



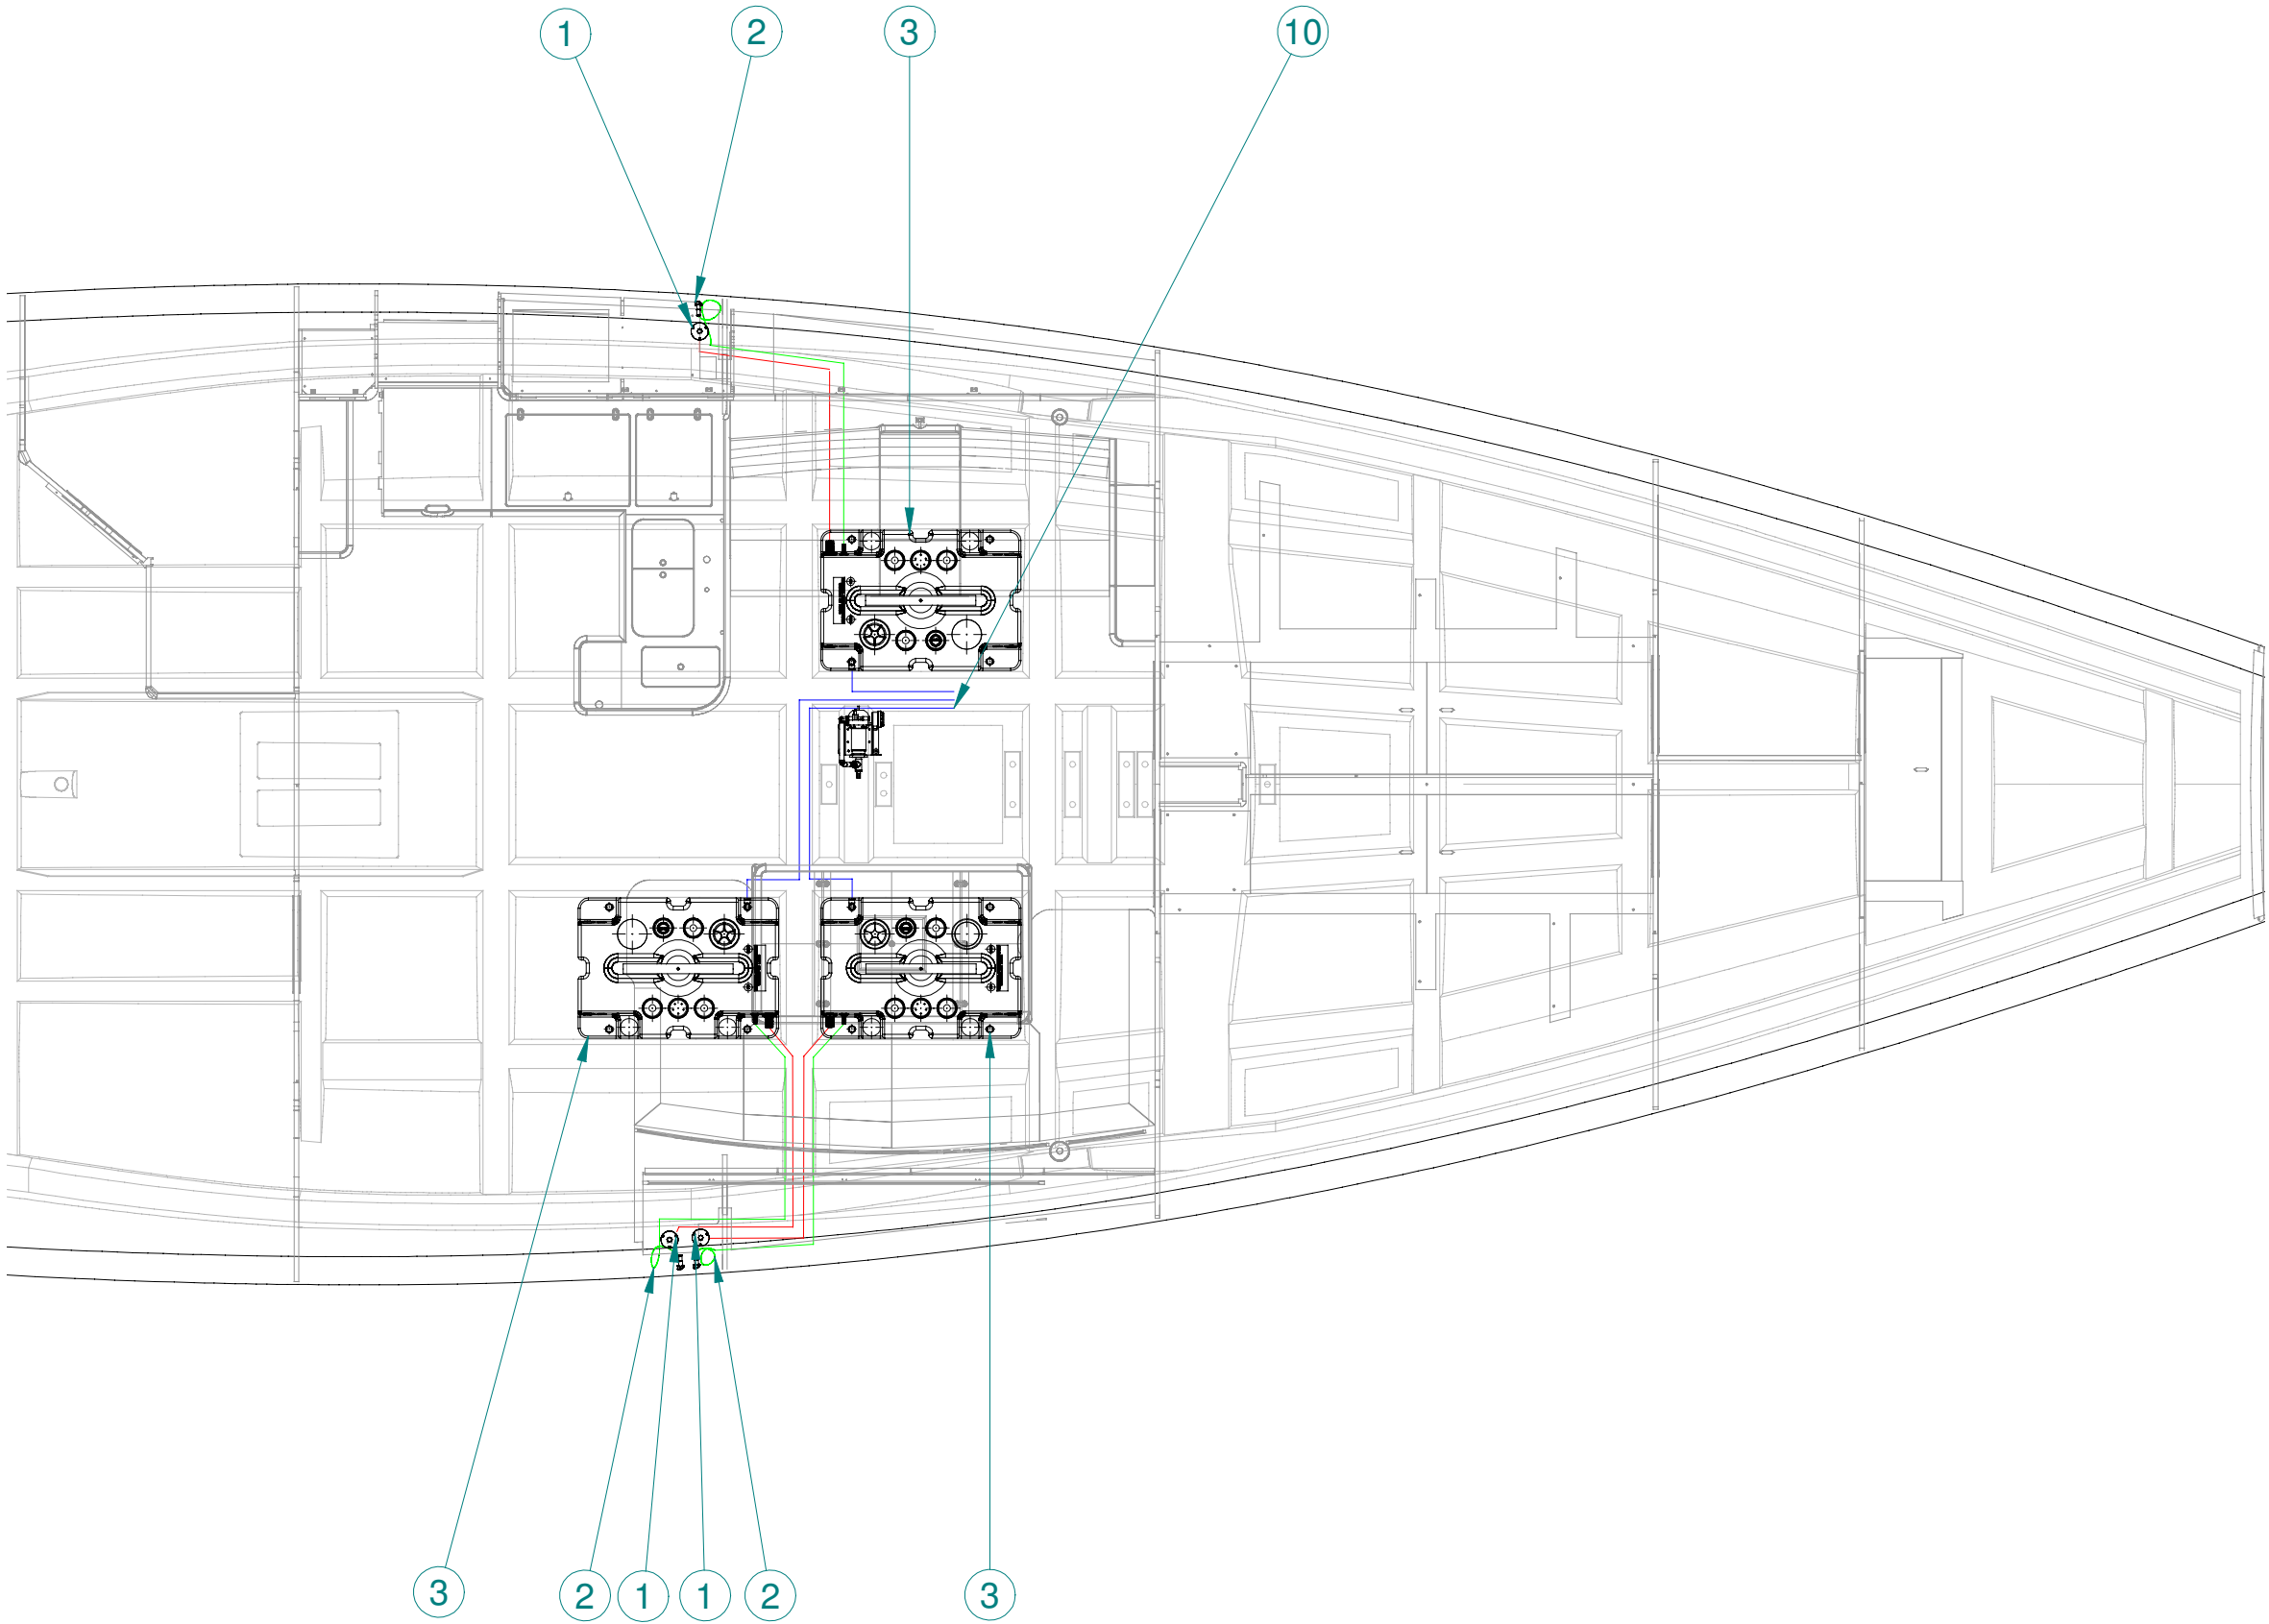

FILLING CIRCUIT

| REFERENCE ON<br>DIAGRAM | FUNCTIONS              |
|-------------------------|------------------------|
| 1                       | Deck filler            |
| 2                       | Vent hole              |
| 3                       | Water tank - 3 x 300 l |
| 10                      | Valve to select tank   |

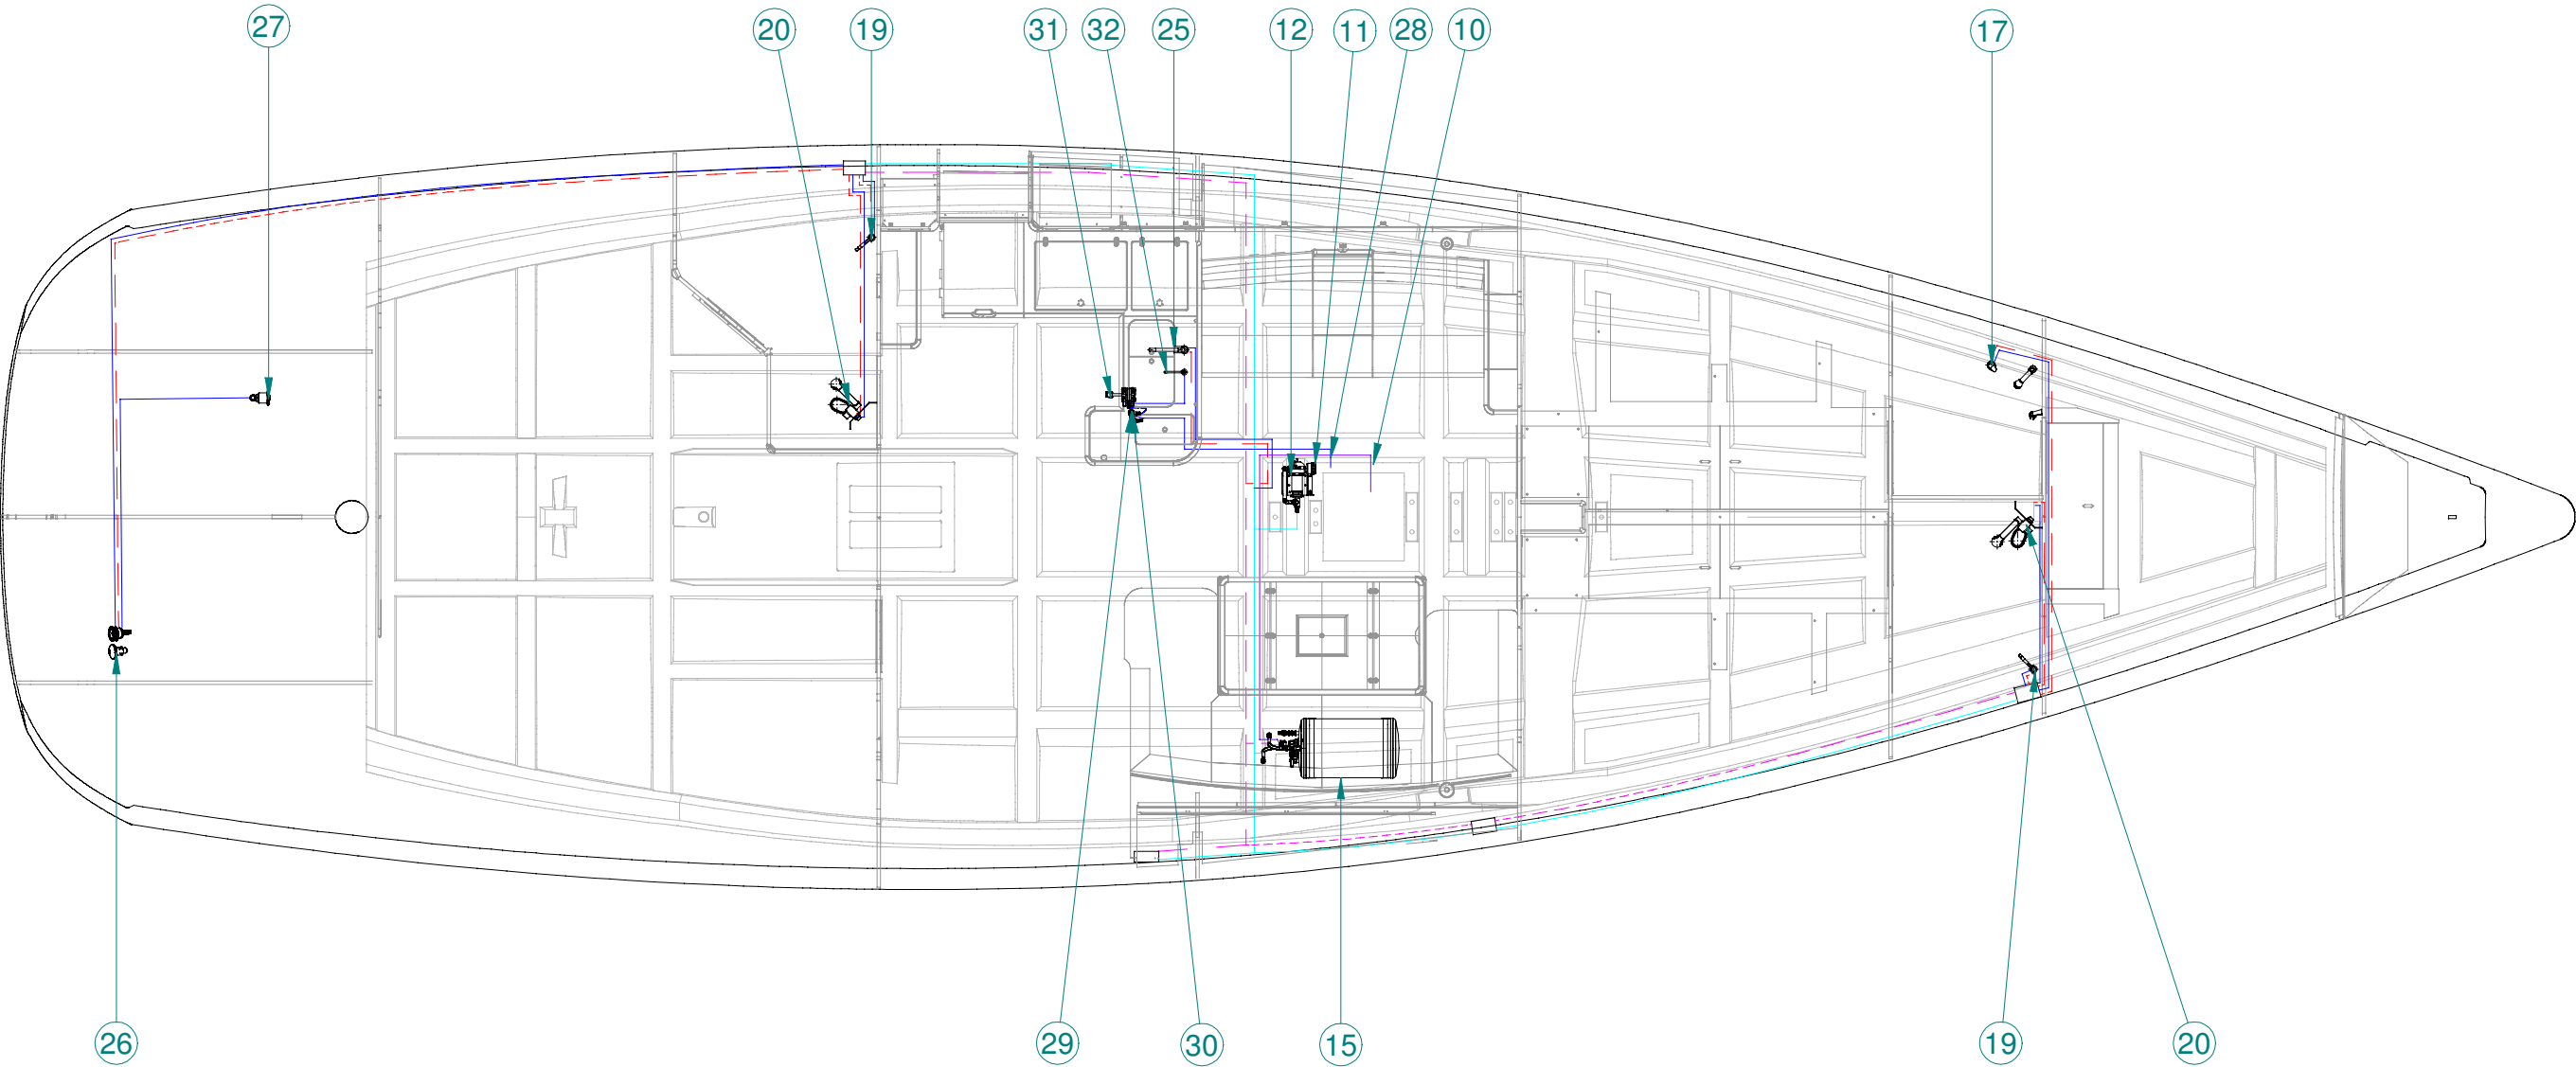

DISTRIBUTION CIRCUIT

1 AFT CABIN - 3 FORWARD CABINS


| REFERENCE ON<br>DIAGRAM | FUNCTIONS                                  |
|-------------------------|--------------------------------------------|
| 10                      | Valve to select tank                       |
| 11                      | Filter                                     |
| 12                      | Water unit                                 |
| 15                      | Water heater                               |
| 17                      | Washbasin mixer tap - Shower               |
| 19                      | Washbasin mixer tap                        |
| 20                      | Mixer shower                               |
| 25                      | Sink mixer tap                             |
| 26                      | Cockpit shower spray                       |
| 27                      | Shore power socket - Fresh water           |
| 28                      | House water inlet                          |
| 29                      | Seawater inlet                             |
| 30                      | Valve selection of water board / Sea water |
| 31                      | Foot pump                                  |
| 32                      | Spout                                      |



DISTRIBUTION CIRCUIT

2 AFT CABINS - 1 FORWARD CABIN

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                                  |
|-------------------------|--------------------------------------------|
| 10                      | Valve to select tank                       |
| 11                      | Filter                                     |
| 12                      | Water unit                                 |
| 15                      | Water heater                               |
| 17                      | Washbasin mixer tap - Shower               |
| 19                      | Washbasin mixer tap                        |
| 20                      | Mixer shower                               |
| 25                      | Sink mixer tap                             |
| 26                      | Cockpit shower spray                       |
| 27                      | Shore power socket - Fresh water           |
| 28                      | House water inlet                          |
| 29                      | Seawater inlet                             |
| 30                      | Valve selection of water board / Sea water |
| 31                      | Foot pump                                  |
| 32                      | Spout                                      |

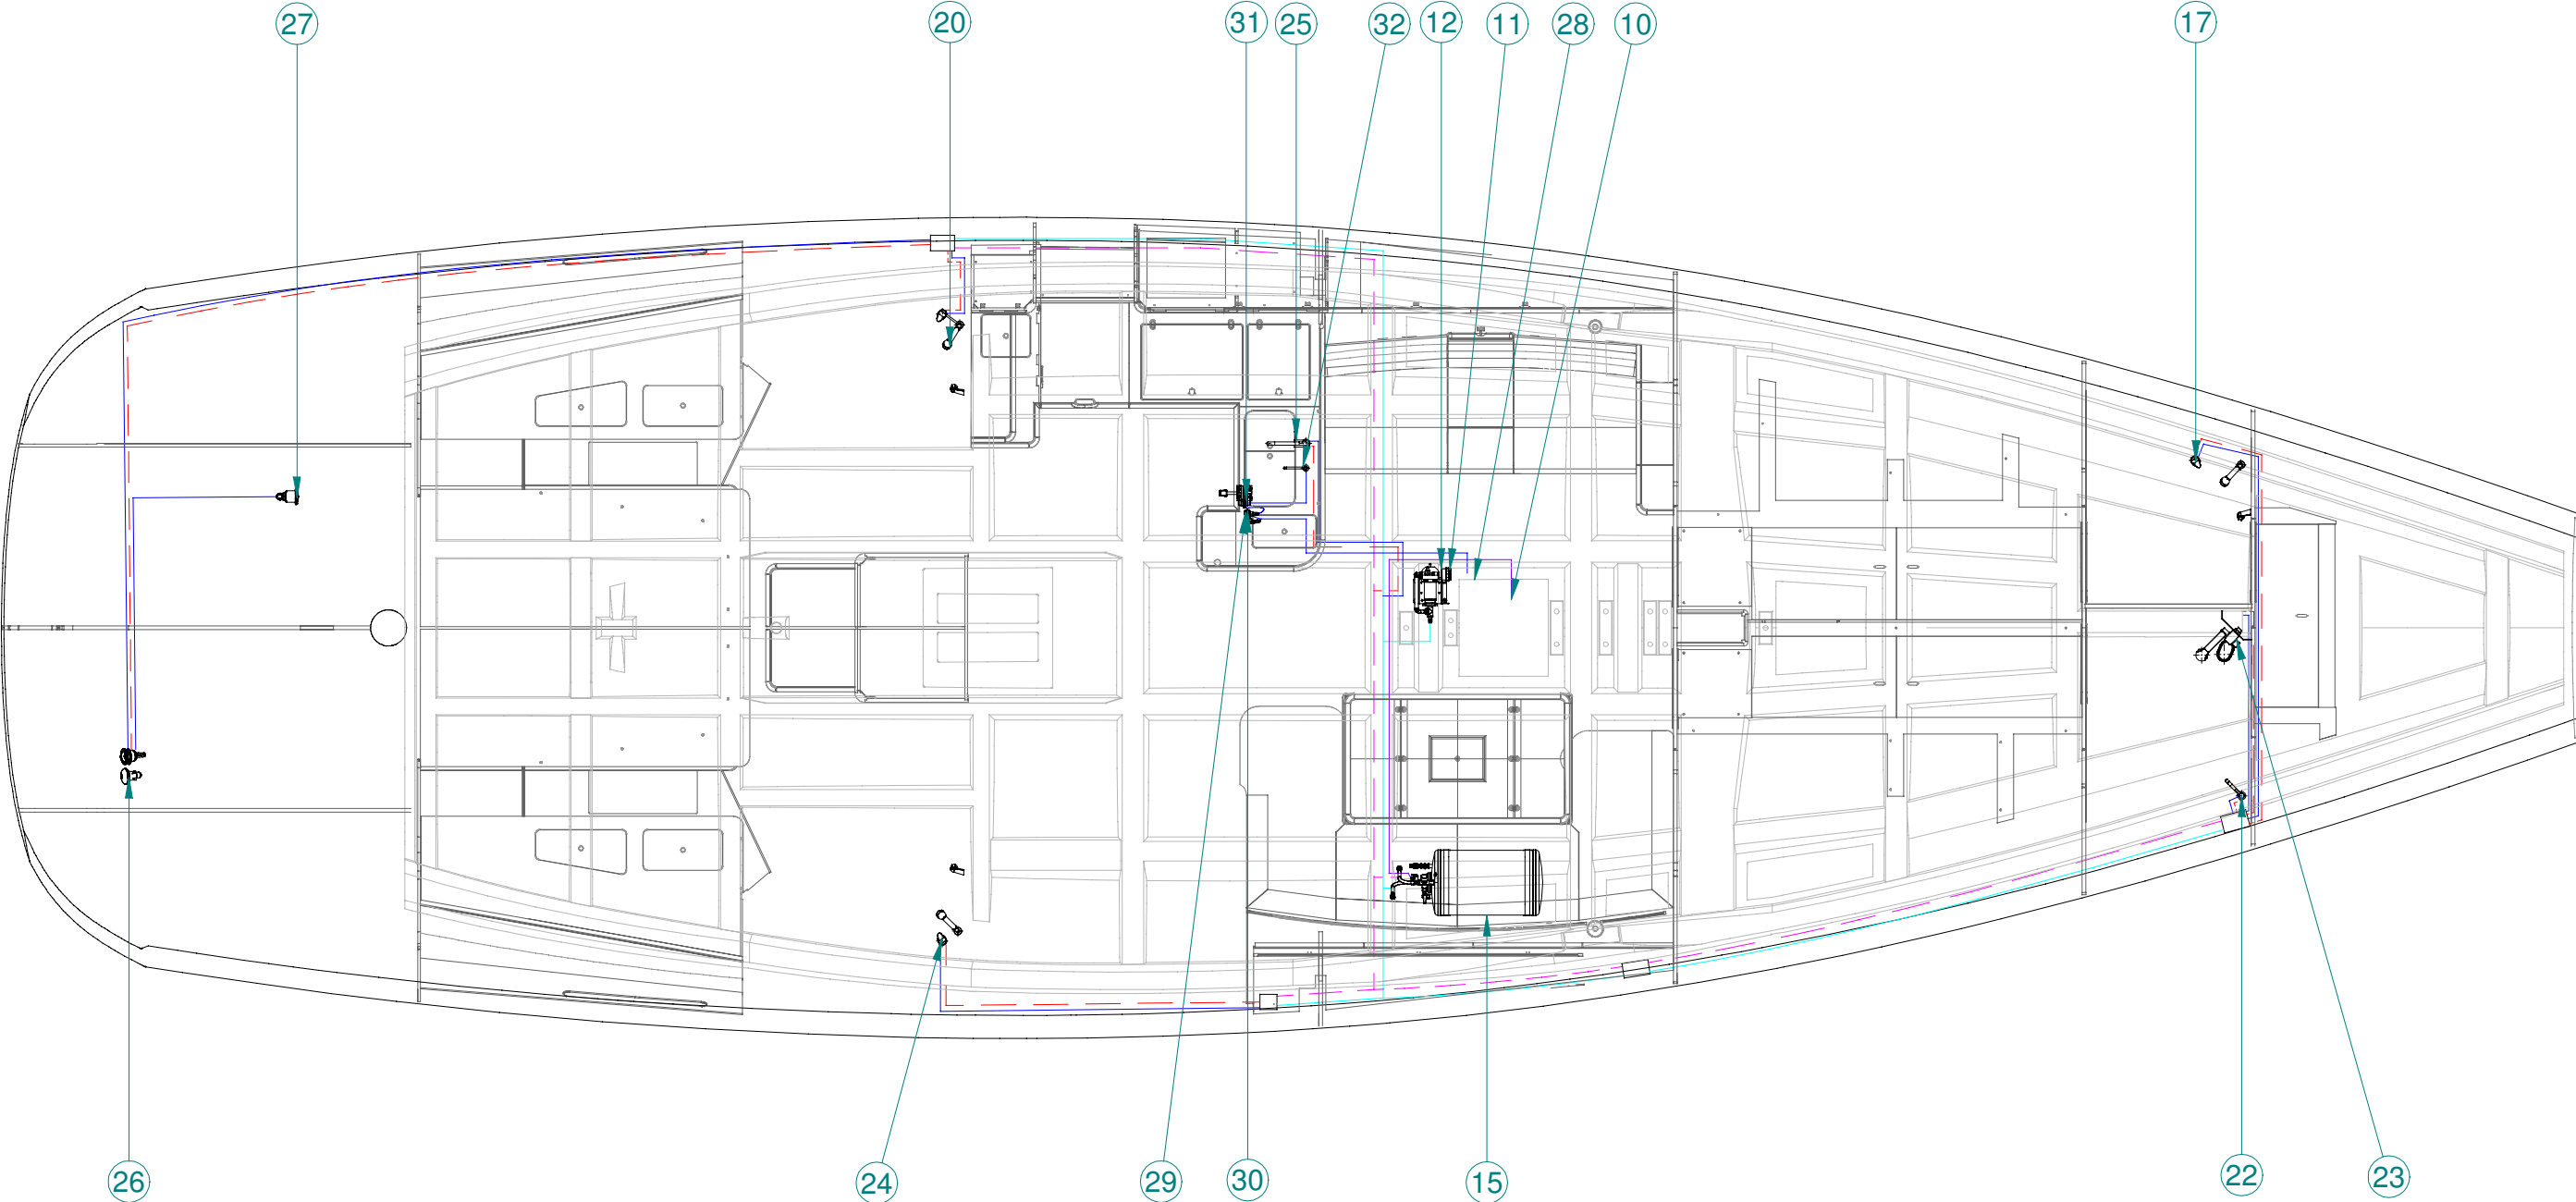


DISTRIBUTION CIRCUIT

2 AFT CABINS - 3 FORWARD CABINS

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                                  |
|-------------------------|--------------------------------------------|
| 10                      | Valve to select tank                       |
| 11                      | Filter                                     |
| 12                      | Water unit                                 |
| 15                      | Water heater                               |
| 17                      | Washbasin mixer tap - Shower               |
| 19                      | Washbasin mixer tap                        |
| 20                      | Mixer shower                               |
| 25                      | Sink mixer tap                             |
| 26                      | Cockpit shower spray                       |
| 27                      | Shore power socket - Fresh water           |
| 28                      | House water inlet                          |
| 29                      | Seawater inlet                             |
| 30                      | Valve selection of water board / Sea water |
| 31                      | Foot pump                                  |
| 32                      | Spout                                      |

1 AFT CABIN - 3 FORWARD CABINS


PLUMBING

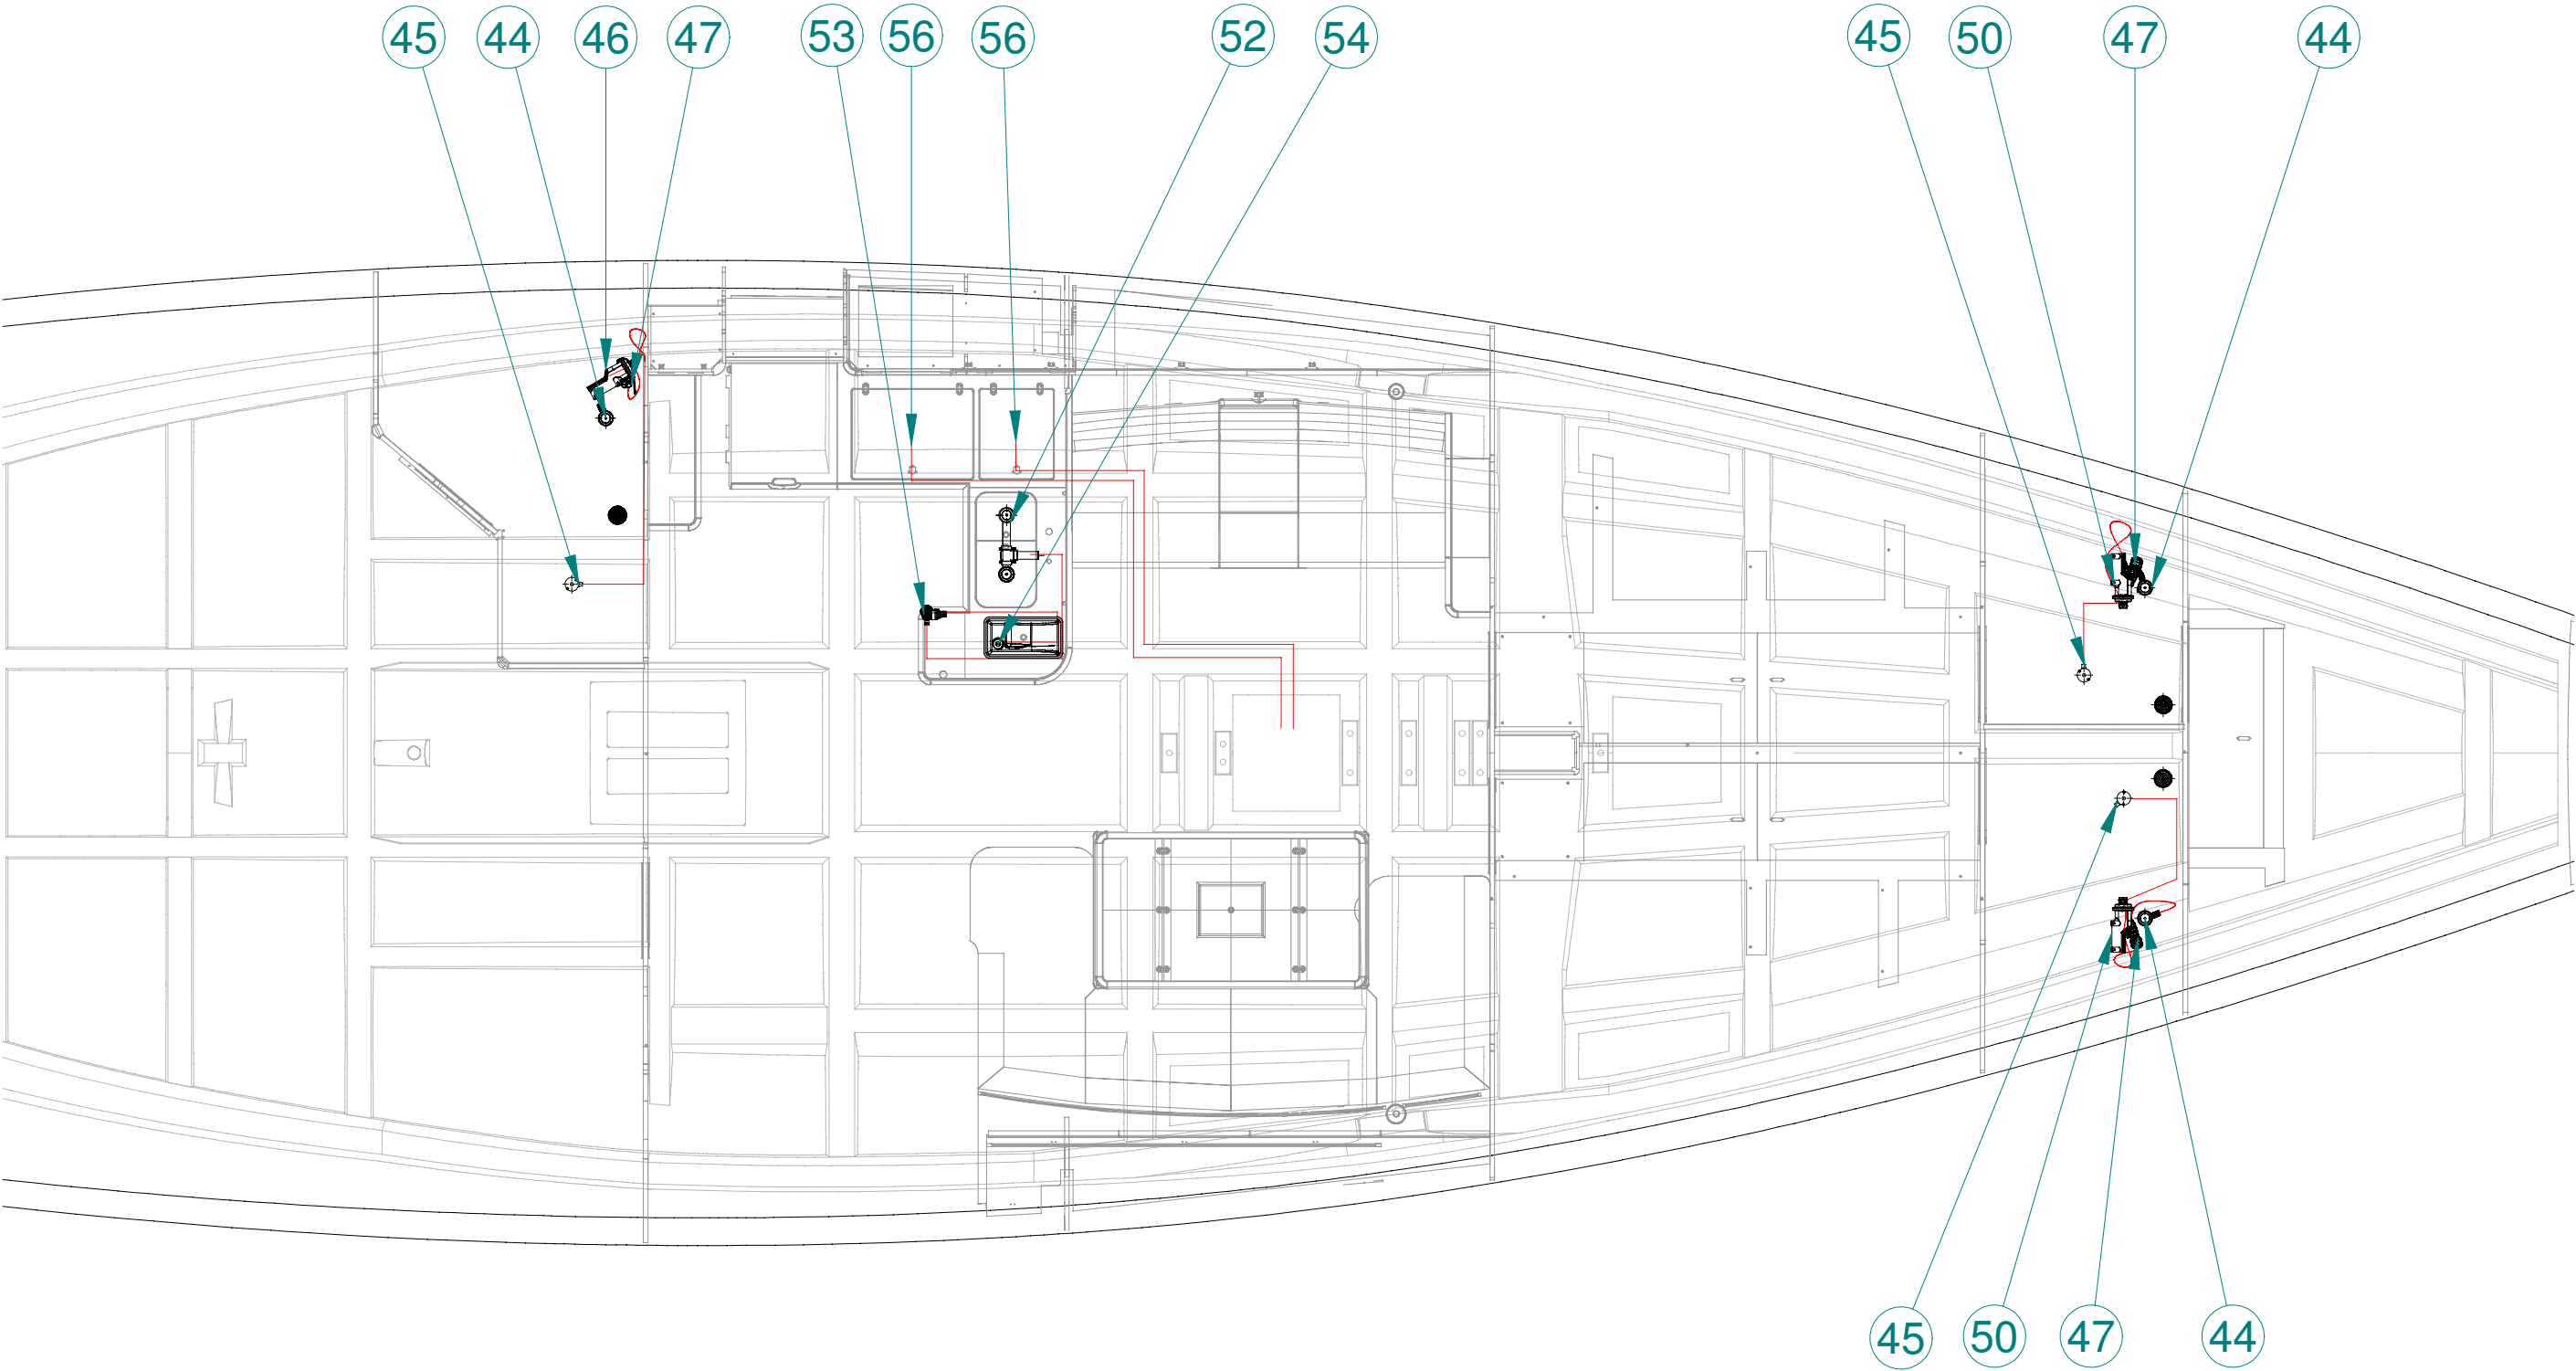

SEWAGE CIRCUIT

1 AFT CABIN - 3 FORWARD CABINS

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                   |
|-------------------------|-----------------------------|
| 44                      | Washbasin drain plug        |
| 45                      | Shower plug hole            |
| 46                      | Shower pump                 |
| 47                      | Shower draining + Washbasin |
| 52                      | Sink plug hole              |
| 53                      | Sink draining               |
| 54                      | Drain plug - Draining rack  |
| 56                      | Icebox drainage (to sump)   |

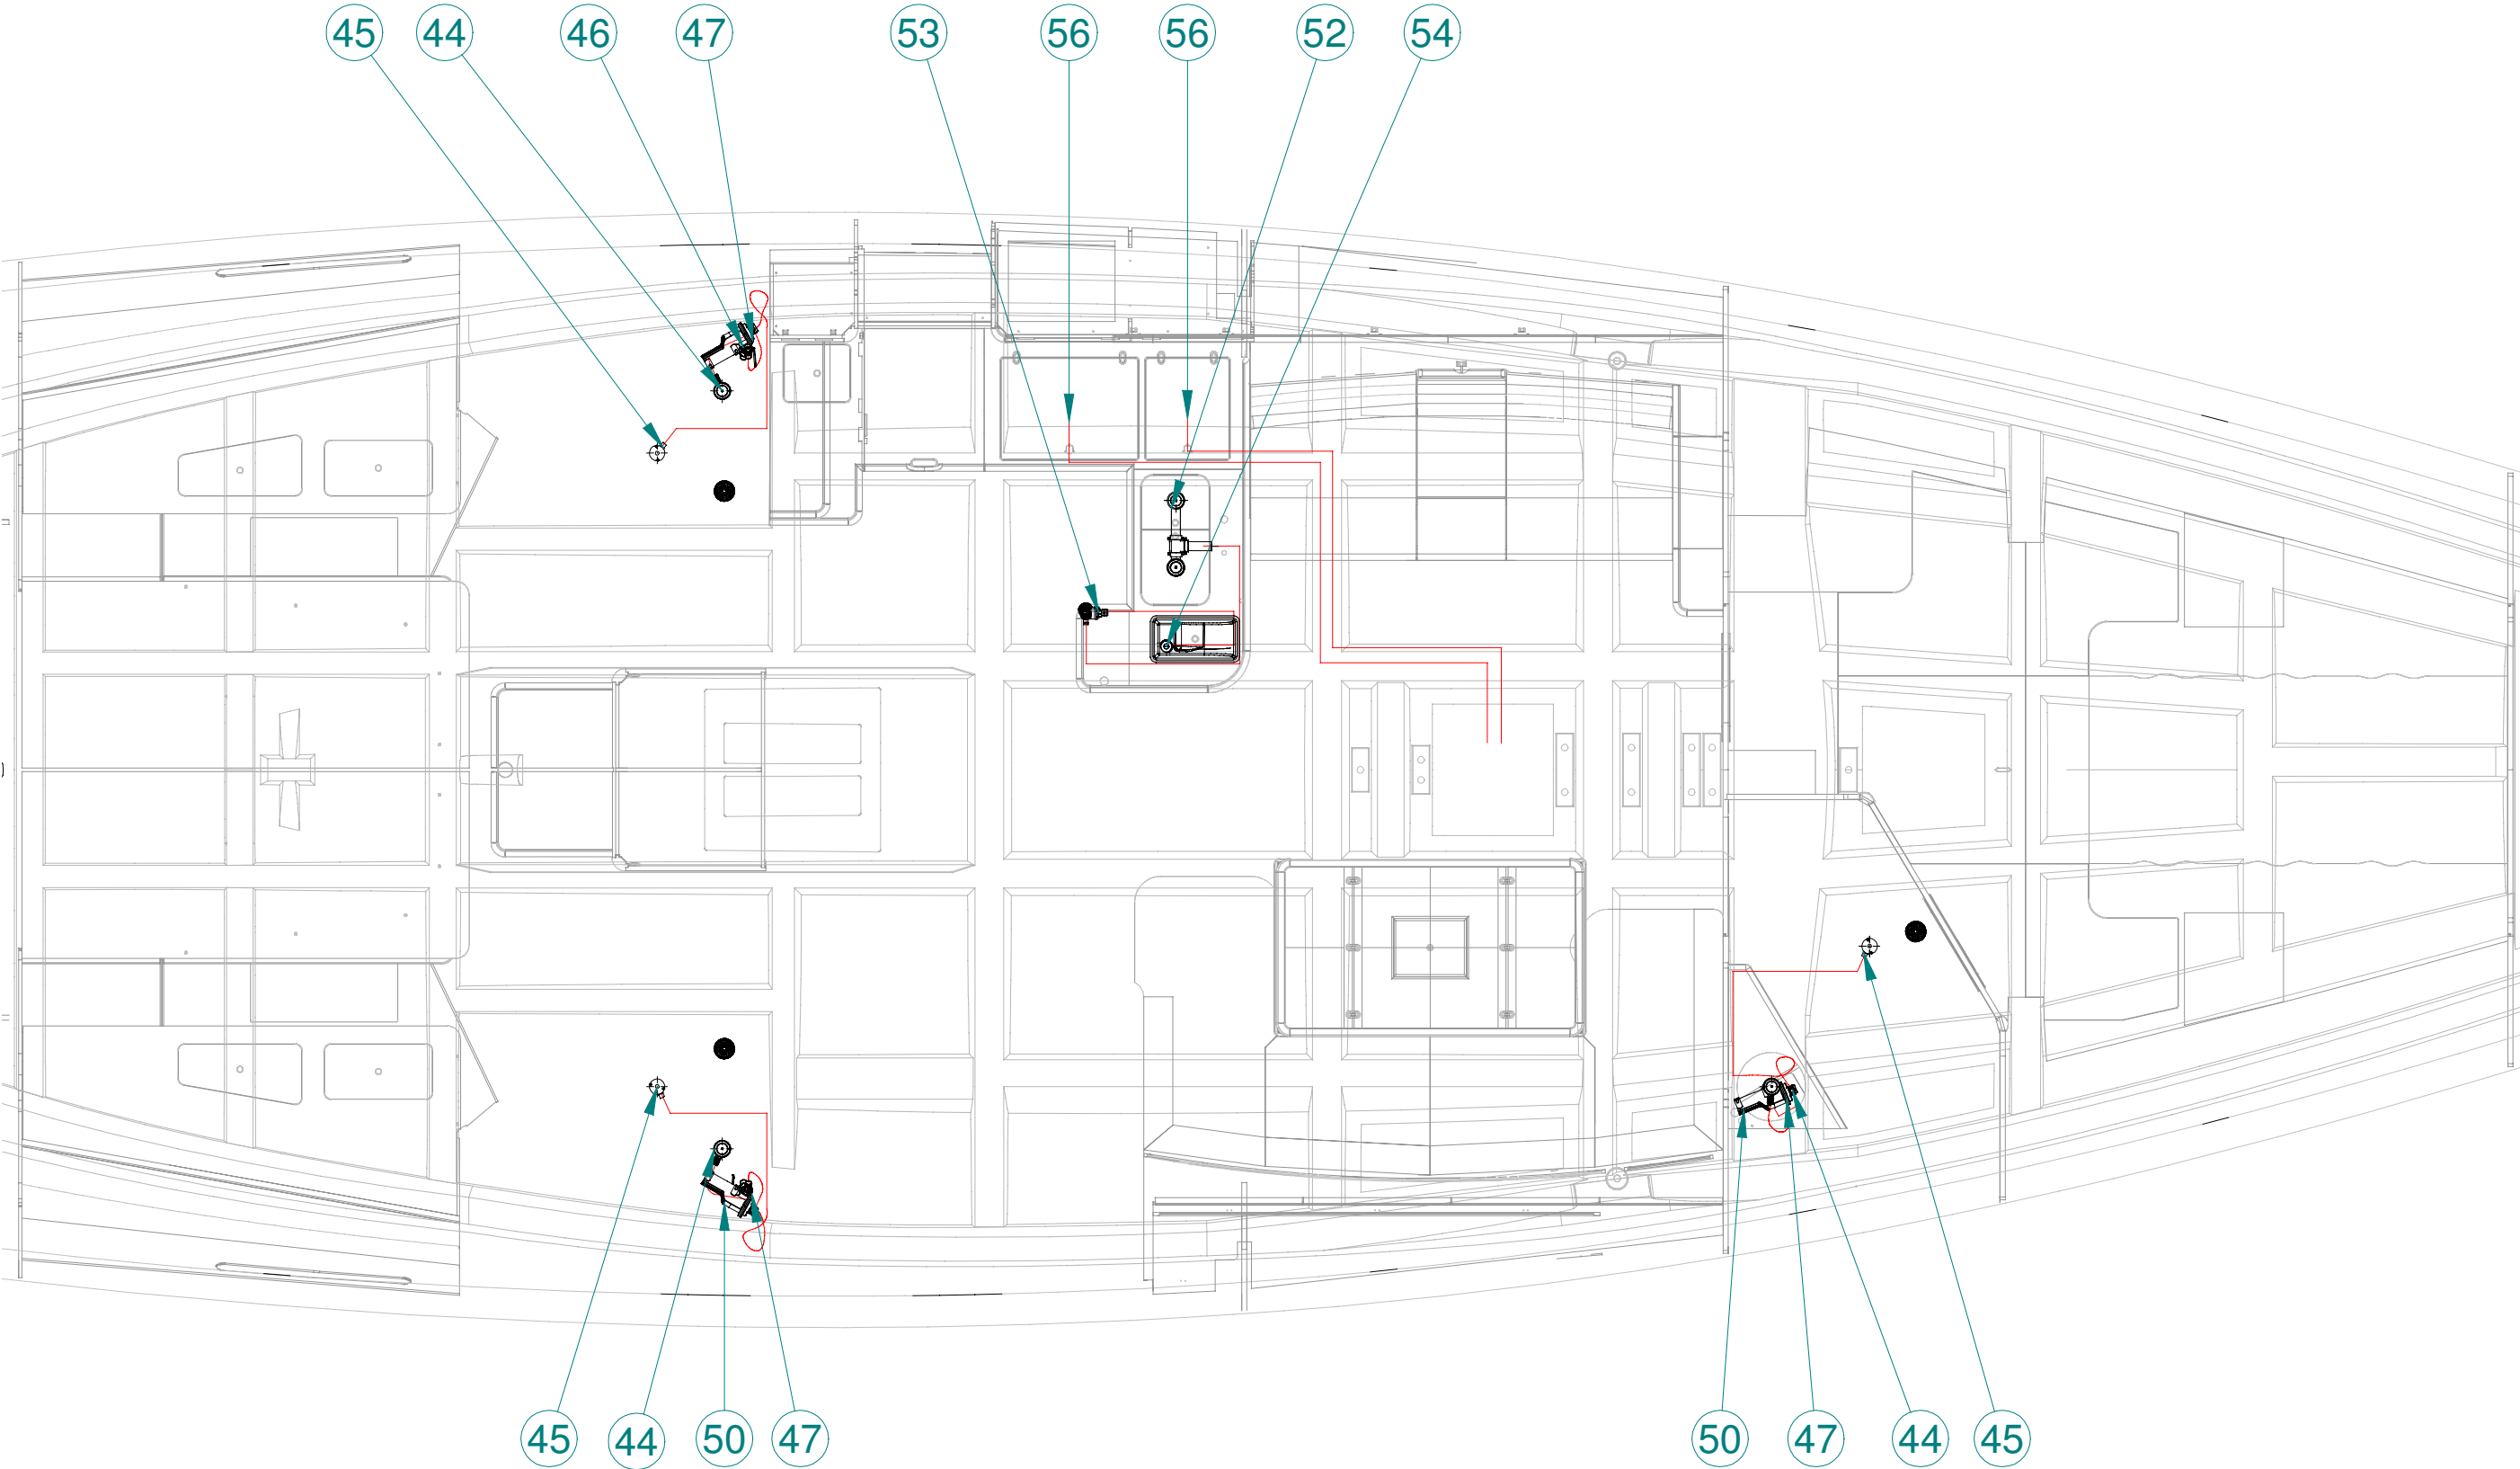


SEWAGE CIRCUIT

2 AFT CABINS - 1 FORWARD CABIN

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                   |
|-------------------------|-----------------------------|
| 44                      | Washbasin drain plug        |
| 45                      | Shower plug hole            |
| 46                      | Shower pump                 |
| 47                      | Shower draining + Washbasin |
| 52                      | Sink plug hole              |
| 53                      | Sink draining               |
| 54                      | Drain plug - Draining rack  |
| 56                      | Icebox drainage (to sump)   |

2 AFT CABINS - 3 FORWARD CABINS


PLUMBING

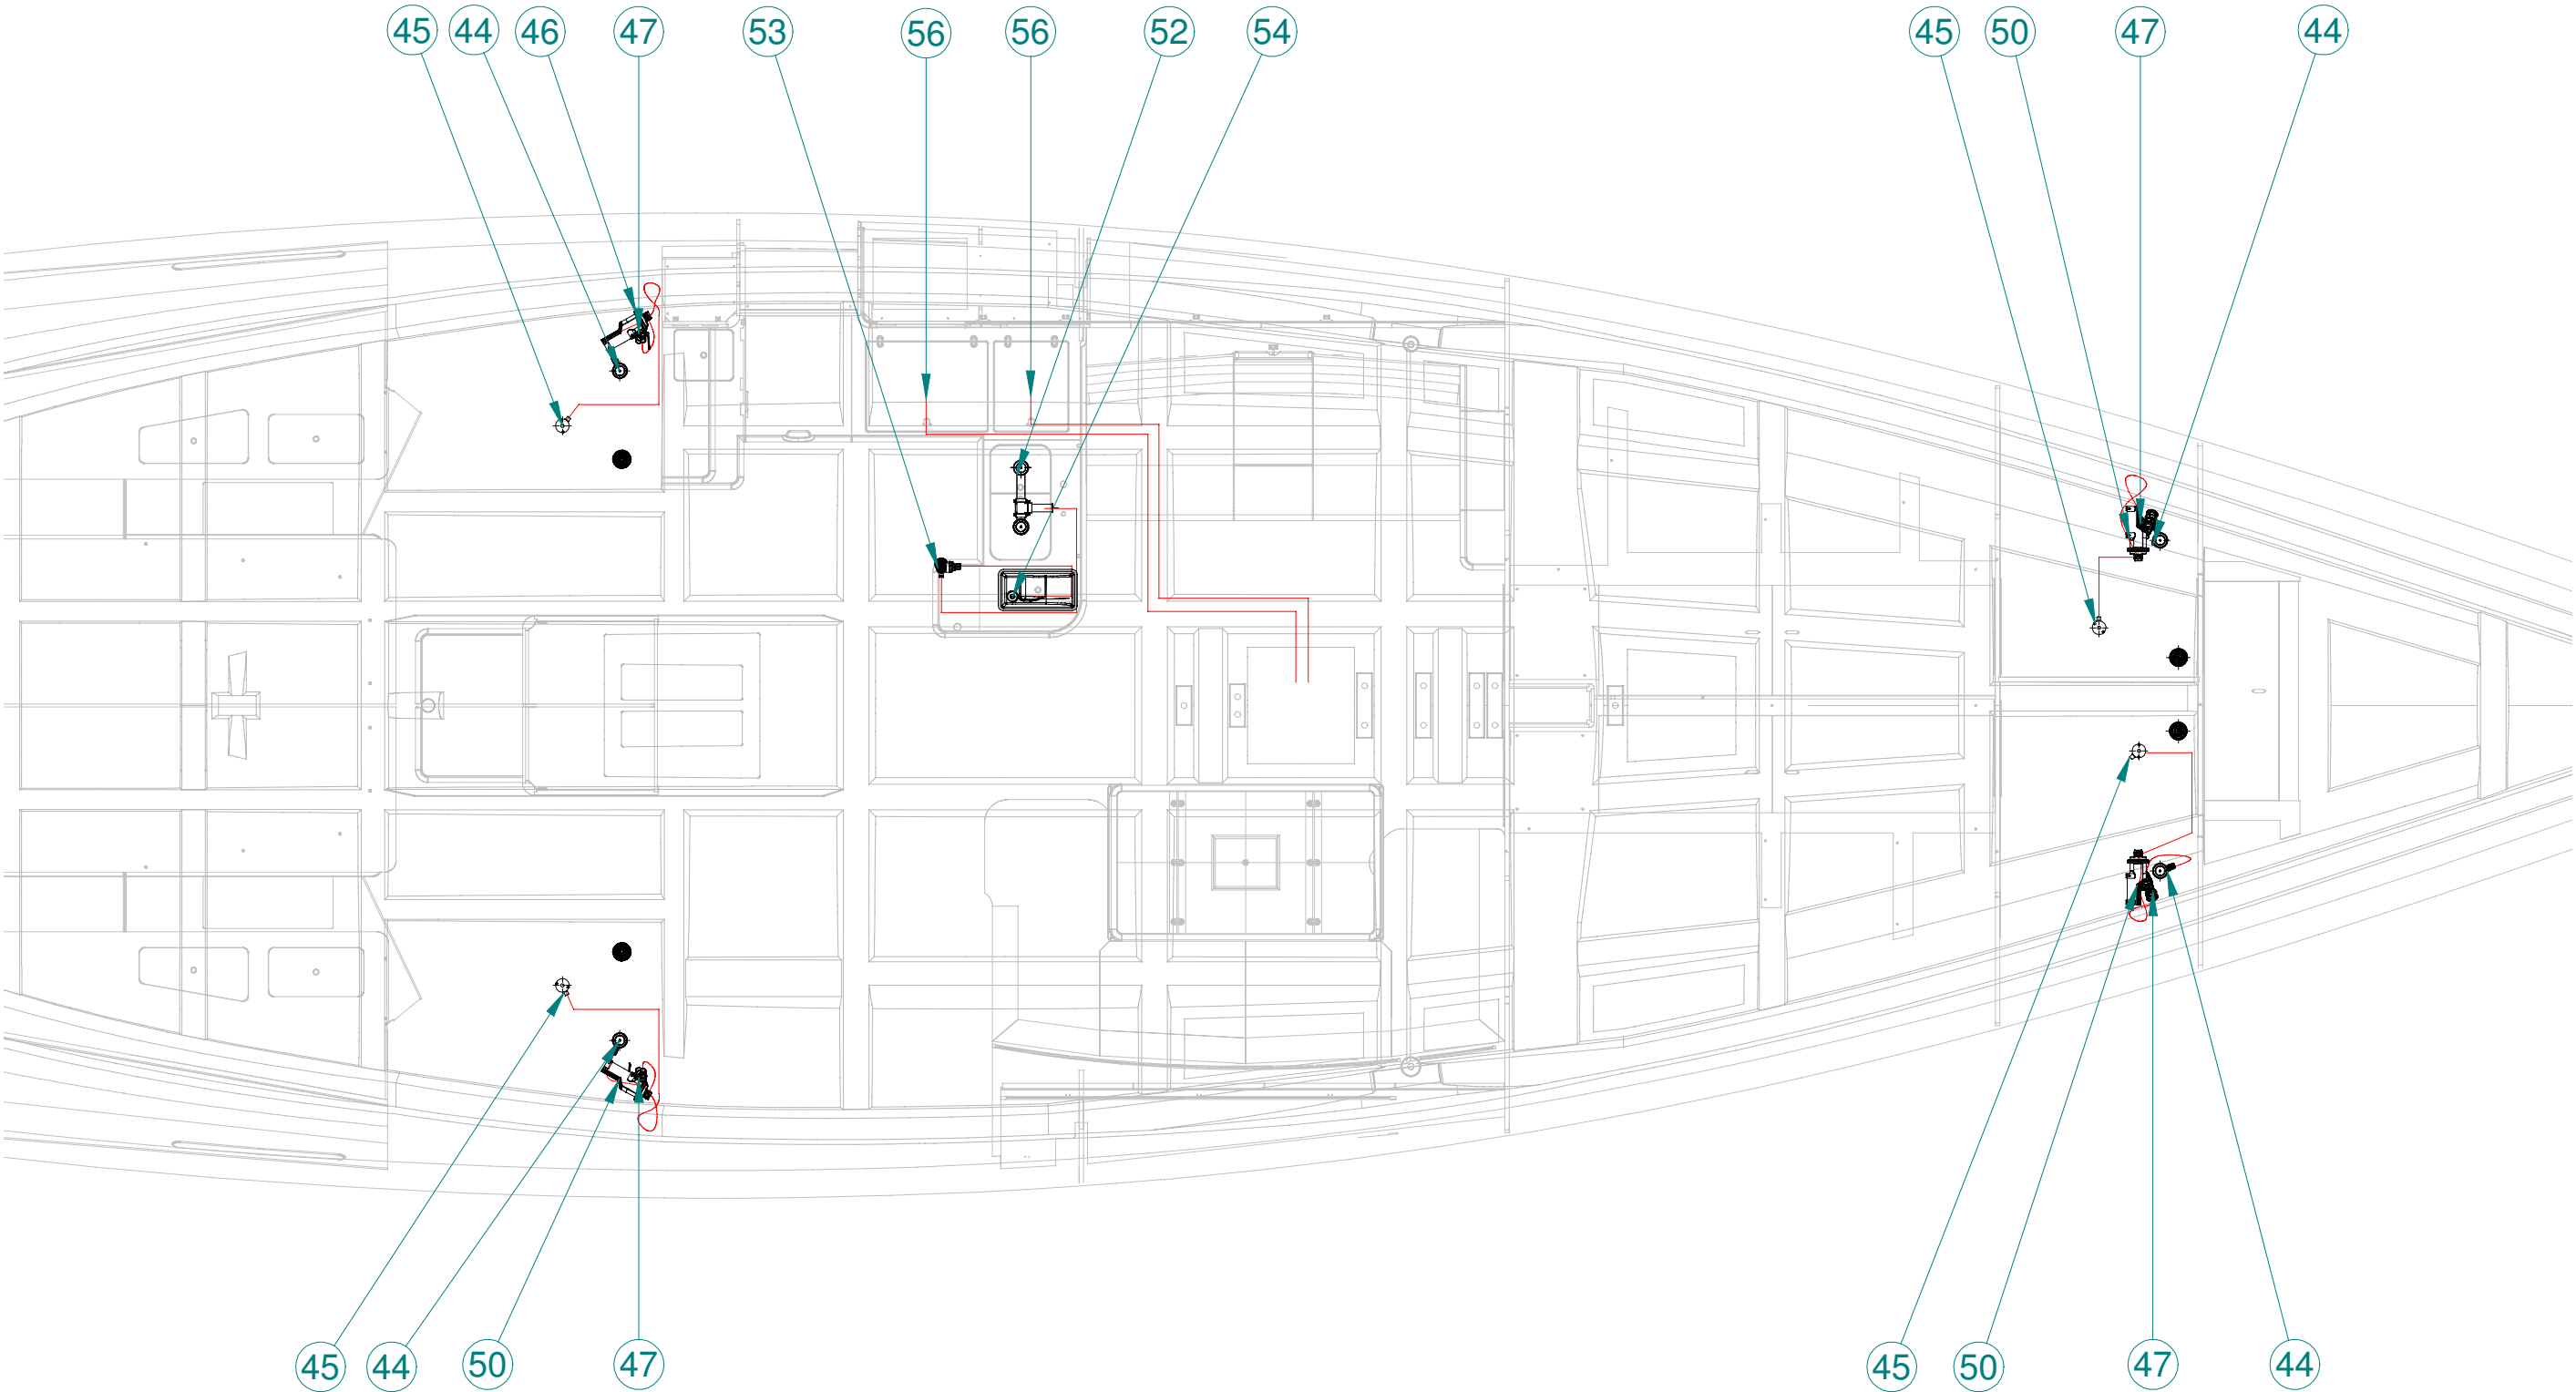

SEWAGE CIRCUIT


2 AFT CABINS - 3 FORWARD CABINS

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                   |
|-------------------------|-----------------------------|
| 44                      | Washbasin drain plug        |
| 45                      | Shower plug hole            |
| 46                      | Shower pump                 |
| 47                      | Shower draining + Washbasin |
| 52                      | Sink plug hole              |
| 53                      | Sink draining               |
| 54                      | Drain plug - Draining rack  |
| 56                      | Icebox drainage (to sump)   |

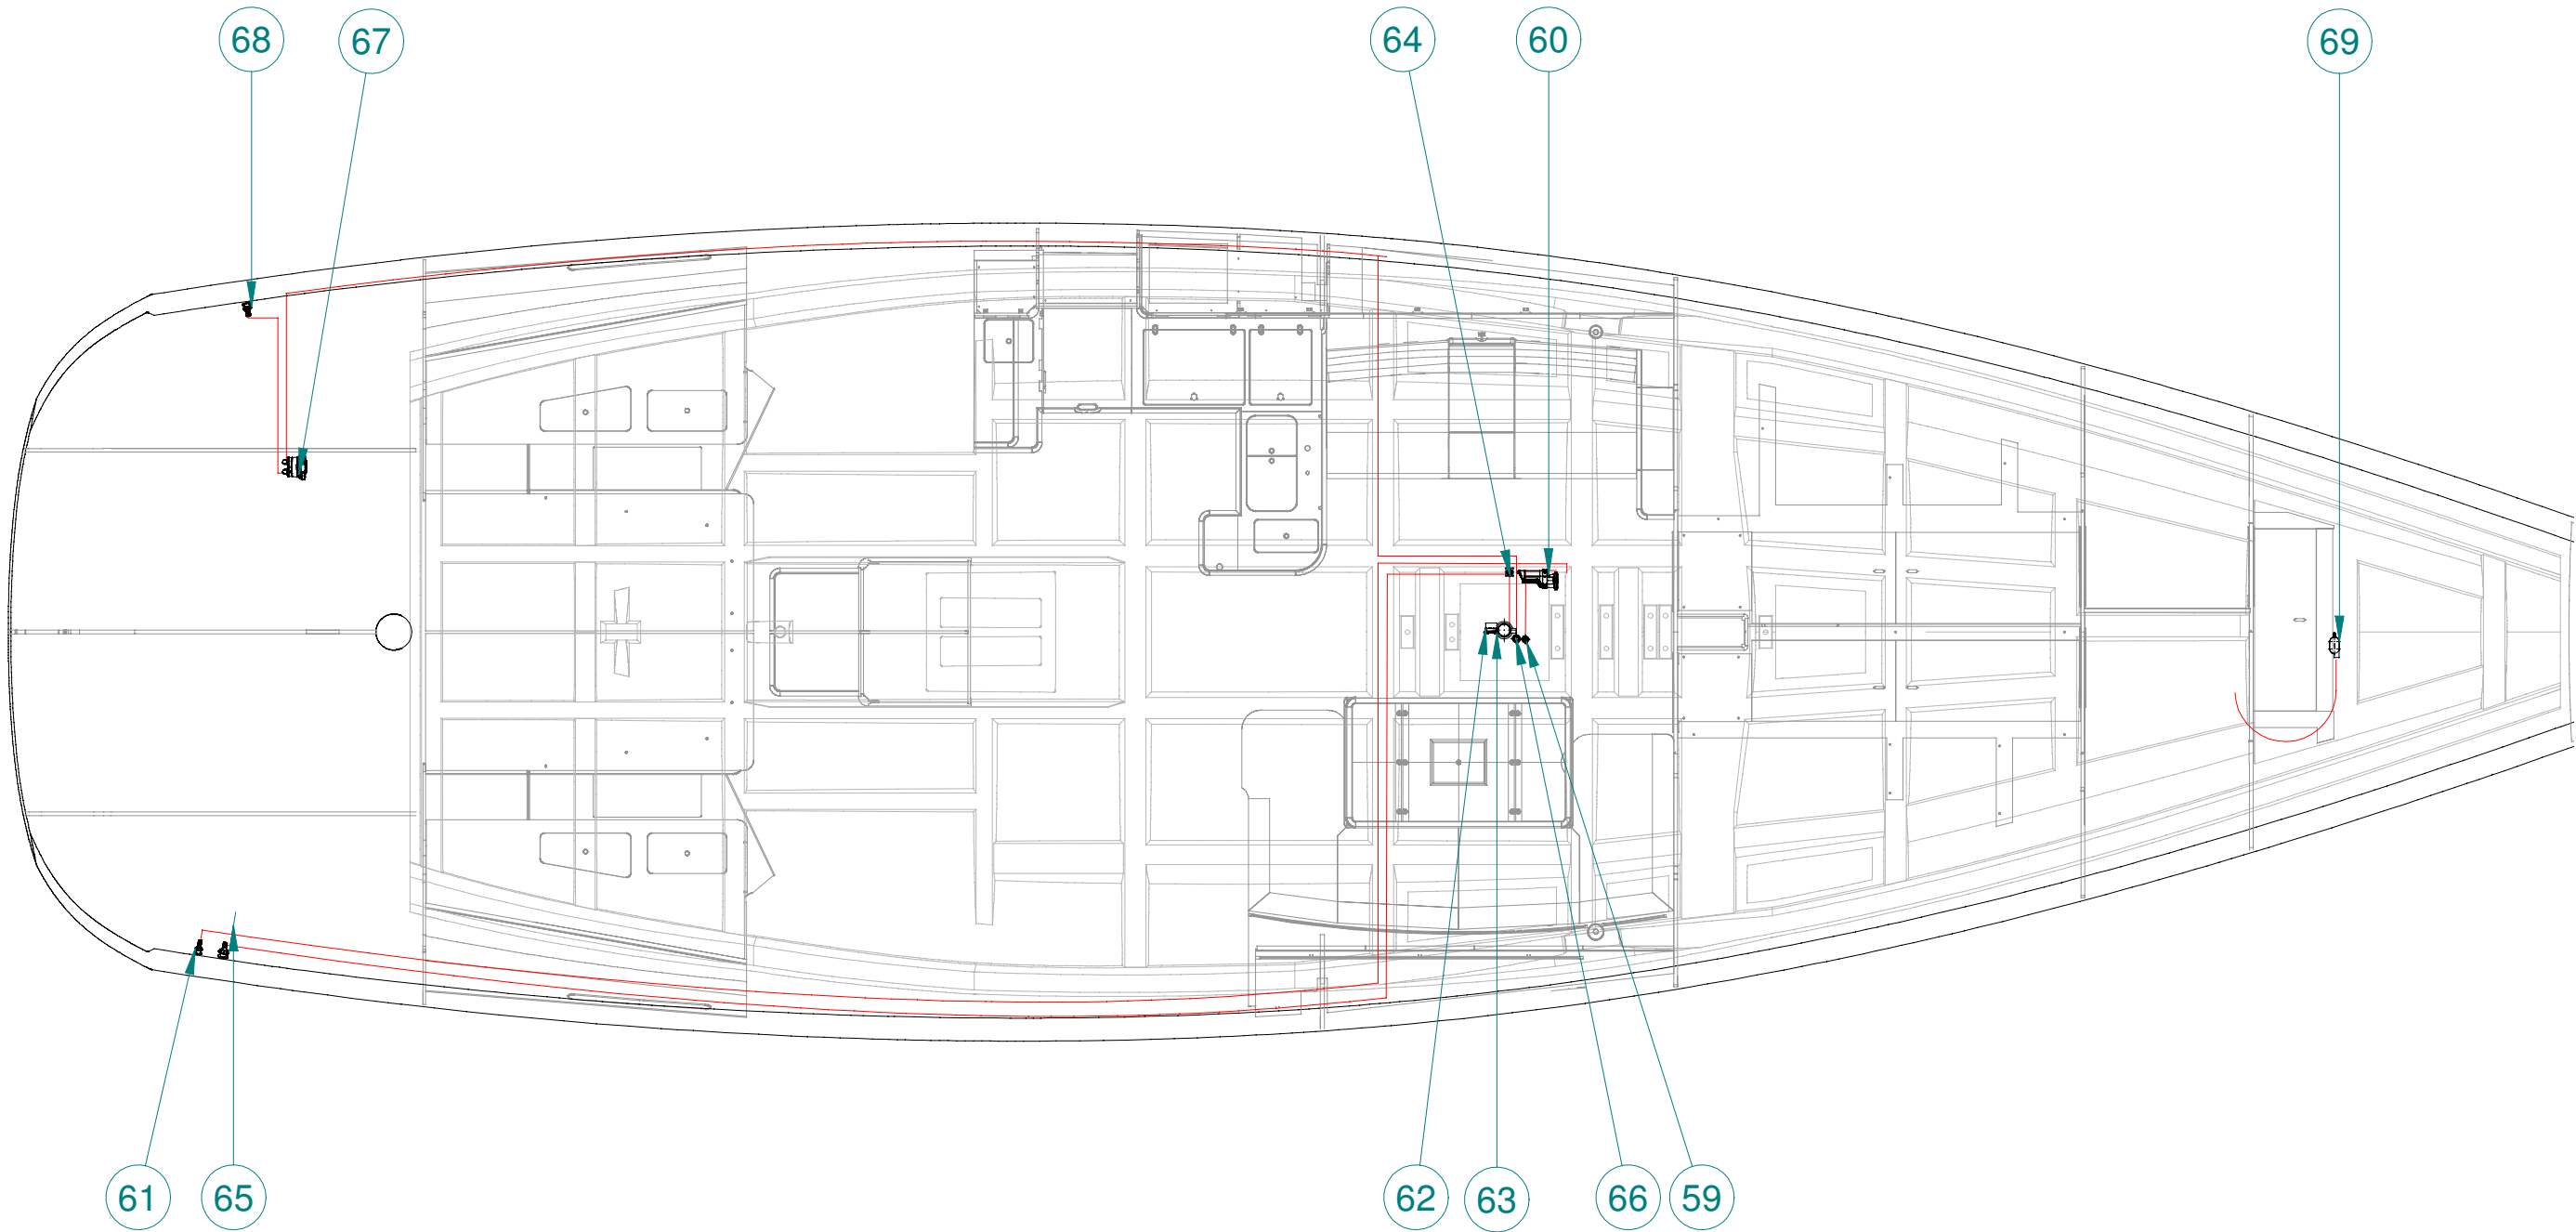

BILGE DRAINING

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                          |
|-------------------------|------------------------------------|
| 59                      | Stuffing box - Electric bilge pump |
| 60                      | Electric bilge pump                |
| 61                      | Drainage - Electric bilge pump     |
| 62                      | Activator - Automatic bilge pump   |
| 63                      | Automatic bilge pump               |
| 64                      | Non-return valve                   |
| 65                      | Drainage - Automatic bilge pump    |
| 66                      | Stuffing box - Manual bilge pump   |
| 67                      | Manual bilge pump                  |
| 68                      | Drainage - Manual bilge pump       |
| 69                      | Forward bilge pump                 |

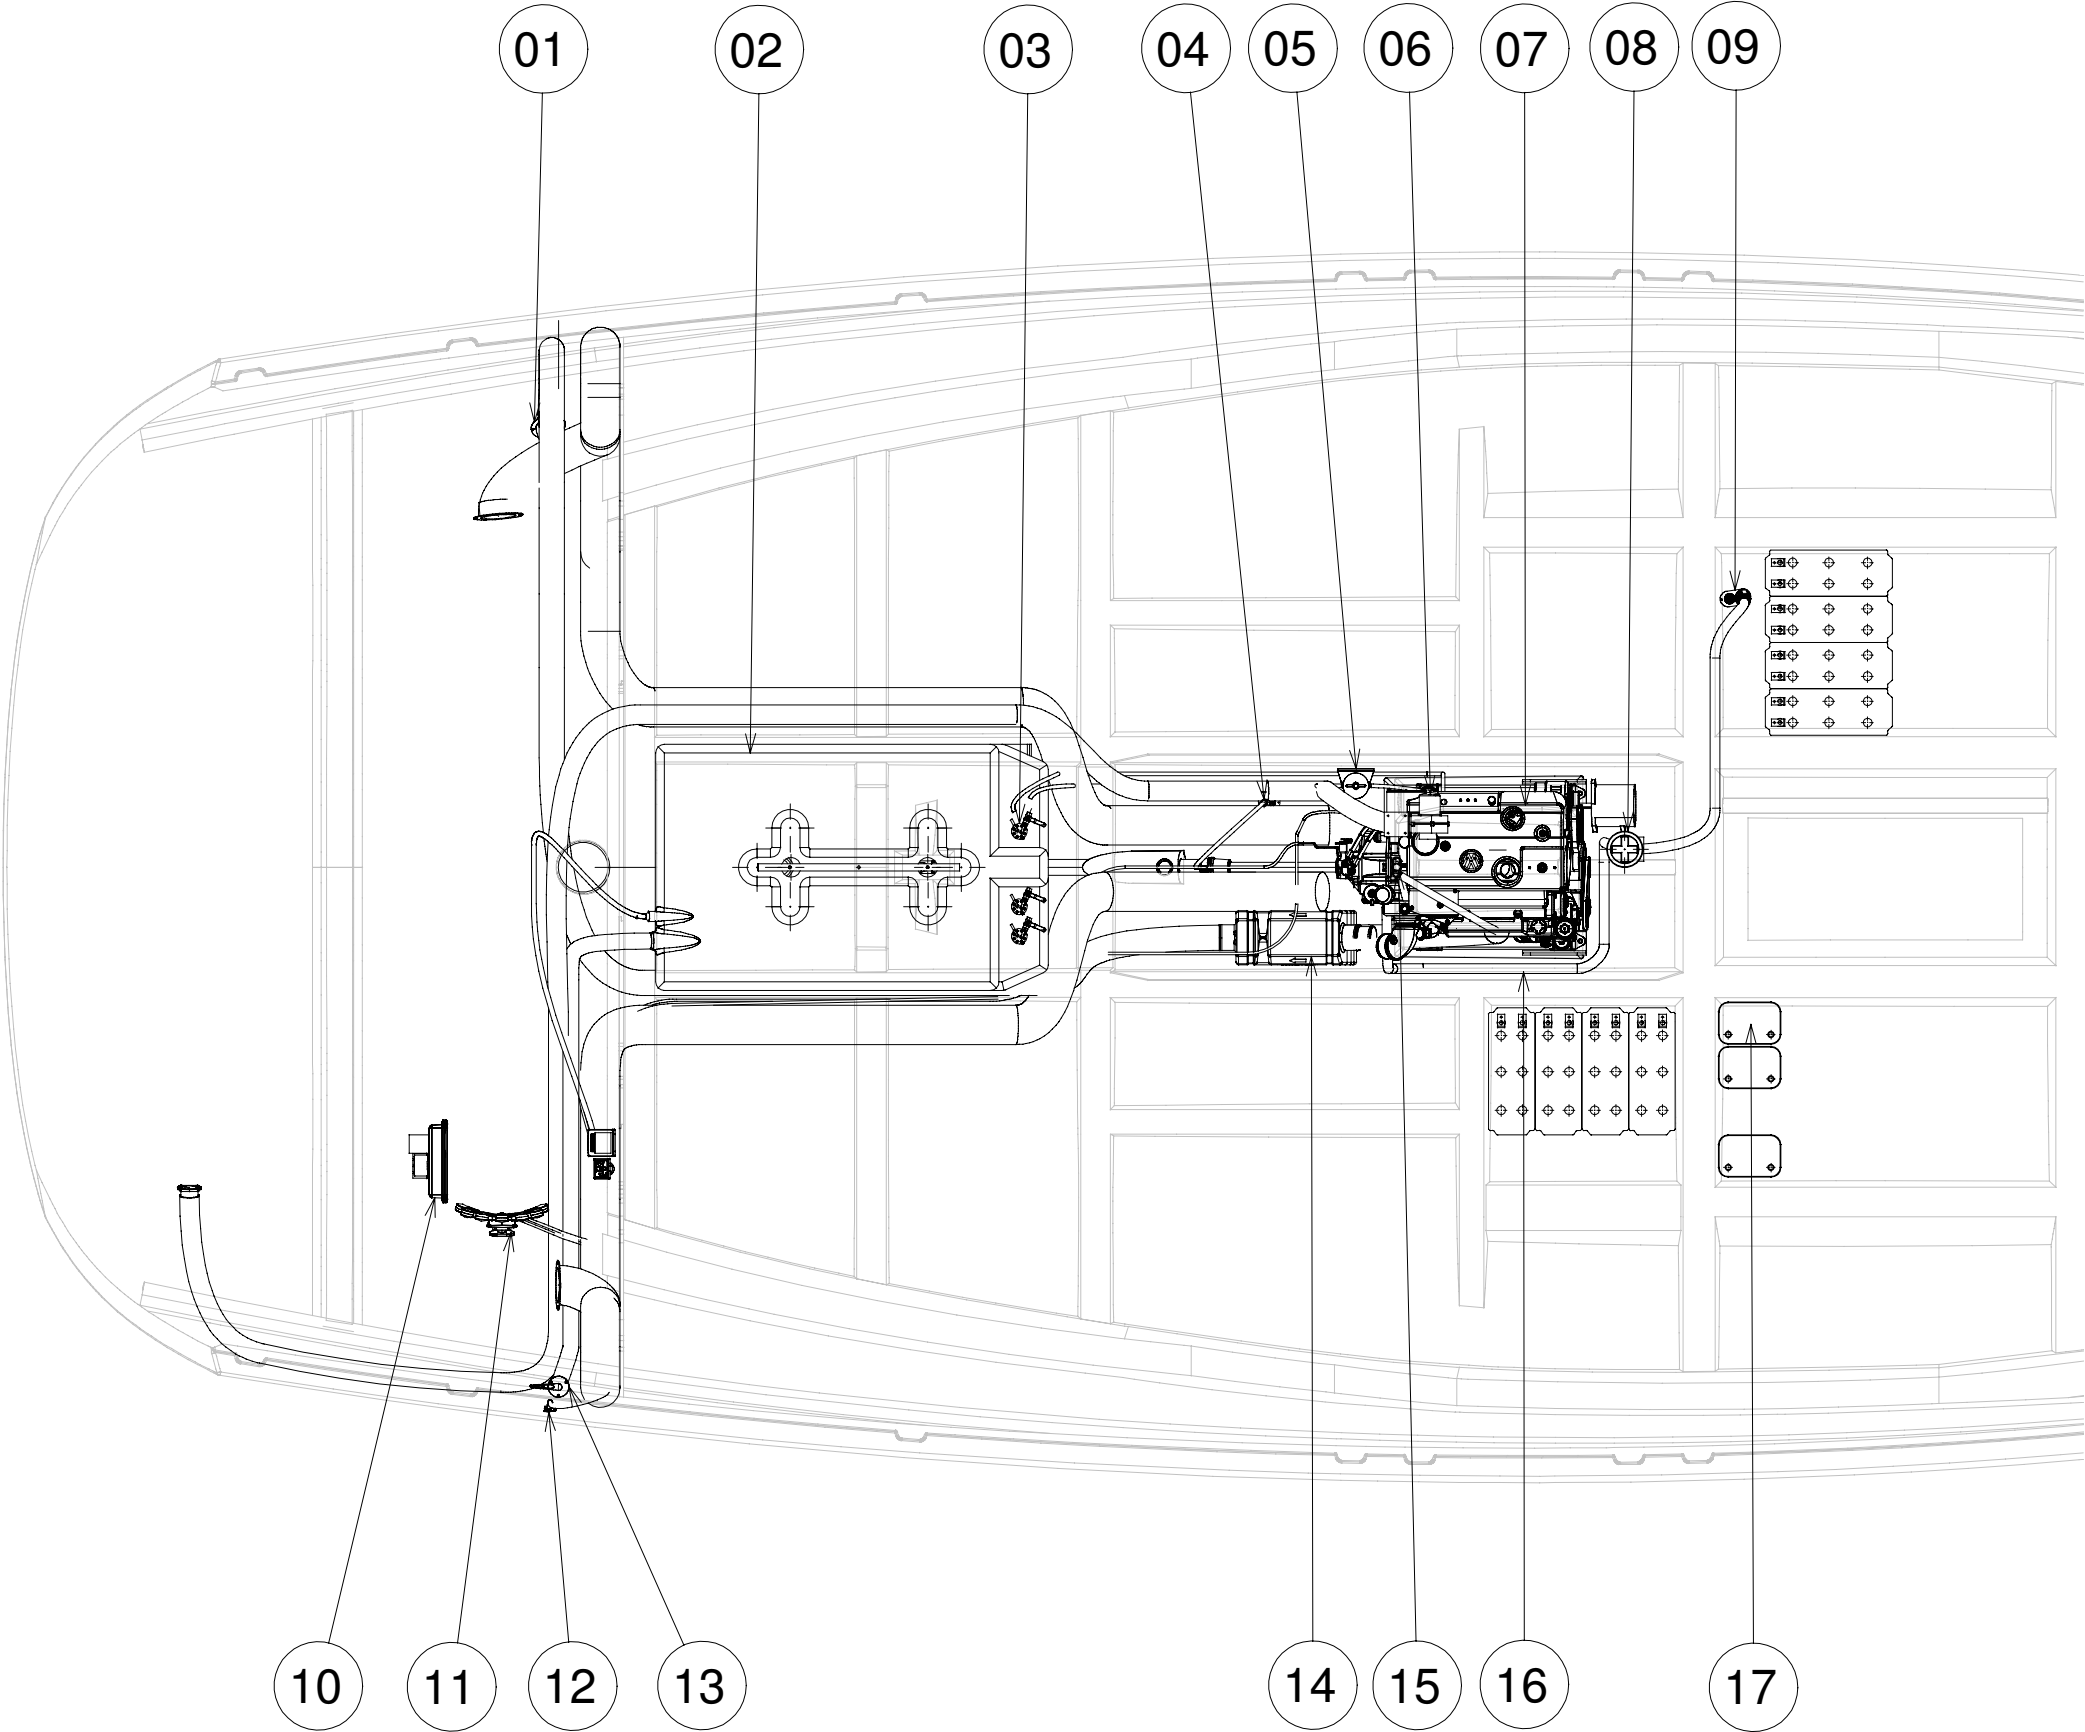



ENGINE FITTING

VIEW TOP

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                        |
|-------------------------|----------------------------------|
| 1                       | Outlet                           |
| 2                       | Fuel tank - 400 l                |
| 3                       | Supply valve - Diesel            |
| 4                       | Stern frame join                 |
| 5                       | diesel filter                    |
| 6                       | Engine compartment ventilator    |
| 7                       | Engine + Gear ratio 2/1          |
| 8                       | Sea water filter                 |
| 9                       | Sea water inlet valve for engine |
| 10                      | Engine panel                     |
| 11                      | Control lever                    |
| 12                      | Vent hole                        |
| 13                      | Deck filler                      |
| 14                      | Water trap                       |
| 15                      | Anti-siphonage item              |
| 16                      | Battery isolation switch set     |
| 17                      | Engine battery - 12V 50A         |

VIEW - PROPELLER SHAFT

ENGINE

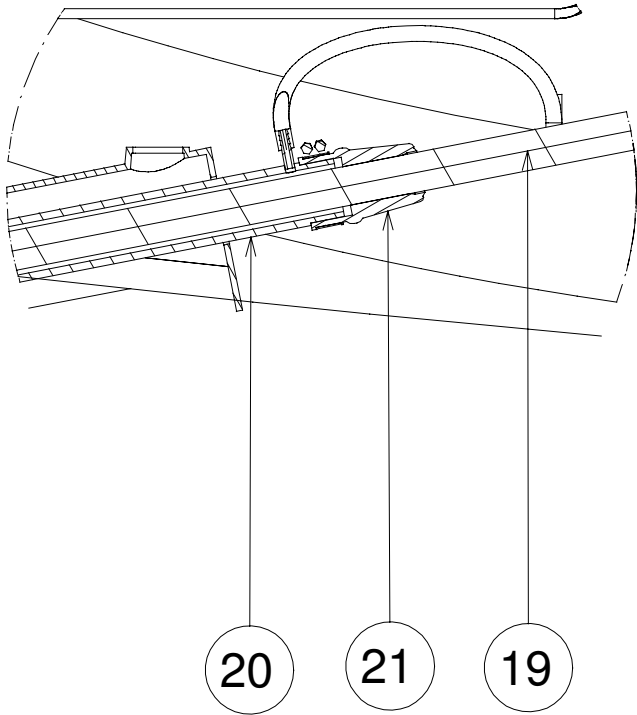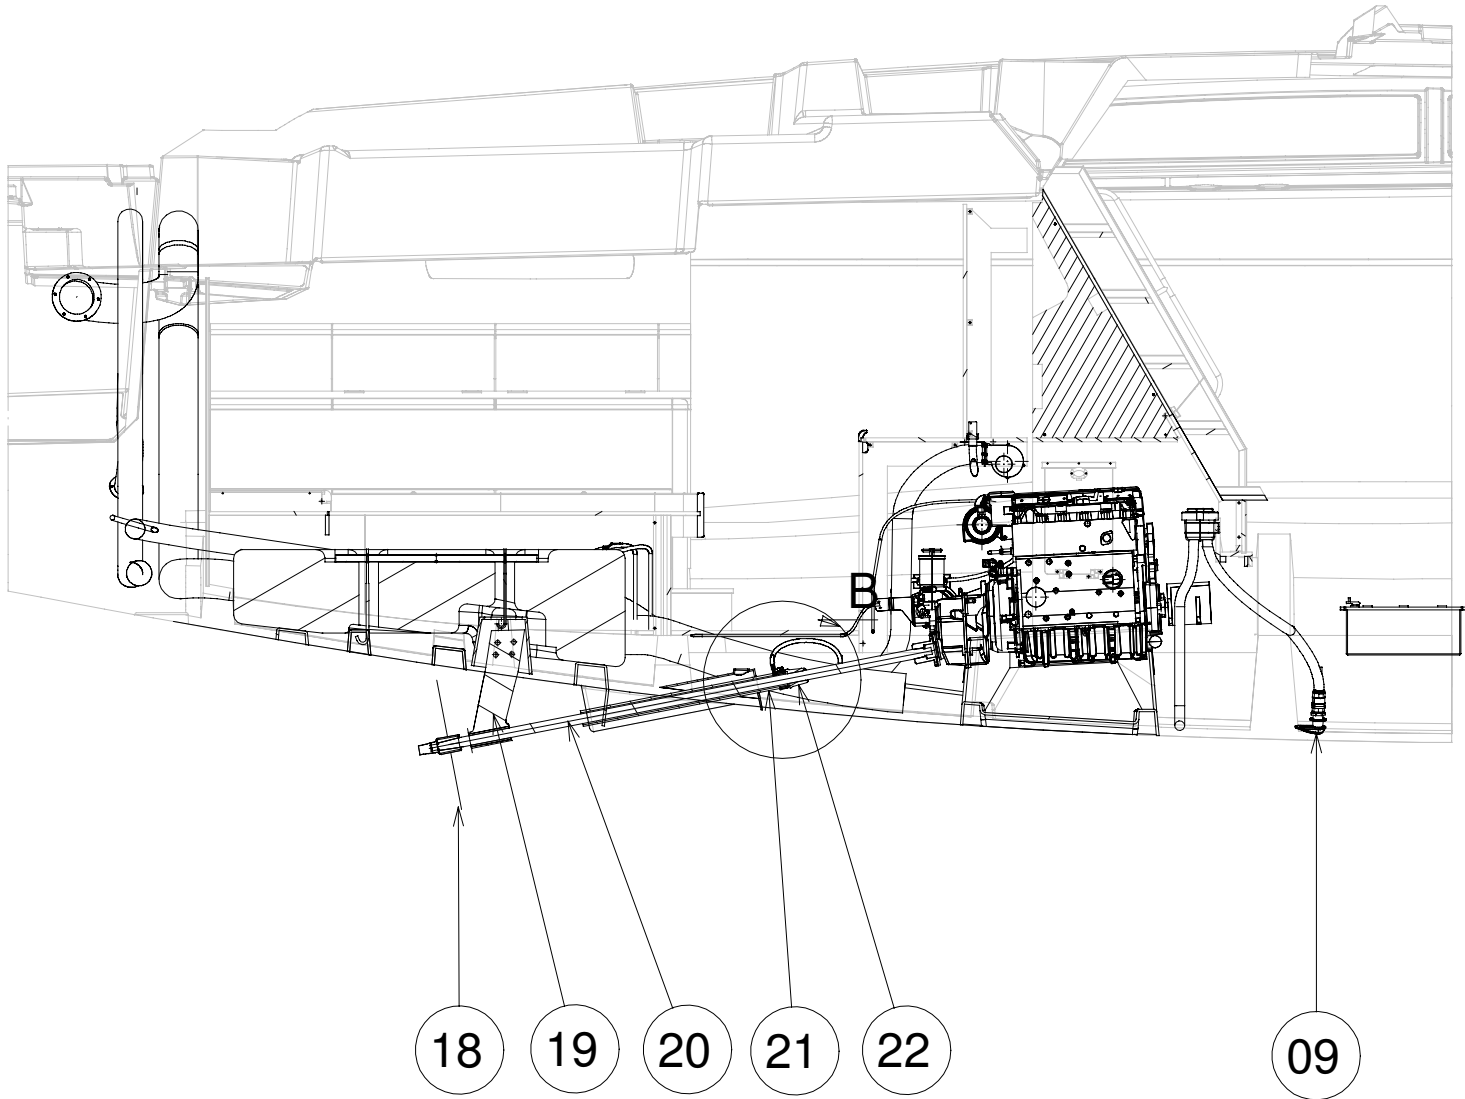


ENGINE FITTING

VIEW - PROPELLER SHAFT

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                        |
|-------------------------|----------------------------------|
| 9                       | Sea water inlet valve for engine |
| 18                      | Propeller                        |
| 19                      | Bearing                          |
| 20                      | Propeller shaft - 40 mm diameter |
| 21                      | Stern frame                      |
| 22                      | Stuffing box                     |

SEEN NEAR


ENGINE

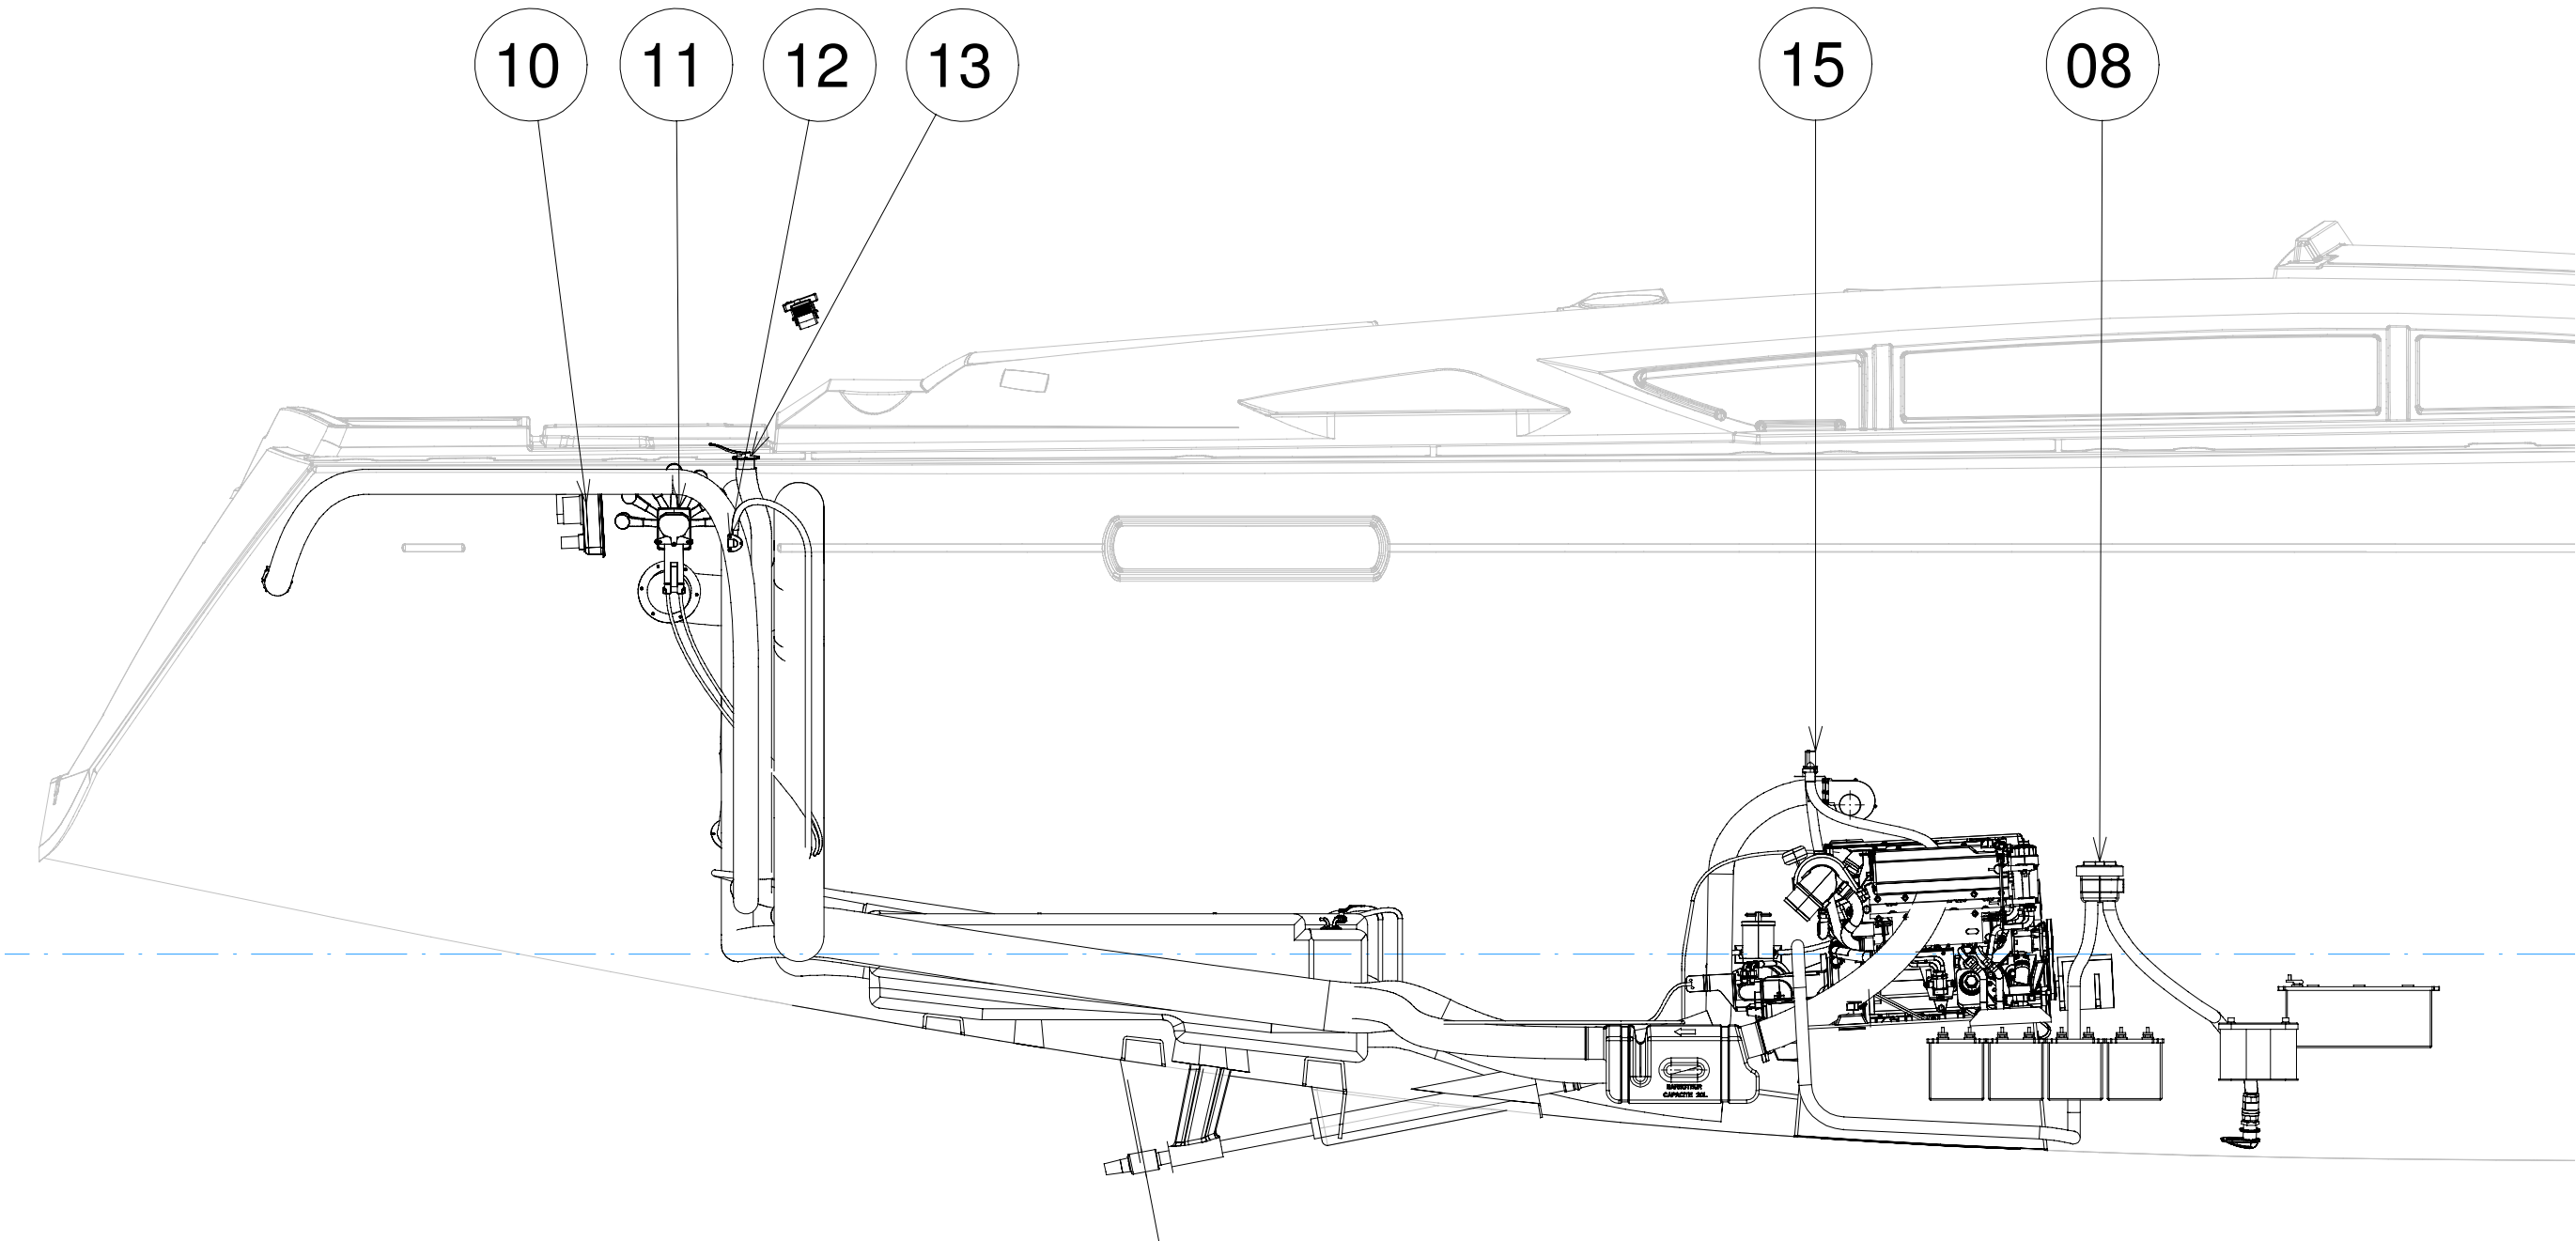

ENGINE FITTING

SEEN NEAR




| REFERENCE ON<br>DIAGRAM | FUNCTIONS           |
|-------------------------|---------------------|
| 8                       | Sea water filter    |
| 10                      | Engine panel        |
| 11                      | Control lever       |
| 12                      | Vent hole           |
| 13                      | Deck filler         |
| 15                      | Anti-siphonage item |

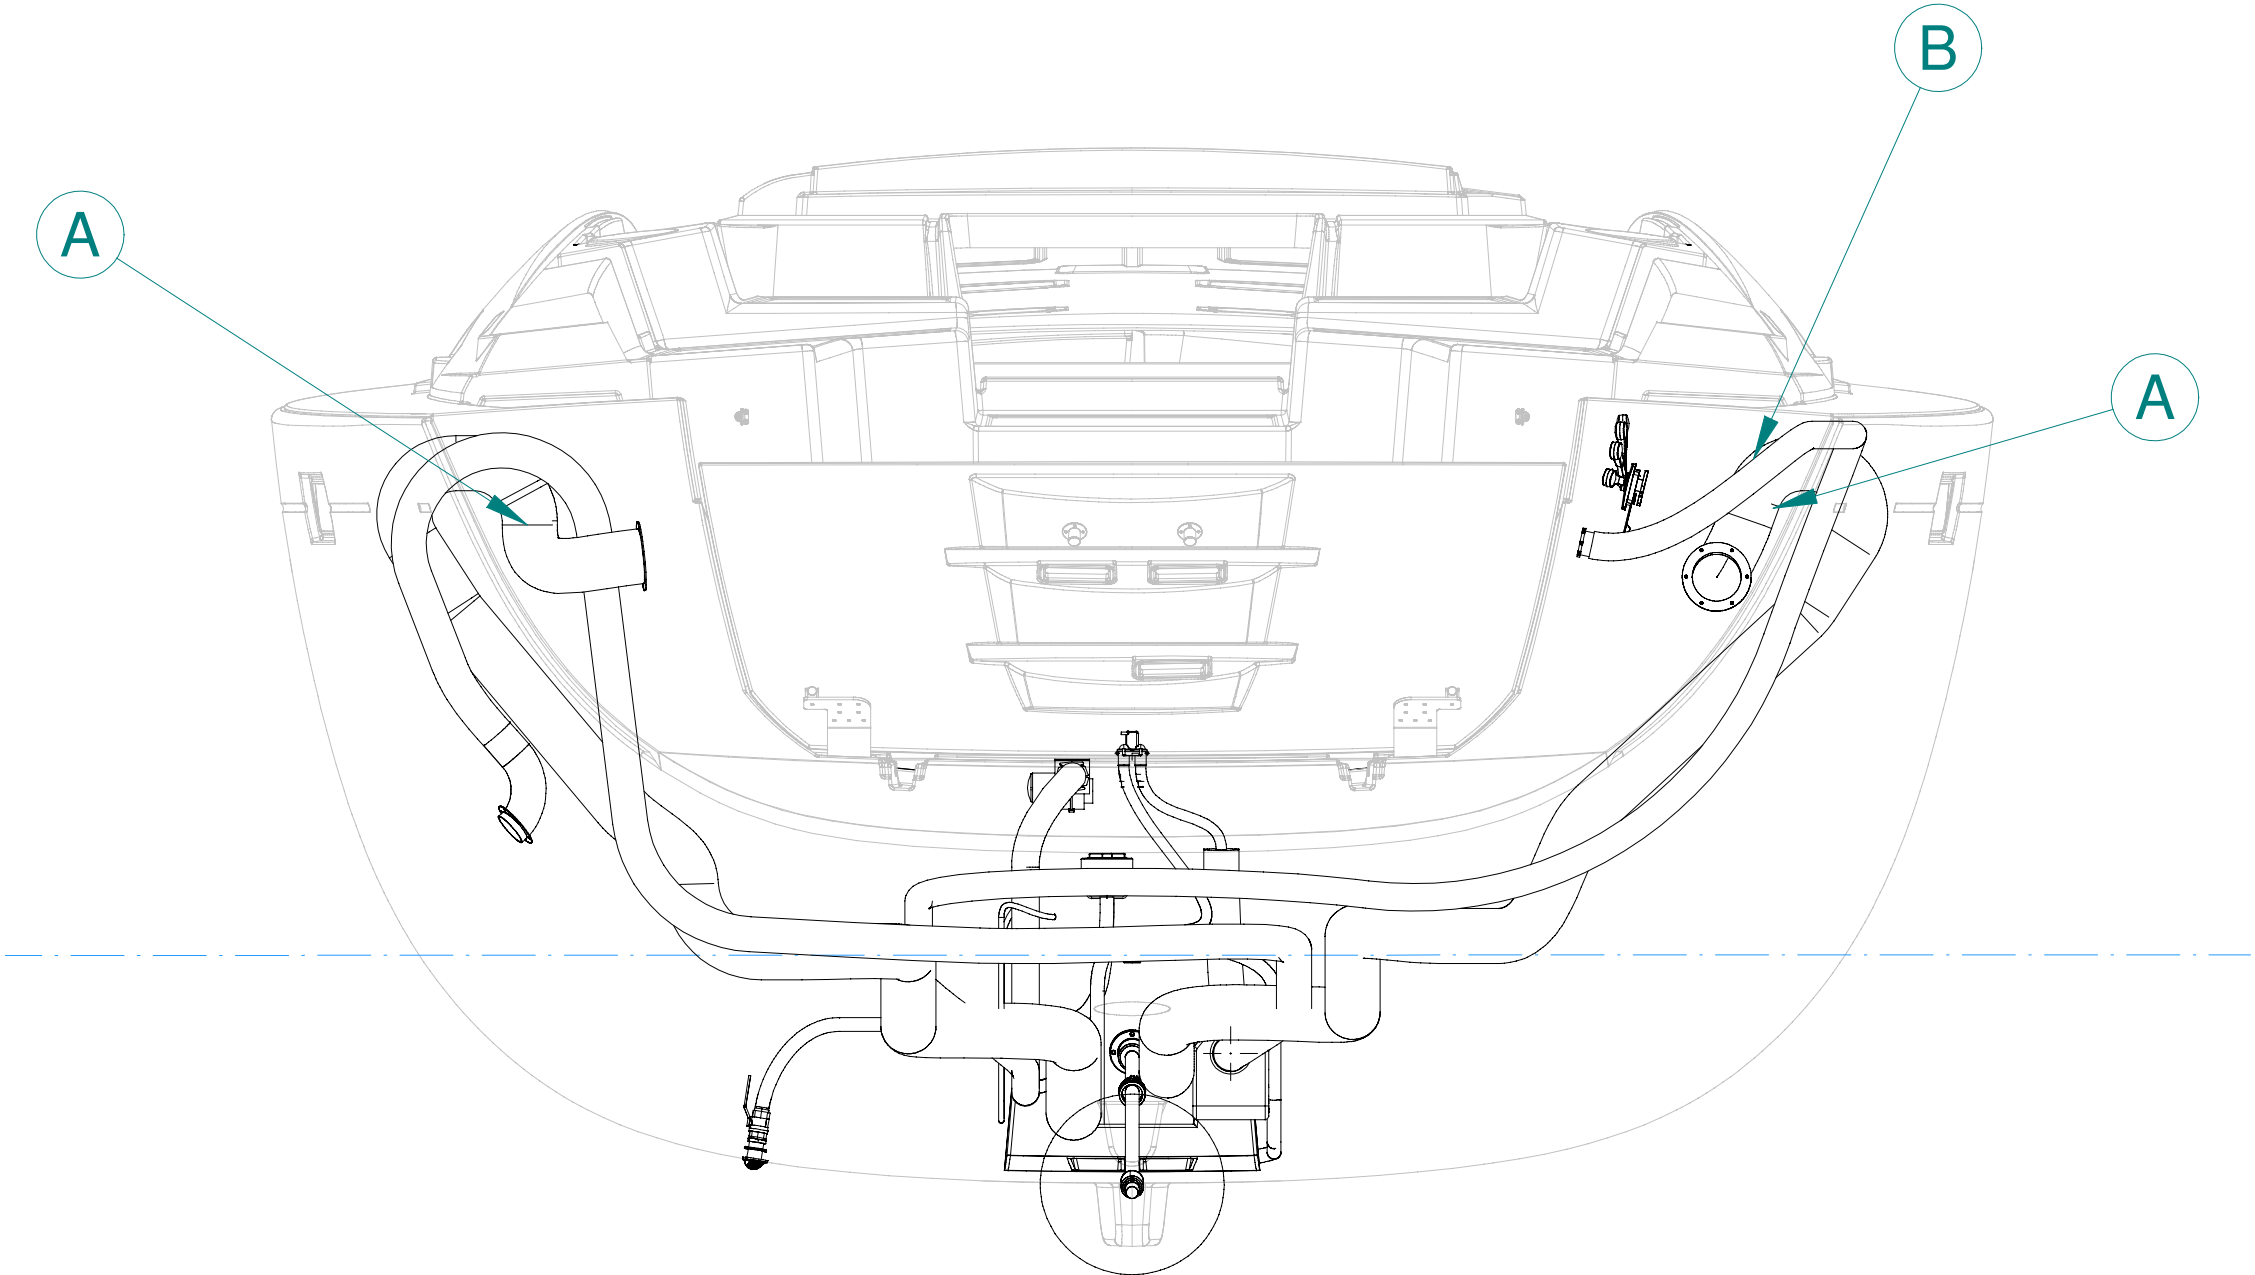

ENGINE FITTING

VIEW BEHIND

| REFERENCE ON<br>DIAGRAM | FUNCTIONS          |
|-------------------------|--------------------|
| A                       | Inlet fresh air    |
| B                       | Hot air extraction |

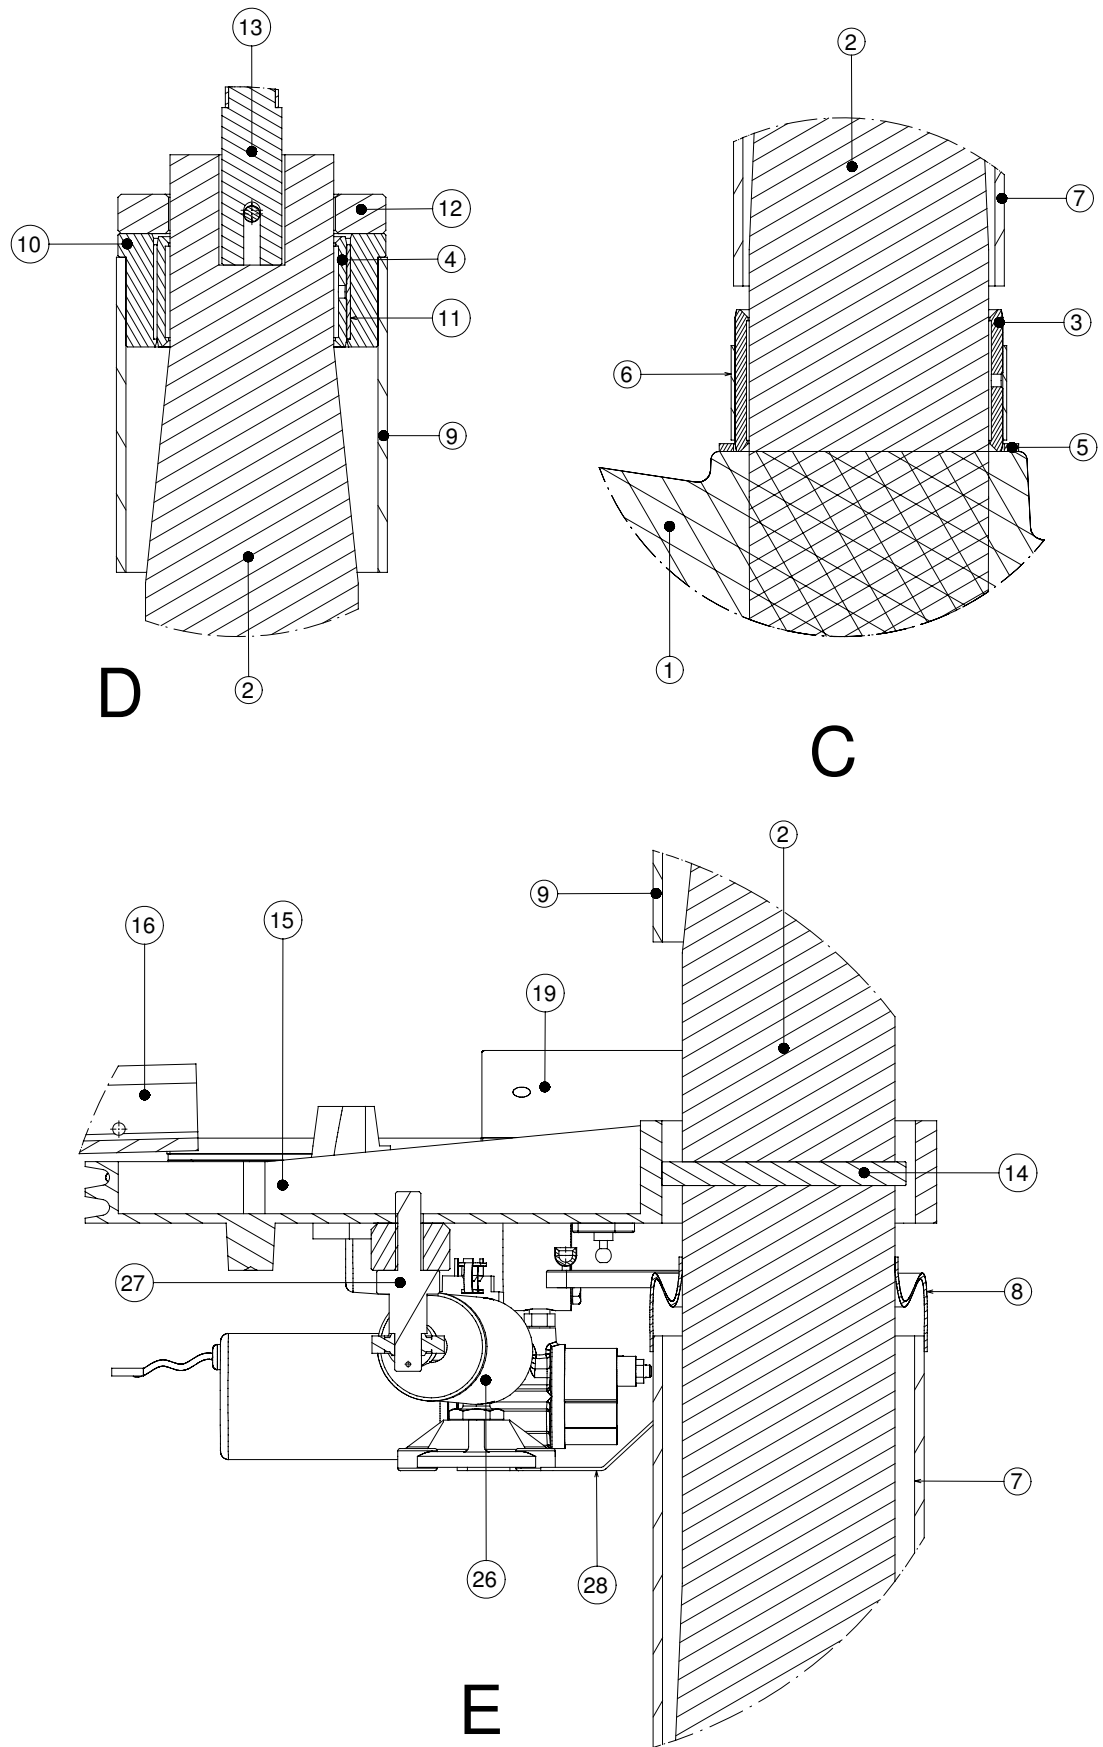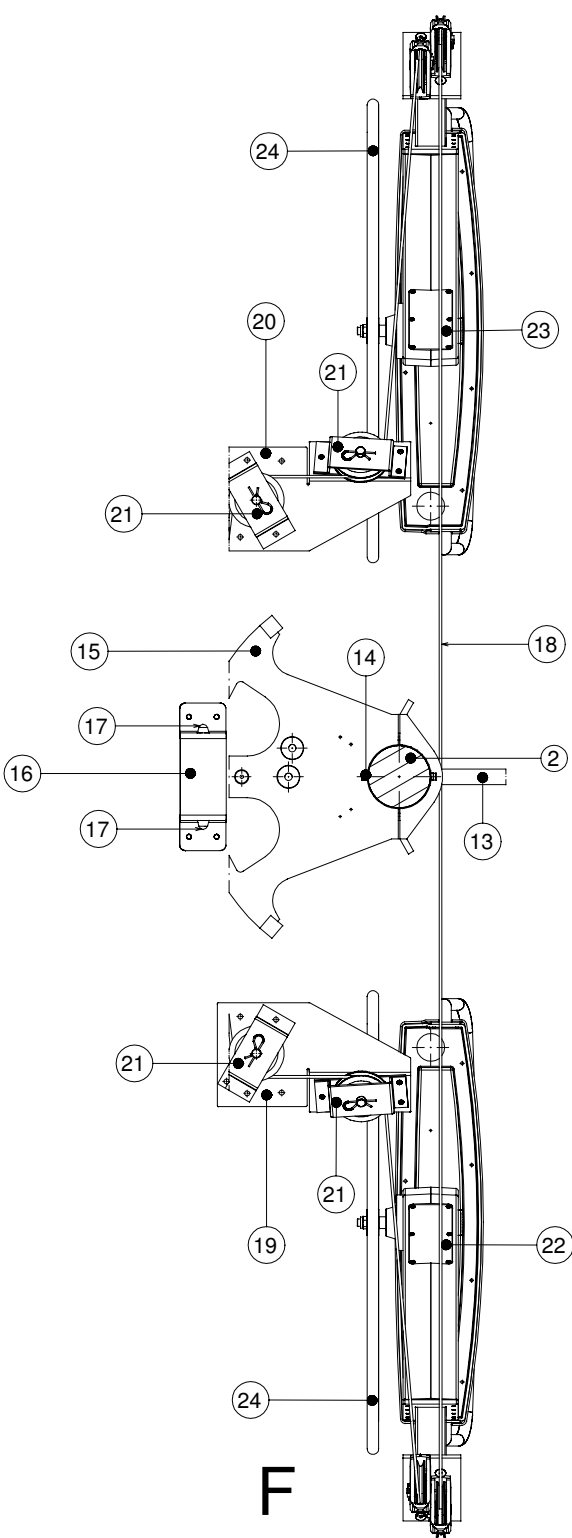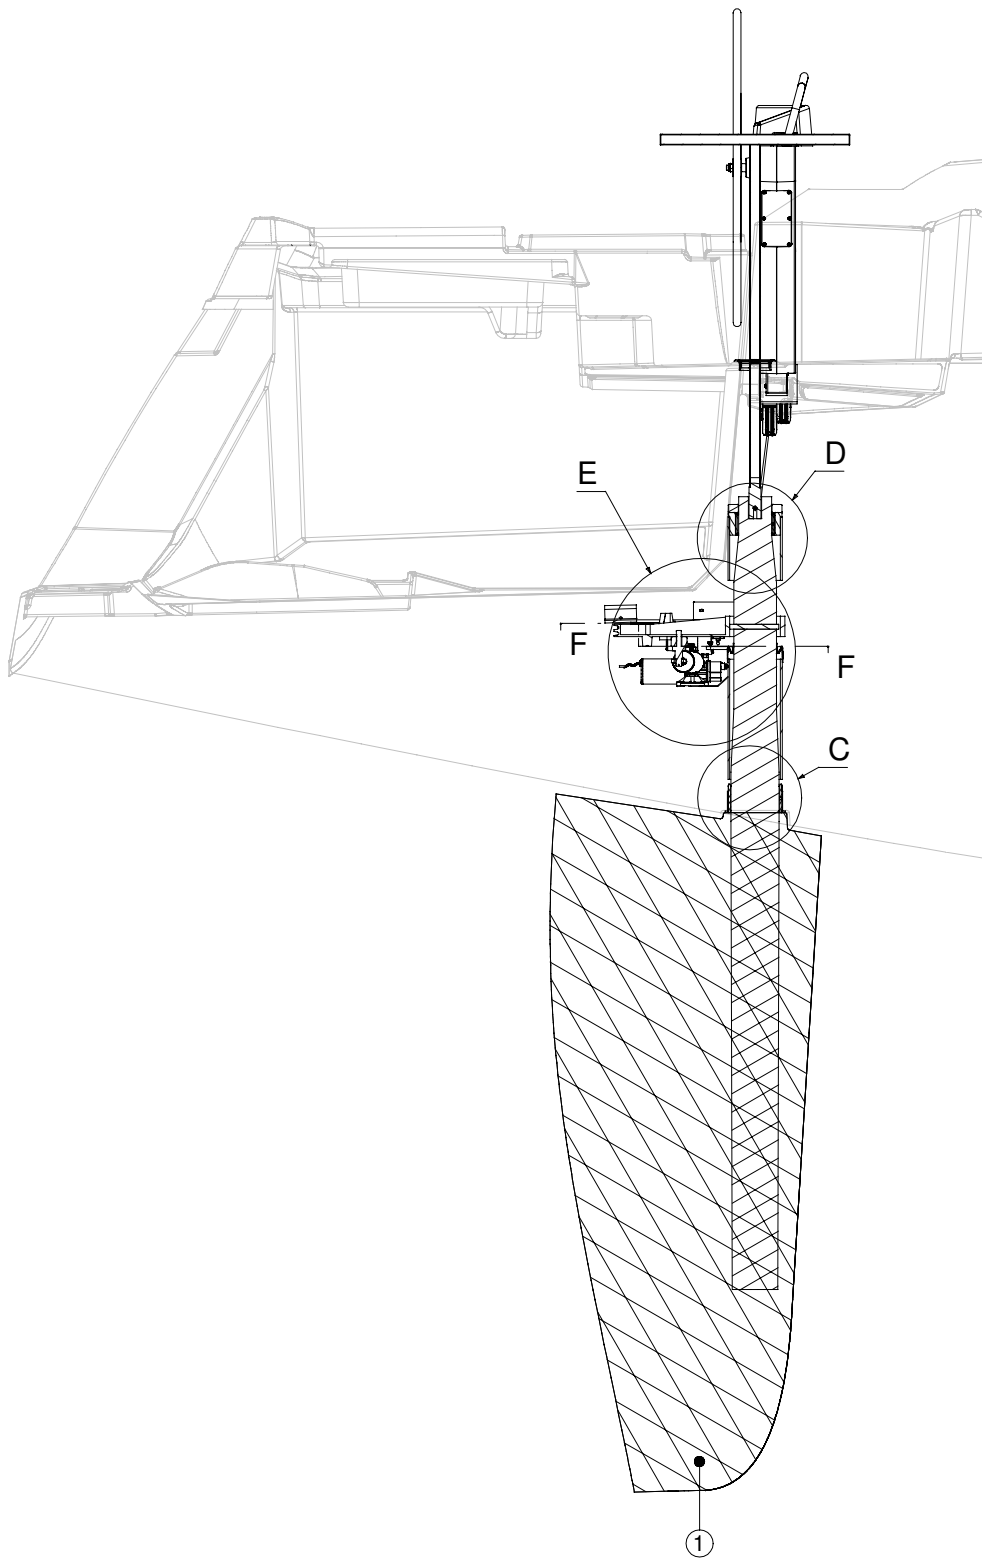

STEERING GEAR

| REFERENCE ON<br>DIAGRAM | FUNCTIONS                      |
|-------------------------|--------------------------------|
| 1                       | Rudder stock                   |
| 2                       | Lower fret                     |
| 3                       | Upper fret                     |
| 4                       | Balance bush                   |
| 5                       | Lower bronze bush              |
| 6                       | Rudder port tube - Lower       |
| 7                       | Seal - Steering cable bellow   |
| 8                       | Rudder port tube - Upper       |
| 9                       | Upper ring                     |
| 10                      | Upper bronze bush              |
| 11                      | Flange                         |
| 12                      | Emergency tiller               |
| 13                      | Pin                            |
| 14                      | Sector                         |
| 15                      | Sector stopper                 |
| 16                      | Silentblocks                   |
| 17                      | Ropes                          |
| 18                      | Support sheaves - To port      |
| 19                      | Support sheaves - To starboard |
| 20                      | Sheaves                        |
| 21                      | Steering Gear - To port        |
| 22                      | Steering Gear - To starboard   |
| 23                      | Steering wheel                 |
| 24                      | Filler cap - Emergency tiller  |
| 25                      | In-line piston                 |
| 26                      | Axis cylinder                  |
| 27                      | Mount - Tiller angle indicator |
| 28                      | Rudder stock                   |