

CONGRATULATIONS ON YOUR CHOICE OF EUROPE'S FINEST PRODUCTION SAILING YACHT....WE WISH YOU MANY YEARS OF ENJOYMENT ON YOUR JEANNEAU.

THIS MANUAL IS DESIGNED TO ASSIST YOU IN THE COMMISSIONING, SERVICE AND MAINTENANCE OF YOUR JEANNEAU SAILBOAT. FOR YOUR CONVENIENCE THIS BOOKLET HAS BEEN DIVIDED INTO THREE (3) SECTIONS.

- 1) COMMISSIONING INSTRUCTIONS/BOAT SYSTEMS
- 2) PARTS GUIDE - DIAGRAMS/PART NUMBERS
- 3) SERVICE RECORD FOR YOUR OWN USE

YOUR JEANNEAU DEALER:

NAME: _____
ADDRESS: _____
CITY: _____
STATE/ZIP: _____
TELEPHONE: _____
REPRESENTATIVE: _____


FANTASIA

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
I. JEANNEAU LIMITED ONE-YEAR WARRANTY.....	1
II. COMMISSIONING INSTRUCTIONS/BOAT SYSTEMS.....	2
DECK FITTINGS.....	3
STANDING RIGGING.....	4
MAST FEATURES.....	5
SHEET AND HALYARD PLAN.....	6
BOOM FEATURES.....	7
WATER AND GAS SYSTEM.....	8
ELECTRICAL SYSTEM.....	9
FUSE PANEL.....	10
INSTRUMENT PANEL.....	11
ENGINE SYSTEM.....	12
CENTERBOARD MECHANISM.....	13
GENERAL COMMISSIONING INSTRUCTIONS.....	14
.....	15
.....	16
III. PARTS GUIDE - DIAGRAMS/PART NUMBERS.....	17
DECK FITTINGS.....	18
WASHROOM AND AFT CABIN.....	19
PULPITS/STANCHIONS.....	20
GLASS PANELS/PORCHES.....	20
SALON/GALLEY.....	21
GAS SYSTEM/MANUAL BILGE PUMP.....	22
WATER SYSTEM.....	23
ELECTRICAL SYSTEM.....	24
FUEL SYSTEM.....	25
SHAFT LINE.....	26
BALLAST/CENTERBOARD.....	27
RUDDER - FIN KEEL/CENTERBOARD.....	28
CUSHIONS.....	29
IV. OWNER'S SERVICE RECORD.....	30
.....	31
.....	32
.....	33
.....	34
.....	35

II. COMMISSIONING INSTRUCTIONS BOAT SYSTEMS


DECK FITTINGS

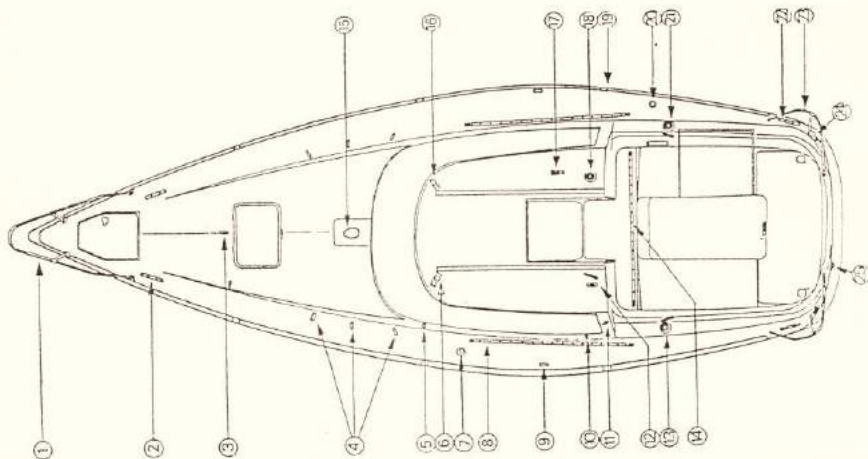


- 1 BOW PULPIT
- 2 FORE MOORING CLEAT
- 3 BOOM DOWNHAUL CHAINPLATE
- 4 SHROUD CHAINPLATES
- 5 BOOM DOWNHAUL EYELET
- 6 FLAT DECK AND SPINNAKER TURNING BLOCKS
- 7 WATER FILL CAP
- 8 GENOA TRACK
- 9 BILGE SHORE CHAINPLATES
- 10 BOOM DOWNHAUL CHAINPLATE
- 11 CLAM CLEAT (BOOM DOWNHAUL)
- 12 CLAM CLEAT AND SPINNAKER TURNING BLOCK CLEATS
- 13 SHEET WINCH (PORTSIDE)
- 14 MAIN SHEET TRACKS
- 15 MAST STEP
- 16 FLAT DECK AND SHEET TURNING BLOCKS
- 17 SHEET TURNING BLOCK STOPS
- 18 HALYARD WINCH
- 19 STANCHION BASE
- 20 FUEL FILL CAP
- 21 SHEET WINCH (STARBOARD)
- 22 AFT MOORING CLEAT
- 23 STERN PULPIT
- 24 BACKSTAY CHAINPLATE
- 25 OARLOCK SUPPORT

STANDING RIGGING

- 1 BACKSTAY
- 2 BOOM TOPPING LIFT
- 3 MAINSHEET TACKLE
- 4 BOOM DOWNHAUL VANG
- 5 UPPER SHROUD
- 6 LOWER AFT SHROUD
- 7 LOWER FORE SHROUD
- 8 STAY

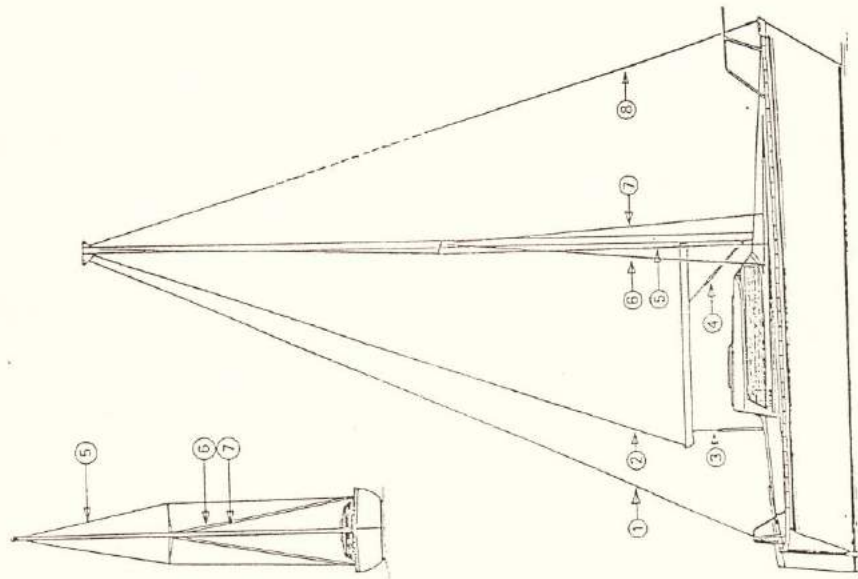


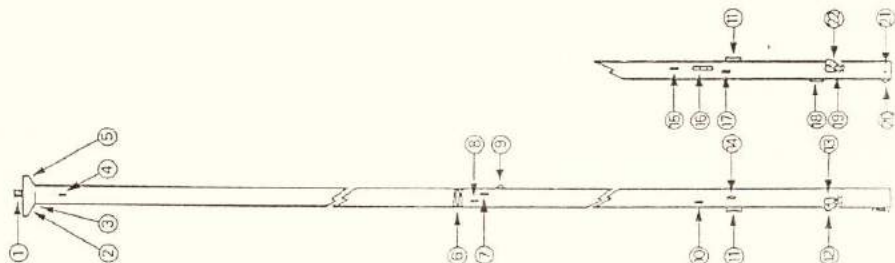

MAST FEATURES


- 1 MAST LIGHT
- 2 MOORING BACKSTAY
- 3 MAIN HALYARD TURNING BLOCKS
AND BOOM TOPPING LIFT
- 4 UPPER SHROUD MOORING
- 5 MOORING STAY
- 6 SPREADER
- 7 LOWER FORE MOORING SHROUDS
- 8 LOWER AFT MOORING SHROUDS
- 9 BOOM TOPPING LIFT BRACKET
- 10 MAIN HALYARD OUTLET
- 11 GOOSENECK
- 12 MAIN HALYARD TURNING BLOCK
- 13 GENOA HALYARD TURNING BLOCK
- 14 GENOA HALYARD OUTLET
- 15 BOOM TOPPING LIFT OUTLET
- 16 BOOM TOPPING LIFT CLEAT
- 17 SPINNAKER HALYARD OUTLET
- 18 BOOM TRACK AND SLIDE
- 19 BOOM TOPPING LIFT TRACK
AND SLIDE
- 20 TRACK SLIDE STOP
- 21 ELECTRICAL WIRING THREADER
- 22 SPINNAKER HALYARD TURNING
BLOCK


SHEET AND HALYARD PLAN

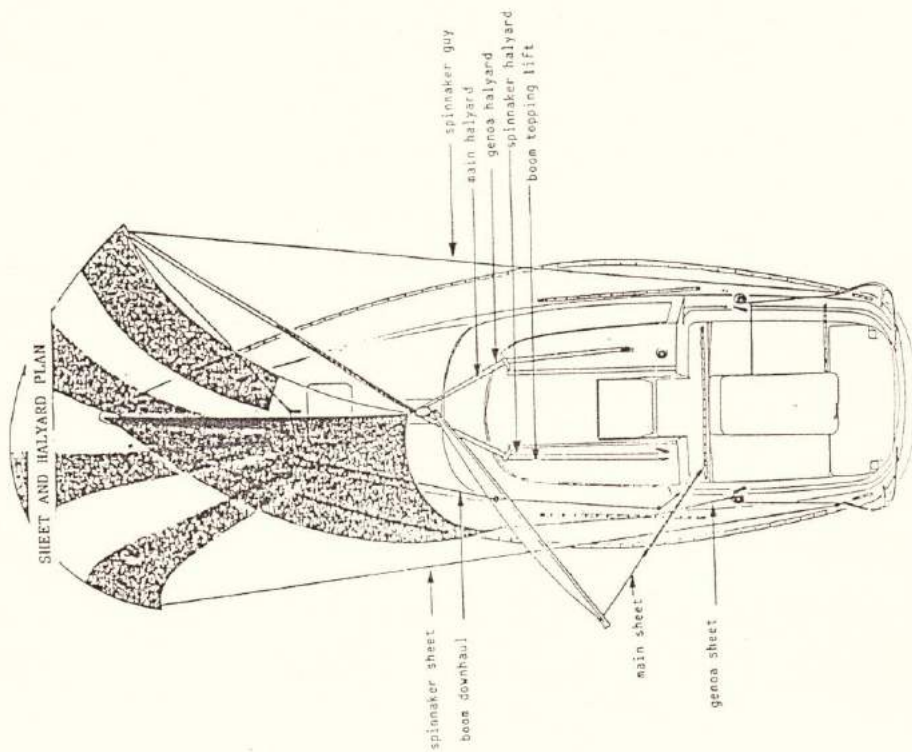

BOOM FEATURES


- 1 CAM STOPS (2 REEF BANDS, 1 CLEW HOIST)
- 2 DOUBLE BLOCK
- 3 DOUBLE BLOCK
- 4 BOOM VANG MOORING BRACKET
- 5 REEF BAND BRACKETS
- 6 TOPPING LIFT BRACE
- 7 BOOM VANG BRACKET
- 8 DOUBLE BLOCK
- 9 DOUBLE BLOCK

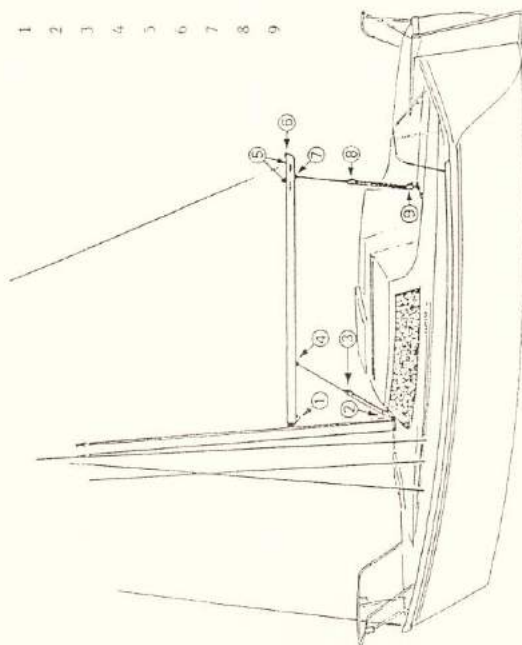

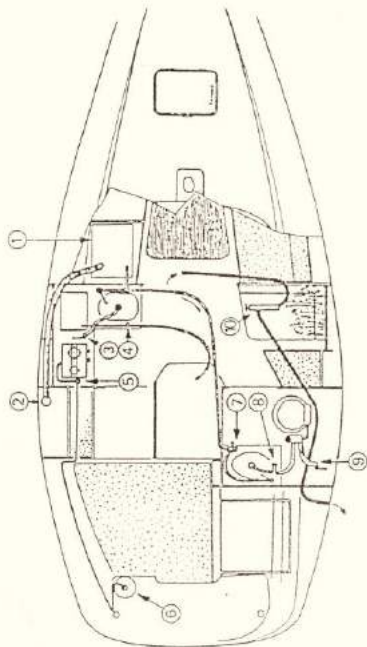

WATER AND GAS SYSTEM


- 1 WATER TANK
- 2 WATER FILL GAP
- 3 BRONZE SEACOCK - KITCHEN SINK
- 4 ICEBOX DRAIN TAP
- 5 GAS PILOT LIGHT VALVE
- 6 GAS BOTTLE
- 7 WASHROOM FOOT PUMP
- 8 BRONZE SEACOCK FOR WASHROOM - SEAWATER SUPPLY
- 9 MARINE HEAD SEACOCK
- 10 MANUAL BILGE PUMP

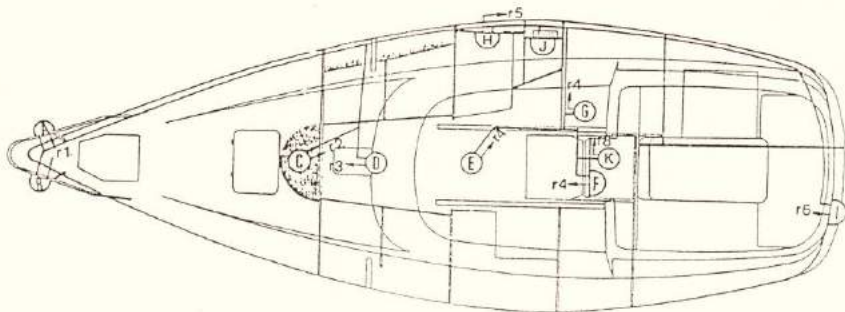

ELECTRICAL SYSTEM

- | | |
|---|--|
| A | GREEN NAVIGATIONAL LIGHT - FUSE # 1 - RED - r1 |
| B | RED NAVIGATIONAL LIGHT - FUSE # 1 - RED - r1 |
| C | FORE CABIN DOME CEILING LIGHT - FUSE # 10 - BROWN - r2 |
| D | DECK LIGHT - FUSE # 4 - WHITE - r3 |
| | MAST LIGHT - FUSE # 2 - PURPLE - r3 |
| | MOORING LIGHT - FUSE # 3 - ORANGE - r3 |
| E | SALON DOME CEILING LIGHT - FUSE # 8 - ORANGE - r4 |
| F | AFT CABIN DOME CEILING LIGHT - FUSE # 9 - GREY - r4 |
| G | WASHROOM DOME CEILING LIGHT - FUSE # 9 - GREY - r4 |
| H | CHART LECTERN - FUSE # 7 - RED - r5 |
| I | STERN LIGHT - FUSE # 1 - RED - r6 |
| J | NAVIGATOR OUTLET - FUSE # 7 - GREY - r7 |
| K | ELECTRICAL BILGE PUMP - FUSE # 5 - RED - r8 |
| | (depending on type of engine) |
| L | COMPASS LIGHT - FUSE # 5 |

FUSE PANEL

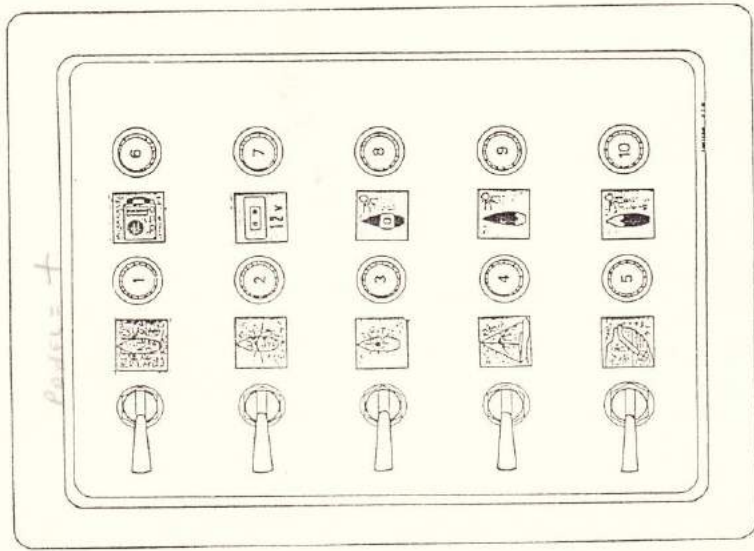

Model No. 10-3441


Boat -

Main Battery #1

aux battery #2

- 1 GREEN NAVIGATIONAL LIGHT
- 2 RED NAVIGATIONAL LIGHT
- 3 STERN LIGHT
- 4 MAST LIGHT
- 5 MOORING LIGHT
- 6 DECK LIGHT
- 7 ELECTRICAL BILGE PUMP
- 8 COMPASS LIGHT
- 9 RADIO RECEIVER/TELEPHONE
- 10 CHART LECTERN/NAVIGATOR OUTLET
- 11 SALON DOME CEILING LIGHT
- 12 AFT CABIN DOME CEILING LIGHT
- 13 WASHROOM DOME CEILING LIGHT
- 14 FORE CABIN DOME CEILING LIGHT


INSTRUMENT PANEL

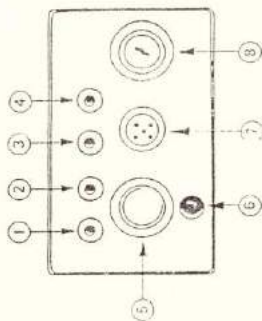


1/4 INCH
1 CM

- 1 PANEL BUTTON
- 2 WATER TEMPERATURE GAUGE
- 3 OIL PRESSURE GAUGE
- 4 ALTERNATOR GAUGE
- 5 STARTER BUTTON
- 6 STOP ENGINE CORD
- 7 SOUNDING ALARM
- 8 ENGINE IGNITION

ENGINE SYSTEM

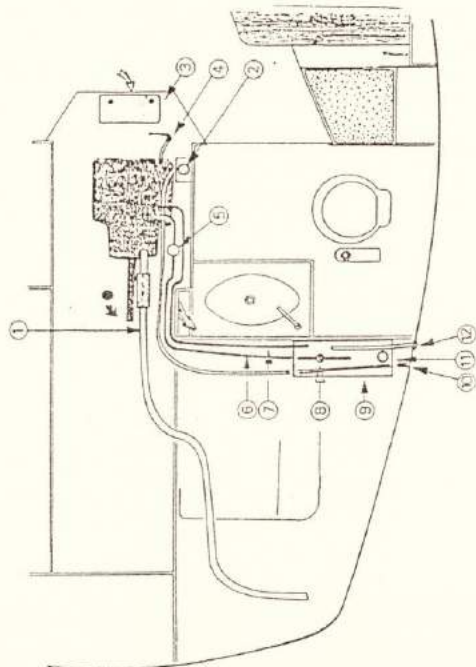

- 1 EXHAUST SYSTEM
 - 2 ELECTRICAL BILGE PUMP
 - 3 12 VOLT BATTERY
 - 4 WATER COOLED ENGINE HOSE
 - 5 FUEL FILTER
 - 6 FUEL FEEDER
 - 7 FUEL RETURN
 - 8 ON/OFF VALVE
 - 9 FUEL TANK
 - 10 BILGE PUMP OUTLET
 - 11 FUEL CAP
 - 12 FRESH AIR INTAKE
- ACCESS TO STUFFING BOX UNDERNEATH
AFT CABIN CUSHIONS

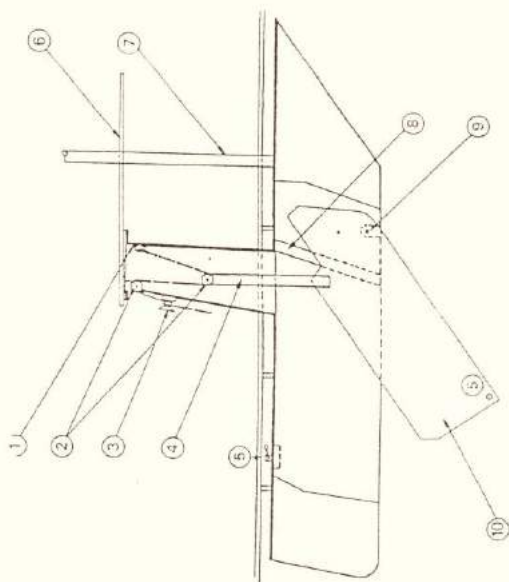

CENTERBOARD MECHANISM

- 1 BRACKET
- 2 PULLEYS
- 3 WINCH
- 4 RAISING ARM
- 5 SEACOCK
- 6 FLAT BOARD
- 7 SHORE PROP
- 8 FRICTION PLATE
- 9 CENTERBOARD AXLE
- 10 CENTERBOARD

IMPORTANT NOTE: WHEN NOT IN USE, IT IS RECOMMENDED THAT YOU DO NOT EXCESSIVELY BLOCK THE CENTERBOARD IN A HIGH POSITION, AND TO THUS ALLOW A MEAN TO MANEUVER THE CENTERBOARD FOR THE NEXT SEASON.

BEFORE PUTTING THE BOAT IN WATER:

- ANTICIPATE THE EVENTUAL INSTALLATION OF THE DEPTH SOUNDER AND SPEEDOMETER IF YOUR BOAT WILL BE EQUIPPED WITH THESE DEVICES.
- CHECK THE ENGINE OIL LEVEL AS PER YOUR ENGINE MAINTENANCE MANUAL.
- IT IS NECESSARY TO WATERPROOF, USING A LUBRICANT, THE BOW PULPIT AS WELL AS ANY OPTIONAL ACCESSORIES.
- THE CONNECTING OF THE LIGHTS IS DONE BY THE DOMINO SITUATED IN THE COCKPIT WELL.
- ALL SEACOCKS (WASHROOM - ENGINE) SHOULD BE CLOSED.
- THE SIDEWAYS POSITION OF THE SEACOCK LEVER INDICATES THAT THEY ARE CLOSED.
- SECURE THE BOAT FORE AND AFT SO AS TO PREVENT THRASHING FROM THE SIDES OF THE DOCK.

UPON PUTTING THE BOAT IN WATER:

- MAKE SURE THE DEPTH SOUNDER AND SPEEDOMETER ARE WATERTIGHT.
- CHECK THE STUFFING BOX FOR LEAKAGE.
- OPEN THE SEACOCKS AND MAKE SURE THEY ARE WATERTIGHT WITH THE CORRESPONDING VALVE.

BEFORE STARTING THE ENGINE:

OPEN THE FUEL TANK VALVE.

ENGAGE THE ELECTRICAL CIRCUIT BY ACTIVATING THE BATTERY.

BEFORE STARTING THE ENGINE, DISENGAGE THE REVERSE IN ORDER TO OBTAIN IDLE POSITION.

TO START THE ENGINE, CONSULT THE ENGINE MANUAL.

AS THE ENGINE TURNS OVER, CHECK THE COOLING SYSTEM, THEN LET ENGINE WARM UP A FEW MINUTES, AND PUT FORWARD AND REVERSE INTO GEAR SLOWLY.

CHECK THE ENGINE WATER COOLANT TO MAKE SURE IT IS COMING THROUGH OUTLET - IF THIS IS NOT THE CASE, STOP THE ENGINE IMMEDIATELY AND CHECK THE WATER CIRCUITS.

NOTE: NEVER CUT THE ELECTRICAL CIRCUITS WHILE ENGINE IS RUNNING AS THIS WILL INSTANTLY DO DAMAGE TO THE SYSTEM.

ENGINE

REFER TO MANUAL FURNISHED IN THE BOAT.
IT IS IMPORTANT TO READ THIS CAREFULLY AS IT WILL
GIVE DETAILED EXPLANATIONS ON THE ENGINE FUNCTIONS
AND HOW TO KEEP THE ENGINE IN GOOD RUNNING CONDITION.

 
PROPELLOR

DO NOT CHANGE THE PROPELLOR WITHOUT CONSULTING
YOUR DEALER.

FUEL FILTER

(CLEANING THE FUEL FILTER.)

- COMPLETELY UNSCREW THE SMALL SCREW
- REMOVE
- EMPTY AND CLEAN
- CHANGE FILTER IF NECESSARY
- REASSEMBLE



STUFFING BOX

AS THE SHAFT TURNS, WATER SHOULD DRIP FROM THE
STUFFING BOX APPROXIMATELY EVERY 5 - 10 SECONDS
AND BE PRACTICALLY WATERTIGHT WHEN DRIPPING
STOPS (A SMALL AMOUNT OF LEAKAGE CAN BE TOLERATED).

 
TO ADJUST:

- TIGHTEN OR LOOSEN THE TWO (2) SCREWS
- MAKE SURE THE TIGHTENING STRING REMAINS PARALLEL
TO THE BODY OF THE STUFFING BOX

CAREFUL!! NEVER OVER TIGHTEN THE STUFFING BOX
AS THIS WILL VERY RAPIDLY DETERIORATE
THE THREADS SITUATED IN THE INTERIOR.

AT THE END OF THE SEASON, TAKE THE TIGHTENING
STRING COMPLETELY OUT AND CHECK THE CONDITION
OF THE BRAIDING. IF IT IS VERY DRY, OR IF THE
STRING COMES UP AGAINST THE BODY OF THE STUFFING
BOX, IT SHOULD BE CHANGED.

NOTE: THIS PROCEDURE SHOULD ONLY BE DONE OUT
OF THE WATER.



TO DISENGAGE THE REVERSE:

SHIFT INTO NEUTRAL AND PULL THE
BUTTON SITUATED ON THE BASE OF
THE GEAR BOX. IN THIS POSITION,
ONLY THE THROTTLE IS ACTIVATED.



EXHAUST:

EACH YEAR, CHECK THE EXHAUST TANK
AND CHANGE IF NECESSARY


THE BUILDER'S IDENTIFICATION PLATE IS AFFIXED TO THE
BOAT AND MUST HAVE THE FOLLOWING INFORMATION:

- YEAR OF CONSTRUCTION
- TYPE OF BOAT
- SERIES NUMBER
- NAVIGATION CATEGORY
- MAXIMUM HORSEPOWER
- NUMBER OF PERSONS ALLOWED ON BOAT
- MERCHANT MARINE APPROVAL NUMBER
- U.S. HULL I.D. NUMBER


III. PARTS GUIDE
DIAGRAMS/PART NUMBERS

DECK FITTINGS

125245	ALUMINUM STEM FITTING
125310	STANDARD 168 CHAIN RETAINED AXLE
125724	FOREROLLER
069245	FOREROLLER AXLE + 1 SCREW NUT (078030)
133314	FORE & AFT HOORING CLEATS W/FLANGE
122622	BULLDOG CLIP
125807	S/S EYELET
033902	WATERPROOF EYELET
137810	MAST STEP
122689	SNAPSHACKLE AND BULLDOG CLIP
129445	PLASTIC TRACK END CAP
128769	BLACK ALUMINUM TRAVELLER SLIDE
128967	ALUMINUM JIB TRACK
124305	VERTICAL OPEN STOP CONDUCTOR
130104	TRACKSLIDE ADJUSTER
130344	TRACK END CAP
129981	TRAVELLER AND DELRIN FOREROLLERS
130526	MAINSHEET TRACK
131102	FLAT DECK DOUBLE TURNING BLOCK
126417	DECK HANDRAIL
124727	DOUBLE VERTICAL CAM CLEAT
132035	14 CS WINCH
131979	30C WINCH
142307	WINCH HANDLE BOX
142802	BLACK PLASTIC MINI-HAMSE HOLE
133124	ALUMINUM CLEAT
122705	SHAPSHACKLE AND BULLDOG CLIP
141945	CARLOCK SUPPORT
141903	CARLOCK
113100	PLASTIC GRILL FOR VENTILATORS

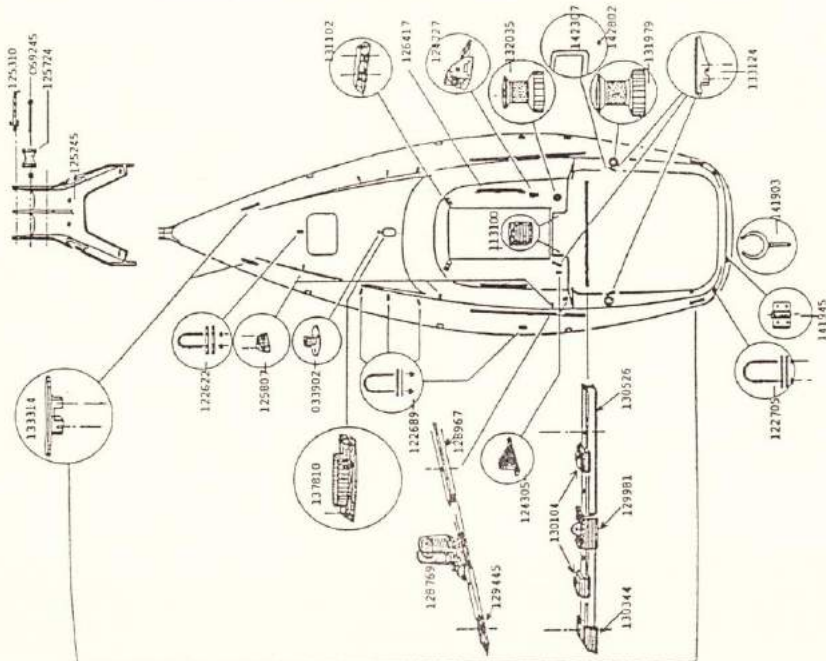


PULPITS/STANCHIONS

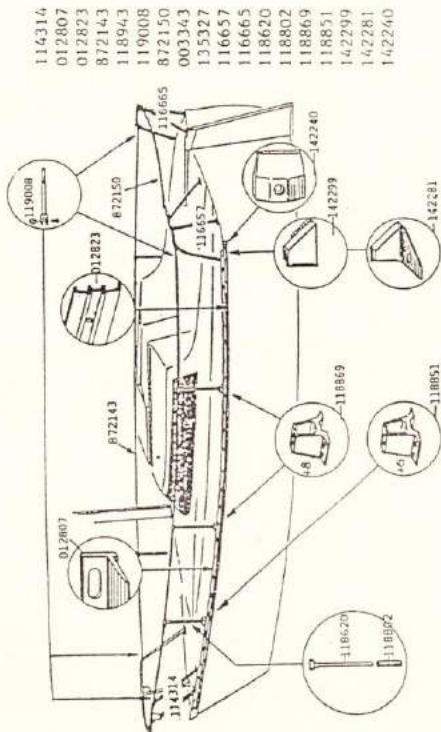

GLASS PANELS/PORTHOLES


- 083576 SHOKED PLEXIGLASS STRIP
- 082230 DECK HATCH COVER
- 112532 ROUND ALUMINUM VENTILATOR (FOR ABOVE)
- 082388 PORTHOLE (AFT CABIN)
- 035535 DECORATING STRIPES



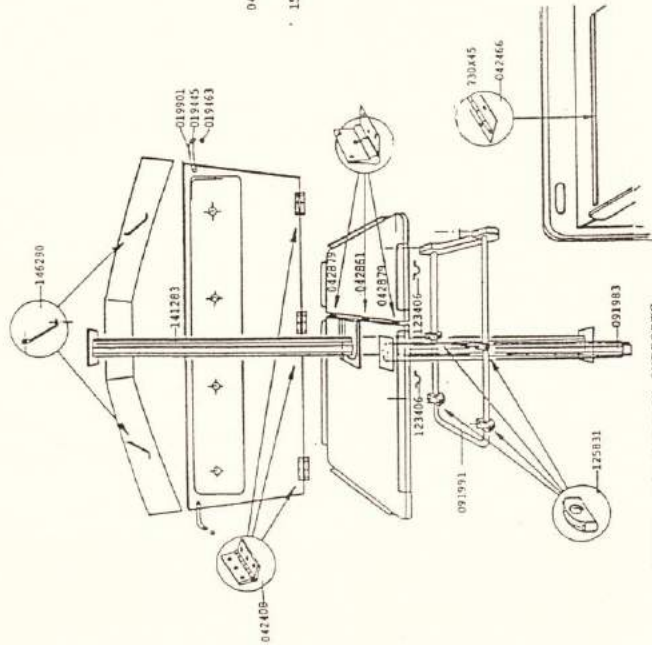

S/S STORAGE SUPPORTS

- 146200 PLASTIC HINGE
- 042608 BACKREST HOLD STRAP
- 019901 SPRING GLASP
- 019465 END CLASP
- 019463 LEFT HINGE
- 042879 RIGHT HINGE
- 042861 S/S EYELET
- 125831 TABLE SUPPORT
- 091991 S/S BRACKET + RUBBER WASHER
- 123606 BRASS HINGE
- 062366 S/S TABLE PROP
- 141281 TABLE INCH
- 091983

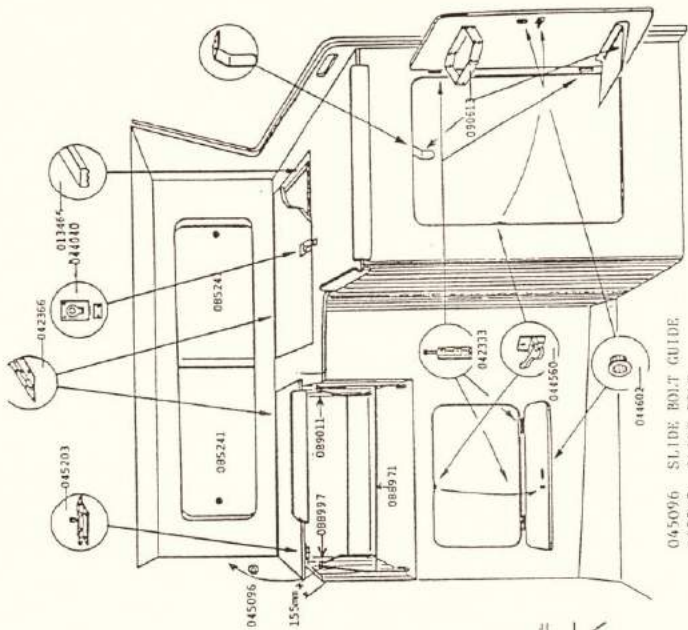


SLIDE BOLT GUIDE

- 045096 SLIDE BOLT
- 045203 BRASS HINGE
- 042366 SINK RING
- 044040 TIGER JOINT
- 013466 FLEXIGLASS SLIDING PORTHOLE
- 085241 STOVE FRAME UNIVERSAL JOINT
- 088971 LEFT SUPPORT FOR ABOVE
- 088997 RIGHT SUPPORT FOR ABOVE
- 089011 BRASS HINGE
- 042333 BLACK PLASTIC LATCH
- 046360 MAINTAIN OVEN HANDLE
- 044602 PLASTIC WASTE/EGG HOLDER
- 090613

GAS SYSTEM/MANUAL, BILGE PUMP

- 036566 BILGE PUMP SUPPORT CLAMPS
- 037184 BILGE PUMP
- 112128 PLASTIC RINGED PIPE
- 039453 PLASTIC THROUGH HULL DISCHARGE
- 088625 ENAMELLED TWO-BURNER STOVE
- 041707 FAUCET
- 089003 GAS VALVE FOR STOVE
- 088542 PRESSURE REDUCER
- 088401 2 KG. GAS BOTTLE
- 003939 ELASTIC GASKET
- 141804 S/S HOOR FOR ABOVE
- 123406 S/S BRACKET


FANTASIA - SPARE PARTS CATALOG

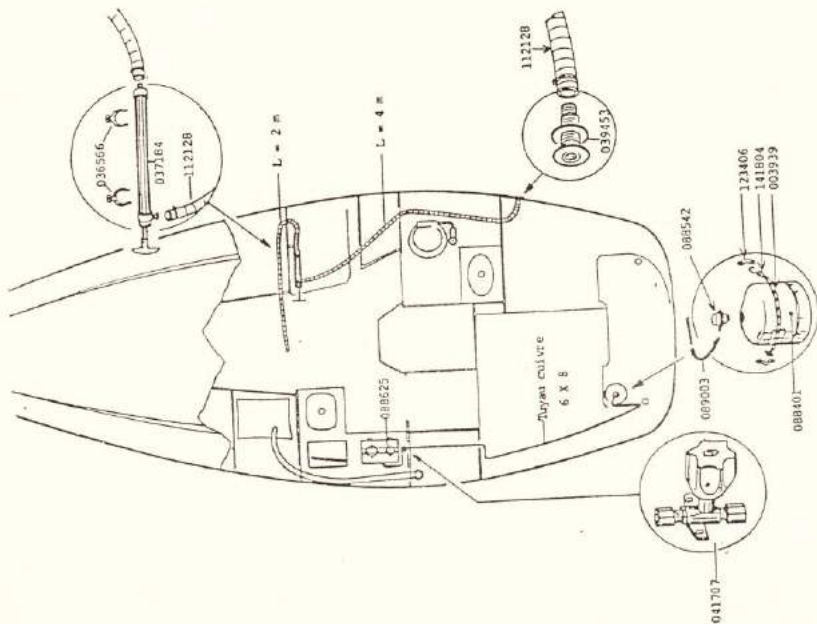

ELECTRICAL SYSTEM

- RED RUNNING LIGHT (PORT)
GREEN RUNNING LIGHT (STARBOARD)
BATTERY POSITIVE TERMINAL
BATTERY NEGATIVE TERMINAL
12V BATTERY
DOME LIGHT
CHART LECTERN LAMP
ELECTRICAL OUTLET
MOUNTED ELECTRICAL PANEL
PLASTIC FRAME
TWO-POSITION SWITCH
13 HOLE RETURN STRIP
DOME LIGHT
ELECTRIC BILGE PUMP
WHITE STERN LIGHT


- 027508
027516
030825
030833
026401
026955
026807
033043
844506
033191
031602
031849
026948
046409
027987

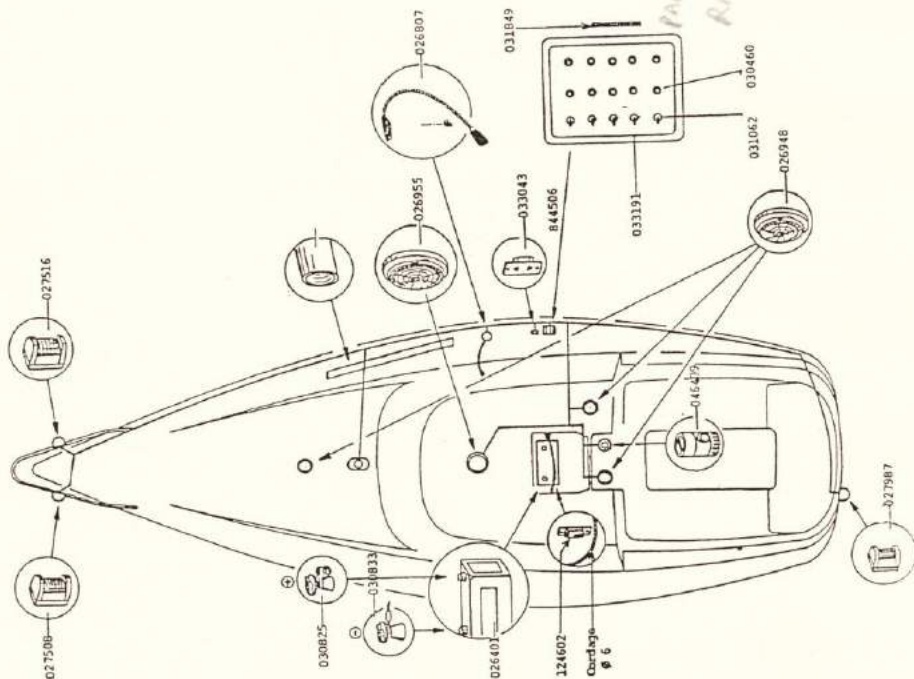

PAPER = +
RAGG = ROSTO + BUNGE -


FUEL SYSTEM

- 041103 FUEL TANK - 27 LITER
- 036780 PLASTIC FUEL FILL CAP
- 036848 STOPPER AND CHAIN FOR ABOVE
- 111880 BILGE PUMP DISCHARGE HOSE
- 038471 THROUGH HULL FITTING
- 110908 FUEL HOSE
- 111401 FUEL FILL HOSE
- 110965 FRESH AIR INTAKE HOSE
- 039503 S/S VENT HOLE
- 041764 FUEL VALVE
- 046409 ELECTRIC BILGE PUMP
- 169037 FUEL FILTER WITHOUT PUMP
- 168752 EXHAUST TANK
- 161166 STOP CORD
- 158907 GEAR BOX
- 160648 ACCELERATOR CABLE
- 160622 REVERSE CABLE
- 112409 EXHAUST PIPE
- 168542 THROUGH HULL EXHAUST

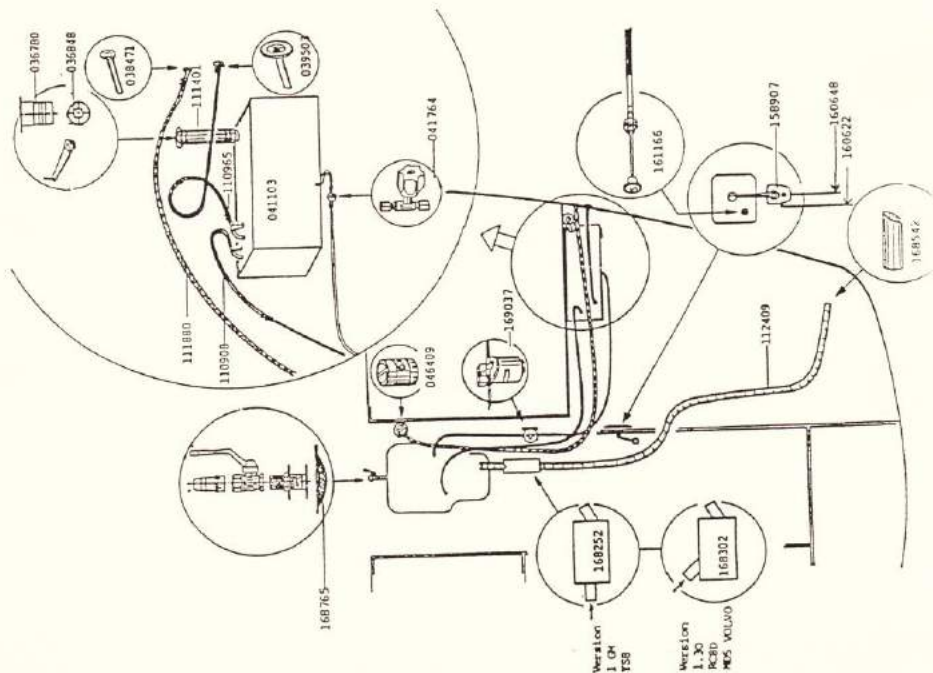


SHAFT LINE

Version MD5 VOLVO

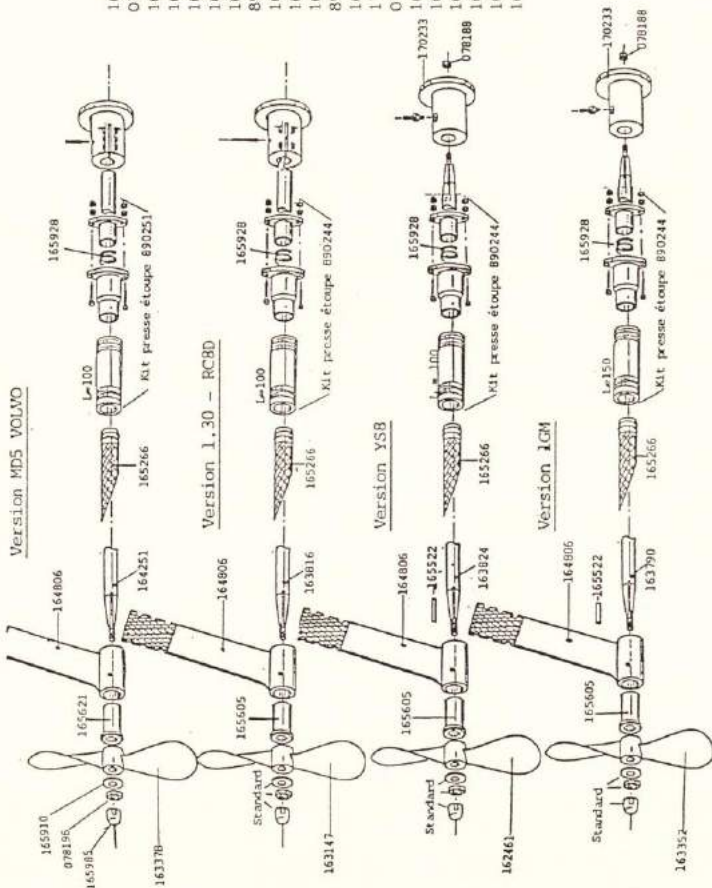


BALLAST/CENTERBOARD

111963 SMOOTH HOSE
 038232 GROOVED END CAP
 041970 SEACOCK
 039370 THROUGH HULL FITTING
 008813 CENTERBOARD RAISING PLATEN
 008821 PULLEY SHEAVE FOR ABOVE
 008953 CROSS BAR FOR PULLEY
 008862 CENTERBOARD ARM PULLEY SHEAVE
 008961 CROSS BAR FOR CENTERBOARD ARM
 008979 CENTERBOARD ARM AXLE
 008904 CENTERBOARD RAISING ARM
 009043 GALVANIZED CENTERBOARD
 008912 CENTERBOARD AXLE
 008920 CENTERBOARD AXLE NYLON RING
 002444 CENTERBOARD RAISING BRAIDED CORDAGE
 123422 S/S CORDAGE BRACKET
 131862 WINCH
 132423 BLACK ALUMINUM WINCH HANDLE
 133165 BLACK PLASTIC SHEET CLEAT
 006148 FANTASIA L/K CAST-IRON BALLAST
 073817 THREADED STEEL ROD
 073395 THREADED STEEL ROD
 077039 STEEL SCREW NUT
 077040 STEEL SCREW NUT
 007401 BALLAST PLATE
 007427 BALLAST PLATE

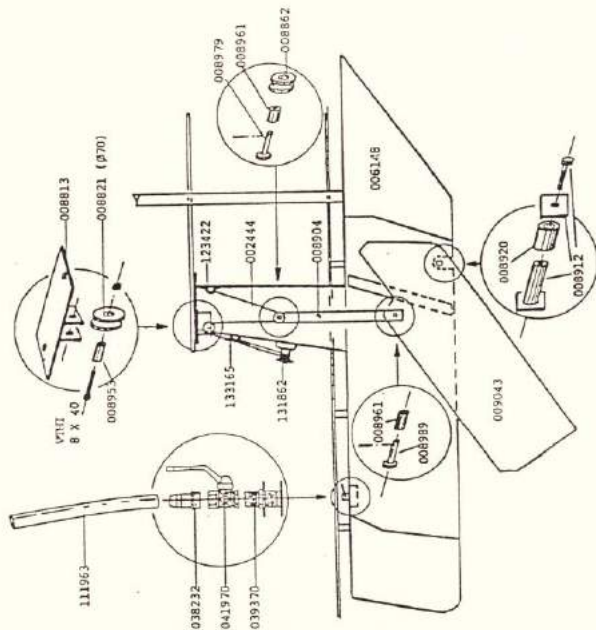

RUDDER - FTN KEEL/CENTERBOARD

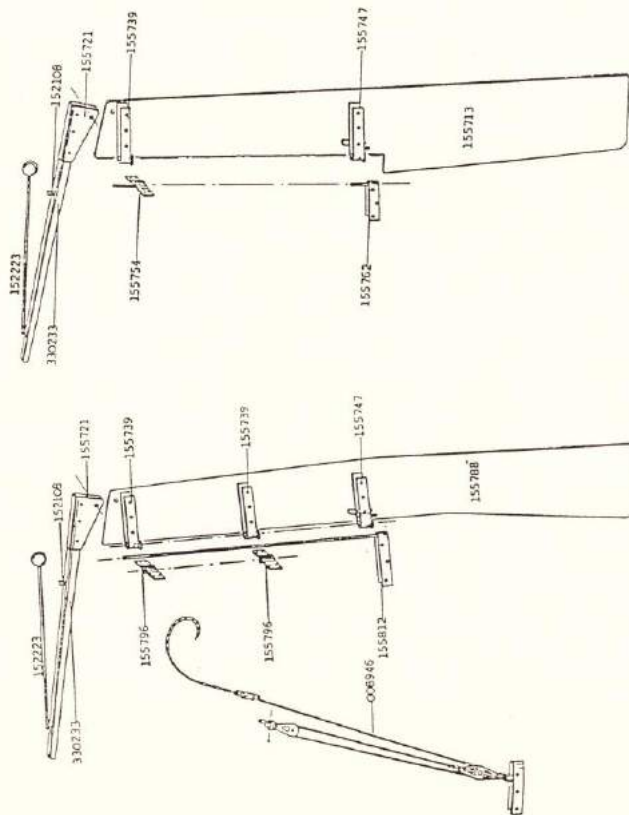

- 152223 TILLER ROD
- 330233 TILLER
- 152108 ROD CLASP
- 155721 S/S TILLER HEAD
- 155796 RUDDER GUDGEON
- 155812 LOWER PINTLE
- 155739 UPPER MID-GUDGEON
- 155747 LOWER GUDGEON W/RING FOR VANG
- 155788 RUDDER PLATE (L/K)
- 155754 UPPER PINTLE
- 155762 SHORT LOWER PINTLE
- 155713 RUDDER PLATE (F/K)
- 008946 VANG FOR RAISING RUDDER PLATE (L/K)

PIN KEEL

CENTERBOARD

FANTASIA CUSHIONS

DESCRIPTION	CUSHION	COVER
1 FORE CABIN V-CUSHION	308155	314641
2 FORE CABIN SIDE CUSHION	308163	314658
3 SALON PORTSIDE CUSHION	308171	314666
4 SALON STARBOARD CUSHION	308189	314674
5 SALON BACKREST CUSHION PORTSIDE	308197	314682
6 SALON BACKREST CUSHION STARBOARD	308205	314690
7 NAVIGATOR SEAT CUSHION	308213	314708
8 SEAT CUSHION IN FRONT OF AFT CABIN HANGING LOCKER	308221	314716
9 LARGE TRAPEZOIDAL CUSHION AFT CABIN	308247	314732
10 RECTANGULAR CUSHION - AFT CABIN	308239	314724
11 SMALL TRAPEZOIDAL CUSHION AFT CABIN	308254	314740

