

Sport Decks

Owner's Manual Supplement


MAXUM®

Engine Serial Number: _____

Hull Identification Number: _____

Hull Identification Number

- The Hull Identification Number (HIN) is located on the starboard side of the transom.
- Be sure to record the HIN (and the engine serial numbers) in the space provided above.
- Please refer to the HIN for any correspondence or orders.

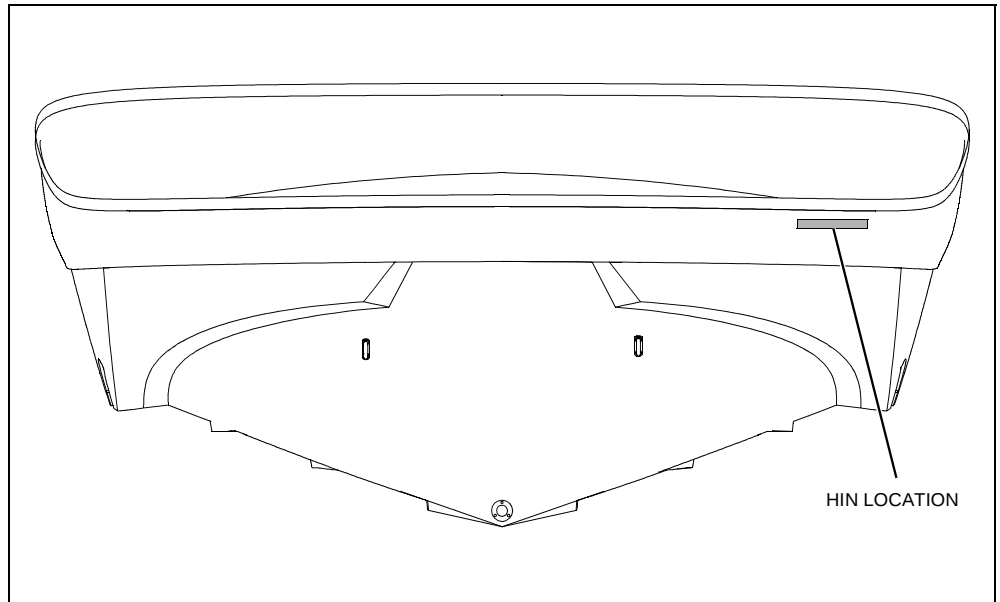

© 2003 Maxum Marine Technical Publications. All rights reserved.

No part of this publication may be reproduced, stored in any retrieval system, or transmitted in any form by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of Maxum. Printed in the U.S.A.

General Notes

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Maxum assumes no liability resulting from errors or omissions in this document, or from the use of information contained herein. Due to our commitment to product improvement, Maxum reserves the right to make changes in the product design, specifications and equipment at any time without notice or obligation. Illustrations and/or photos may show optional equipment. All Maxum products meet or exceed USCG (United States Coast Guard) and/or NMMA (National Marine Manufacturer's Association) construction standards. Manufactured with 1,1,1 Trichloroethane, a substance which harms public health and environment during the manufacturing process by destroying ozone in the upper atmosphere.

Proprietary Rights

This document discloses subject matter in which Maxum has proprietary rights. The information and design disclosed herein were originated by and are the property of Maxum. Neither receipt nor possession thereof confers or transfers any right to reproduce, copy, alter or disclose the document or any part thereof, any information contained therein, or to construct boats or any item from it, except by written permission from or written agreement with Maxum. This document is to be returned upon request to Maxum.

CONTENTS

1 Chapter 1: Welcome Aboard!

- 1 Dealer Service
- 1 Warranty Information
- 1 Boating Experience
- 2 Safety Standards
- 2 Engine & Accessories Guidelines
- 3 Engine & Accessories Literature
- 3 Qualified Maintenance
- 3 Special Care For Moored Boats
- 4 Carbon Monoxide (CO)
 - 4 *Facts about CO*
 - 5 *Where and How CO Can Accumulate*
 - 5 *How to Protect Yourself and Others From CO*
 - 6 *Trip Checklist*
 - 6 *Monthly Checklist*
 - 6 *Annual Checklist*
 - 6 *More Information*

7 Chapter 2: Product Specifications

- 7 2100SD
- 7 2400SD

8 Chapter 3: Locations

- 8 Exterior Views
 - 8 *Hull Views*
 - 9 *Deck Views*
- 10 Component Locations

11 Chapter 4: Propulsion & Related Systems

- 11 Engine
- 11 Engine Room Ventilation System
- 12 Fuel System
 - 12 *Fuel Fill and Vent*
 - 12 *Fuel Filters*
 - 13 *Anti-siphon Valve*
- 13 Fire Suppression System (If Equipped)
- 14 Quick Oil Drain System

15 Chapter 5: Controls & Gauges

- 15 Steering
- 15 Shift/Throttle
- 15 Power Trim and Tilt
- 15 Trim Tabs (2400SD Only, If Equipped)
- 16 Gauges
 - 16 *Cleaning Gauges*
 - 16 *Gauge Fogging*
 - 16 *Radio Transmission Interference*
 - 16 *Fuel Gauge*

17 Chapter 6: Navigation & Communication Equipment

- 17 Depth Finder

18 Chapter 7: Plumbing

- 18 Bilge Pumps
 - 20 *Autofloat Switches*
- 20 Drain Systems
 - 20 *Deck Drains*
- 21 Freshwater System
 - 23 *Freshwater System Winterization*
- 24 Portable Toilet (If Equipped)
- 24 Portable Toilet Pump-out (If Equipped)

25 Chapter 8: Deck Equipment

- 25 Cleats and Tow Eyes
- 25 Ski Tow Ring
- 26 Canvas
 - 26 *Bimini Top*

27 Chapter 9: Entertainment Systems

- 27 Audio & Visual Equipment

28 Chapter 10: Convertible Seats, Beds, & Tables

- 28 Bow Conversion (If Equipped)

29 Chapter 11: Lights

- 29 Care and Maintenance
- 29 Navigation Lights
- 29 Docking Lights (If Equipped)

30 Chapter 12: Electrical System

- 31 12-Volt DC System
 - 31 *Battery*
 - 31 *Battery Switch*
 - 31 *Fuses and Circuit Breakers*
 - 31 *Alternator*
 - 31 *12-Volt Accessory Outlet*
- 32 Electrical Routings
 - 32 *2100SD Deck Electrical Harness*
 - 33 *2400SD Deck Electrical Harness*
 - 34 *Hull Electrical Harness*
- 35 Wiring Diagram

36 Important Records

37 Float Plan

Hazard Boxes & Symbols

The hazard boxes and symbols shown below are used throughout this *Supplement* to call attention to potentially dangerous situations which could lead to either personal injury or product damage. **Read ALL warnings carefully and follow all safety instructions.**

 **DANGER!**

This box alerts you to immediate hazards which *WILL* cause severe personal injury or death if the warning is ignored.

 **WARNING!**

This box alerts you to hazards or unsafe practices which *COULD* result in severe personal injury or death if the warning is ignored.

 **CAUTION**

This box alerts you to hazards or unsafe practices which *COULD* result in minor personal injury or cause product or property damage if the warning is ignored.

NOTICE

This box calls attention to installation, operation or maintenance information, which is important to proper operation but is not hazard related.



Chapter 1: Welcome Aboard!

This *Owner's Manual Supplement* provides specific information about your boat that is **not** covered in the *Sport Boat Owner's Manual*. Please study the *Sport Boat Owner's Manual* and this *Supplement* carefully. Keep the *Sport Boat Owner's Manual* and this *Supplement* on your boat in a secure, yet readily available place.

Dealer Service

- Your dealer is your key to service.
- Ask your dealer to explain **all** systems before taking delivery of your boat.
- Contact your dealer if you have any problems with your new boat.
- If your dealer cannot help, call our customer service hotline: 360-435-8957 or send us a FAX: 360-403-4235.
- Buy replacement parts from any authorized Maxum dealer.

Warranty Information

- Maxum offers a Limited Warranty on each new Maxum purchased through an authorized Maxum dealer.
- A copy of the Limited Warranty was included in your owner's packet.
- If you did **not** receive a copy of the Limited Warranty, please contact your dealer or call 360-435-8957 for a copy.

Boating Experience

 **WARNING!**

CONTROL HAZARD!

A qualified operator *must* be in control of the boat at *all* times. **DO NOT** operate your boat while under the influence of alcohol or drugs.

If this is your first boat or if you are changing to a type of boat you are **not** familiar with, for your own comfort and safety, obtain handling and operating experience before assuming command of the boat.

Take one of the boating safety classes offered by the U.S. Power Squadrons or the U.S. Coast Guard Auxiliary. For more course information, including dates and locations of upcoming classes, contact the organizations directly:

- U.S. Power Squadrons: 1-888-FOR-USPS (1-888-367-8777) or on the Internet at: <http://www.usps.org>
- U.S. Coast Guard Auxiliary: 1-800-368-5647 or on the Internet at: <http://www.cgaux.org>

Outside the United States, your selling dealer, national sailing federation or local boat club can advise you of local sea schools or competent instructors.

Safety Standards

 **DANGER!**



FALLING and ROTATING PROPELLER HAZARD!

NEVER allow anyone to ride on parts of the boat *not* designed for such use.

- Sitting on seat backs, lounging on the forward deck, bow riding, gunwale riding or occupying the transom platform while underway is especially hazardous and will cause personal injury or death.

 **DANGER!**





ROTATING PROPELLER and CARBON MONOXIDE POISONING HAZARD!

- NEVER allow anyone to occupy, or hang from, the back deck or swim platform while the engine(s) are running.
- Teak surfing, dragging, or water skiing within 20 feet of a moving watercraft can be fatal.

 **DANGER!**

PERSONAL SAFETY HAZARD!

ALWAYS secure the anchor and other loose objects before getting underway. The anchor and other items that are *not* properly secured can come loose when the boat is moving and cause personal injury or death.

- Your boat's mechanical and electrical systems were designed to meet safety standards in effect at the time it was built.
- Some of these standards were mandated by law, ***all*** of them were designed to insure your safety, and the safety of other people, vessels and property.

In addition to this *Owner's Manual Supplement*, please read the *Sport Boat Owner's Manual* and ***all*** accessory instructions for important safety standards and hazard information.

Engine & Accessories Guidelines

NOTICE

When storing your boat please refer to your engine's operation and maintenance manuals.

- Your boat's engine and accessories were selected to provide optimum performance and service.
- Installing a different engine or other accessories may cause unwanted handling characteristics.
- Should you choose to install a different engine or to add accessories that will affect the boat's running trim, have an experienced marine technician perform a safety inspection and handling test ***before*** operating your boat again.

Certain modifications to your boat can result in cancellation of your warranty protection. Always check with your dealer ***before*** making any modifications to your boat.

Engine & Accessories Literature

- The engine and accessories installed on your boat come with their own operation and maintenance manuals.
- Read and understand these manuals **before** using the engine and accessories.
- Unless noted otherwise, **all** engine and accessory literature referred to in this *Supplement* is included in your owner's packet.

Qualified Maintenance



WARNING!

To maintain the integrity and safety of your boat, allow only qualified personnel to perform maintenance on, or in any way modify: The steering system, propulsion system, engine control system, fuel system, environmental control system, electrical system or navigational system.

- Failure to maintain your boat's systems (listed in the warning above) as designed could violate the laws in your jurisdiction and could expose you and other people to the danger of bodily injury or accidental death.
- Follow the instructions provided in the *Sport Boat Owner's Manual*, this *Owner's Manual Supplement*, the engine owner's manual and **all** accessory instruction sheets and manuals.

Special Care For Moored Boats

NOTICE

- **To help seal the hull bottom and reduce the possibility of gelcoat blistering on moored boats, apply an epoxy barrier coating. The barrier coating should be covered with several coats of anti-fouling paint.**
- **Many states regulate the chemical content of bottom paints in order to meet environmental standards. Check with your local dealer about recommended bottom paints, and about the laws in effect in your area.**

- Whether moored in saltwater or freshwater, your boat **will** collect marine growth on its hull bottom.
- This will detract from the boat's beauty, greatly affect its performance and may damage the gelcoat.
- Periodically haul the boat out of the water and scrub the hull bottom with a bristle brush and a solution of soap and water.

Carbon Monoxide (CO)

 DANGER!	
	• Carbon monoxide gas (CO) is colorless, odorless, tasteless, and extremely dangerous. • All engines, generators, and fuel burning appliances produce CO as exhaust. • Prolonged exposure to low concentrations or very quick exposure to high concentrations <i>will</i> cause BRAIN DAMAGE or DEATH. • Teak surfing, dragging, or water skiing within 20 feet of a moving watercraft can be fatal.

Facts about CO


- CO poisoning causes a significant number of boating deaths each year.
- Called the "silent killer", CO is an extremely toxic, colorless, odorless and tasteless gas.
- CO can harm or even kill you inside or outside your boat.
- CO can affect you whether you're underway, moored, or anchored.
- CO symptoms are similar to seasickness or alcohol intoxication.
- CO can make you sick in seconds. In high enough concentrations, even a few breaths can be fatal.
- Breathing CO blocks the ability of your blood to carry oxygen.
- The effects are cumulative, even low levels of exposure can result in injury or death.

Factors That Increase the Effects of CO Poisoning


- Age
- Smokers or people exposed to high concentrations of cigarette smoke
- Consumption of alcohol
- Lung disorders
- Heart problems
- Pregnancy

Where and How CO Can Accumulate

Stationary Conditions That Increase CO Accumulations Include:

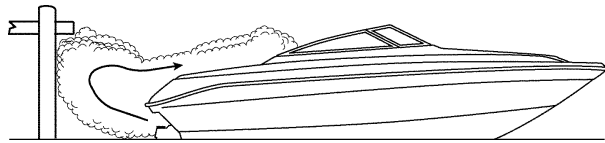

A. Using engine, generator, or other fuel burning device when boat is moored in a confined space.

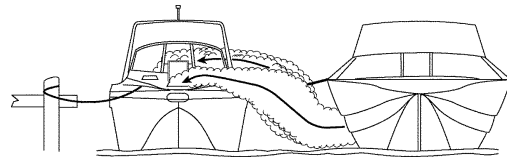


B. Mooring too close to another boat that is using its engine, generator, or other fuel burning device.


To correct stationary situations A and/or B:

- **Close all** windows, portlights and hatches.
- If possible, move your boat away from source of CO.

Running Conditions That Increase CO Accumulations Include:

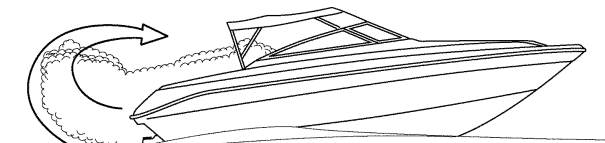

C. Running boat with trim angle of bow too high.

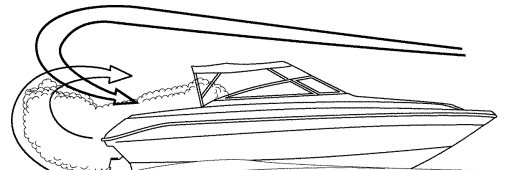

D. Running boat without through ventilation (station wagon effect).

To correct running situations C and/or D:

- Trim bow down.
- **Open** windows and canvas.
- When possible, run boat so that prevailing winds help dissipate exhaust.

How to Protect Yourself and Others From CO

- Know where and how CO may accumulate in and around your boat (see above).
- Maintain fresh air circulation throughout the boat at **all** times.
- Know where your engine and generator exhaust outlets are located and keep everyone away from these areas.
- **Never** sit on, or hang onto, the back deck or swim platform while the engine(s) are running.
- **Never** enter the areas under swim platforms where exhaust outlets are located.
- Although CO can be present without the smell of exhaust fumes, if exhaust fumes are detected on the boat, take immediate action to dissipate these fumes.
- Treat symptoms of seasickness as possible CO poisoning. Get the person into fresh air immediately. Seek medical attention—unless you're sure it's **not** CO.
- Install and maintain CO alarms inside your boat. **Do not** ignore any alarm. Replace alarms as recommended by the alarm manufacturer.
- Follow the checklists provided on the next page.
- Get a Vessel Safety Check.

For information on how to get a free VESSEL SAFETY CHECK, visit www.vesselsafetycheck.org or contact your local U.S. Coast Guard Auxiliary or United States Power Squadrons®.

- U.S. Coast Guard Auxiliary: 1-800-368-5647 or on the Internet at: <http://www.cgaux.org>
- U.S. Power Squadrons: 1-888-FOR-USPS (1-888-367-8777) or on the Internet at: <http://www.usps.org>

Trip Checklist

- ☐ Make sure you know where the exhaust outlets are located on your boat.
- ☐ Educate **all** passengers about the symptoms of CO poisoning and where CO may accumulate.
- ☐ When docked, or rafted with another boat, be aware of exhaust emissions from the other boat.
- ☐ Confirm that water flows from the exhaust outlet when the engines and generator are started.
- ☐ Listen for any change in exhaust sound, which could indicate an exhaust component failure.
- ☐ Test the operation of each CO alarm by pressing the test button.

Monthly Checklist

- ☐ Make sure **all** exhaust clamps are in place and secure.
- ☐ Look for exhaust leaking from exhaust system components. Signs include rust and/or black streaking, water leaks, or corroded or cracked fittings.
- ☐ Inspect rubber exhaust hoses for burned, cracked, or deteriorated sections. **All** rubber hoses should be pliable and free of kinks.

Annual Checklist

Have a Qualified Marine Technician:

- ☐ Replace exhaust hoses if cracking, charring, or deterioration is found.
- ☐ Ensure that your engines and generators are properly tuned, and well maintained.
- ☐ Inspect each water pump impeller and the water pump housing. Replace if worn. Make sure cooling systems are in working condition.
- ☐ Inspect **all** metallic exhaust components for cracking, rusting, leaking, or loosening. Make sure they check the cylinder head gasket, exhaust manifold, water injection elbow, and the threaded adapter nipple between the manifold and the elbow.
- ☐ Clean, inspect, and confirm proper operation of the generator cooling water anti-siphon valve (if equipped).

More Information

For more information about how you can prevent carbon monoxide poisoning on recreational boats and other ways to boat more safely, contact:

United States Coast Guard

Office of Boating Safety (G-OPB-3)
2100 Second Street SW
Washington, DC 20593
www.uscgboating.org
1-800-368-5647

National Marine Manufacturers Association (NMMA)

200 East Randolph Drive
Suite 5100
Chicago, IL 60601-9301
www.nmma.org
312-946-6200

American Boat & Yacht Council, Inc. (ABYC)


3069 Solomon's Island Road
Edgewater, MD 21037-1416
www.abycinc.org
410-956-1050

For information on how to get a free VESSEL SAFETY CHECK, visit www.vesselsafetycheck.org or contact your local U.S. Coast Guard Auxiliary or United States Power Squadrons®.

- U.S. Coast Guard Auxiliary: 1-800-368-5647 or on the Internet at: <http://www.cgaux.org>
- U.S. Power Squadrons: 1-888-FOR-USPS (1-888-367-8777) or on the Internet at: <http://www.usps.org>


Chapter 2: Product Specifications

2100SD

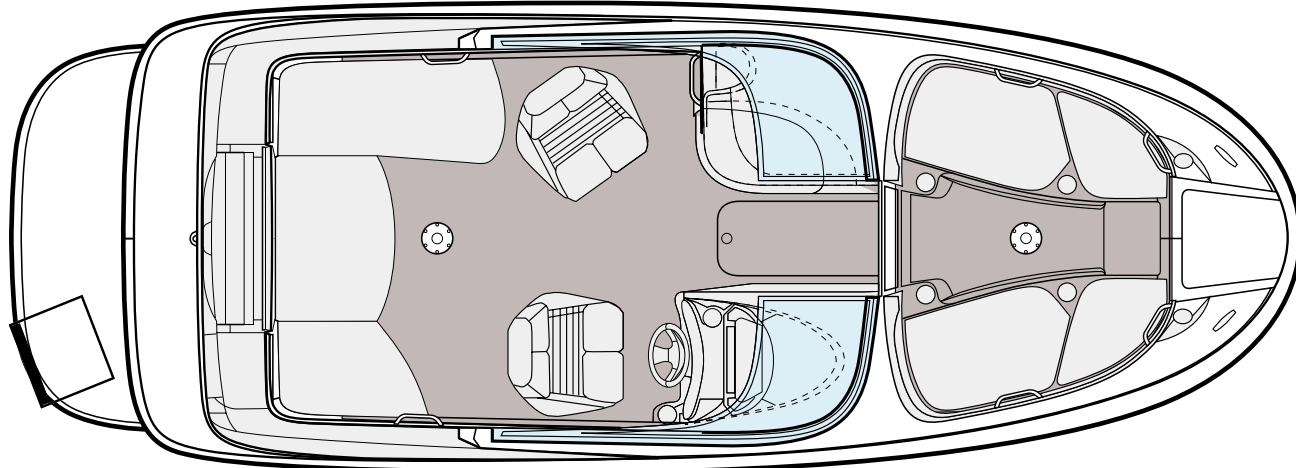

Overall Length	Bridge Clearance	Beam	Draft (Drive Up)	Draft (Drive Down)	Fuel Capacity (gal.)	Freshwater Capacity (gal.)
21' 1"	4' 10"	8' 6"	1' 7"	3' 0"	55	10

2400SD

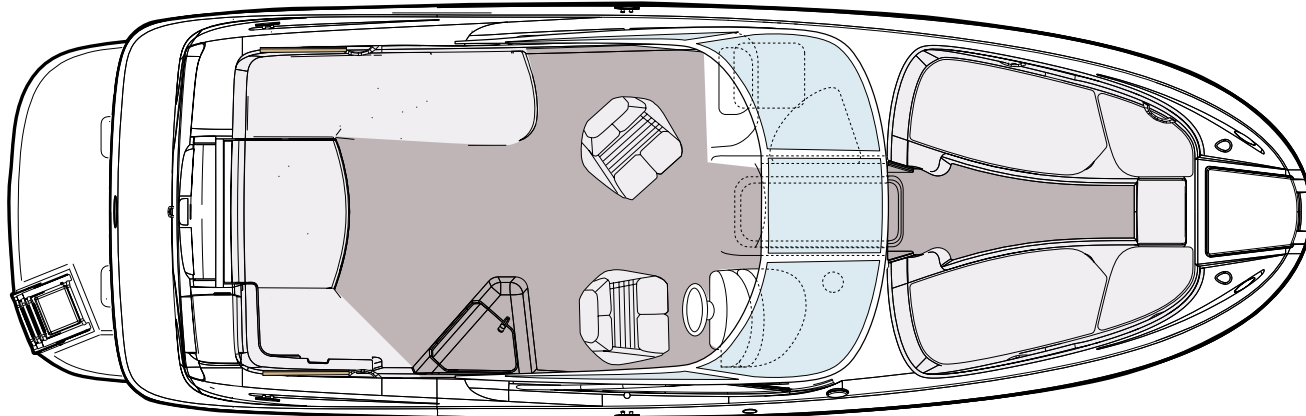



Overall Length	Bridge Clearance	Beam	Draft (Drive Up)	Draft (Drive Down)	Fuel Capacity (gal.)	Freshwater Capacity (gal.)
24' 2"	5' 2"	8' 6"	1' 10"	3' 0"	75	15

Chapter 3: Locations

Exterior Views

Hull Views

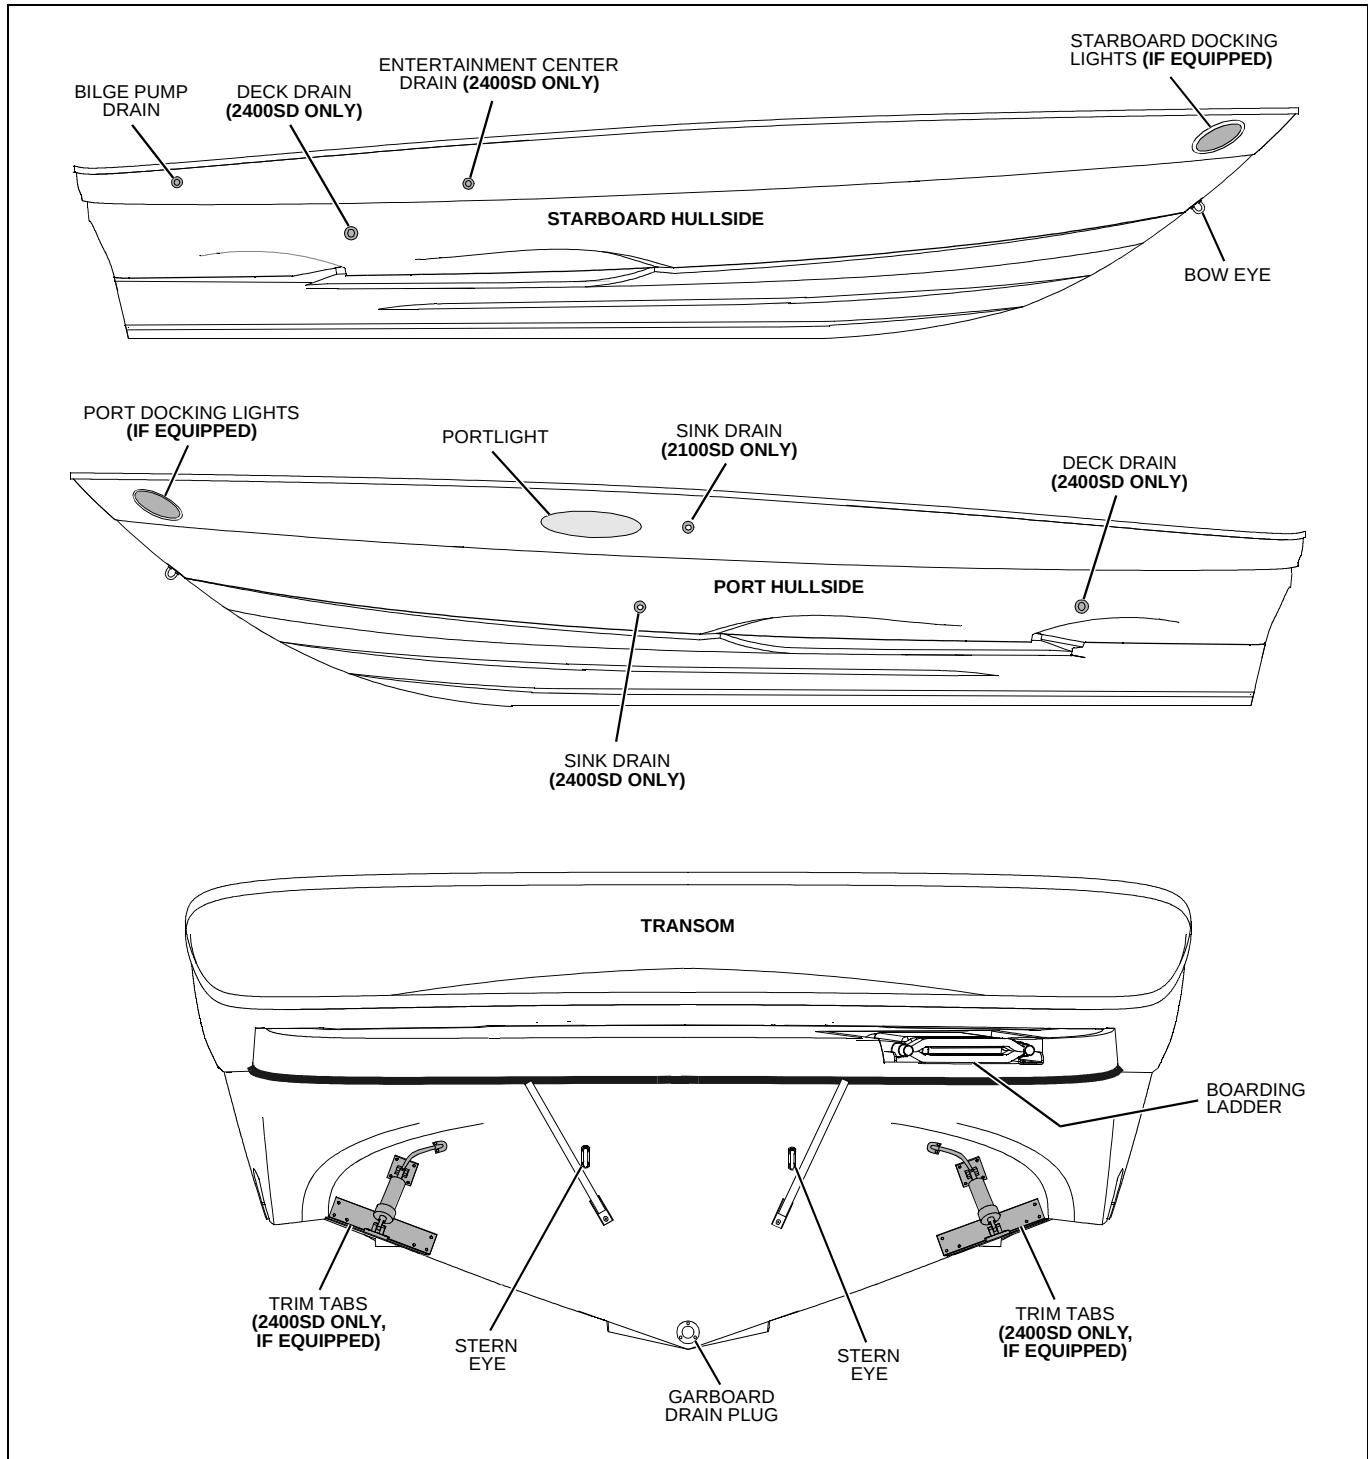

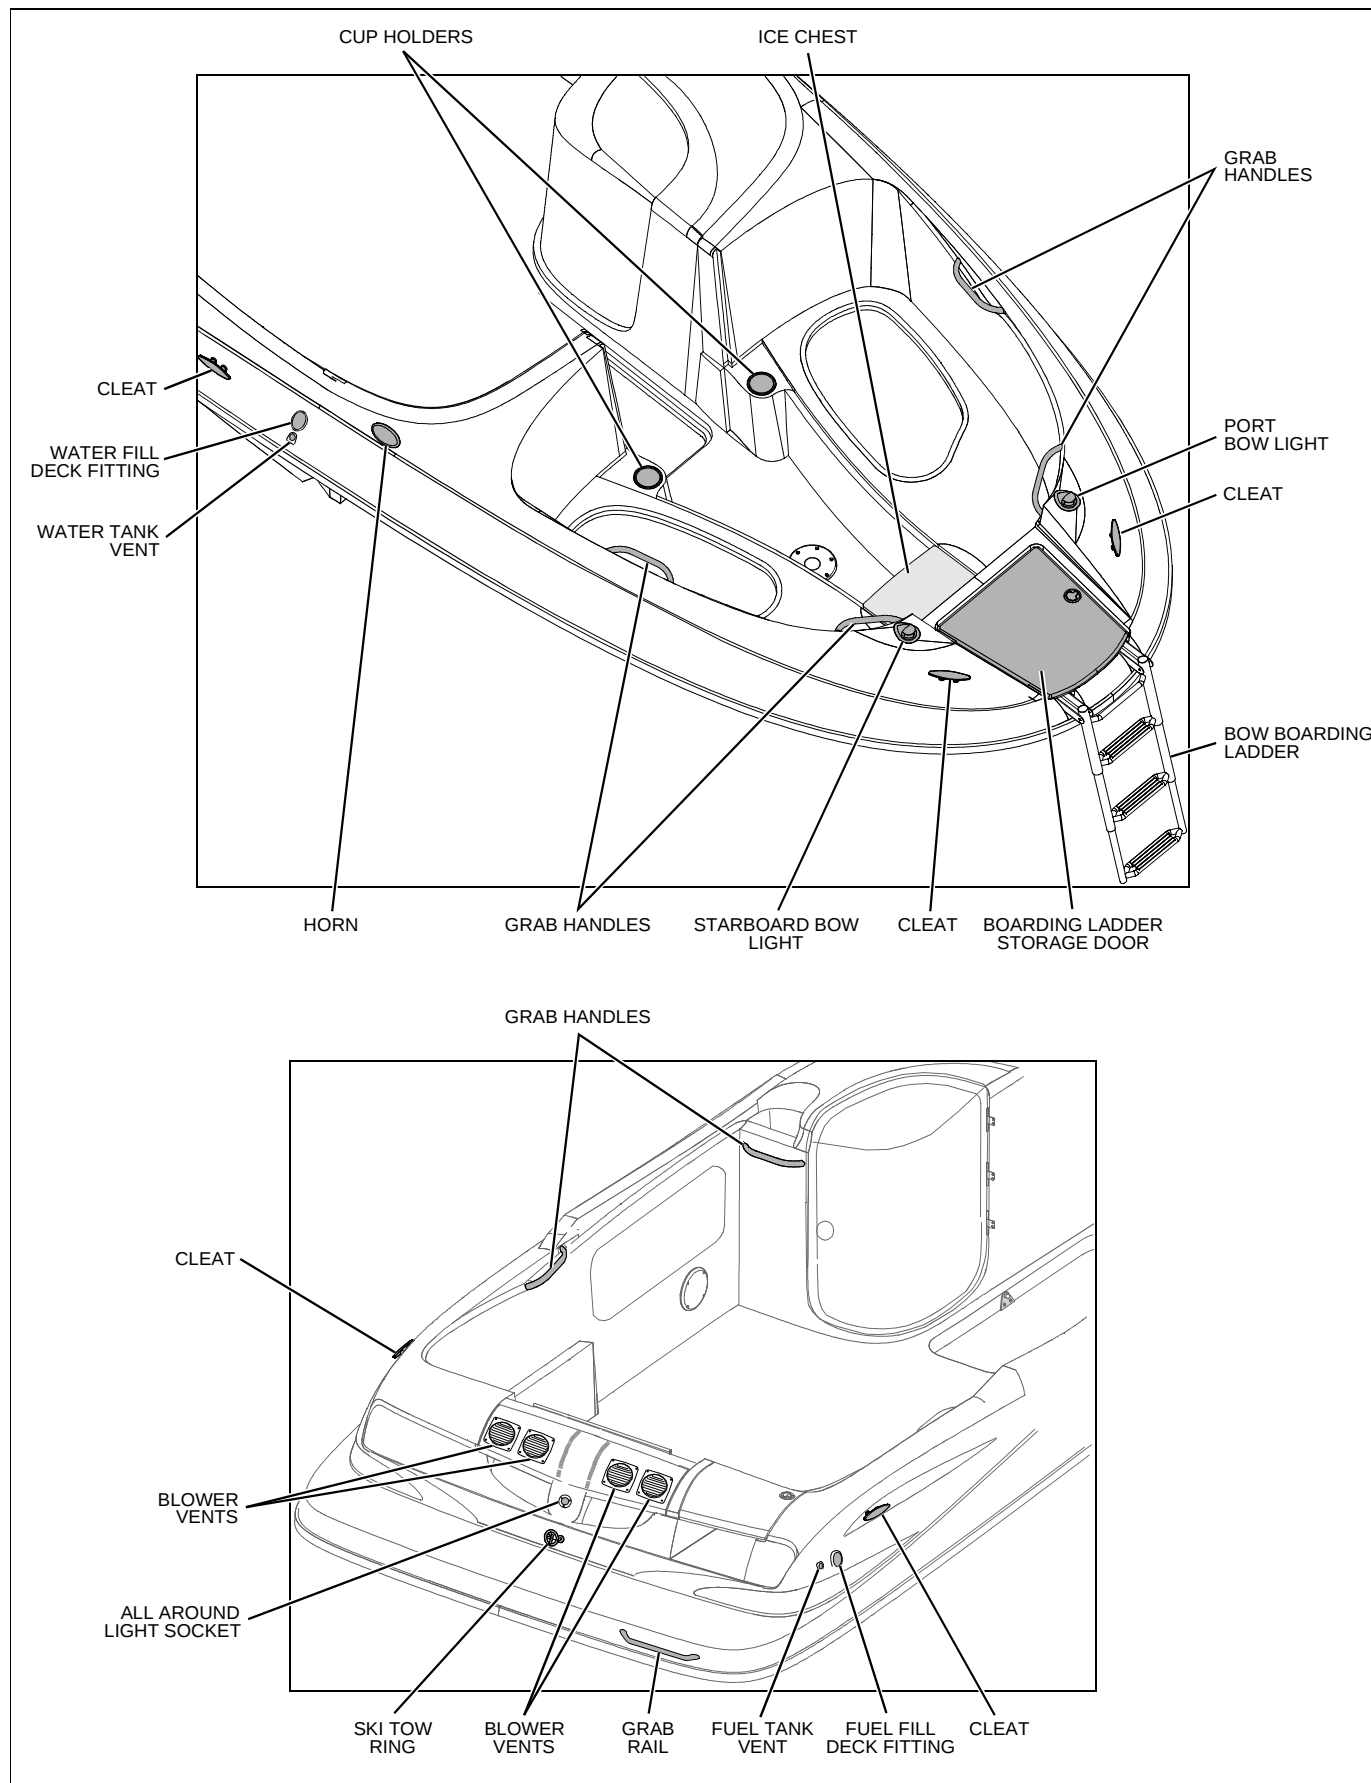Deck Views

Component Locations

12-Volt Accessory Outlets: On the starboard side panel, aft of the shifter. One the portside side panel and one inside the starboard storage compartment, on the aft wall.

Battery: On the starboard side of the engine compartment.

Battery Switch: In the engine compartment on the starboard side.

Bilge pump: In the engine compartment.

Depth Sounder Transducer (If Equipped): In the engine compartment.

Engine Circuit Breaker: On the engine.

Fuel Fill: On the starboard aft corner of the deck.

Fuel Tank: In the engine compartment, forward of the engine.

Navigation Lights: Red and green lights at the bow. White all-around light on the stern.

Water Pump Switch: On the switch panel at the helm.

Water Tank: Forward of the fuel tank. Access is through the aft square deck plate in the ski locker hatch.

Chapter 4: Propulsion & Related Systems

Engine

Be sure to read and understand the engine operation and maintenance manuals **before** starting or doing any maintenance on the engine.

Engine Room Ventilation System

 **WARNING!**



FIRE/EXPLOSION HAZARD

- Use of the blower system is **NOT A GUARANTEE** that explosive fumes have been removed.
- If you smell fuel, **DO NOT** start the engine and **DO NOT** turn on any electrical devices.
- If you smell fuel and the engine is already running, **SHUT OFF** the engine and **TURN OFF** all electrical devices. Investigate immediately.
- **DO NOT** obstruct or modify the ventilation system.

- The bilge blower removes explosive fuel fumes from the engine compartment.
- Fresh air is drawn into the compartment through the deck vents.
- The blower switch is at the helm.

To make sure the engine compartment is ventilated with fresh air, run the bilge blower:

- For at least four minutes **before** starting the engine.
- During starting.
- Anytime your boat is running below cruising speed.

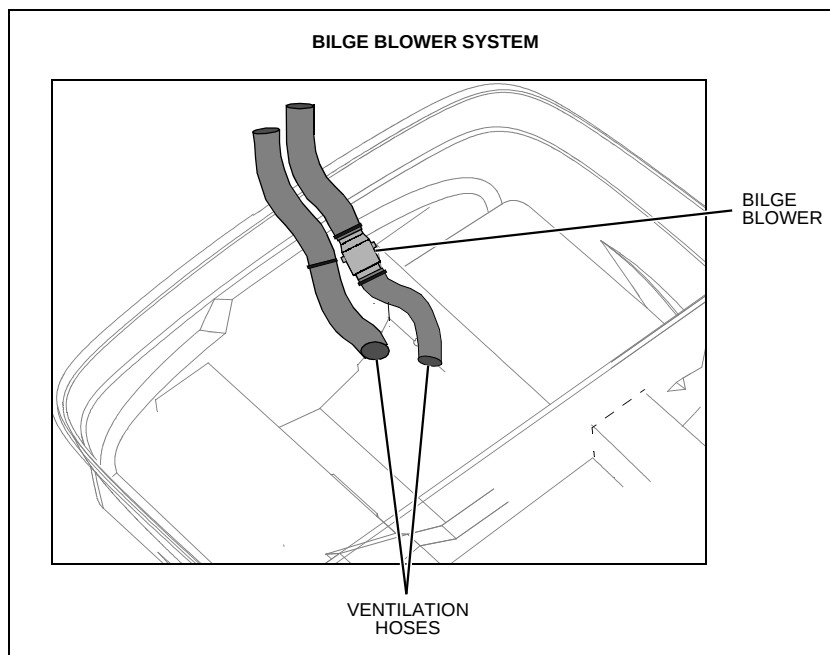

Fuel System

! WARNING!



FIRE, EXPLOSION AND OPEN FLAME HAZARD!

- It is very important that the fuel system be inspected thoroughly the first time it is filled and at each subsequent filling.
- The fueling instructions in the *Sport Boats Owner's Manual* and the fuel recommendations in the engine operation manual *must* be followed.

! CAUTION


Avoid the storage or handling of gear near the fuel lines, fittings and tank.

Fuel Fill and Vent

- The fuel fill fitting is marked “GAS”.
- The fuel tank vent is located below the fuel fill.
- If you experience difficulty filling the fuel tank, check to see if the fuel fill hose is kinked or collapsed. If there are no visible signs of a problem, contact your local dealer.

Fuel Filters

- The fuel pickup tube (located inside the fuel tank) is equipped with a fine mesh screen filter.
- In addition, when supplied by the engine manufacturer, a fuel filter is installed on the engine.
- Periodically replace the fuel filters to make sure they remain clean and free of debris.
- Consult with your selling dealer or local marina concerning fuel additives that help to prevent fungus or other buildup in your fuel tank.

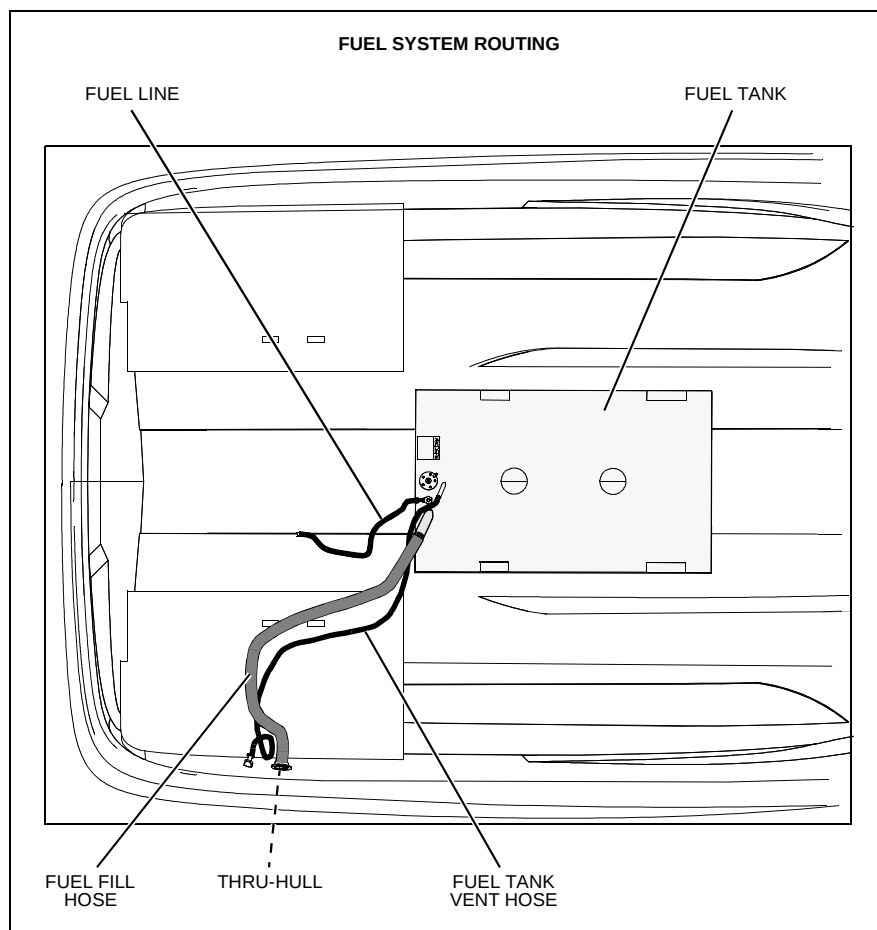

Anti-siphon Valve

NOTICE

- **If an engine running problem is diagnosed as fuel starvation, check the anti-siphon valve. If the valve is stuck or clogged, change or replace it while the engine is shut down.**
- **NEVER** run the engine with the anti-siphon valve removed, except in an emergency.

- The fuel system is equipped with an anti-siphon valve.
- The valve is located at the point where the fuel feed line attaches to the fuel tank.
- The valve is spring loaded and is opened by fuel pump vacuum.
- This valve will prevent fuel from siphoning from the tank in the event of a fuel line rupture.


Fire Suppression System (If Equipped)

Before using your boat for the first time, read and understand the fire suppression system's instruction and maintenance manual and follow **all** warnings.

Observe the following:

- The system will go off automatically whenever direct heat from a fire is detected in the engine compartment.
- The system can only be set off once. After the system is discharged it **must** be refilled and refurbished before it can be used again.

Quick Oil Drain System

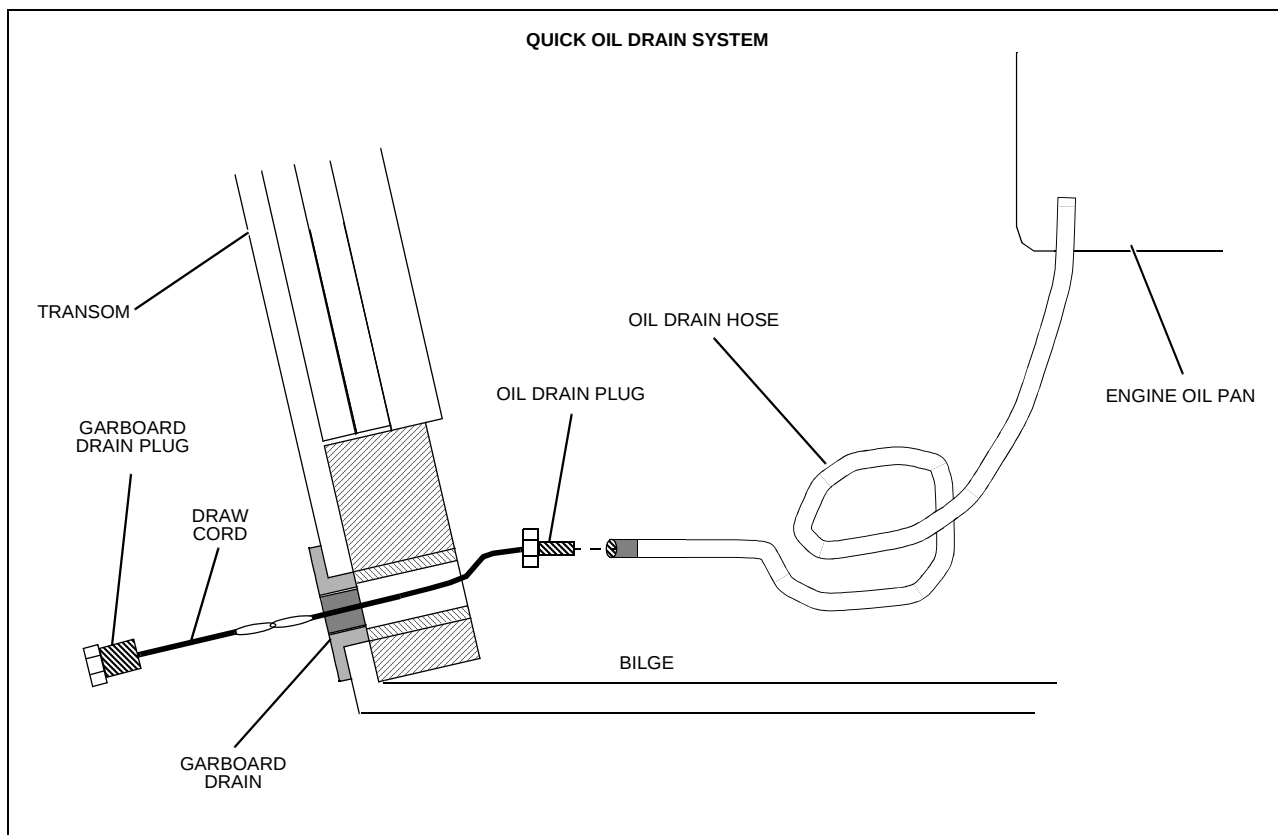

To drain the engine oil:

1. Remove the boat from the water.
2. Unscrew the garboard drain plug.
3. Pull the draw cord until the oil drain plug and the oil drain hose slide out of the garboard drain.
4. Place the end of the oil drain hose into a suitable container.
5. Unscrew the oil drain plug and drain the engine oil.
6. Replace the oil drain plug.
7. Push the drain hose back into the bilge.
8. Replace the garboard drain plug.

Always dispose of waste oil in accordance with local regulations.

Chapter 5: Controls & Gauges

Steering

- Refer to the engine manual for steering system details.

Shift/Throttle


WARNING!

LOSS OF CONTROL HAZARD!

Improper maintenance of shift/throttle hardware may cause a sudden loss of control!

- Carefully read and understand **all** of the information about the shift/throttle in the *Sport Boat Owner's Manual*.
- Also, read and understand the shifter/throttle and engine manuals.

Power Trim and Tilt

- The stern drive on your boat is equipped with power trim and tilt.
- Trim and tilt instructions are provided in the engine operation manual and the shifter/throttle manual.

Trim Tabs (2400SD Only, If Equipped)


WARNING!


LOSS OF CONTROL HAZARD! Improper use of trim tabs will cause loss of control!

- **DO NOT** allow anyone unfamiliar with trim tabs to use them.
- **DO NOT** use trim tabs in a following sea as they *will* cause broaching or other unsafe handling characteristics.
- **DO NOT** use trim tabs to compensate for excessive unequal weight distribution.

- The trim tabs may be used to help keep your boat level at cruising speeds.
- The trim tabs are controlled by two rocker switches at the helm.
- **Before** using the trim tabs read and understand the trim tab operation manual.

Observe the following:

- Once cruising speed is reached, the port or starboard trim tab switch may be used (one at a time) to level the boat.
- Perform trim tab adjustment with several short touches to the switch rather than one long one.
- After each short touch allow several seconds for the hull to react.
- The trim tab hydraulic fluid reservoir is located in the engine compartment. The fluid level must be checked periodically (at least once a year) and refilled as necessary.

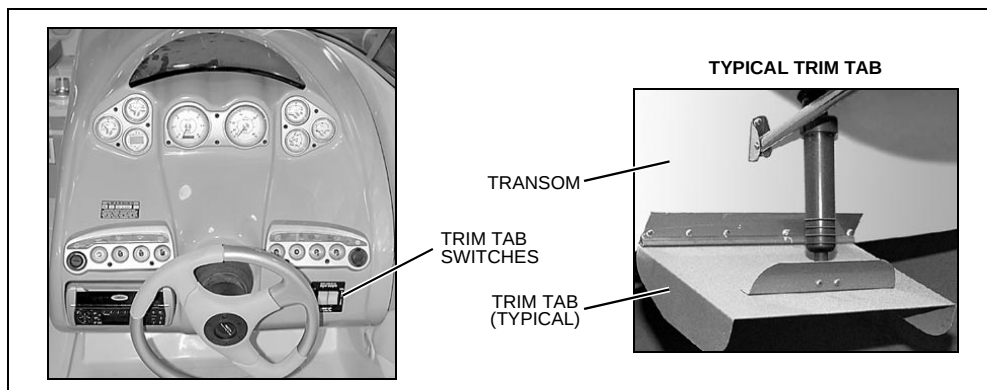

Gauges

Cleaning Gauges



CAUTION

PRODUCT or PROPERTY DAMAGE HAZARD!

- Use **only** mild soap and water to clean the gauge lenses and bezels.
- Use of other cleaners, including common window cleaning solutions, may cause the lenses to crack.
- Lenses cracked in this manner **will not** be covered by our warranty.

Gauge Fogging

- Moisture may occasionally find its way into the gauges causing lens fogging.
- Turning **On** the gauge lights will help dry the lenses.
- Fogging **will not** harm the gauges.

Radio Transmission Interference

VHF or other radio transmissions may cause brief erratic readings on the tachometer. This **will not** damage this gauge or affect its accuracy when **not** transmitting.

Fuel Gauge

It is normal for the pointer on your fuel gauge to bounce as fuel sloshes back and forth in the fuel tank.

Chapter 6: Navigation & Communication Equipment

Thoroughly read and understand the navigation and communication manuals *before* using these systems for the first time and observe the following:


Depth Finder



WARNING!

- **DO NOT** use the depth finder as a navigational aid to prevent collision, grounding, boat damage or personal injury.
- When the boat is moving, submerged objects *will not* be seen until they are already under the boat.
- Bottom depths may change too quickly to allow time for the boat to react.
- If you suspect shallow water or submerged objects, run the boat at very slow speeds.

DEPTH
FINDER

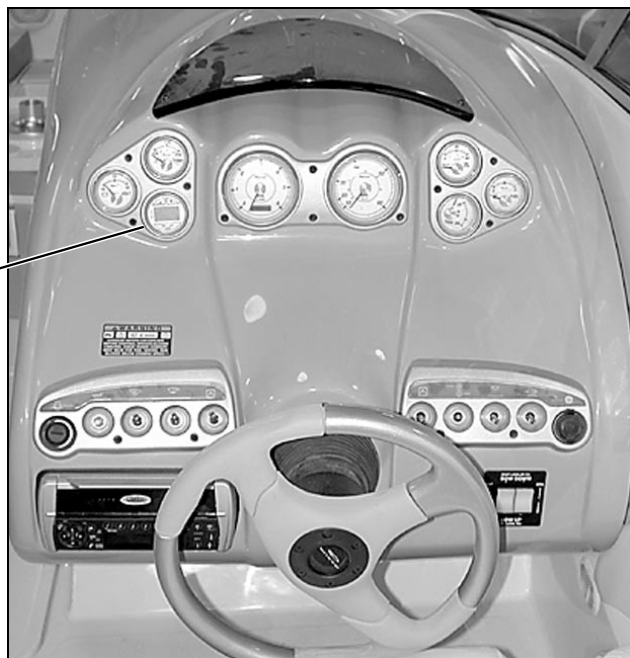


Chapter 7: Plumbing

Bilge Pumps

NOTICE

Discharge of oil, oil waste or fuel into navigable waters is prohibited by law. Violators are subject to legal action by the local authorities.

- Your boat is equipped with a bilge pump for pumping water out of the bilge.
- The bilge pump is controlled by an automatic bilge pump float switch (autofloat switch) and/or a switch at the helm.

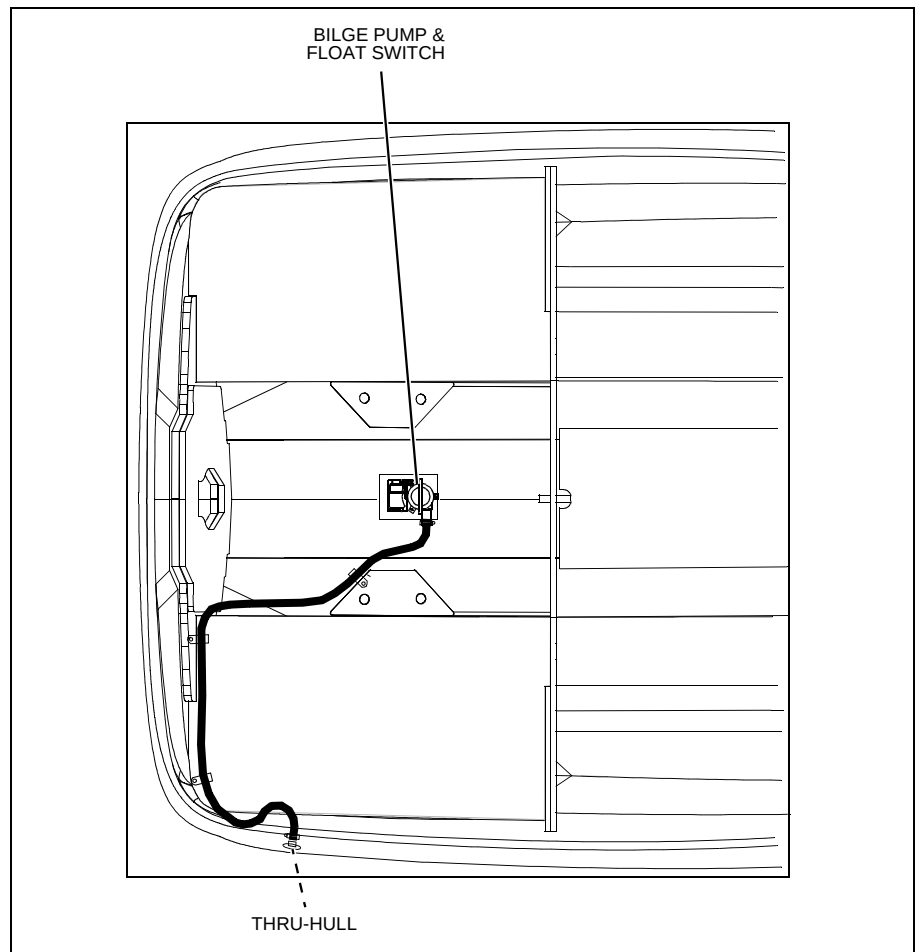


Bilge Pump Testing

- The bilge pump is critical to the safety of your boat.
- Check the bilge pump often to make sure it is working.

Test the pump as follows:

1. Turn **On** the bilge pump switch at the helm.
2. Any water in the bilge should pump overboard.
- If the pump motor is running, but **not** pumping, inspect the discharge hose for a kink or collapsed area.
- If no problems are found, check the bilge pump housing for clogging debris as follows:
 1. Remove the power cartridge:
 - a. Lift the tab while rotating the fins counter-clockwise.
 - b. Lift out the power cartridge.
 - c. Clear the outer housing of debris.
 2. Reinstall the power cartridge:
 - a. Make sure the “O” ring is properly seated.
 - b. Coat the “O” ring with a light film of vegetable or mineral oil.
 - c. Align the cams on either side of the power cartridge with the two slots on the outer housing.
 - d. Press the power cartridge into the housing while twisting clockwise.
3. Check the reinstallation by trying to twist the fins counter-clockwise without lifting the tab; the cartridge should stay in place.

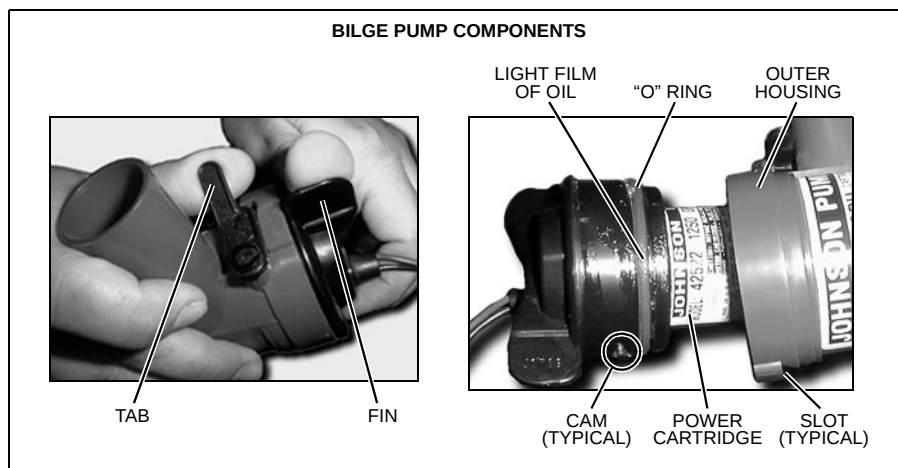


Autofloat Switches

- The automatic bilge pump uses an electromagnetic float switches (autofloat) to turn **On** the pump whenever water rises above a preset level in the bilge.
- The auto-float switch is mounted next to the automatic bilge pump.
- The auto-float switch is wired directly to the battery and will normally function even when the boat is completely shut down and left unattended.

Test the autofloat switch often as follows:

1. Lift the float switch test button **up** to turn **On** the bilge pump.
 - If the pump does **not** turn **On**, check the fuse on the fuse block.
 - If the fuse is good but the switch still doesn't work, it may mean the switch is bad or possibly the battery is low.
2. Push test button all the way **down** to return the float switch to auto mode.

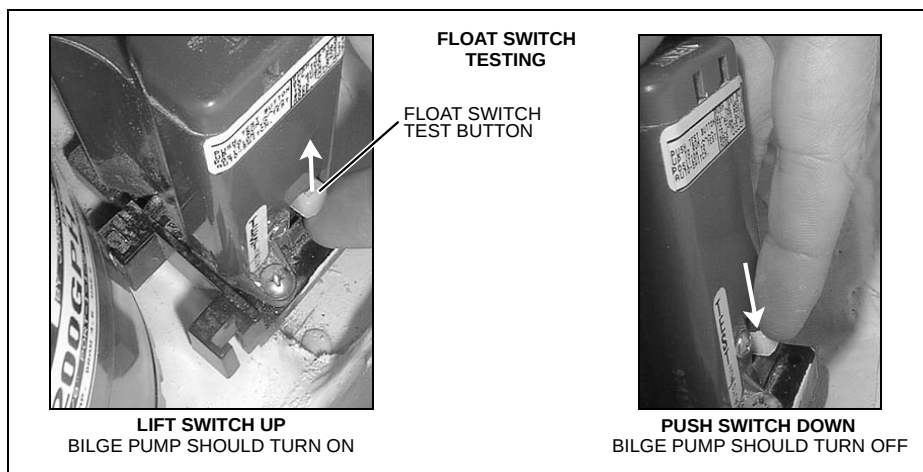

CAUTION

When the test is completed on each float switch, you **MUST** push the test button **all the way down** to the auto position to return the switch to auto mode!

Drain Systems

Deck Drains


- Water on the deck is drained overboard through the deck drains.
- Keep the deck drains free of debris.


Freshwater System



WARNING!

- Only use safe drinking (potable) water in your boat's freshwater system.
- Only use a sanitary drinking water hose to fill the water tank or connect to city water.
- *Never* use a common garden hose for drinking water.

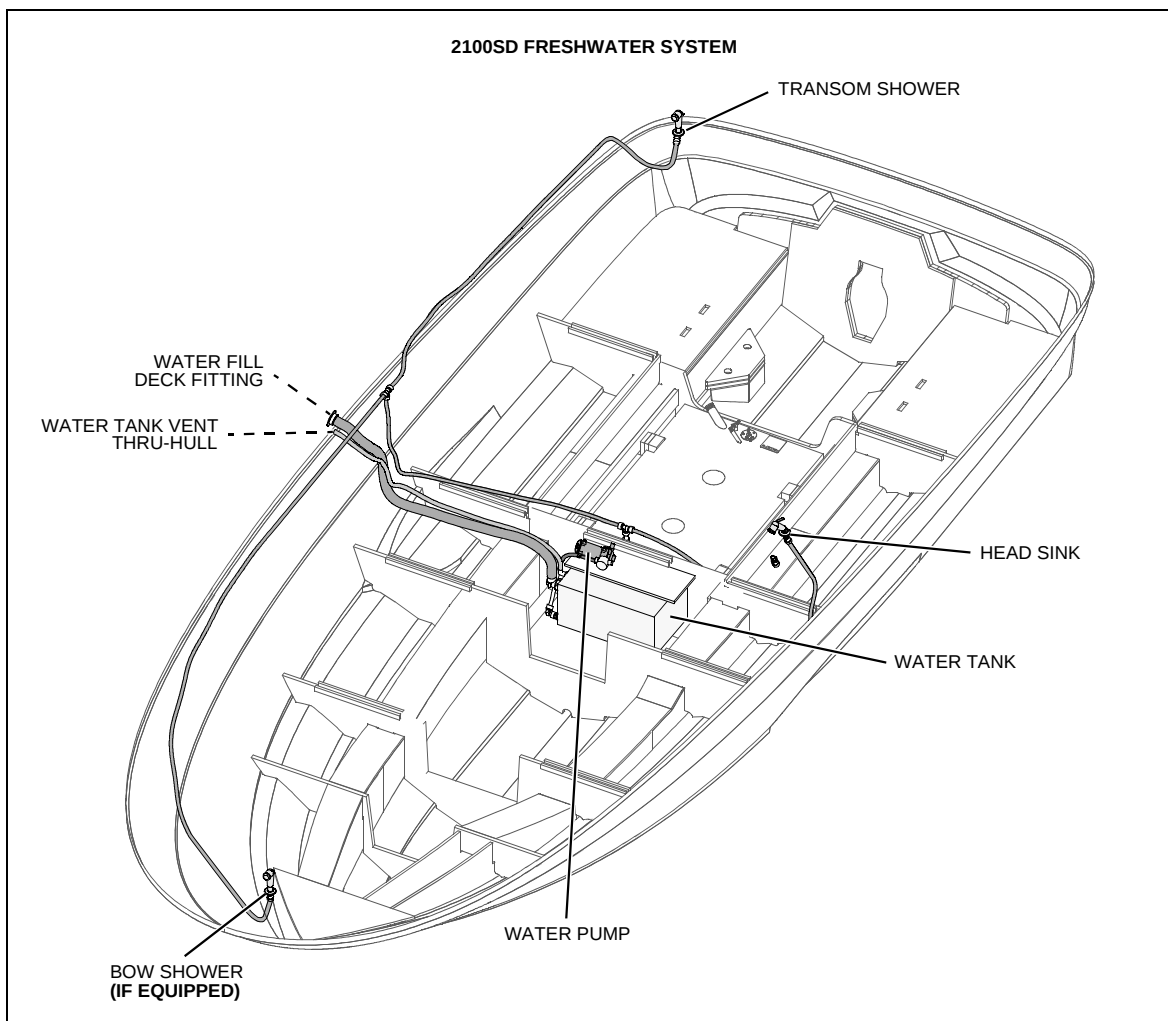

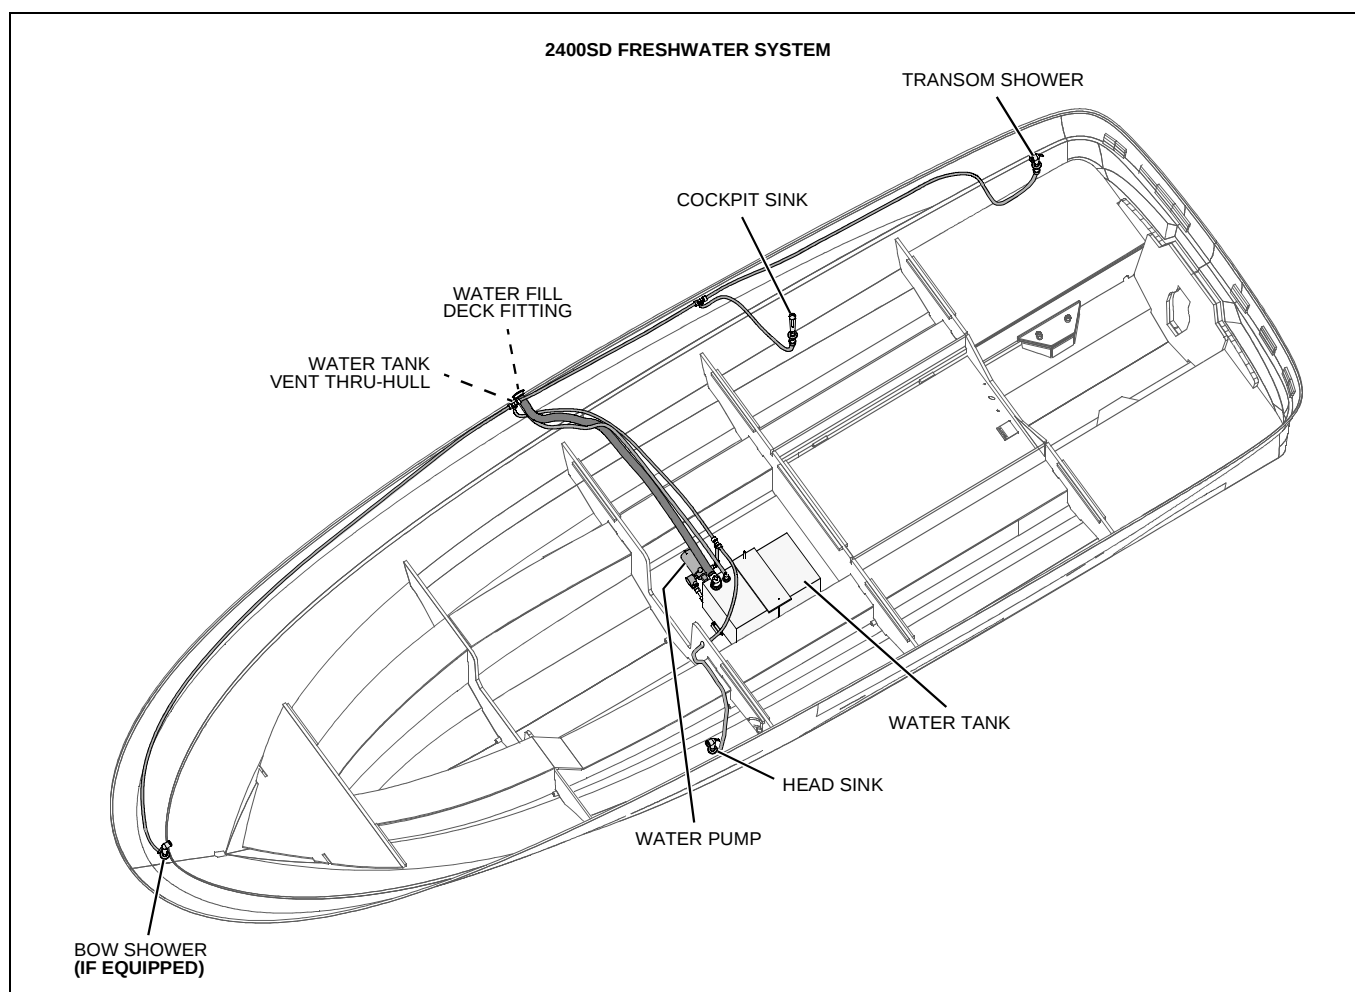

- Read the *Freshwater System* section in the *Sport Boat Owner's Manual*.
- Your boat is equipped with a pressure type (demand) freshwater (potable) system.
- This system is pressurized by turning **On** the freshwater pump switch.

Observe the following about the freshwater system:

- Turn **Off** the freshwater pump switch when the boat is **not** in use or the water tank is empty.
- Inspect and clean the water filter often (located on the water pump).
- When your boat is to be left unattended for long periods of time, pump the water tank dry to prevent stored water from becoming stagnant and distasteful.
- If the freshwater system needs to be disinfected, ask your dealer about treatments available for your boat's system.

Freshwater System Winterization



CAUTION!

WATER SYSTEM DAMAGE HAZARD!

Never blow compressed air through the water system when *all* of the faucets are *Closed*.

1. Turn **On** the water system switch.
2. **Open all** of the faucets and showers and let the water system drain completely.
3. Turn **Off** the water system switch.

Any remaining water **must** be removed from the water lines. There are two ways to remove the remaining water from the lines:

- Compressed Air
- Gravity Draining


Compressed Air

You **must** have an air compressor with an air hose and an air nozzle.

1. Remove the water line from the outlet side of the water pump (opposite side from filter).
2. **Open** the faucet that is furthest away from the water pump.
3. Place the air nozzle against the end of the just removed water line and blow air through the system.
4. When water stops coming out of the **Open** faucet, stop the air and **Close** the faucet.
5. One at a time, repeat this process on **all** faucets and showers.

Gravity Draining

1. **Open all** faucets and showers.
2. Remove the drain plug from the tee fitting on the freshwater tank.
3. When the water has stopped draining from the freshwater tank, replace the drain plug.

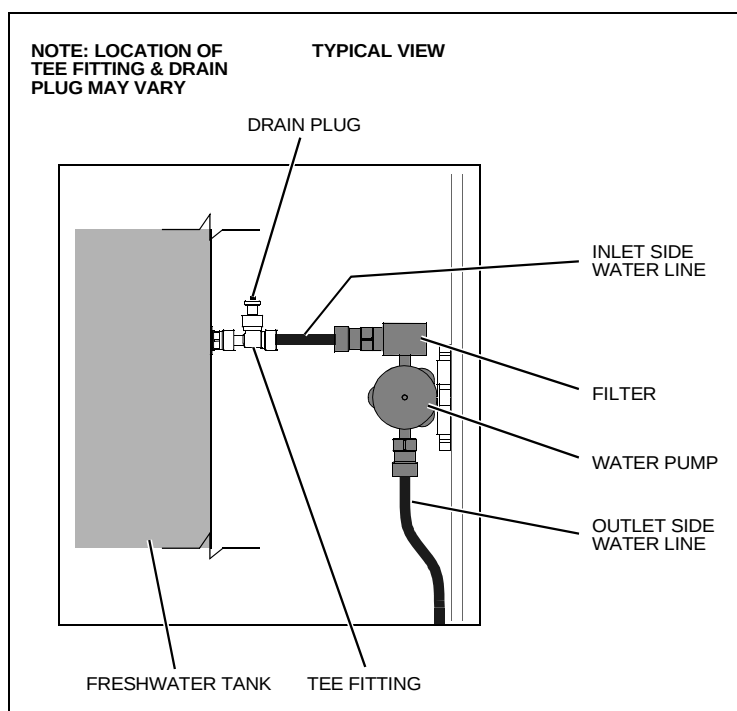


Portable Toilet (If Equipped)

NOTICE


Check with local authorities for regulations regarding the legal use of marine head systems.

- Your boat may feature a portable toilet.
- Read and follow the manufacturer's operating instructions **before** using the portable toilet.

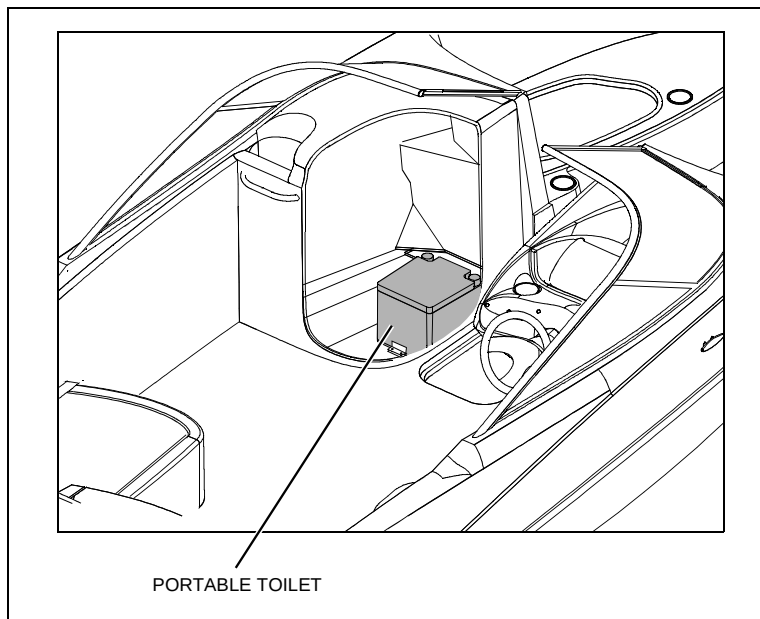

Portable Toilet Pump-out (If Equipped)

- Your boat may feature a portable toilet pump-out.
- Read and follow the manufacturer's operating instructions **before** using this feature.

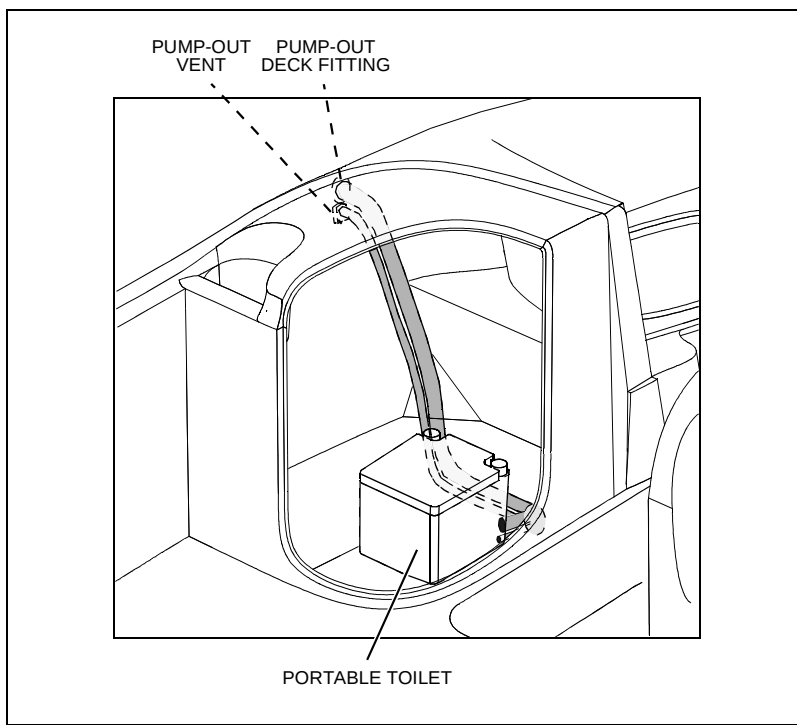

Chapter 8: Deck Equipment

Cleats and Tow Eyes

 **WARNING!**

PERSONAL INJURY and /or PRODUCT or PROPERTY DAMAGE HAZARD!

- **NEVER** lift the boat using the bow and stern eyes or the cleats.

Carefully read the section on towing in the *Sport Boat Owner's Manual* **before**:

- Towing anything behind the boat.
- Being towed by another vessel.

Ski Tow Ring


 **WARNING!**

PERSONAL INJURY and /or PRODUCT or PROPERTY DAMAGE HAZARD!

Failure to follow these guidelines can result in injury or death:

- Only tow water skis, wakeboards, or recreational towables.
- **Do not** tow parasails, kites, or other boats.
- **Do not** tow more than two persons at one time.
- Use caution with skier in tow as tow rope may snap back into cockpit when released.

- Your boat may feature a ski tow ring.
- Attach the tow rope as shown in the photo.

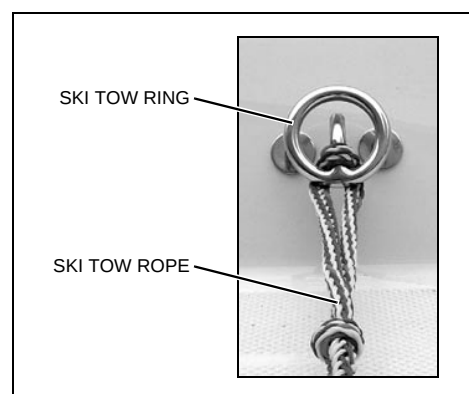

Canvas



CAUTION

PRODUCT or PROPERTY DAMAGE HAZARD!




Take down and securely stow the canvas top or bimini top, side curtains, and slant back cover *before* transporting your boat by road.

NOTICE

Two people are needed to do the tasks listed below.

Bimini Top

1. Slide the end eyes of the main bow (A) into the deck hinges (B) and insert the securing pins.
 2. Slide the end eyes of the aft supports (C) into the deck hinges and insert the securing pins.
 3. Pull the secondary bow (D) forward and slide the forward support (E) swivel ends over the windshield frames and insert the securing pins.
 4. Slide the end eye of the port stern support (F) into the deck hinge and insert the securing pin.
- The jaw slides should **not** need to be adjusted.
 - However, if you think the jaw slides need to be adjusted, obtain the measurements from your selling dealer.

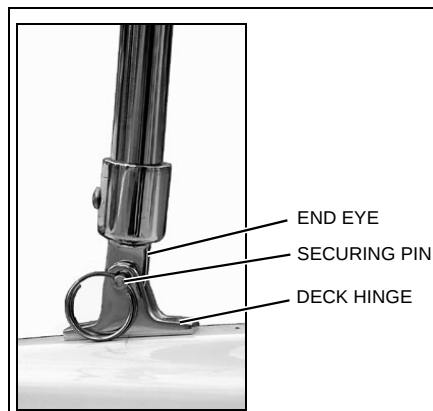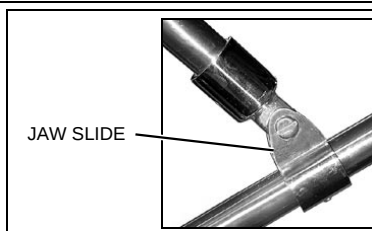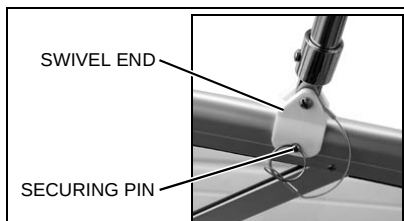

Chapter 9: Entertainment Systems

Audio & Visual Equipment

NOTICE


AM radio reception may be impaired anytime the engine is running.

Read and understand the instruction manual for your boat's audio system *before* using.


Chapter 10: Convertible Seats, Beds, & Tables

Bow Conversion (If Equipped)

1. Place the forward filler board (A) and the aft filler board (B) so that they fit securely on the edge lips.

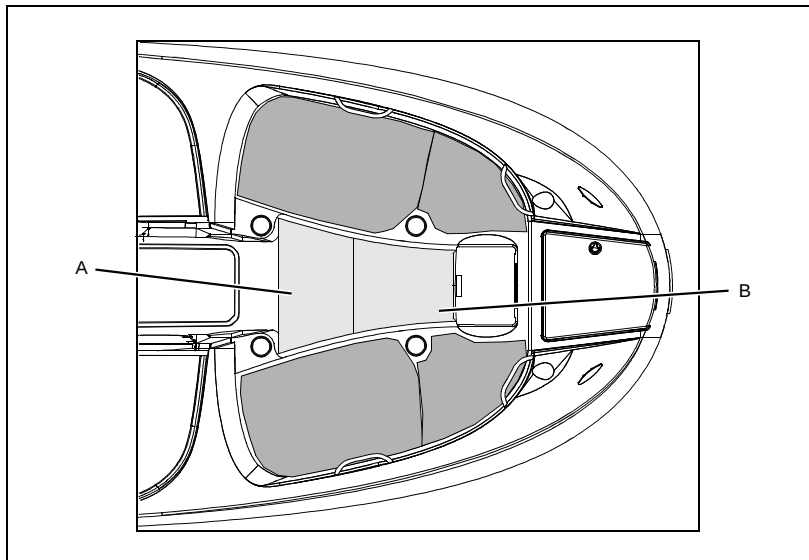

2. Place the filler cushion (C) on top of the filler boards.

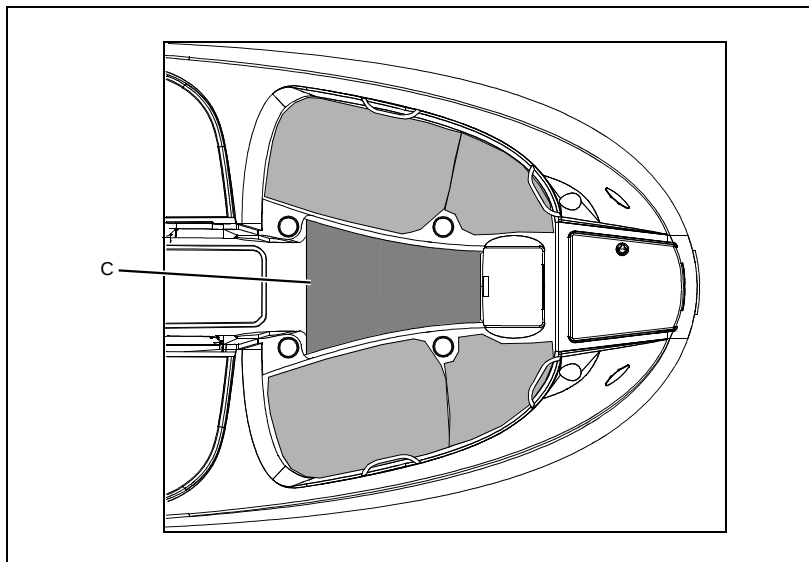

Chapter 11: Lights



CAUTION

- Be conservative in the use of battery power.
- If the engine is *not* running, prolonged use of the lights (overnight) *will* result in a drained battery.

- The lights are powered by the boat's 12-volt DC system.

Care and Maintenance

All of the lights installed on your boat are of top quality, but you should be aware that failure may periodically occur for a variety of reasons:

1. There may be a blown fuse - *replace the fuse*.
2. The bulb may be burned out - *carry spare bulbs for replacement*.
3. A wire may be damaged or may have come loose - *repair as required*.
4. The bulb base may be corroded - *clean the base and coat it with non-conductive electrical lubricant*.

Navigation Lights



CAUTION

Avoid the storage of gear where it would block navigation lights from view.

Read and understand the navigation light section of *Sport Boat Owner's Manual*.

Docking Lights (If Equipped)

Read and follow the manufacturer's operating instructions *before* using the docking lights.

Chapter 12: Electrical System

DANGER!



EXTREME FIRE, SHOCK & EXPLOSION HAZARD!

- To minimize the risks of fire and explosion, **NEVER** install knife switches or other arcing devices in the fuel compartments.
- **NEVER** substitute automotive parts for marine parts. Electrical, ignition and fuel system parts were designed and manufactured to comply with rules and regulations that minimize risks of fire and explosion.
- **DO NOT** modify the electrical systems or relevant drawings.
- Have qualified personnel install batteries and/or perform electrical system maintenance.
- Make sure that *all* battery switches are turned **OFF** before performing any work in the engine spaces.

WARNING!



FIRE & EXPLOSION HAZARD!

- Fuel fumes are heavier than air and *will* collect in the bilge areas where they can be accidentally ignited.
- Visually and by smell (sniff test), check the engine and fuel compartments for fumes or accumulation of fuel.
- **ALWAYS** run the bilge blowers for at least four minutes prior to engine starting, electrical system maintenance or activation of electrical devices.
- Minimize the danger of fire and explosion by *not* exposing the batteries to open flame or sparks. **NEVER** smoke anywhere near the batteries.

CAUTION



SHOCK & ELECTRICAL SYSTEM DAMAGE HAZARD!

NEVER disconnect the battery cables while the engine is running since it can cause damage to your boat's electrical system components.

NOTICE

Electrical connections are prone to corrosion. To reduce corrosion caused electrical problems, keep *all* electrical connections clean and apply a spray-on protectant that is designed to protect connections from corrosion.

12-Volt DC System

Battery

The battery supplies electricity for lights, accessories, engine starting.

The Electrical section of Chapter 8, in the *Sport Boat Owner's Manual*, provides battery, care and maintenance instructions.

Battery Switch

- The *Owner's Manual* provides a general description of the battery switch function in the *Batteries* portion of the Electrical Section.

Fuses and Circuit Breakers

- Fuses for the engine and main accessory power are on the fuse block behind the dash.
- Some equipment may have secondary fuse protection at the unit, behind the battery.
- Electronics power is provided at the helm station.

Alternator

The engine alternator will keep the battery properly charged when running at cruising speeds.

12-Volt Accessory Outlet


 **CAUTION**

***DO NOT* use the 12-volt accessory outlet with a cigarette or cigar lighter. High temperatures may melt the outlet.**

- Your boat is equipped with a 12-volt accessory outlet at the helm.
- The outlet can be used with any 12-volt device which draws 15 amps or less.
- The 12-volt accessory outlet is protected by a 15 amp circuit breaker on the main circuit breaker panel.


Electrical Routings

2100SD Deck Electrical Harness

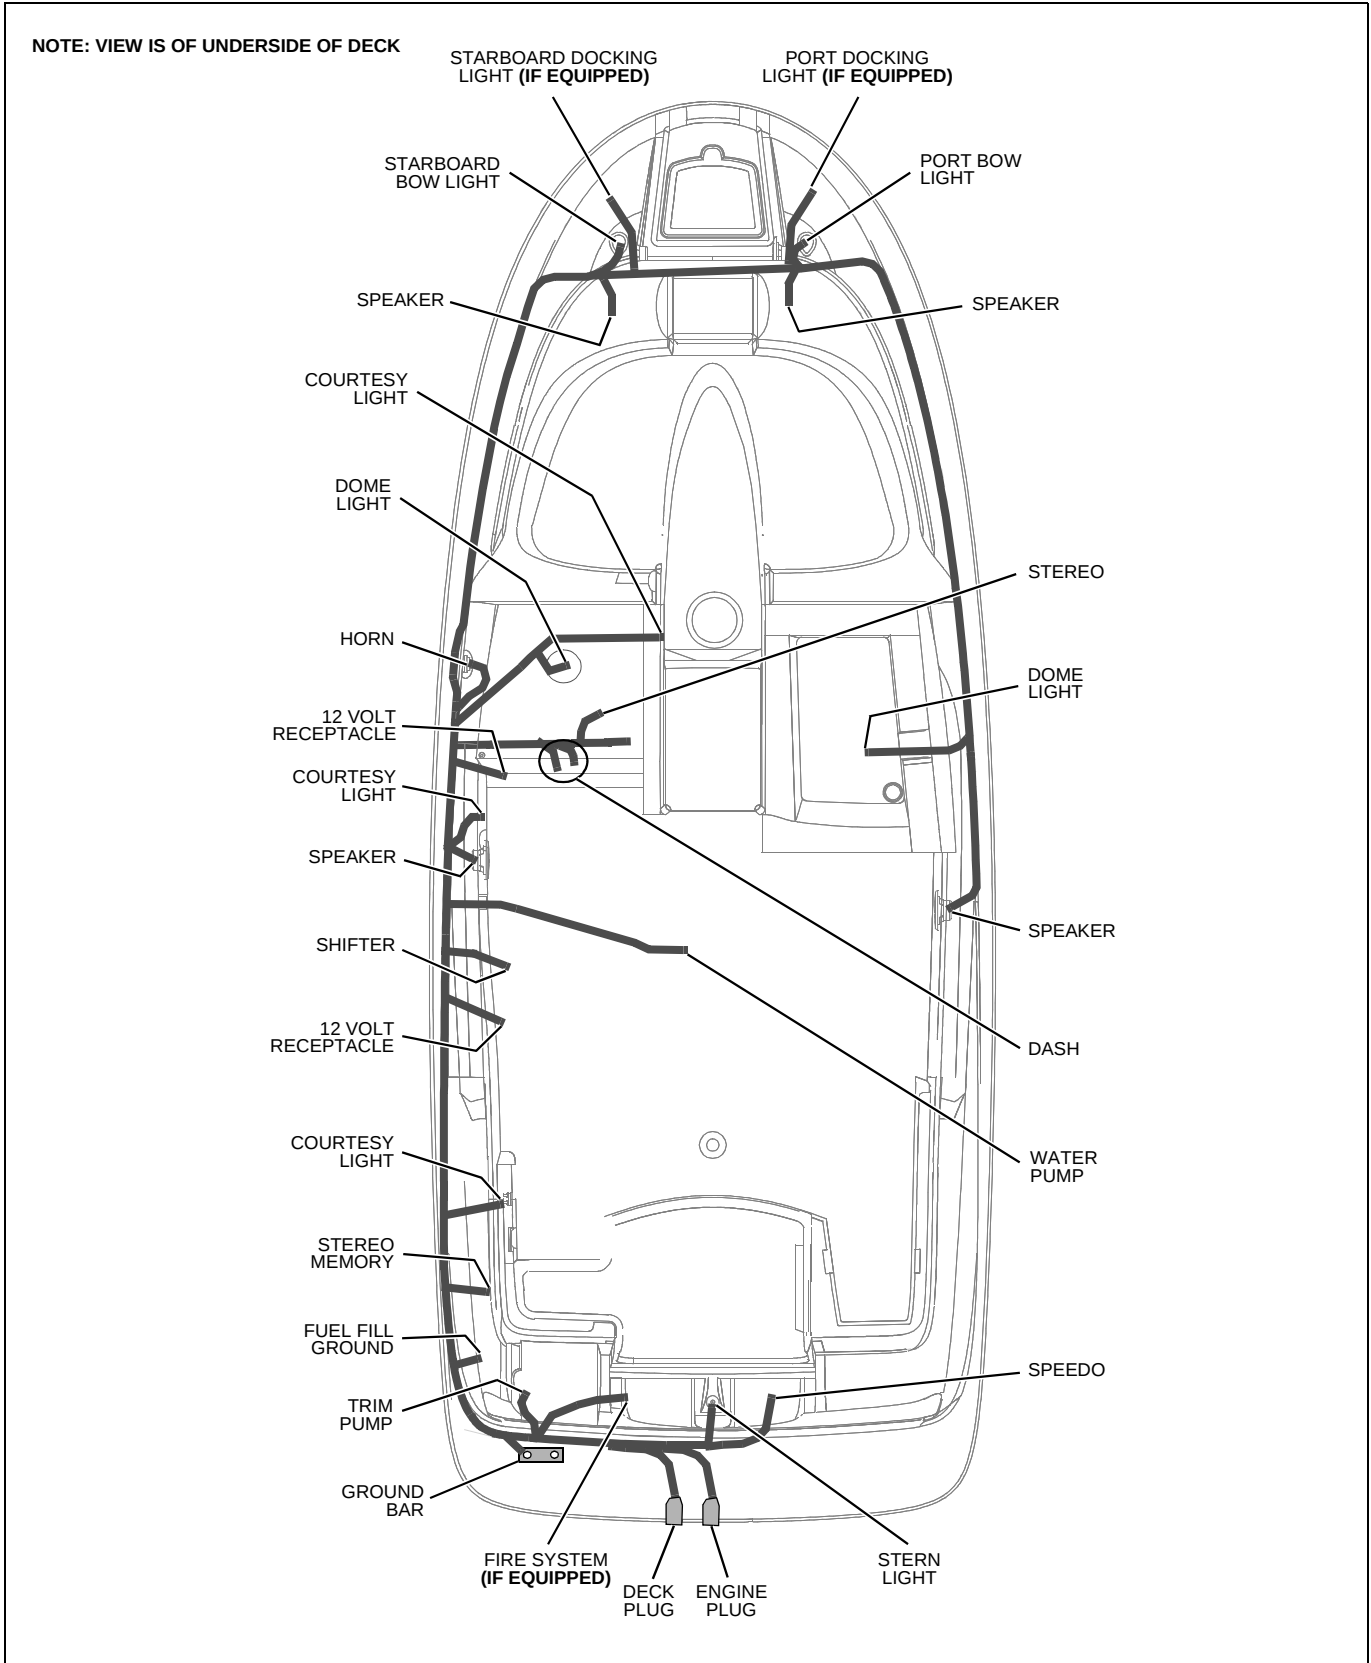


2400SD Deck Electrical Harness


NOTE: VIEW IS OF UNDERSIDE OF DECK

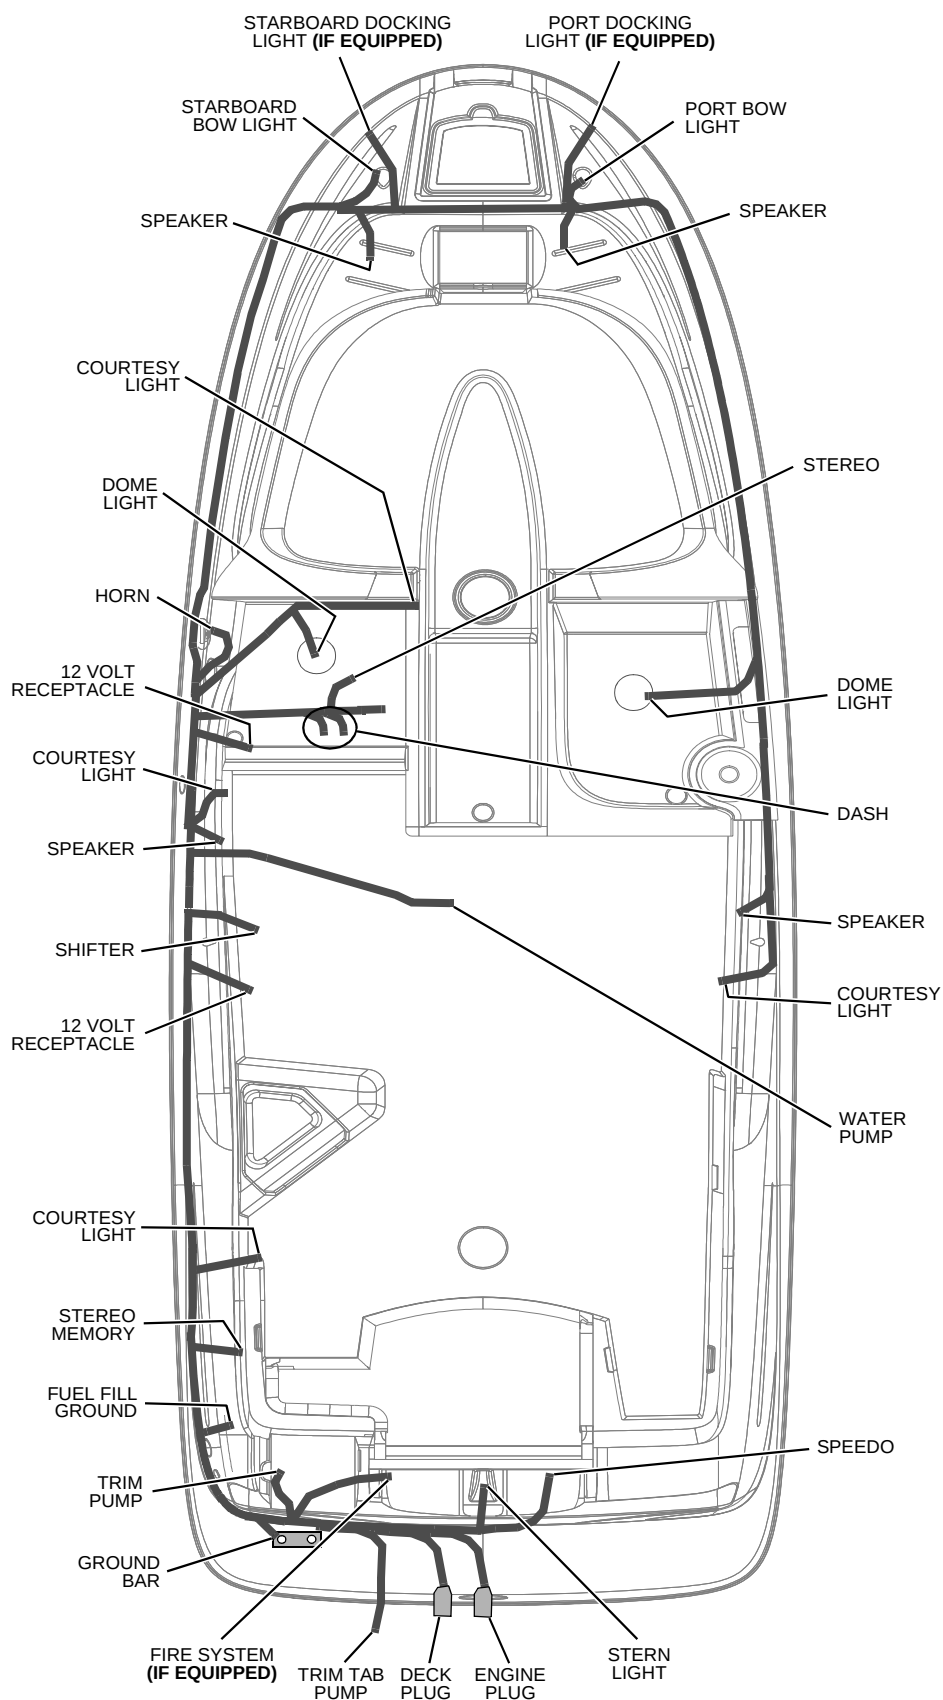

Hull Electrical Harness

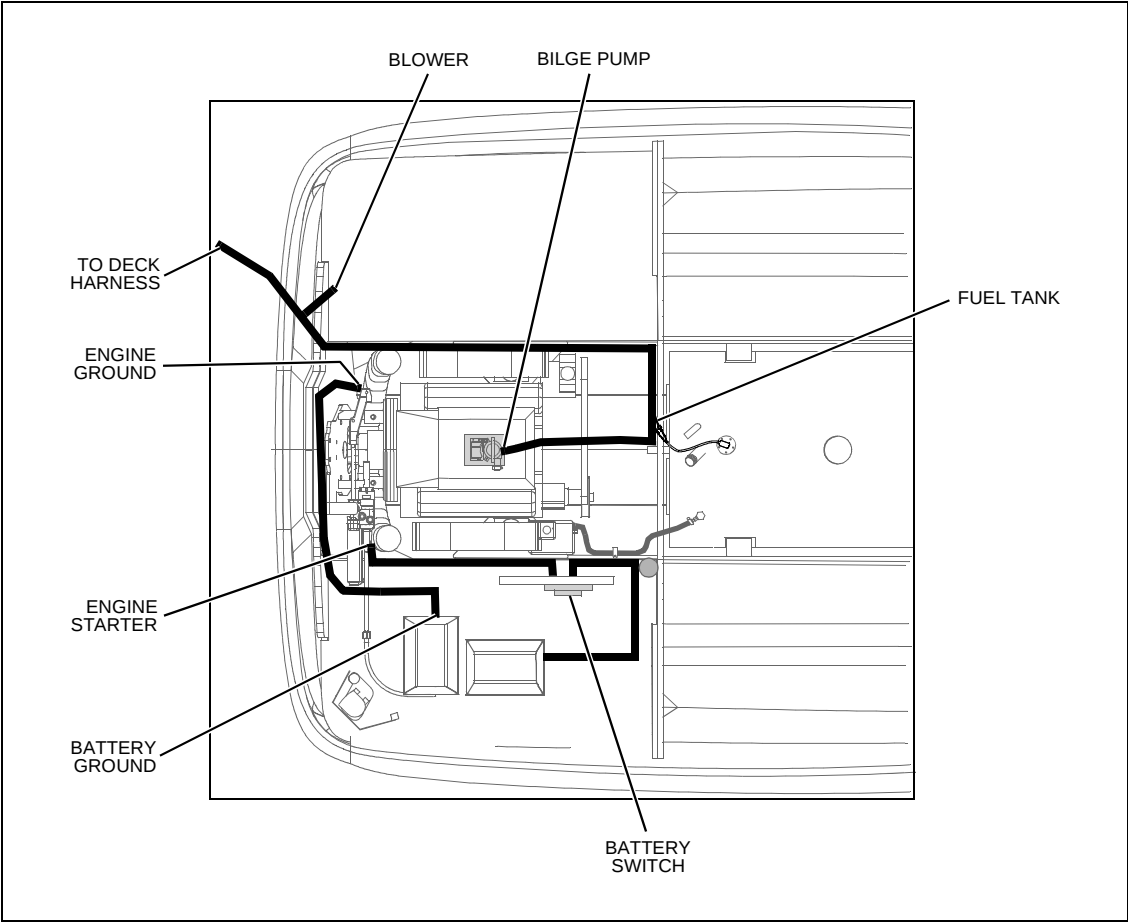

Wiring Diagram

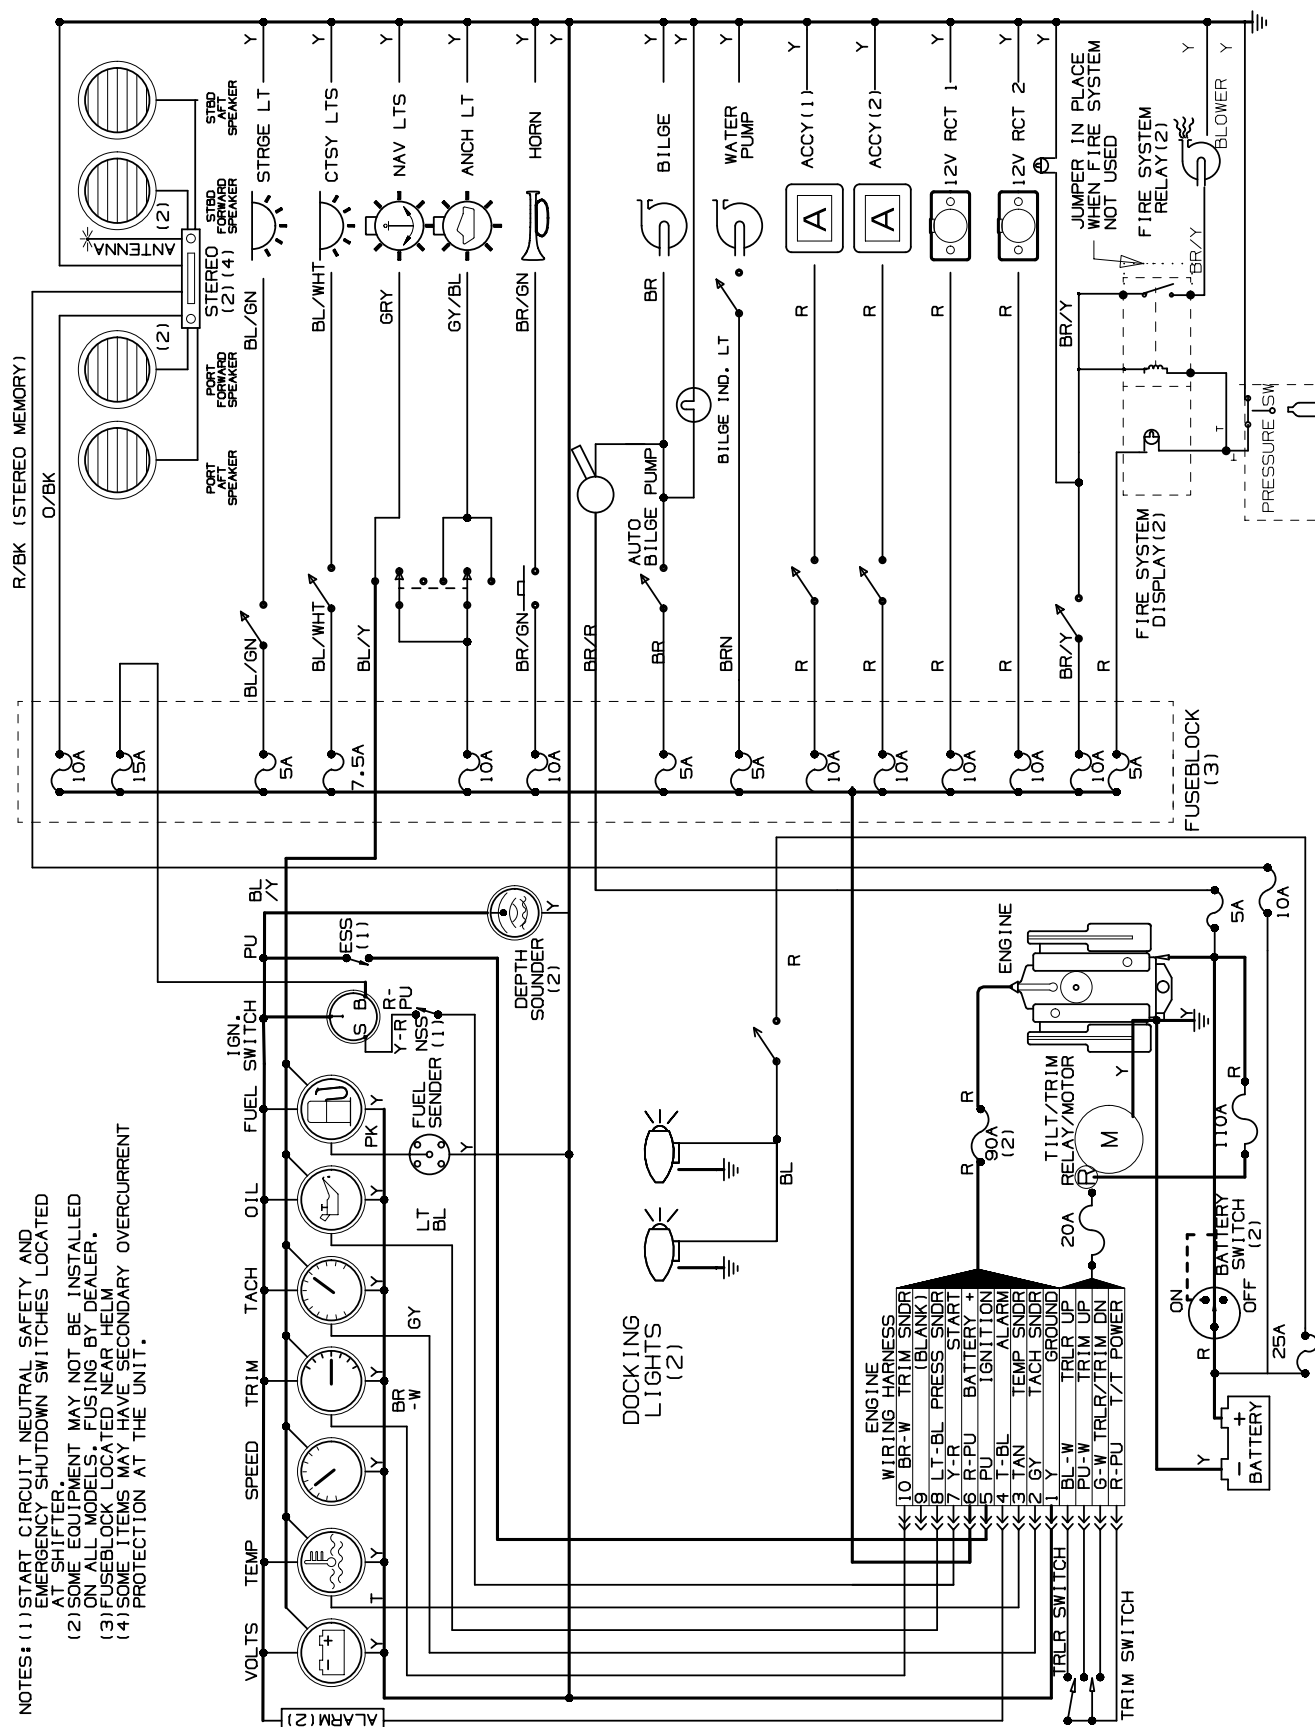

Important Records

Selling Dealer

Name Of Dealership

Address

Phone/FAX/E-mail

Sales Manager

Service Manager

Engine

Manufacturer

Model Name/Number

Engine Serial Number

Oil Type/SAE

Quarts per Engine

Filter Type

Propeller

Manufacturer

Pitch

Model Number

Key Numbers

Ignition

Other

Electronics

Manufacturer

Model Name/Number

Serial Number

Manufacturer

Model Name/Number

Serial Number

Manufacturer

Model Name/Number

Serial Number

Manufacturer

Model Name/Number

Serial Number

Float Plan

Before going boating, fill out a copy of this float plan (or similar) and leave it with a **reliable** person whom you can depend on to contact the Coast Guard or other rescue organization, if you do not return as scheduled.

Description of Boat

_____ Registration/Documentation Number		
_____ Length	_____ Make	_____ Type
_____ Hull Color		_____ Trim Color
_____ Fuel Capacity	_____ Engine Type	_____ Number of Engines
_____ Distinguishing Features		
_____ Distinguishing Features		

Operator of Boat

_____ Full Name		
_____ Male or Female	_____ Age	_____ Health
_____ Address		
_____ Address		
_____ Phone/FAX/E-mail		
_____ Operator's Experience		

Persons on Board

_____ Full Name		
_____ Age	_____ Health	_____ Phone Number
_____ Full Name		
_____ Age	_____ Health	_____ Phone Number
_____ Full Name		
_____ Age	_____ Health	_____ Phone Number
_____ Full Name		
_____ Age	_____ Health	_____ Phone Number

Survival Equipment

Marine Radio (Yes/No)	Type	Frequencies
Number of PFDs	Flares (Yes/No)	Mirror (yes or no)
Smoke Signals (Yes/No)	Flashlight (Yes/No)	Food (Yes/No)
Water (Yes/No)	Anchor (Yes/No)	Raft/Dinghy (Yes/No)
Paddles (Yes/No)	EPIRB (Yes/No)	Other
Other	Other	Other

Vehicle Description

Make	Model
Color	License Number
Where is the Vehicle Parked?	

Trip Expectations

Departing From	
Departure Date	Departure Time
Stopover 1	
Arrive No Later Than: Date	Arrive No Later Than: Time
Stopover 2	
Arrive No Later Than: Date	Arrive No Later Than: Time
Stopover 3	
Arrive No Later Than: Date	Arrive No Later Than: Time
Stopover 4	
Arrive No Later Than: Date	Arrive No Later Than: Time
Stopover 5	
Arrive No Later Than: Date	Arrive No Later Than: Time
Stopover 6	
Arrive No Later Than: Date	Arrive No Later Than: Time
Final Destination Port (If Different Than Home Port)	
Arrive No Later Than: Date	Arrive No Later Than: Time

If not returned by the date and time listed above, call the Coast Guard or other local authority.

Coast Guard Phone Number
Local Authority Phone Number

[illegible]

[illegible]

Part Number 1742432

Maxum Marine • P.O. Box 9029 • Everett, WA 98206 • 360-435-5571