


# **QUICKSILVER®**

## Activ 755 Open Owner's Manual

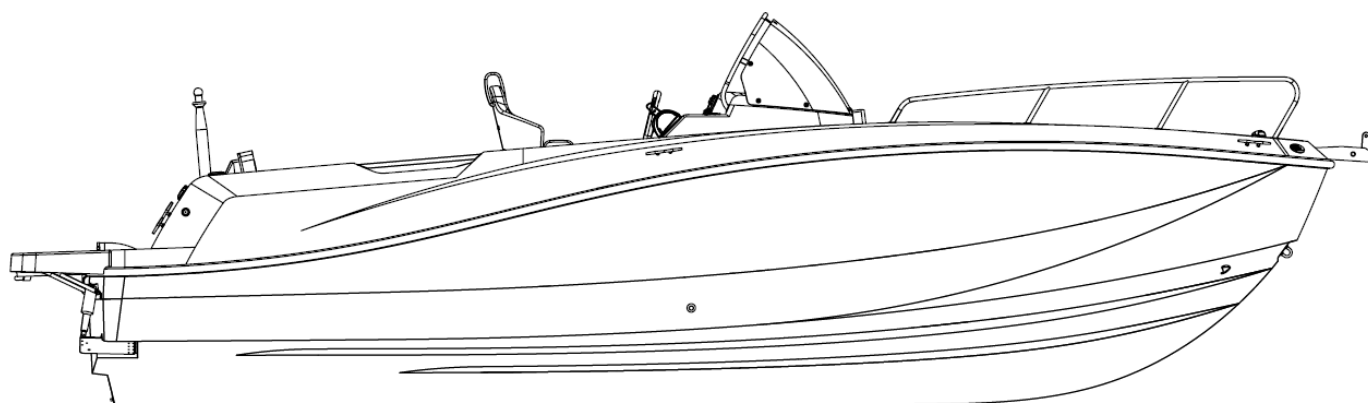



---

## Welcome

---

Congratulations on becoming a new owner of a Quicksilver® boat. This Owner's Packet will provide important information about the features of your boat and should be, at all times, kept aboard your boat. Take time to carefully review the information in this packet to really get to know your boat.

The Owner's Packet will contain the following:

- **Model Specific Owner's Manual**  
The model specific manual contains information vital to understanding the operation of your boat.
- **Original Equipment Manufacturer (OEM) Information**  
The OEM information contains manuals provided by the individual system manufacturers of the equipment installed on your boat. These include items such as engine controls, electronics, and stereos, just to name a few. The Owner's Manual will often refer to information provided by the manufacturers of specific systems.

Please keep this manual in a secure place, and transfer to the new owner when you sell the craft.

Information and assistance is also available via our website, [www.quicksilver-boats.com](http://www.quicksilver-boats.com).

Information in this publication is based upon the latest production specifications available at printing. Quicksilver® reserves the right to make changes at any time, without notice, in the colors, equipment, specifications, materials and prices of all models, or to discontinue models. Should changes in production models be made, Quicksilver® is not obligated to make similar changes or modifications to models sold prior to the date of such changes.

**QUICKSILVER® • A BRUNSWICK COMPANY**  
**# INT 2207633**

QUICKSILVER 755OP  
FEBRUARY 2016

---

## Table of Contents

---

### Introduction

|                                            |     |
|--------------------------------------------|-----|
| 1. Owner's Manual .....                    | vi  |
| 2. Your Responsibilities.....              | vi  |
| 3. Safety / Warning Labels .....           | vi  |
| 4. Dealer Responsibilities.....            | vii |
| 5. Craft Identification Number (CIN) ..... | vii |
| 6. Warranty Information.....               | vii |

### General Information

|                                                 |    |
|-------------------------------------------------|----|
| 1. Basic Boat Dimensions & Specifications ..... | 1  |
| 2. Vessel Stability .....                       | 2  |
| 3. Load Capacity .....                          | 2  |
| 4. Passenger Locations .....                    | 3  |
| 5. Design Categories .....                      | 3  |
| 6. Safety Label Locations .....                 | 4  |
| 7. Deck/Cockpit Layout (standard equipment) ..  | 6  |
| 8. Deck/Cockpit Layout (optional equipment) ... | 7  |
| 9. Cockpit Storage .....                        | 9  |
| 10. Thru Hull Locations .....                   | 10 |
| 11. Cabin Layout .....                          | 11 |
| 12. Dash Layout .....                           | 12 |
| 13. Navigation Lights .....                     | 13 |
| 14. Engines .....                               | 14 |
| 15. Trailering .....                            | 14 |
| 16. Strong Points .....                         | 15 |

### System & Component Overview and Operation

|                                        |    |
|----------------------------------------|----|
| 1. Fuel System .....                   | 16 |
| 2. Fresh Water System (optional) ..... | 18 |
| 3. Black Water System (optional) ..... | 20 |
| 4. Grey Water System (optional).....   | 22 |
| 5. Bilge Pumps .....                   | 23 |

|                                                 |    |
|-------------------------------------------------|----|
| 6. Fire Suppression .....                       | 24 |
| 7. Carbon Monoxide Monitor .....                | 25 |
| 8. LPG System (optional).....                   | 27 |
| 9. Bow Anchor Windlass (optional) .....         | 29 |
| 10. Steering .....                              | 30 |
| 11. Engine Controls .....                       | 32 |
| 12. Emergency Engine Shutdown Switch .....      | 33 |
| 13. Smartcraft™ System Gauges.....              | 34 |
| 14. Smartcraft™ VesselView4 (optional).....     | 34 |
| 15. Trim Tabs (optional).....                   | 34 |
| 16. Stereo (optional).....                      | 34 |
| 17. Port & Starboard Jump Seats .....           | 35 |
| 18. Port & Starboard Flip Seats (optional)..... | 35 |
| 19. Aft Cockpit Table .....                     | 36 |
| 20. Ski Pole (optional).....                    | 36 |
| 21. Motorwell Bridge (optional).....            | 37 |
| 22. Bow Cockpit Table (optional) .....          | 38 |
| 23. Bow Sun Lounge (optional) .....             | 38 |
| 24. Canvas (optional).....                      | 39 |

### Electrical Systems

|                                    |    |
|------------------------------------|----|
| 1. DC Electrical.....              | 41 |
| 2. Batteries .....                 | 41 |
| 3. Battery Boxes.....              | 41 |
| 4. Battery Selector Switches ..... | 41 |
| 5. Fuses and Breakers .....        | 42 |
| 6. Electrical Schematics .....     | 44 |

### Maintenance

|                                |    |
|--------------------------------|----|
| 1. Maintenance .....           | 46 |
| 2. Hull & Deck Surfaces.....   | 46 |
| 3. Component Maintenance ..... | 47 |

---

# Introduction

---

## 1. Owner's Manual

The material here and the rest of the Owner's manual packet:

- Gives you basic safety information
- Describes the fundamentals of boat use
- Describes the features of your boat
- Describes the equipment on your boat
- Contains service and maintenance information

**You must learn to safely operate this boat as well as read, understand and use the information contained in this package.**

What this manual does not give you is a course in boating safety, or how to navigate, anchor or dock your boat. Operating a power boat safely requires more skills, knowledge and awareness than is necessary for a car or truck.

## 2. Your Responsibilities

For your safety, the safety of your passengers, other boaters and people in the water, you must take a boating safety course and get instruction in the safe and proper handling of your boat. Understand and follow the "Rules of the Road" and learn how to navigate.

Do not forget that a boating license is mandatory in many countries for vessels above a certain engine power. These regulations can vary depending on the country or region that you are located in. Finally, your boat must be registered with the proper navigation authorities. A Declaration of Conformity is part of the documents that you receive with the boat and it must be kept aboard with other official documents at all times. The Declaration of Conformity is mandatory when registering the boat.

## 3. Explanation of Safety Labels

The most important aspect of boating is safety. Although every effort is made to address the numerous issues regarding the safe usage of your boat, it is strongly recommended that you avail yourself of the training and knowledge available through boating safety courses, etc.

### Safety Precautions

Mounted at key locations throughout your boat and duplicated in this manual are labels which advise the owner/operator of imperative safety precautions to follow when operating or servicing equipment. Learn to recognize the degree of precaution and understand the explanations of safety prior to reading this manual. These precautions are not all-inclusive. Always use common sense in the operation of your boat.

- Do not remove or obstruct any safety label.
- Replace any label which becomes illegible. Replacement safety labels can be obtained by calling your dealer.

#### **DANGER**

**DANGER**—Immediate hazards which will result in severe personal injury or death if the warning is ignored.

#### **CAUTION**

**CAUTION**—Hazards or unsafe practices which could result in minor injury, product or property damage if the warning is ignored.

#### **WARNING**

**WARNING**—Hazards or unsafe practices which **MAY** result in severe personal injury or death if the warning is ignored.

#### **NOTICE**

**NOTICE**—Information which is important to proper operation or maintenance, but is not hazard related.

---

## Introduction

---

### 4. Dealer Responsibilities


In addition to a pre-delivery check and service of the boat, your dealer is to provide:

- A description and demonstration of the safety systems, features, instruments and controls on your boat
- An orientation in the general operation of your boat
- A review of all warranty information and how to obtain warranty service
- The Owner Information Package

If you do not receive all of these materials, or have any questions, contact your dealer.

### 5. Craft Identification Number (CIN)

The Craft Identification Number is located either on the starboard side of the transom, or on the aft starboard side of the hull under the gunwale if the boat has an optional swim platform, and is your boat's most important identifying factor. The CIN consists of a two digit country code indicating the country of origin of the manufacturer and a unique twelve digit code that provides Quicksilver® vital information about your boat. The CIN must be included in all correspondence related to the vessel. Also of vital importance is the engine serial number(s) and part number(s) when ordering parts for your engine.

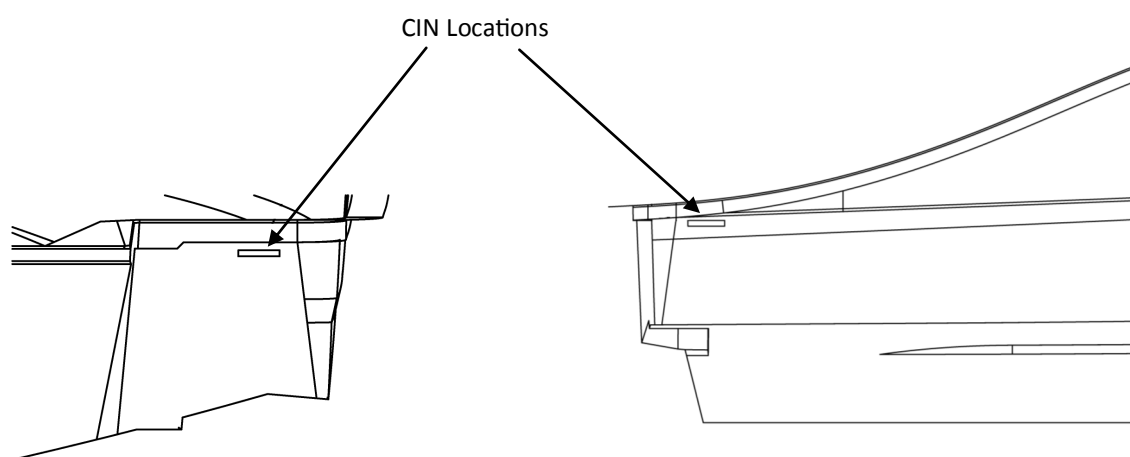

### 6. Warranty Information

You will find information regarding the Quicksilver® warranty following the introduction. A warranty information card is also included in the owner information packet. If for some reason this information is missing, contact your Quicksilver® dealer.

#### Registration

Contact your dealer or the distributor in your country, or the Brunswick Marine in EMEA Center closest to you.

#### Transfer of Warranty

Contact the distributor in your country, or the Brunswick Marine in EMEA Center closest to you.

---

## Introduction

---



### About Your Limited Warranty

The Quicksilver Division of Brunswick Marine in EMEA (Quicksilver®) provides the following Limited Warranty to the original retail owner of its Quicksilver® boat, if purchased from an authorized dealer and operated under normal, subject to remedies, exclusions, and limitations set out in this Limited Warranty.

#### Europe and Confederation of Independent States

**WHAT IS COVERED:** Brunswick Marine in EMEA warrants its new products to be free of defects in material and workmanship during the period described below.

**DURATION OF COVERAGE:** This Limited Warranty provides coverage for two (2) years from the date the product is first sold to a recreational use retail purchaser, or the date on which the product is first put into service, whichever occurs first. Commercial users of these products receive warranty coverage of one (1) year from the date of first retail sale, or one (1) year from the date in which the product was first put into service, whichever occurs first.

Commercial use is defined as any work or employment related use of the product, or any use of the product which generates income, for any part of the warranty period, even if the product is occasionally used for such purposes.

The repair or replacement of parts, or the performance of service under this warranty, does not extend the life of this warranty beyond its original expiration date. Unexpired warranty coverage can be transferred from one recreational use customer to a subsequent recreational use customer upon proper registration of the product. Unexpired warranty coverage may be terminated for use or repossessed product; or product purchased at auction, from a salvage yard, or from an insurance company.

**CONDITIONS THAT MUST BE MET IN ORDER TO OBTAIN WARRANTY COVERAGE:** Warranty coverage is available only to retail customers that purchase from a Dealer authorized by Brunswick Marine in EMEA to distribute the product in the country in which the sale occurred, and then only after the Brunswick Marine in EMEA specified predelivery inspection process is completed and documented. Warranty coverage becomes available upon proper registration of the product by the authorized dealer. Routine maintenance outlined in the Operation and Maintenance Manual must be timely performed in order to maintain warranty coverage. Brunswick Marine in EMEA reserves the right to make future warranty coverage contingent on proof of proper maintenance.

**WHAT BRUNSWICK MARINE IN EMEA WILL DO:** Brunswick Marine in EMEA's sole and exclusive obligation under this warranty is limited to, at our option, repairing a defective part, replacing such part or parts with new or Brunswick Marine in EMEA certified remanufactured parts, or refunding the purchase price of the Brunswick Marine in EMEA product. Brunswick Marine in EMEA reserves the right to improve or modify products from time to time without assuming an obligation to modify products previously manufactured.

**HOW TO OBTAIN WARRANTY COVERAGE:** The customer must provide Brunswick Marine in EMEA with a reasonable opportunity to repair, and reasonable access to the product for warranty service. Warranty claims shall be made by delivering the product for inspection to a Brunswick Marine in EMEA authorized dealer to service the product. If purchaser cannot deliver the product to such a dealer, written notice must be given to Brunswick Marine in EMEA. We will then arrange for the inspection and any covered repair. Purchaser in that case shall pay for all related transportation charges and/or travel time. If the service provided is not covered by this warranty, purchaser shall pay for all related labor and material, and any other expenses associated with that service. Purchaser shall not, unless requested by Brunswick Marine in EMEA, ship the product or parts of the product directly to Brunswick Marine in EMEA. Proof of registered ownership must be presented to the dealer at the time warranty service is requested in order to obtain coverage.

**WHAT IS NOT COVERED:** As expressly set out herein, all warranties provided by the manufacturers and distributors of components, equipment, and parts ("Component Manufacturer") on the boat are hereby assigned to the owner, to the extent permitted by the Component Manufacturer, as the owner's sole and exclusive remedy with respect to such items. Any assistance by Brunswick Marine in EMEA and/or its authorized dealers with regard to component warranties shall not constitute an adoption of the responsibilities of a component manufacturer with regard to its component warranties. This Limited Warranty does not apply to any Quicksilver® which has been salvaged or declared a total loss or a constructive total loss for any reasons not covered in this Limited Warranty. This Limited Warranty also does not apply to the following items:

1. Engines, drivetrains, controls, propellers, batteries, other equipment or accessories that carry their own individual warranties, or equipment and accessories which are not installed by Quicksilver®
2. Window damage or breakage

---

## Introduction

---

3. Rainwater leakage, including rainwater leakage through convertible tops
4. Damage or deterioration of cosmetic surface finishes, including cracking, crazing, discoloration, air voids, fading or oxidation of gel coat, wood finishes (varnishes, stains, and paints), fabrics, vinyls, plastics, trim tape, plated or painted metal, stainless steel finishes, anti-fouling bottom paint, or zinc anodes
5. Any Quicksilver® which has been altered or modified from Brunswick Marine in EMEA factory specifications
6. Any Quicksilver® initially sold at retail by a party other than an authorized Brunswick Marine in EMEA dealer
7. Any Quicksilver® which has been used for racing or military purposes, or which has been overpowered according to Brunswick Marine in EMEA factory specifications for such Quicksilver®
8. Any Quicksilver® used for Commercial Purposes. Commercial Purposes, as used herein, means a vessel with more than 50% usage for business or revenue-producing purposes.
9. Any failure or defect caused by an accident, product abuse or misuse, failure of the owner to use, maintain, or store the Quicksilver® as specified in Brunswick Marine in EMEA owner's manual(s), and any other failure to provide reasonable care and maintenance.
10. Any transportation, haul out, or other expenses incurred in returning the Quicksilver® to the selling dealer or to the Brunswick Marine in EMEA factory for warranty service.
11. Any representation or implication relating to speed, range, fuel consumption or estimated performance characteristics.
12. Damage, shrinkage, or deterioration of carpet, upholstery, and exterior canvas tops, enclosures, and weather covers (including rainwater leakage)
13. Any failure or defect caused by an act of nature resulting in damage, cost, or expense
14. Any transportation
15. Any failure or defect arising from a previous repair made by a non-authorized service provider
16. Any item exceeding the expressed coverage limits specified in any Brunswick Marine in EMEA Limited Warranty
17. Any defect or repair requiring redesign of the Quicksilver®, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971, or the recall laws of any other foreign jurisdiction.

**SOLE REMEDY:** The remedy of repair or replacement of parts that are found to be defective in factory materials or workmanship covered by the Limited Warranty shall constitute the owner's sole and exclusive remedy against Brunswick Marine in EMEA for any claims whatsoever of economic loss resulting from product failure.

In keeping with environmental policies and practices, Brunswick Marine in EMEA reserves the right to utilize reconditioned, refurbished, repaired or remanufactured products or parts in the warranty repair or replacement process. Such products and parts will be comparable in function and performance to an original product or part and warranted for the remainder of the original warranty period. In no event shall any repair or replacement under this Limited Warranty exceed the fair market value of the product as of the date of the owner's claim. Acceptance of any product returned or any refund provided by Brunswick Marine in EMEA shall not be deemed an admission that the product is defective. Products that are replaced become the property of Brunswick Marine in EMEA.

**OTHER LIMITATIONS:** Except as set forth herein or on any other written Limited Warranties by Brunswick Marine in EMEA, there are no other warranties, expressed or implied provided by Brunswick Marine in EMEA, on this Quicksilver®. All other warranties, expressed or implied are expressly excluded. Brunswick Marine in EMEA further disclaims any liability for economic loss arising from claims of product failure, negligence, defective design, manufacturing defect, failure to warn and/or instruct, lack of seaworthiness, and any other theory of liability not expressly covered under the terms of this Limited Warranty.

Any implied warranty of merchantability or fitness for a particular purpose is disclaimed. To the extent the implied warranty cannot be disclaimed, it is limited to the shorter of one (1) year from the date of delivery to the first retail owner or the duration of the respective Limited Warranties stated herein. To the extent required by law and implied warranty of merchantability is limited for the duration of the respective Limited Warranties stated. To the extent allowed by law neither Brunswick Marine in EMEA, nor the selling dealer shall have any responsibility of the loss of use of the Quicksilver®, loss of time, inconvenience, commercial loss or consequential damages.

Some countries, states or regions do not allow limitations on how long an implied warranty lasts, so the above limitations may not be applicable. Some countries, states or regions do not allow the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not be applicable. This warranty gives the owner specific legal rights, and the owner may also have other rights, which vary country to country, state to state, or region to region.

Retail customers in the European Economic area (EEA) may have legal rights under the applicable national legislation regarding the sale of consumer goods which are not affected by this Limited Warranty. The retail customer's legal rights under any applicable national legislation regarding the sale of consumer goods shall not be affected. Information on authorized EEA dealers and EEA Privacy be obtained at [www.Quicksilver-boats.com](http://www.Quicksilver-boats.com).

---

## Introduction

---

**STATUTE OF LIMITATIONS:** Any action for rescission or revocations against Brunswick Marine in EMEA shall be barred unless it is commenced within one (1) year from the date of accrual of such cause of action. This provision does not grant any consumer a right of rescission or revocation against Brunswick Marine in EMEA, where such does not otherwise exist under applicable law. Some country, state, or region may not allow the applicable statute of limitations for rescission or revocation to be reduced, so this provision may not apply to each retail owner.

**OWNER'S OBLIGATIONS:** Contact the selling Brunswick Marine in EMEA dealer to set up an appointment for warranty repairs. All warranty work or repairs must be referred to the selling dealer for authorization as a condition precedent to Limited Warranty coverage. Brunswick Marine in EMEA must receive written notice of any remaining warranty claims from the owner prior to the expiration of the owner's Limited Warranty, and the owner must notify Brunswick Marine in EMEA of any Quicksilver® being repaired by an authorized Brunswick Marine in EMEA dealer which has been at the dealership for fifteen (15) days, or of any claimed defect which was not corrected after one (1) repair attempt.

**MODIFICATIONS & SEVERABILITY:** The terms and conditions contained herein, as well as those of any documents prepared in conjunction with the sale of this vessel may not be modified, altered, or waived by any action, inaction, or representations, whether oral or in writing, except upon the expressed, written authority of a management level employee of Brunswick Marine in EMEA. The invalidity or unenforceability of any one or more of the provisions herein shall not affect the validity and enforceability of the other provisions.

### **Africa and Middle East**

**WHAT IS COVERED:** Brunswick Marine in EMEA warrants its new products to be free of defects in material and workmanship during the period described below.

**DURATION OF COVERAGE:** This Limited Warranty provides coverage for one (1) years from the date the product is first sold to a recreational use retail purchaser, or the date on which the product is first put into service, whichever occurs first. Commercial users of these products receive warranty coverage of one (1) year from the date of first retail sale, or one (1) year from the date in which the product was first put into service, whichever occurs first.

Commercial use is defined as any work or employment related use of the product, or any use of the product which generates income, for any part of the warranty period, even if the product is occasionally used for such purposes.

The repair or replacement of parts, or the performance of service under this warranty, does not extend the life of this warranty beyond its original expiration date. Unexpired warranty coverage can be transferred from one recreational use customer to a subsequent recreational use customer upon proper registration of the product. Unexpired warranty coverage may be terminated for use or repossessed product; or product purchased at auction, from a salvage yard, or from an insurance company.

**CONDITIONS THAT MUST BE MET IN ORDER TO OBTAIN WARRANTY COVERAGE:** Warranty coverage is available only to retail customers that purchase from a Dealer authorized by Brunswick Marine in EMEA to distribute the product in the country in which the sale occurred, and then only after the Brunswick Marine in EMEA specified predelivery inspection process is completed and documented. Warranty coverage becomes available upon proper registration of the product by the authorized dealer. Routine maintenance outlined in the Operation and Maintenance Manual must be timely performed in order to maintain warranty coverage. Brunswick Marine in EMEA reserves the right to make future warranty coverage contingent on proof of proper maintenance.

**WHAT BRUNSWICK MARINE IN EMEA WILL DO:** Brunswick Marine in EMEA's sole and exclusive obligation under this warranty is limited to, at our option, repairing a defective part, replacing such part or parts with new or Brunswick Marine in EMEA certified remanufactured parts, or refunding the purchase price of the Brunswick Marine in EMEA product. Brunswick Marine in EMEA reserves the right to improve or modify products from time to time without assuming an obligation to modify products previously manufactured.

**HOW TO OBTAIN WARRANTY COVERAGE:** The customer must provide Brunswick Marine in EMEA with a reasonable opportunity to repair, and reasonable access to the product for warranty service. Warranty claims shall be made by delivering the product for inspection to a Brunswick Marine in EMEA authorized dealer to service the product. If purchaser cannot deliver the product to such a dealer, written notice must be given to Brunswick Marine in EMEA. We will then arrange for the inspection and any covered repair. Purchaser in that case shall pay for all related transportation charges and/or travel time. If the service provided is not covered by this warranty, purchaser shall pay for all related labor and material, and any other expenses associated with that service. Purchaser shall not, unless requested by Brunswick Marine in EMEA, ship the product or parts of the product directly to Brunswick Marine in EMEA. Proof of registered ownership must be presented to the dealer at the time warranty service is requested in order to obtain coverage.

---

## Introduction

---

**WHAT IS NOT COVERED:** As expressly set out herein, all warranties provided by the manufacturers and distributors of components, equipment, and parts ("Component Manufacturer") on the boat are hereby assigned to the owner, to the extent permitted by the Component Manufacturer, as the owner's sole and exclusive remedy with respect to such items. Any assistance by Brunswick Marine in EMEA and/or its authorized dealers with regard to component warranties shall not constitute an adoption of the responsibilities of a component manufacturer with regard to its component warranties. This Limited Warranty does not apply to any Quicksilver® which has been salvaged or declared a total loss or a constructive total loss for any reasons not covered in this Limited Warranty. This Limited Warranty also does not apply to the following items:

1. Engines, drivetrains, controls, propellers, batteries, other equipment or accessories that carry their own individual warranties, or equipment and accessories which are not installed by Quicksilver®
2. Window damage or breakage
3. Rainwater leakage, including rainwater leakage through convertible tops
4. Damage or deterioration of cosmetic surface finishes, including cracking, crazing, discoloration, air voids, fading or oxidation of gel coat, wood finishes (varnishes, stains, and paints), fabrics, vinyls, plastics, trim tape, plated or painted metal, stainless steel finishes, anti-fouling bottom paint, or zinc anodes
5. Any Quicksilver® which has been altered or modified from Brunswick Marine in EMEA factory specifications
6. Any Quicksilver® initially sold at retail by a party other than an authorized Brunswick Marine in EMEA dealer
7. Any Quicksilver® which has been used for racing or military purposes, or which has been overpowered according to Brunswick Marine in EMEA factory specifications for such Quicksilver®
8. Any Quicksilver® used for Commercial Purposes. Commercial Purposes, as used herein, means a vessel with more than 50% usage for business or revenue-producing purposes.
9. Any failure or defect caused by an accident, product abuse or misuse, failure of the owner to use, maintain, or store the Quicksilver® as specified in Brunswick Marine in EMEA owner's manual(s), and any other failure to provide reasonable care and maintenance.
10. Any transportation, haul out, or other expenses incurred in returning the Quicksilver® to the selling dealer or to the Brunswick Marine in EMEA factory for warranty service.
11. Any representation or implication relating to speed, range, fuel consumption or estimated performance characteristics.
12. Damage, shrinkage, or deterioration of carpet, upholstery, and exterior canvas tops, enclosures, and weather covers (including rainwater leakage)
13. Any failure or defect caused by an act of nature resulting in damage, cost, or expense
14. Any transportation
15. Any failure or defect arising from a previous repair made by a non-authorized service provider
16. Any item exceeding the expressed coverage limits specified in any Brunswick Marine in EMEA Limited Warranty
17. Any defect or repair requiring redesign of the Quicksilver®, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971, or the recall laws of any other foreign jurisdiction.

**SOLE REMEDY:** The remedy of repair or replacement of parts that are found to be defective in factory materials or workmanship covered by the Limited Warranty shall constitute the owner's sole and exclusive remedy against Brunswick Marine in EMEA for any claims whatsoever of economic loss resulting from product failure.

In keeping with environmental policies and practices, Brunswick Marine in EMEA reserves the right to utilize reconditioned, refurbished, repaired or remanufactured products or parts in the warranty repair or replacement process. Such products and parts will be comparable in function and performance to an original product or part and warranted for the remainder of the original warranty period. In no event shall any repair or replacement under this Limited Warranty exceed the fair market value of the product as of the date of the owner's claim. Acceptance of any product returned or any refund provided by Brunswick Marine in EMEA shall not be deemed an admission that the product is defective. Products that are replaced become the property of Brunswick Marine in EMEA.

**OTHER LIMITATIONS:** Except as set forth herein or on any other written Limited Warranties by Brunswick Marine in EMEA, there are no other warranties, expressed or implied provided by Brunswick Marine in EMEA, on this Quicksilver®. All other warranties, expressed or implied are expressly excluded. Brunswick Marine in EMEA further disclaims any liability for economic loss arising from claims of product failure, negligence, defective design, manufacturing defect, failure to warn and/or instruct, lack of seaworthiness, and any other theory of liability not expressly covered under the terms of this Limited Warranty.

Any implied warranty of merchantability or fitness for a particular purpose is disclaimed. To the extent the implied warranty cannot be disclaimed, it is limited to the shorter of one (1) year from the date of delivery to the first retail owner or the duration of the respective Limited Warranties stated herein. To the extent required by law and implied warranty of merchantability is limited for the duration of the respective Limited Warranties stated. To the extent allowed by law neither Brunswick Marine in EMEA, nor the selling dealer shall have any responsibility of the loss of use of the Quicksilver®, loss of time, inconvenience, commercial loss or consequential damages.

---

## Introduction

---

Some countries, states or regions do not allow limitations on how long an implied warranty lasts, so the above limitations may not be applicable. Some countries, states or regions do not allow the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not be applicable. This warranty gives the owner specific legal rights, and the owner may also have other rights, which vary country to country, state to state, or region to region.

Retail customers in the European Economic area (EEA) may have legal rights under the applicable national legislation regarding the sale of consumer goods which are not affected by this Limited Warranty. The retail customer's legal rights under any applicable national legislation regarding the sale of consumer goods shall not be affected. Information on authorized EEA dealers and EEA Privacy be obtained at [www.Quicksilver-boats.com](http://www.Quicksilver-boats.com).


**STATUTE OF LIMITATIONS:** Any action for rescission or revocations against Brunswick Marine in EMEA shall be barred unless it is commenced within one (1) year from the date of accrual of such cause of action. This provision does not grant any consumer a right of rescission or revocation against Brunswick Marine in EMEA, where such does not otherwise exist under applicable law. Some country, state, or region may not allow the applicable statute of limitations for rescission or revocation to be reduced, so this provision may not apply to each retail owner.

**OWNER'S OBLIGATIONS:** Contact the selling Brunswick Marine in EMEA dealer to set up an appointment for warranty repairs. All warranty work or repairs must be referred to the selling dealer for authorization as a condition precedent to Limited Warranty coverage. Brunswick Marine in EMEA must receive written notice of any remaining warranty claims from the owner prior to the expiration of the owner's Limited Warranty, and the owner must notify Brunswick Marine in EMEA of any Quicksilver® being repaired by an authorized Brunswick Marine in EMEA dealer which has been at the dealership for fifteen (15) days, or of any claimed defect which was not corrected after one (1) repair attempt.

**MODIFICATIONS & SEVERABILITY:** The terms and conditions contained herein, as well as those of any documents prepared in conjunction with the sale of this vessel may not be modified, altered, or waived by any action, inaction, or representations, whether oral or in writing, except upon the expressed, written authority of a management level employee of Brunswick Marine in EMEA. The invalidity or unenforceability of any one or more of the provisions herein shall not affect the validity and enforceability of the other provisions.

# Quicksilver 755OP — General Information

## 1. Basic Boat Dimensions & Specifications

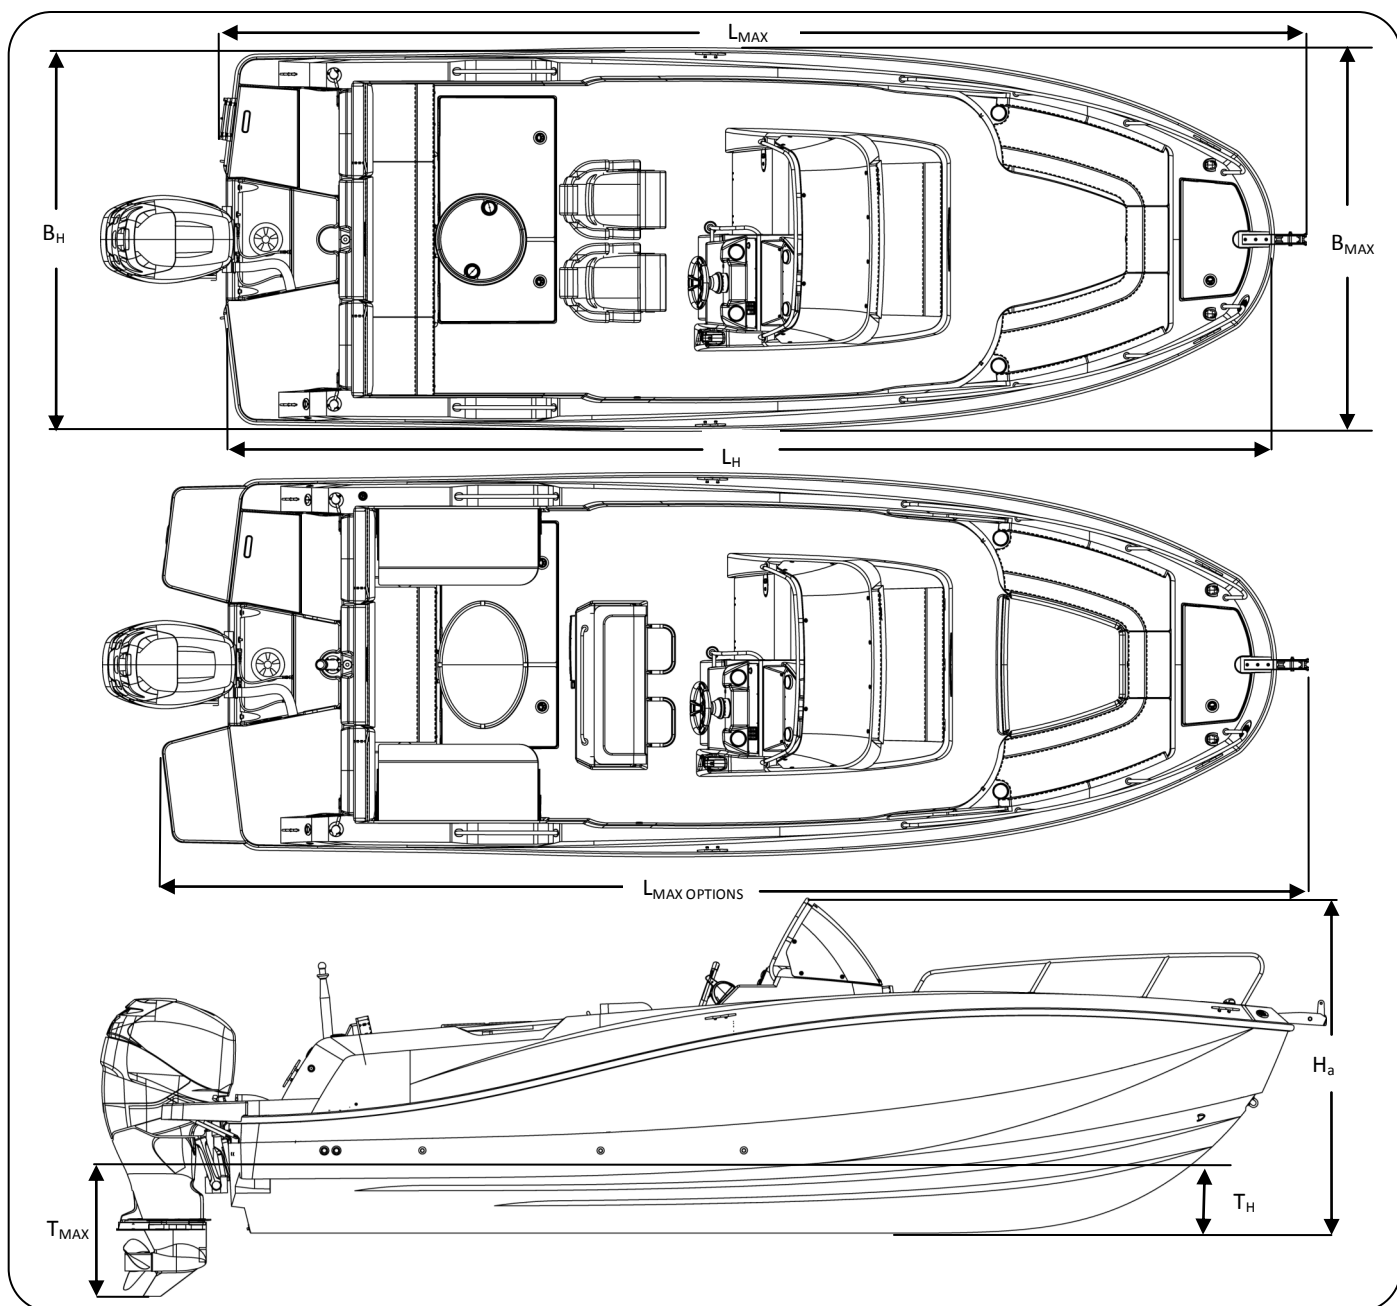

Manufacturer: Brunswick Marine in EMEA

Model: Quicksilver Activ 755OP

|                                      |       |                                  |        |
|--------------------------------------|-------|----------------------------------|--------|
| Design Category:                     | C     | Light Craft Mass ( $m_{LCC}$ ):  | 1980kg |
| Length of Hull ( $L_H$ ):            | 6.95m | Maximum Load ( $m_{MTL}$ ):      | 972kg  |
| Length Overall ( $L_{MAX}$ ):        | 7.23m | Fully Loaded Mass ( $m_{LCC}$ ): | 2952kg |
| Length Overall ( $L_{MAX OPTION}$ ): | 7.62m | Trailerable Mass ( $m_T$ ):      | 2230kg |
| Beam of Hull ( $B_H$ ):              | 2.48m | Fuel Tank Capacity:              | 280L   |
| Beam Max ( $B_{MAX}$ ):              | 2.55m | Water Tank Capacity:             | 80L    |
| Draft of Hull ( $T_H$ ):             | 0.48m | Waste Tank Capacity:             | 27.8L  |
| Draft Max ( $T_{MAX}$ ):             | 0.89m | Grey Water Tank Capacity:        | 80L    |
| Overall Height ( $H_a$ ):            | 2.19m |                                  |        |

## Quicksilver 755OP — General Information

### 2. Vessel Stability

The following maximum load has been used for assessing the stability and buoyancy comprising

- |                                                                      |       |
|----------------------------------------------------------------------|-------|
| • Manufacturer's maximum recommended load per ISO 14946              | 972kg |
| • Fuel, fresh water, other fluids to maximum capacity of fixed tanks | 315kg |

This assessment has been made assuming that

- |                                                       |        |
|-------------------------------------------------------|--------|
| • The boat in the empty craft condition has a mass of | 1389kg |
| • The boat in the light craft condition has a mass of | 1980kg |
| • The maximum recommended engine outboard mass is     | 294kg  |
| • All standard equipment is aboard.                   |        |

Your boat was manufactured to specific stability and flotation standards for the capacity shown on the certification plate. Any increase from the recommended load capacities will put your boat in jeopardy of capsizing, swamping and/or sinking. In addition, any changes to the masses aboard may significantly affect the stability, trim, and performance of the craft. Stability can be considerably affected by loose fluids or weight within the vessel. Keep the bilge area as dry as possible, and in rough weather or at planing speeds, keep all openings, hatches, lockers, doorways, and windows closed to minimize flooding. Breaking waves are a serious stability hazard. Finally, stability can be compromised when towing or lifting heavy weights using a davit or boom.

### 3. Load Capacity

The capacity plate, located near the helm, indicates the maximum weight and number of persons your boat can handle under calm sea conditions. Do not exceed the load capacities stated. A full explanation of this information can be found in the relevant sections of this manual.

The information present on the certification plate does not relieve the operator of responsibility. Use common sense and sound judgment when placing equipment and/or passengers in your boat.

#### WARNING

Do not exceed the maximum recommended number of persons. Regardless of the number of persons on board, the total weight of persons and equipment must never exceed the maximum recommended load. Always use the seats/seating spaces provided.

#### WARNING

When loading the craft, never exceed the maximum recommended load. Always load the craft carefully and distribute loads appropriately to maintain design trim (approximately level), and secure loose equipment when underway. Avoid placing heavy weights high up.

#### Quicksilver 755OP Capacity Plate

**QUICKSILVER**

**Brunswick Marine in EMEA**

Parc Industriel De Petit Rechain 4800 Verviers - Belgium

Activ 755

CE 0609

Category C

Max 8 

Max  +  +  = 950 kg

2207636

## Quicksilver 755OP — General Information

### 4. Passenger Locations

#### **⚠ DANGER**


Be aware of your footing while the boat is underway. Slipping or falling could result in serious injury or death, especially if the boat is in motion or in rough seas. Keep the accommodation clean, so if movement is necessary, it will be free of obstruction.

#### **⚠ WARNING**

Gelcoat surfaces are slippery when wet. Use extreme caution when walking on wet surfaces.

Never occupy the working decks while the boat is underway.

When people are on the working deck area for anchoring, mooring, or in emergencies, they must be holding on and be positioned as to prevent falling overboard.

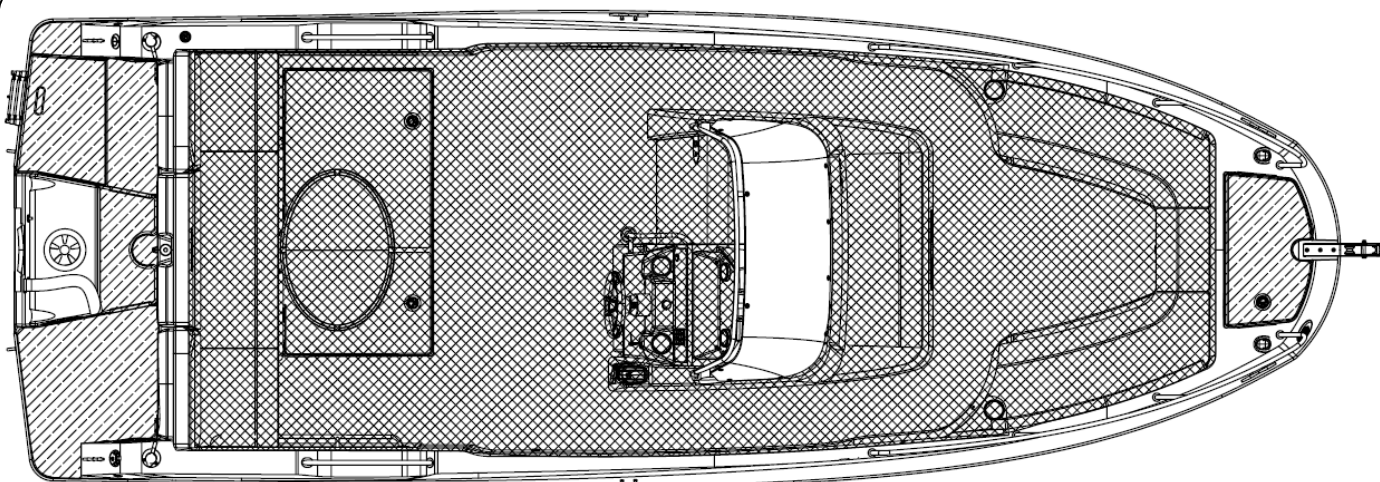

Working deck area to be used during normal operation



Working deck area to be used during anchoring, mooring and emergency operation

### 5. Design Categories

There are four design categories of boats based upon their ability to withstand wind and water conditions:

Category A – Designed for winds that may exceed wind force 8 (Beaufort scale – 40 knots) and a significant wave height of 4m and above.

Category B -- Designed for winds that include up to wind force 8 (Beaufort scale – 40 knots) and significant wave height up to and including 4m.

Category C – Designed for winds that include up to a wind force 6 (Beaufort scale – 27 knots) and a significant wave height up to and including 2m.

Category D – Designed for winds that include up to a wind force 4 (Beaufort scale – 16 knots) and a significant wave height up to and including 0.3m, with occasional waves of 0.5m maximum height.


Refer to your product capacity plate for the design category of your boat.

#### **⚠ WARNING**

Do not attempt to operate boat in severe weather conditions. Death or serious injury can occur. Get to shore before the weather turns bad.

# Quicksilver 7550P — General Information

## 6. Safety Label Locations—Cockpit

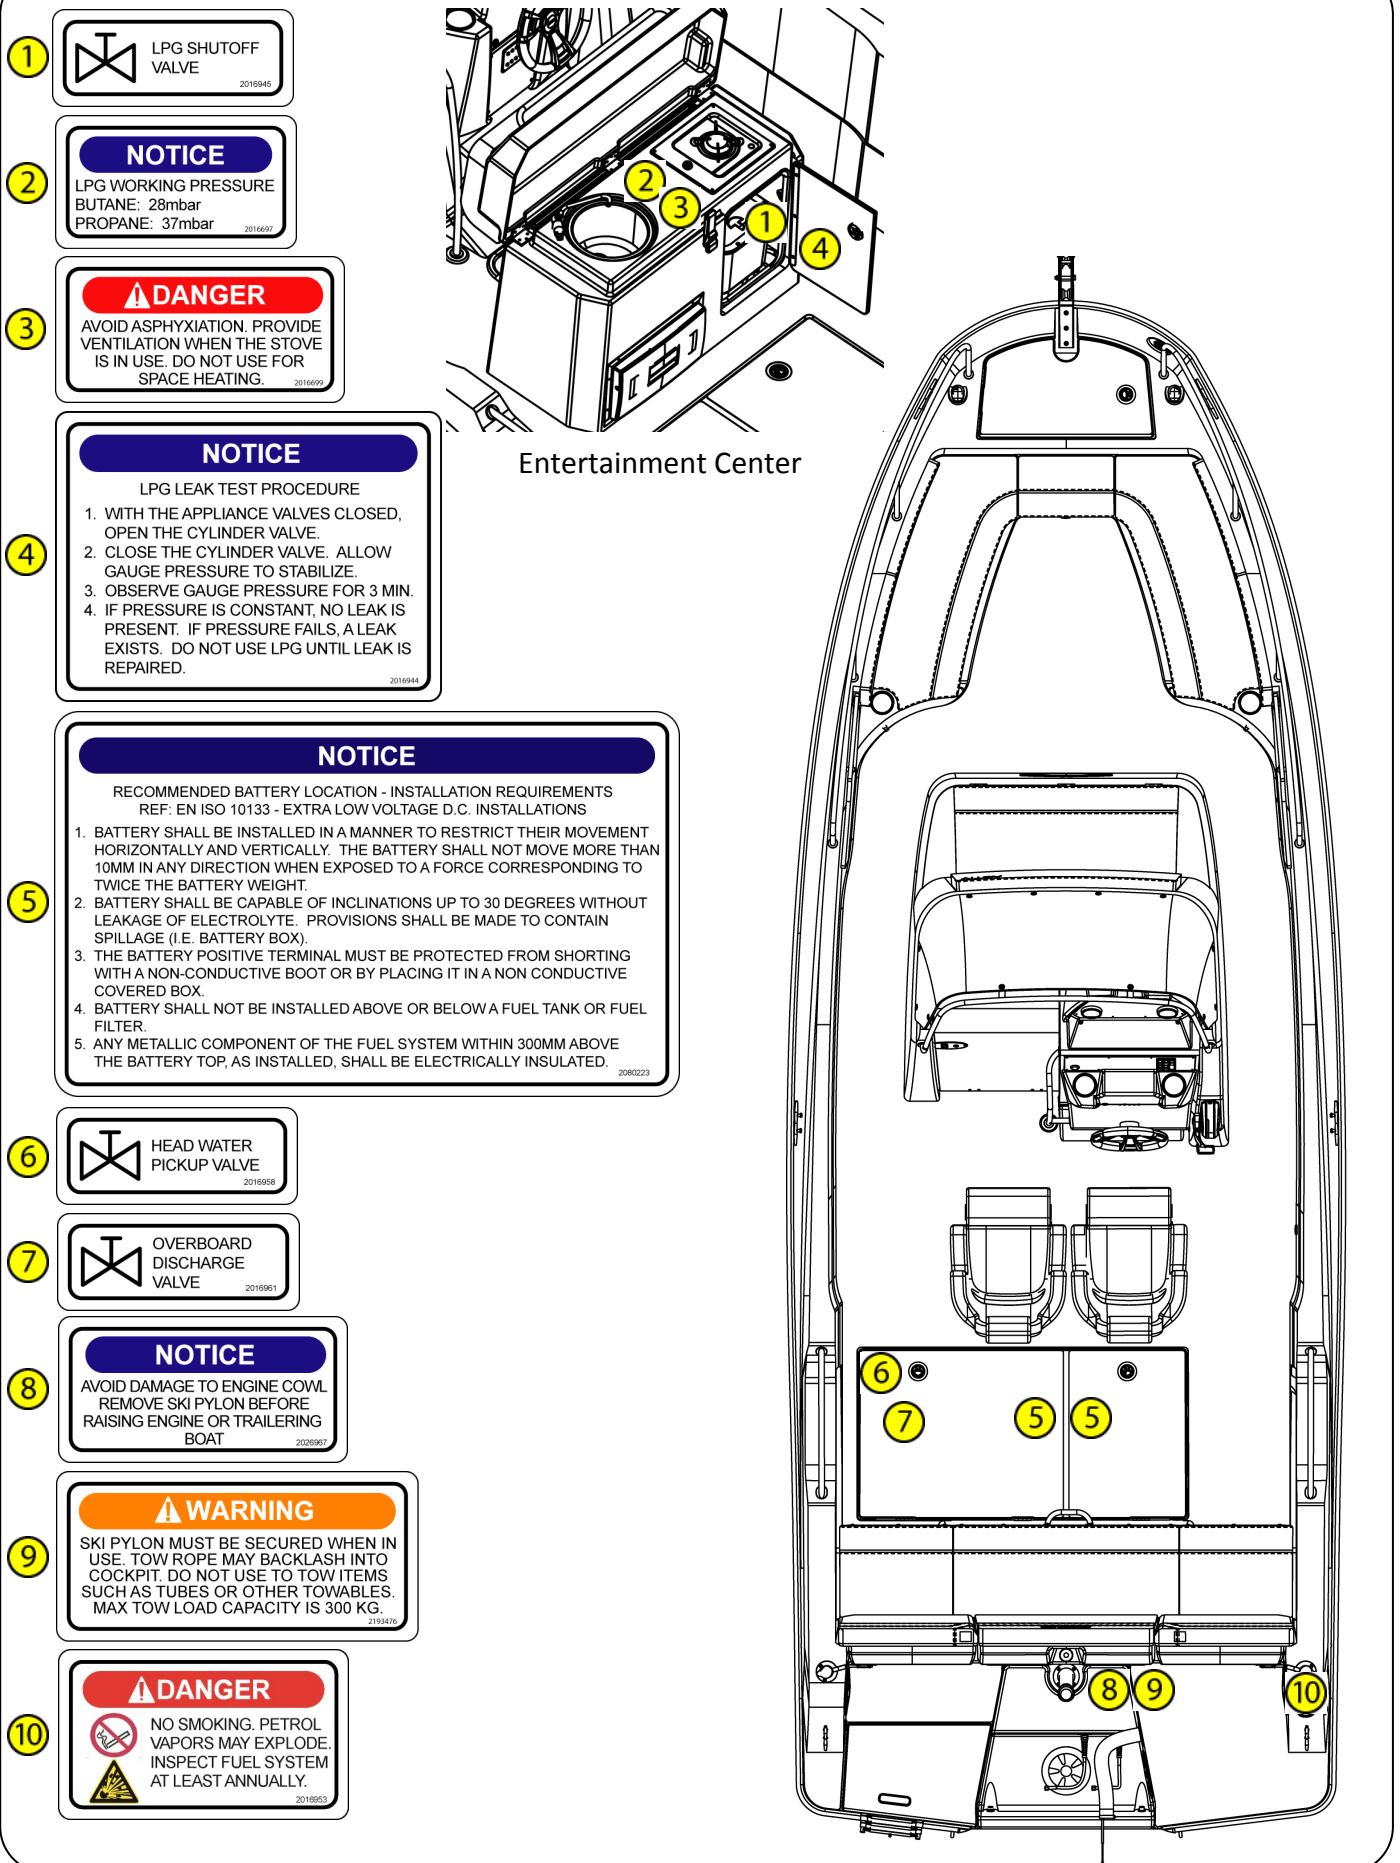

# Quicksilver 7550P — General Information

## Safety Label Locations— Helm, Transom & Interior

**QUICKSILVER**

Brunswick Marine in EMEA  
Parc Industriel De Petit Rechain 4800 Verviers - Belgium

Activ 755

Category C

Max 8

Max  = 950 kg

2207638

CE 0609

221 kW



MAX

2119763

### WARNING



ATTACH SHUT DOWN SWITCH LAYNARD TO QUALIFIED OPERATOR WHILE ENGINE IS IN OPERATION. UNCONTROLLED BOAT MAY CAUSE INJURY OR DEATH. READ OWNERS MANUAL BEFORE USE.

2016954

### WARNING



ROTATING PROPELLER MAY CAUSE SERIOUS INJURY OR DEATH. SHUT OFF ENGINE WHEN NEAR SWIMMERS IN THE WATER.

2016955

### NOTICE

TO AVOID DAMAGE TO ENGINE COWL(S), RAISE MOTORWELL BRIDGE BEFORE TRIMMING ENGINE(S) TO TRAILERING MODE

2165360

### WARNING



Carbon monoxide (CO) can cause brain damage or death. Engine and generator exhaust contains odorless and colorless carbon monoxide gas. Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness. Get fresh air if anyone shows signs of carbon monoxide poisoning. See Owner's Manual for information regarding carbon monoxide poisoning.

2016956

### WARNING



ROTATING PROPELLER MAY CAUSE SERIOUS INJURY OR DEATH. DO NOT BOARD OR USE LADDER IF ENGINE IS RUNNING.

2016954

### DANGER



Carbon monoxide (CO) can cause brain damage or death. Engine and generator exhaust contains odorless and colorless carbon monoxide gas. Carbon monoxide will be around the back of the boat when engines or generators are running. Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.



2016956

### WARNING



Carbon monoxide (CO) can cause brain damage or death. Carbon monoxide can be present in the cabin. Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness. Get fresh air if anyone shows signs of carbon monoxide poisoning. Get fresh air if carbon monoxide detector alarm sounds. Carbon monoxide detector must be functioning at all times.



2016956

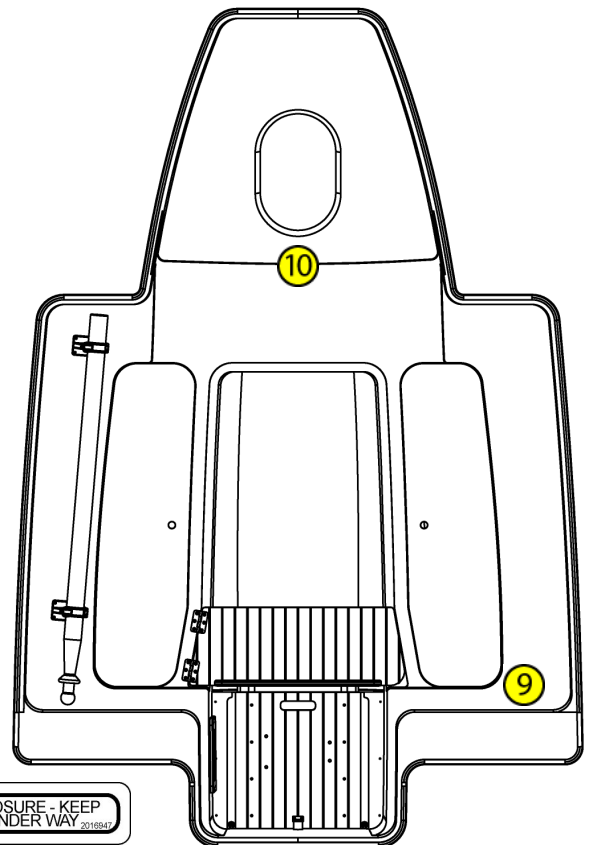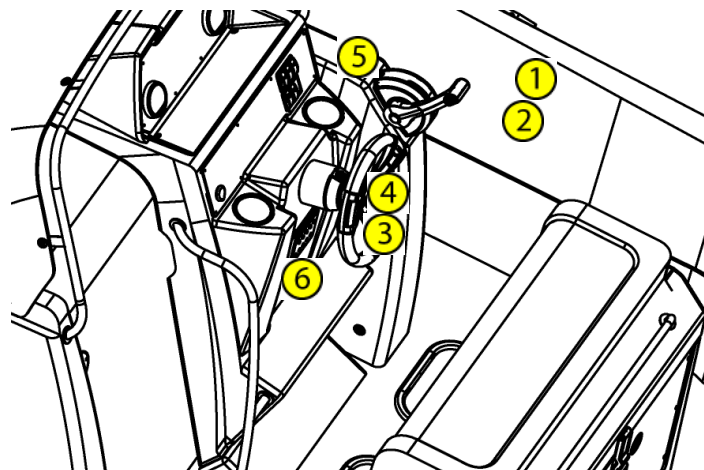

10


WATERTIGHT CLOSURE - KEEP SHUT WHEN UNDER WAY

2016947

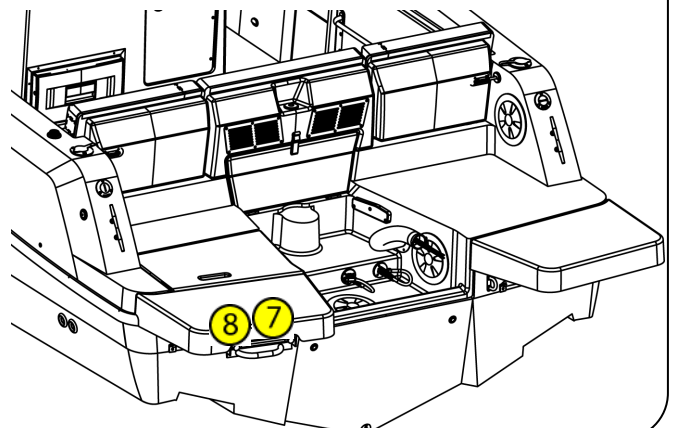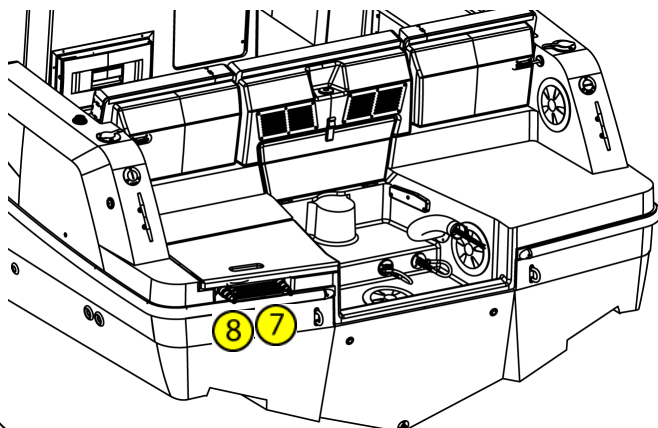


## Quicksilver 755OP — General Information

### 7. Deck / Cockpit Layout (standard equipment)

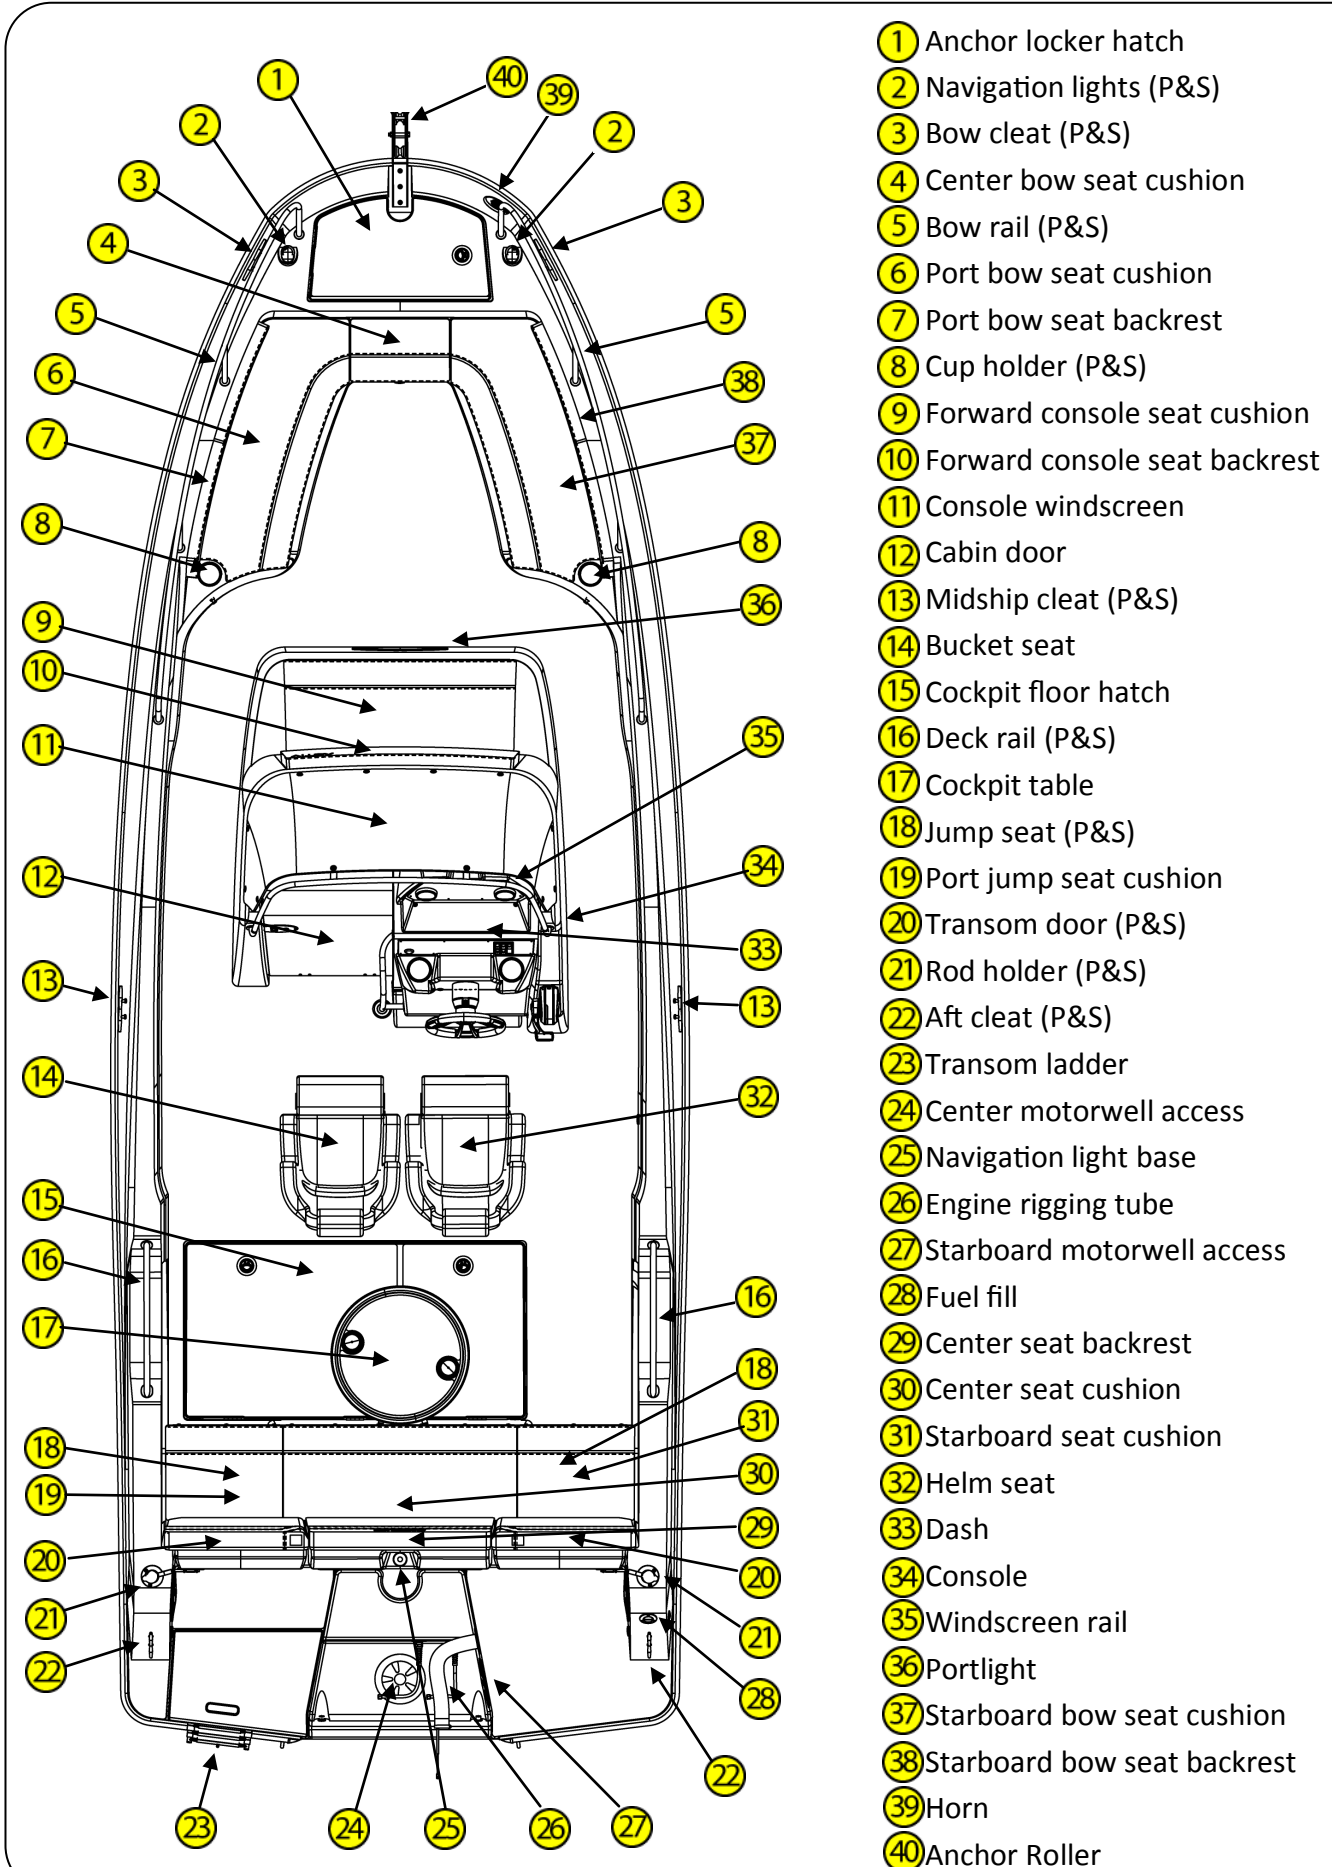

## Quicksilver 755OP — General Information


### 8. Deck / Cockpit Layout (optional equipment)

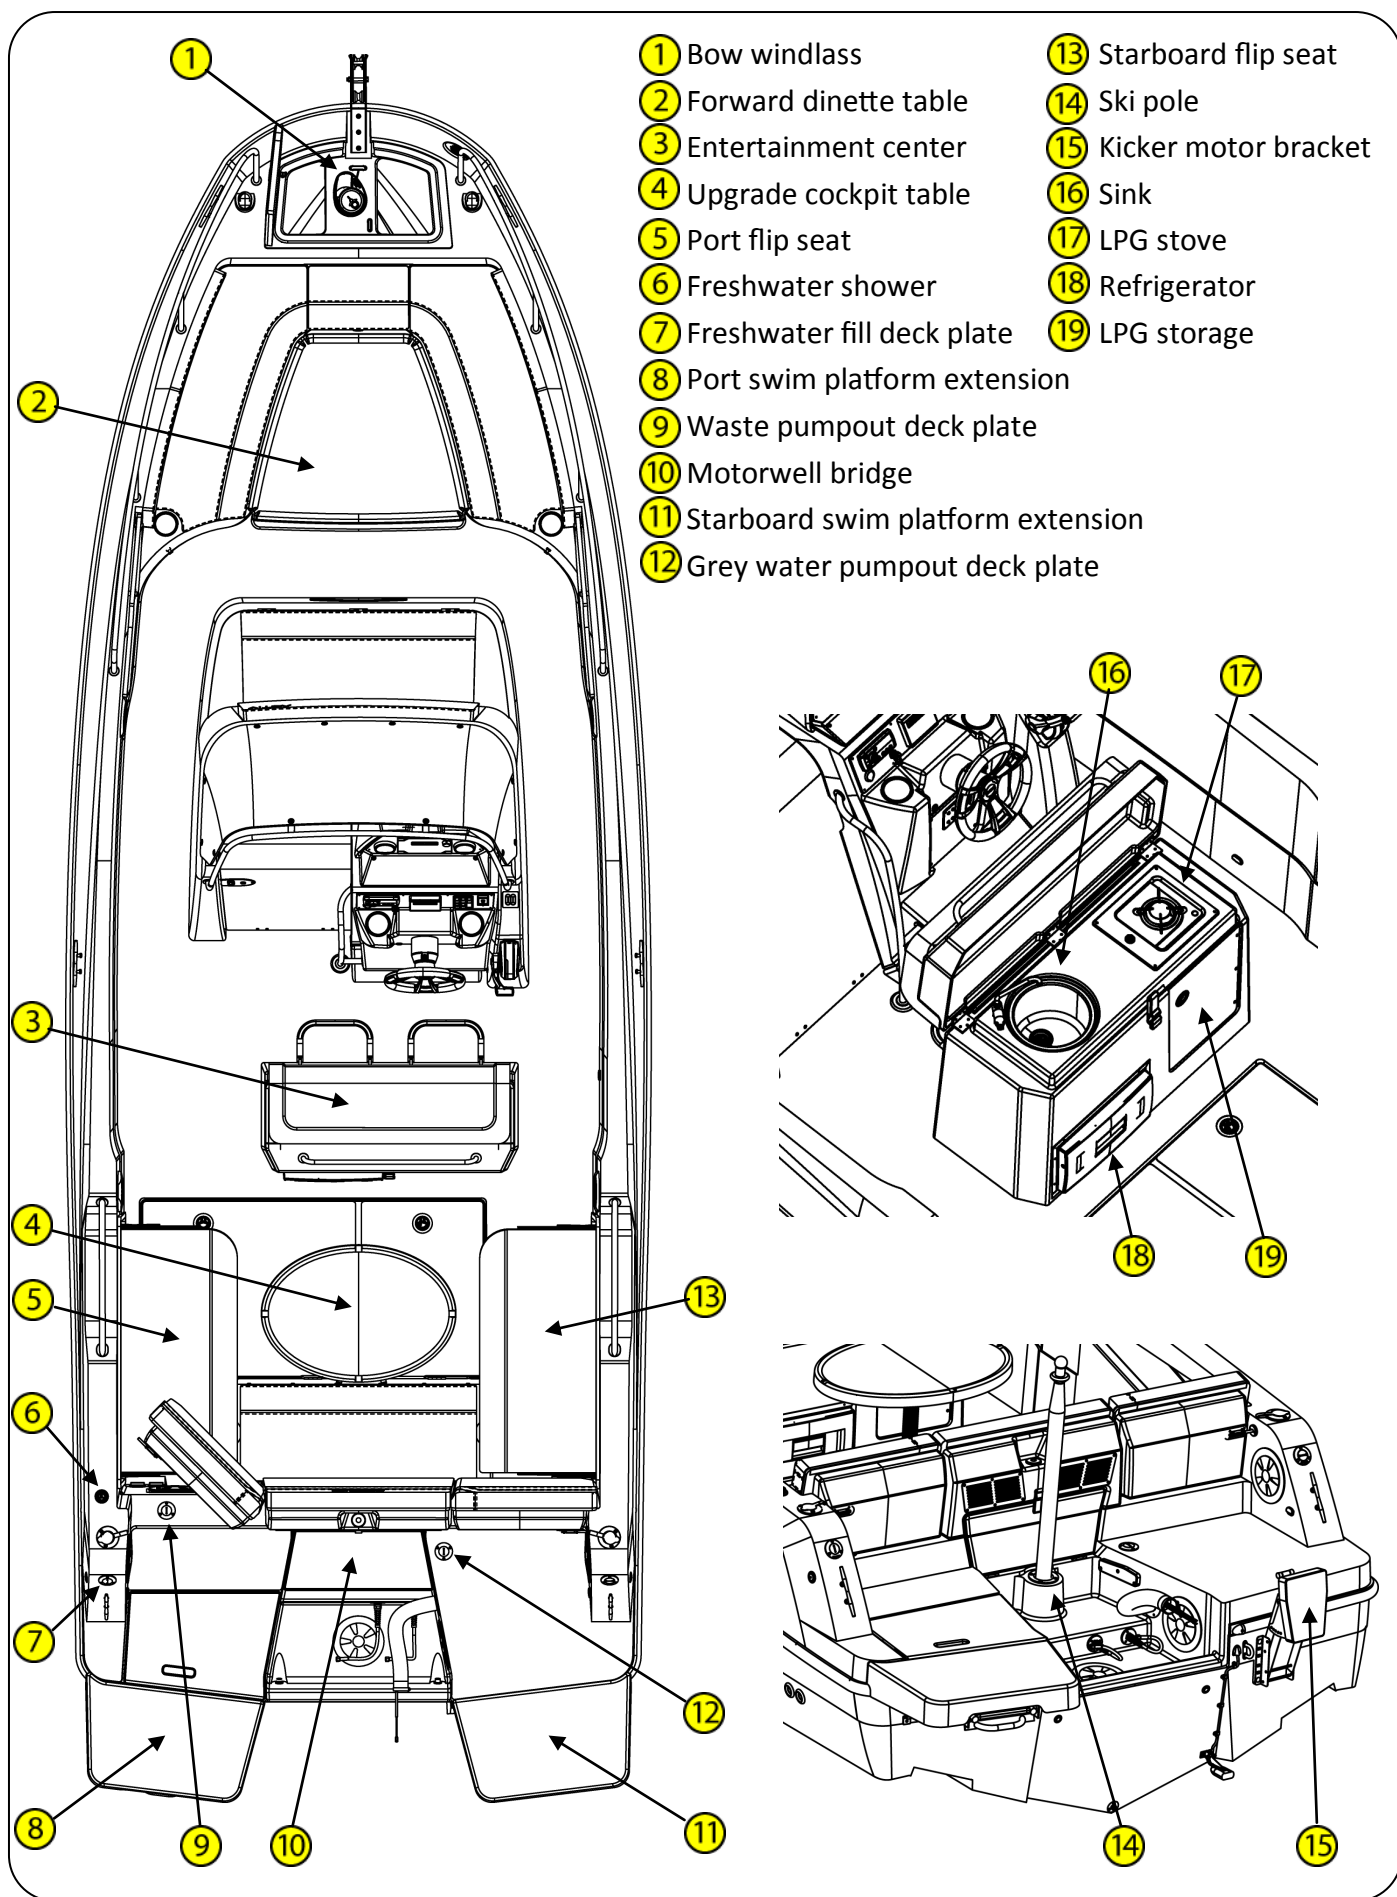

## Quicksilver 755OP — General Information


### Deck / Cockpit Layout (optional equipment)

- ① Port sun lounge filler cushion
- ② Bow table sun lounge filler cushion
- ③ Console sun lounge filler cushion
- ④ Starboard sun lounge filler cushion
- ⑤ Helm leaning post

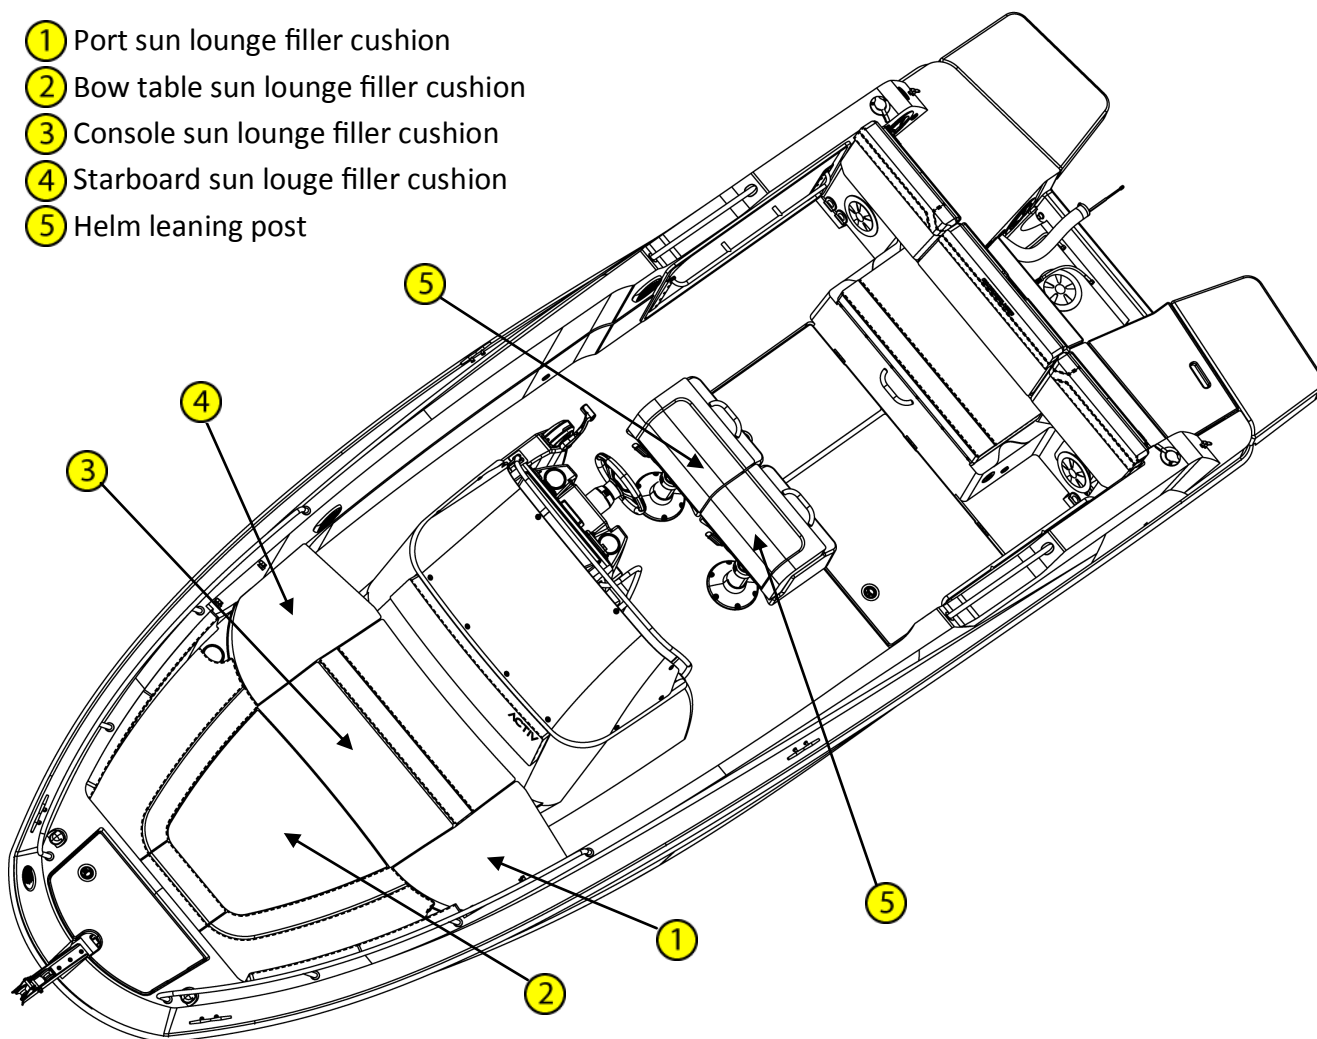

## Quicksilver 755OP — General Information

### 9. Cockpit Storage

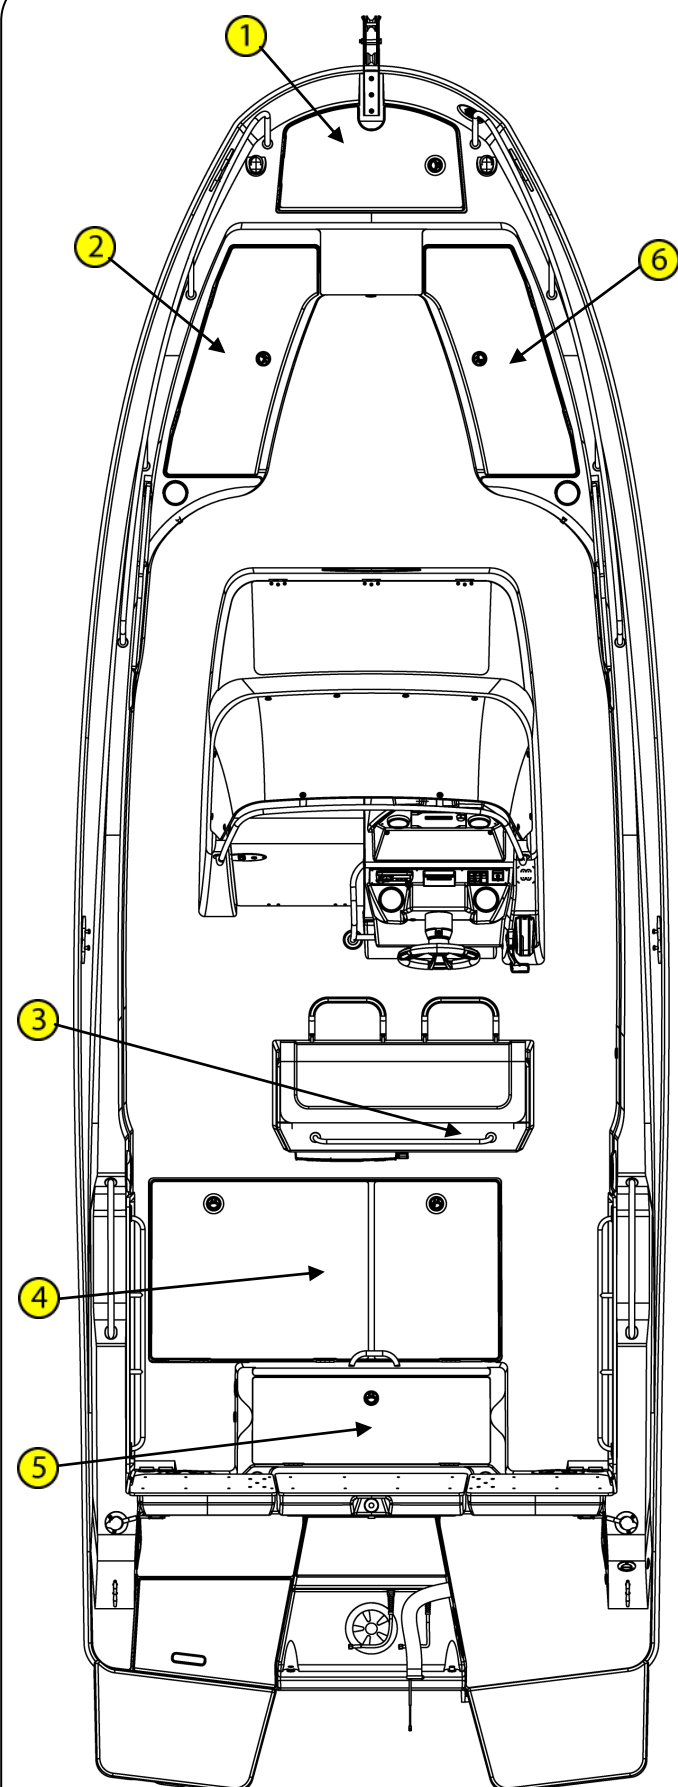

- ① Anchor locker
- ② Port forward storage area
- ③ Entertainment center storage
- ④ Cockpit floor storage area
- ⑤ Cockpit seat storage area
- ⑥ Starboard forward storage area

#### **⚠ WARNING**


With the exception of the cockpit floor storage area, do not store any equipment containing petrol (outboard engines, portable petrol tanks, etc.) in any cockpit storage areas. These compartments were not designed to store petrol and do not have adequate ventilation.

#### **NOTICE**

Quicksilver® recommends that the liferaft store in the cockpit floor storage area or cabin interior.

## Quicksilver 755OP — General Information

### 10. Thru Hull Locations

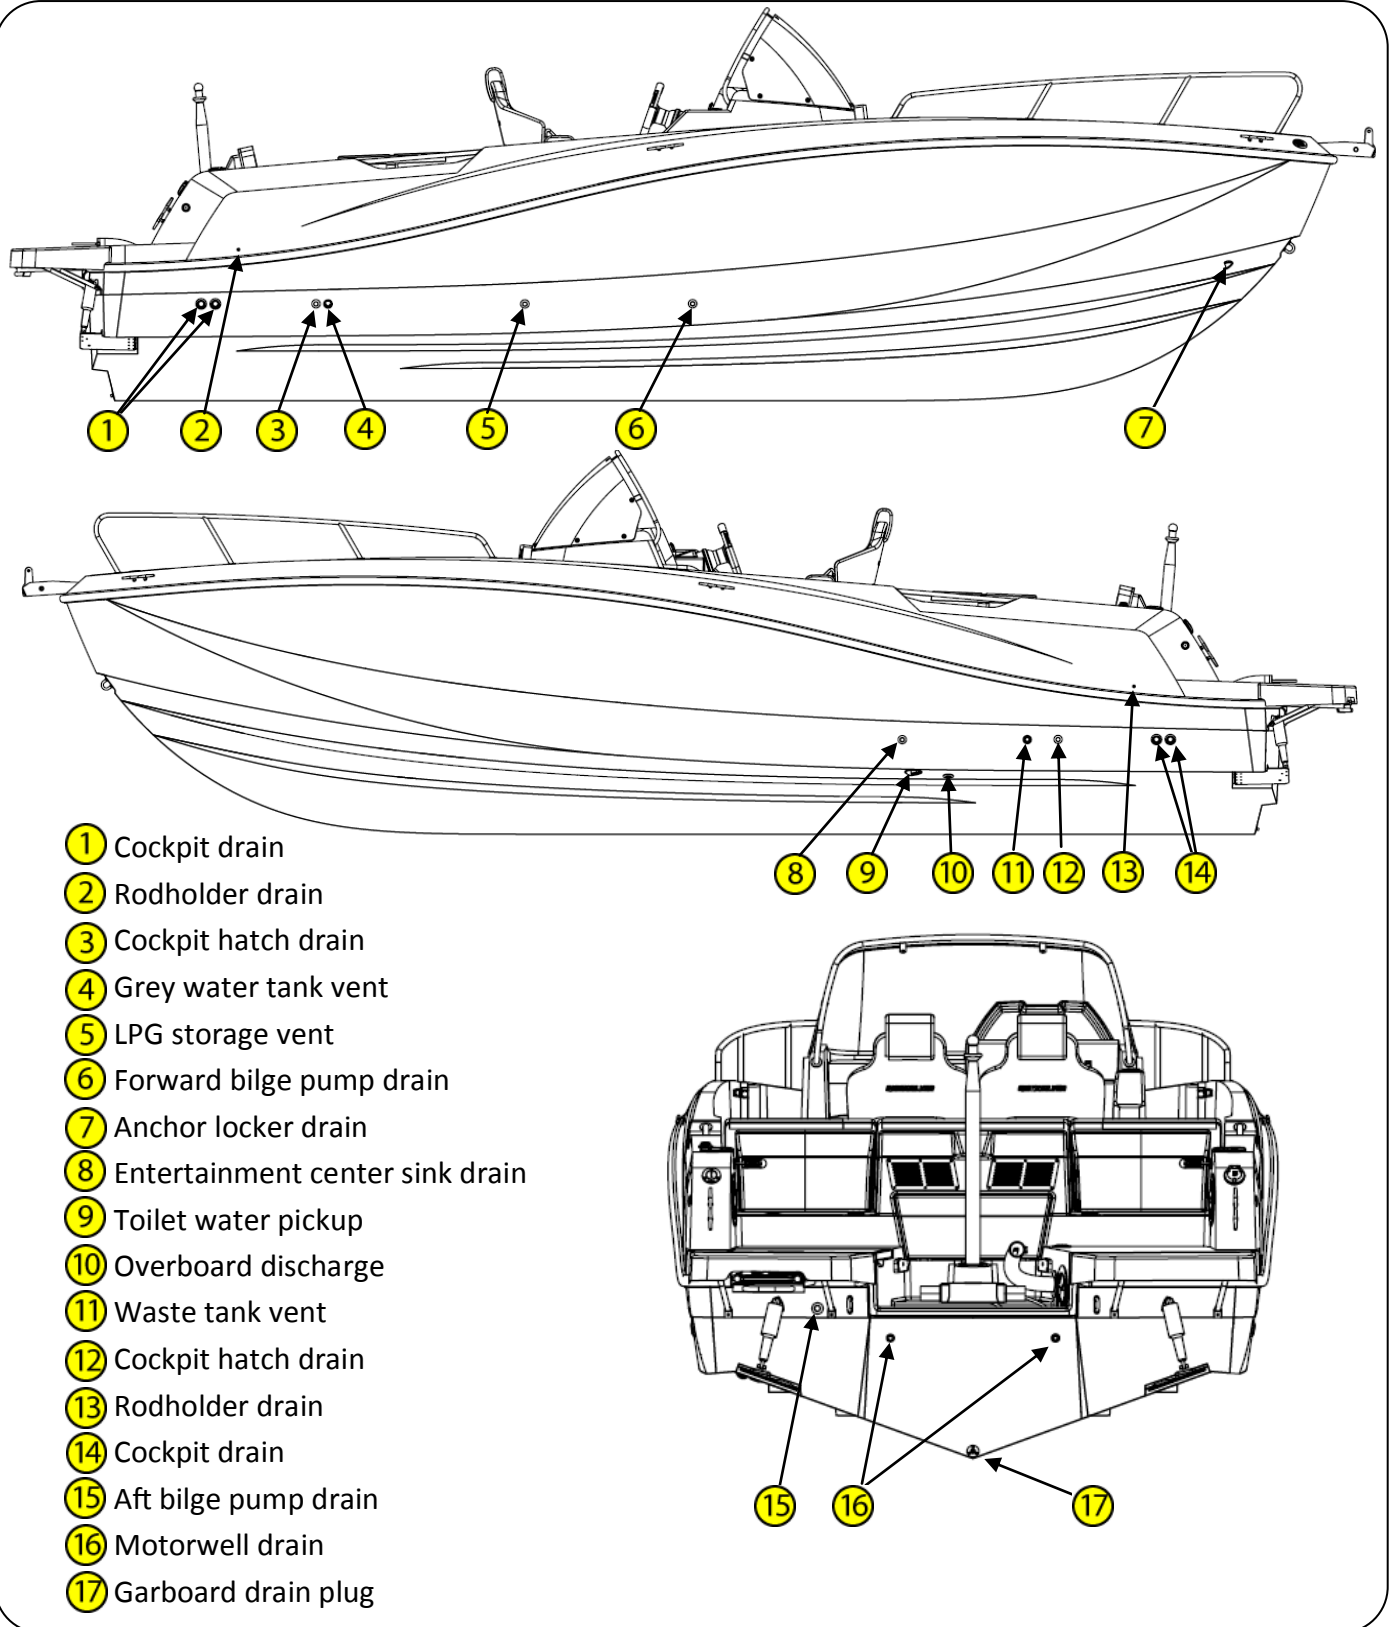

#### NOTICE


The deck drains provide self-bailing capabilities while the boat is static in the water and no passengers on board. This prevents accumulation of water in the cockpit.

#### NOTICE

Depending on the type of boat, you may have underwater fittings that need drain plugs. Garboard drain plugs and fishbox drain plugs need to be in place before the boat goes in to the water. Any fitting that will be underwater needs to be plugged or the seacock needs to be closed.

## Quicksilver 755OP — General Information

### 11. Cabin Layout

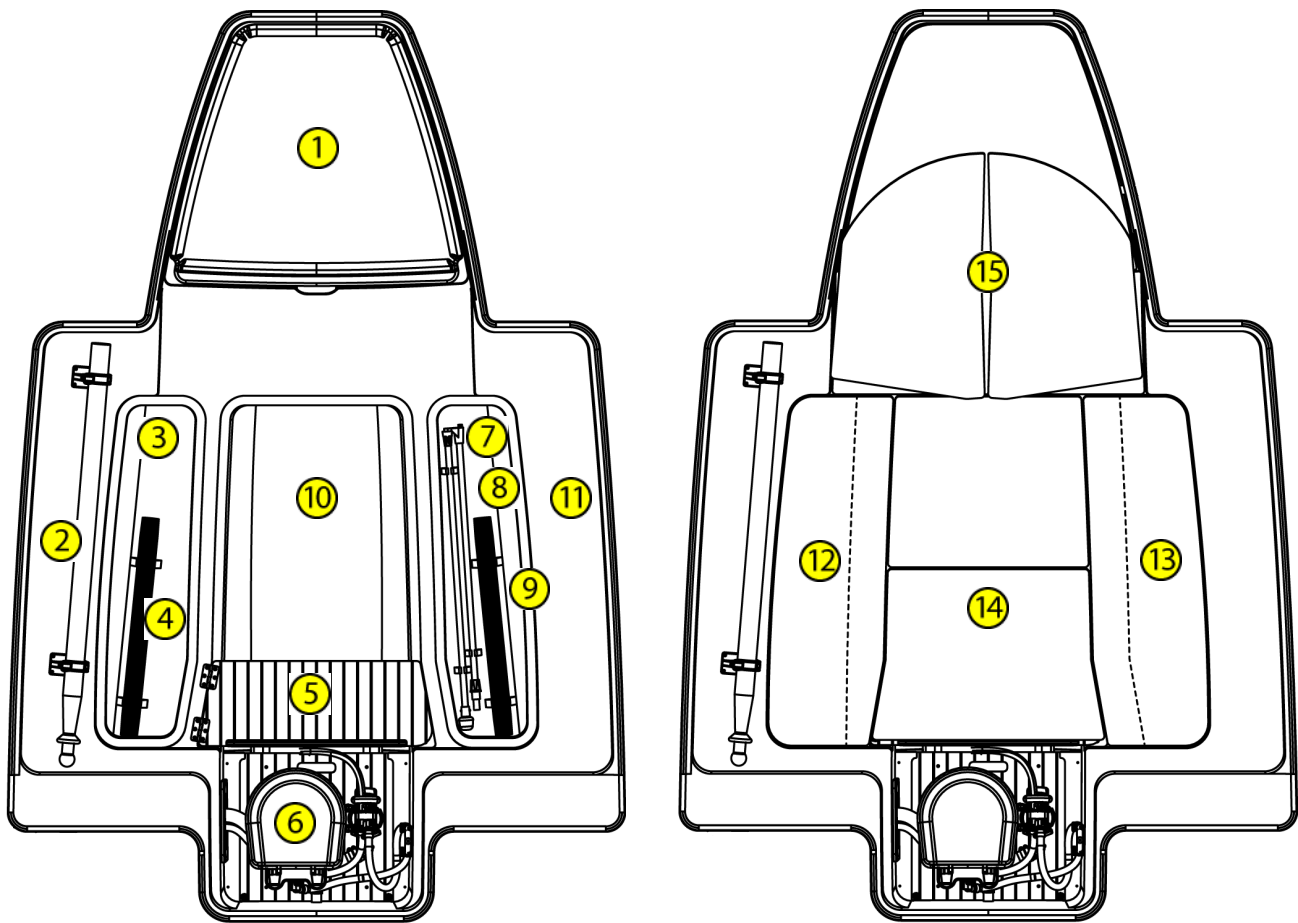


- |                                 |                                                              |
|---------------------------------|--------------------------------------------------------------|
| ① Forward dinette table storage | ⑨ Cockpit table leg storage                                  |
| ② Ski pylon storage             | ⑩ LED swivel light with switch (located in overhead console) |
| ③ Port liner storage            | ⑪ CO monitor (located in overhead console)                   |
| ④ Cockpit table leg storage     | ⑫ Port interior cushion                                      |
| ⑤ Interior step                 | ⑬ Starboard interior cushion                                 |
| ⑥ Manual pump toilet            | ⑭ Center filler cushion                                      |
| ⑦ Starboard liner storage       | ⑮ Forward cockpit filler cushions storage                    |
| ⑧ All around light              |                                                              |

#### NOTICE

LED lights do not have replacement light bulbs


## Quicksilver 755OP — General Information

### 12. Dash Layout (standard equipment)

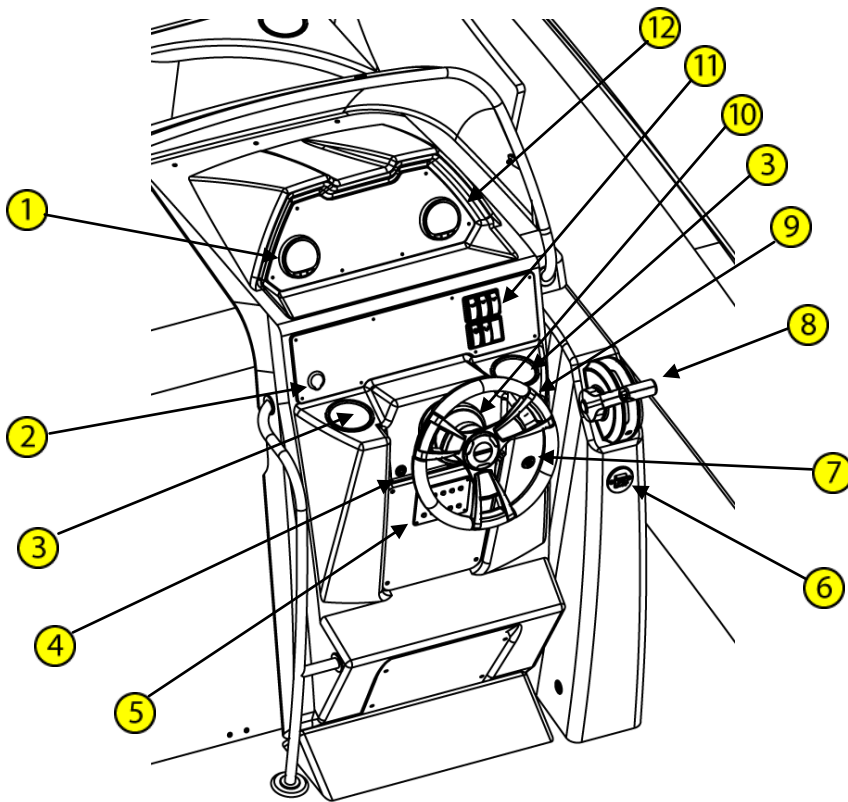

- ① SC1000 tachometer
- ② 12V receptacle
- ③ Cup holder
- ④ Air temperature sensor
- ⑤ Helm breaker panel
- ⑥ Lanyard switch
- ⑦ Engine key
- ⑧ Engine throttle shift control
- ⑨ Steering wheel
- ⑩ Hydraulic steering helm
- ⑪ Helm switch panel
- ⑫ SC1000 speedometer

### Dash Layout (optional equipment)

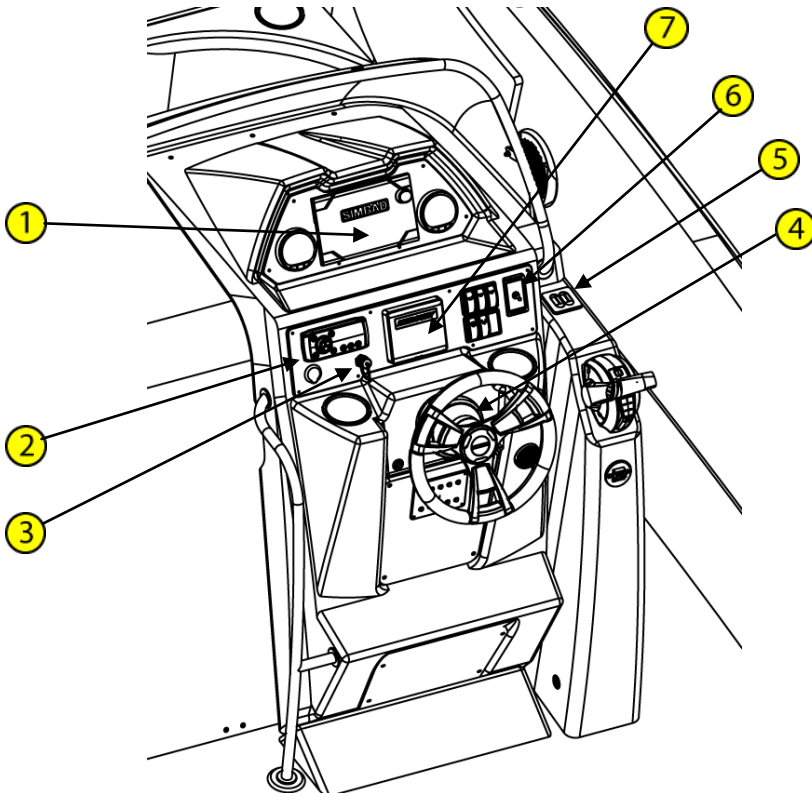


- ① GPS
- ② Stereo
- ③ USB receptacle
- ④ Hydraulic tilt steering
- ⑤ Trim tab controls
- ⑥ Bow windlass control
- ⑦ Vessel View 4"

## Quicksilver 755OP — General Information

Please note that operator vision from the helm may be obstructed by high trim angles of the craft, along with other factors such as outboard engine trim angles, hull trim plane angles, loading and load distribution, speed & acceleration, transition from displacement to planing mode, sea conditions, rain and spray, darkness and fog, interior lights, position of tops and curtains, and persons or movable gear in the operator's field of vision.


### Dash Switch Panel

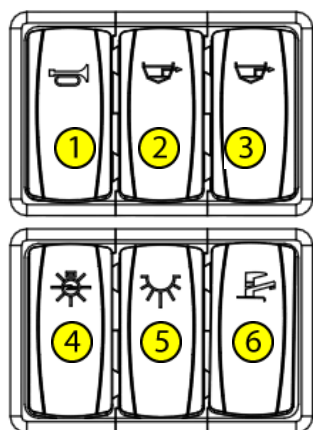


- ① Horn
- ② Forward Bilge Pump
- ③ Aft Bilge Pump
- ④ Navigation Lights
- ⑤ Courtesy Lights
- ⑥ Freshwater Pump

### 13. Navigation Lights

Your boat comes equipped with navigation lighting for use at night or in low visibility conditions. Prior to running at night, you must install the stern pole light into the socket located on the transom. A three position switch, located at the helm switch panel, controls the navigation lights. To turn on the Navigation lights, push the upper part of the switch forward. This illuminates on the port (red), starboard (green) and all around light (white) showing other vessels that you are underway. To turn on the Anchor light, push the lower part of the switch down. This illuminates the all around light (white), letting other boaters know that you are anchored at a given location.

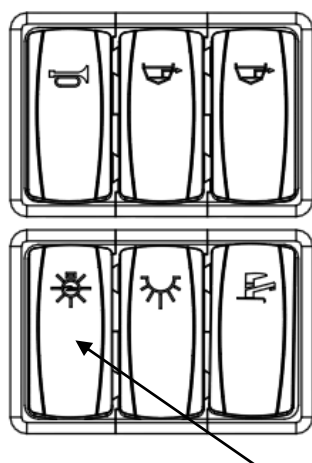

Navigation light switch

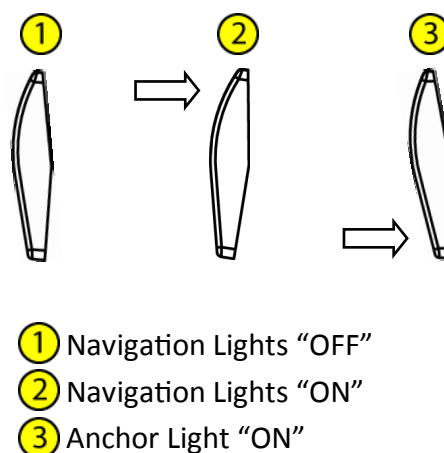


- ① Navigation Lights "OFF"
- ② Navigation Lights "ON"
- ③ Anchor Light "ON"

### NOTICE

The International Regulations for Preventing Collisions at Sea (COLREG) and the rules of the road require that a proper lookout be maintained at all times and observance of right of way be respected. Always be certain to have sufficient distance to stop or manoeuver if required to avoid collisions.

## Quicksilver 7550P — General Information

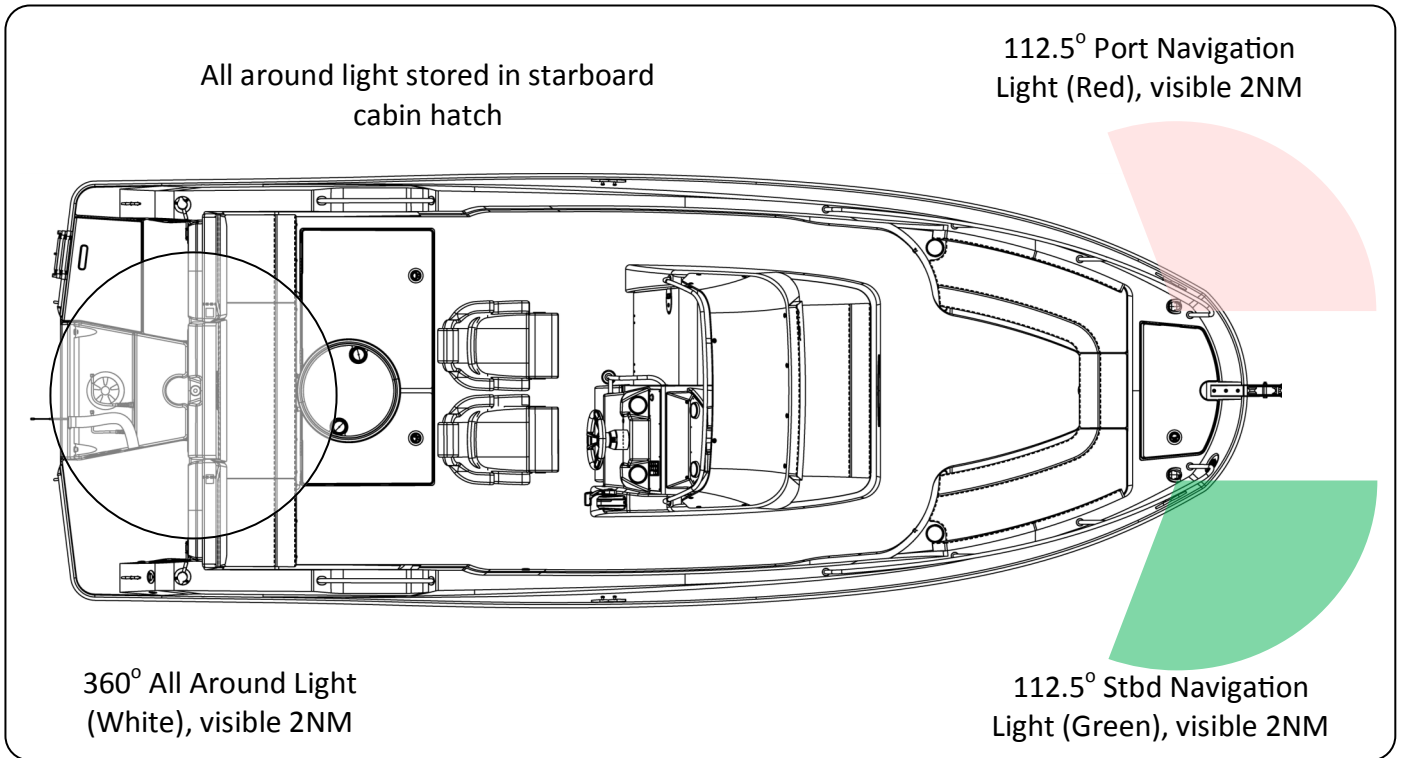

### 14. Engine

Your boat is propelled by a single Mercury outboard engine. The maximum propulsion power rating for the craft is 221 kW. Do not operate this craft with a combined engine power rating larger than that posted on the power capacity label in the craft. The maximum power rating label is located near the helm, under the capacity plate.

#### **WARNING**

Do not operate this craft with an engine of rated power greater than that posted on the capacity label. Do not operate at maximum speed while in congested waterways, or in weather or sea conditions of reduced visibility, high winds or large waves. Reduce speed and wake as a courtesy to others. Observe & obey speed limits and no wake zones.

221 kW  MAX  
2119763

Quicksilver® recommends that you fully comply with the manual provided by the engine manufacturer. Follow the recommended maintenance and warranty schedule in your Engine Operator's Manual. Refer to the Engine Owner's Manual for operating instructions and warranty information. The engines are warranted directly by Mercury, not by Quicksilver®.

### 15. Trailering

Quicksilver® does not offer a trailer for this boat, however, if you plan on purchasing one from another vendor, please consider the following:

- The trailer should have a center roller and keel guards which will help provide good support for the keel.
- Trailers with bunks provide a more even weight distribution.
- The mass of your boat in trailering condition is 2230kg. This includes the weight of a fully optioned boat along with full liquid loads. This does not include gear weight usually associated with operating the vessel.

## Quicksilver 755OP — General Information

### 16. Strong Points

#### Cleats


Your boat comes equipped with six cleats, two located on the bow, two located at midship, and two located at the stern. The cleats are used to secure the boat to the dock while loading, unloading, or mooring. If your boat does not come with a bow windlass, an additional cleat is installed on centerline in the anchor locker for tying off the rode when anchoring.

#### Bow Eye / Stern Eye

Your boat includes a bow eye, which is used to haul and hold your boat onto a trailer. In addition, there are two stern eyes, located on the transom, which are used as tie down points during trailering the boat. The bow and stern eyes may be used for short term lifting of the boat only.

#### Towing

Quicksilver® does not recommend towing other boats, or being towed by other boats, unless it is absolutely necessary. In the event that it becomes necessary for you to have your boat towed, a professional company experienced in this type of operation is better equipped to handle this situation.

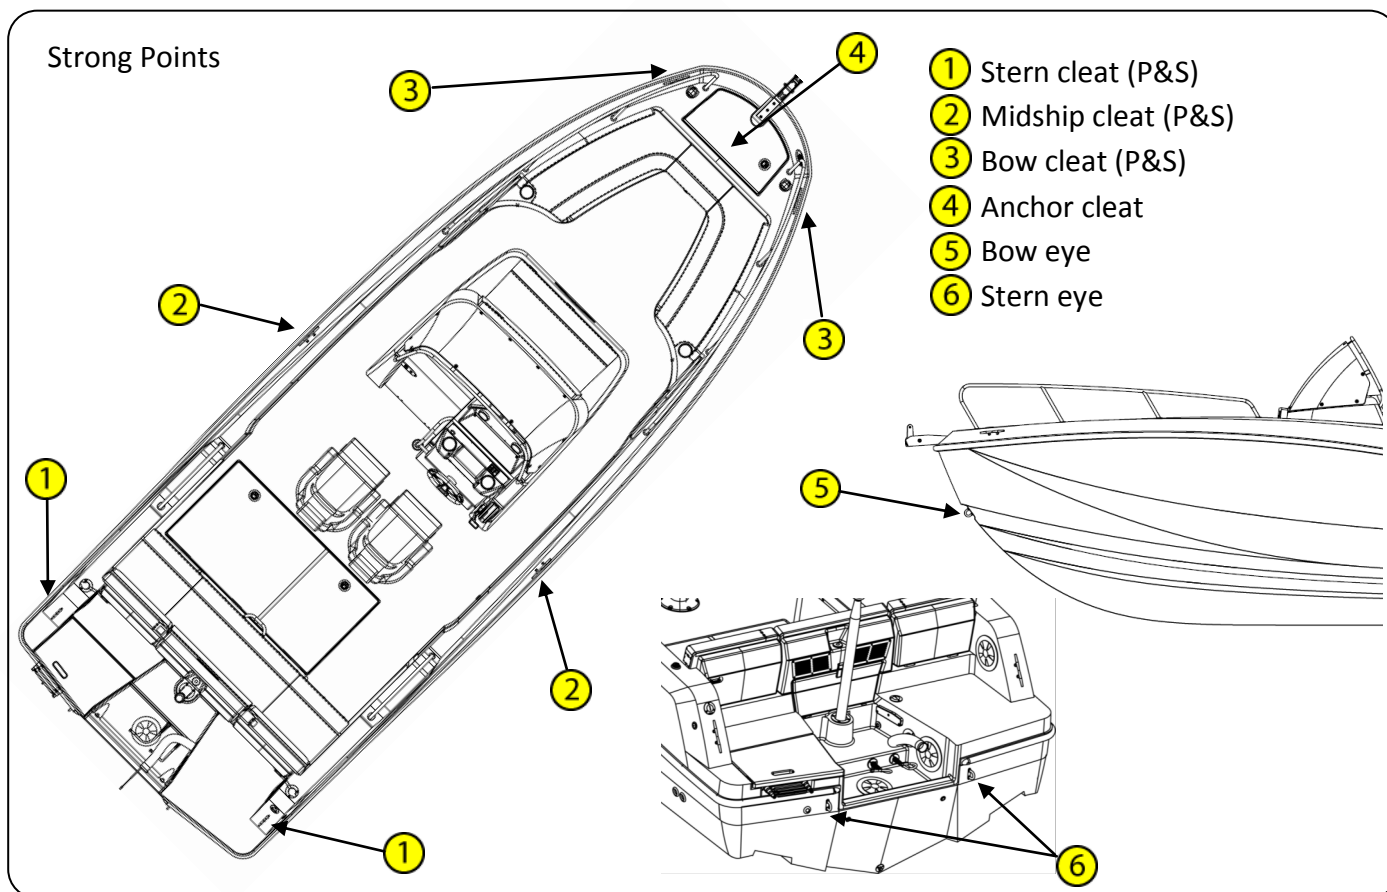

#### NOTICE

It is the owner's/operators responsibility to ensure that mooring lines, towing lines, anchor chains, anchor lines and anchors are adequate for the vessel's intended use. Owners should also consider what action will be necessary when securing a tow line on board.

#### ⚠ WARNING

Towing or being towed can lead to fatigue of the boat's hardware and lines. Failure of any part can seriously injury people or damage the boat. Do not stand directly in line with the tow line. If the line were to break, it would "snap back" causing injury or damage to everything in its path.

#### ⚠ DANGER

Use only the lifting points specified. Using the cleats for lifting is dangerous and could cause serious injury or death.

#### ⚠ CAUTION

Always tow or be towed at a slow speed. Never exceed the hull speed of a displacement craft when being towed.

# Quicksilver 755OP — System & Component Overview and Operation

## 1. Fuel System


Your boat's petrol fuel system consists of a fuel tank, a fuel tank fill and vent fitting, an anti-siphon valve, a sending unit, and an engine fuel supply line. In addition, there are two extra fuel ports for optional pickups, if needed.

### NOTICE

GASOLINE RECOMMENDATIONS  
Minimum octane rating is 87AKI

### CAUTION

The use of improper gasoline or additives can damage your fuel system. Damages caused by improper gasoline or additives will not be covered under warranty.

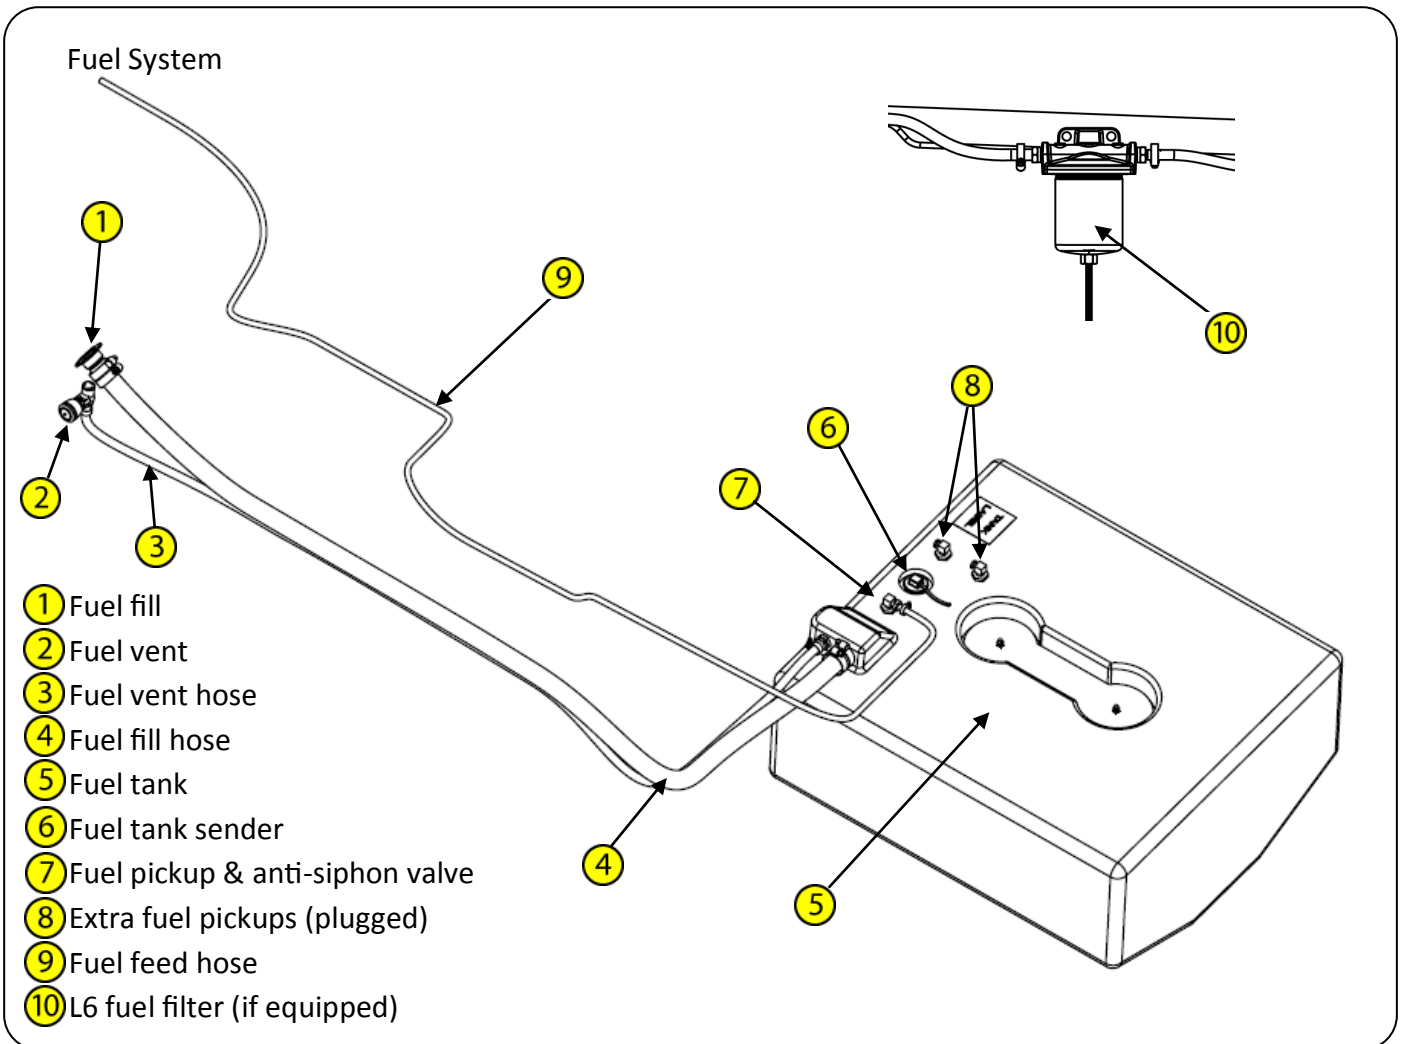

### Fuel Tank

Your boat is equipped with a crosslink polyethylene fuel tank with a capacity of 280 liters. As a precaution, all of the capacity may not be useable due to trim and loading conditions, so consider keeping at a minimum 25% reserve fuel in the tank.

Fuel tanks with levels less than 25% capacity can cause engine stalling problems due to fuel starvation or by allowing sediment and dirt to enter the fuel supply lines. Keep the tank full and monitor the fuel level often to prevent this from happening.

### Fuel Distribution

Fuel is delivered from the tank to the engine through the anti-siphon valve and the fuel feed line. The anti-siphon valve is a safety feature designed to prevent fuel from siphoning out of the tank if the fuel

---

## Quicksilver 755OP — System & Component Overview and Operation

---

feed line was ever cut or broken below the level of the fuel in the tank. If the feed line ever broke, some fuel would leak out from the line, however, the anti-siphon valve prevents the entire contents of the tank to siphon into the boat.

### **NEVER REMOVE OR MODIFY THE ANTI-SIPHON VALVE FROM THE FUEL TANK.**

#### **Ethanol—Blended Fuels**

Ethanol is an oxygenated hydrocarbon compound that has a high octane rating and therefore is useful in increasing the octane level of unleaded gasoline. The fuel system components of your Mercury engine(s) have been tested to perform with the maximum level of ethanol blended gasoline (10% ethanol), currently allowed by the EPA in the United States.

Special precautions should be considered with the use of fuel containing ethanol in your system. Fuels with ethanol can attack some fuel-system components, such as tanks and lines, if they are not made from acceptable ethanol-compatible materials. This can lead to operational problems or safety issues such as clogged filters, leaks, or engine damage.

Your boat was manufactured, and shipped from the factory with ethanol compatible materials. Before introducing petrol with ethanol into your fuel tank, ask your dealer if any components have been added or replaced that are not recommended by Quicksilver, Mercury or may not be ethanol-compatible.

#### **Filling The Tank**

It is best to maintain a full tank of fuel when the engine is not in use. This will reduce the air flow in and out of the tank due to changes in temperature as well as limiting exposure of ethanol in the fuel to humidity and condensation.

When filling the tank, do not attempt to top off the tank. When the nozzle shuts off, the tank is full, and continuing to fill past the fuel fill shutoff will cause the system to spit fuel back.

#### **⚠ DANGER**

Petrol vapors can explode. Never smoke while handling or filling up the petrol tank. Leaking fuel is a fire and explosion hazard. Inspect the fuel system annually to make sure that there are no leaks and corrosion in the system.

#### **⚠ WARNING**

Do not store any equipment containing petrol (outboard engines, portable petrol tanks, etc.) in any cockpit storage areas. These compartments were not designed to store petrol and do not have adequate ventilation.

#### **Phase Separation**

Humidity and condensation create water in your fuel tank which can adversely effect the ethanol blended fuel. A condition called phase separation can occur if water is drawn into the fuel beyond the saturation point. The presence for water in the fuel beyond the saturation level will cause most of the ethanol in the fuel to separate from the bulk fuel and drop to the bottom of the tank, significantly reducing the level of ethanol in the fuel mixture in the upper level (phase). If the lower level (phase), consisting of water and ethanol, is deep enough to reach the fuel inlet, it could be pumped directly into the engine(s) and cause significant problems. Engine problems can also result from the reduced ethanol/fuel mixture left in the upper phase of the tank.

#### **Additives**

There is no practical additive known that can prevent or correct phase separation. The only solution is to keep water from accumulating in the tank. If phase separation does occur, your only remedy is to drain the fuel, clean and dry the tank completely and refill with a fresh, clean tank of fuel.

# Quicksilver 755OP — System & Component Overview and Operation

## Fuel Filters

Mercury already provided the appropriate level of filtration to protect the engine from debris. The addition of another in-line filter to the system will create a possible flow restriction that can starve the engine(s) of fuel. As a precaution, it is advisable to carry extra on-engine filters in case filter plugging from debris becomes a problem during boating.

For vessels powered by an L6 Verado, Mercury provides an approved, externally mounted fuel filter for use in your boat. The filter is located on the starboard side of the vessel and can be accessed via the cockpit floor hatch. The filter is connected to the SmartCraft™ instrumentation and will warn you when maintenance is required. For more information, refer to the engine manufacturer's manual in your owner's manual package.

## Maintenance

Periodically inspect for the presence of water in the fuel tank. If any is found, all water must be removed and the tank completely dried before refilling the tank with any fuel containing ethanol.

## Storage

Long periods of storage and/or non-use, common to boats, create unique problems. When preparing to store a boat for extended periods, of two months or more, it is best to completely remove all fuel from the tank. If it is not possible to remove the fuel, maintaining a full tank of fuel with a fuel stabilizer added to provide fuel stability and corrosion protection is recommended.

REFER TO THE ENGINE MANUFACTURER'S MANUAL IN YOUR OWNER'S MANUAL PACKAGE FOR COMPLETE INSTRUCTIONS AND WARRANTY INFORMATION.

### ⚠ CAUTION

E85 FUELS COULD SERIOUSLY DAMAGE YOUR ENGINE AND MUST NEVER BE USED.

### ⚠ CAUTION

The use of fuels containing ethanol higher than 10 percent (E-10) can damage your engine and/or fuel system and will void the warranty.

### ⚠ WARNING

Do not obstruct or modify the ventilation system.

## 2. Fresh Water System (optional)

The fresh water system consists of an 80 liter water tank, pump, and plumbing connections for water to the entertainment center, the transom shower, or both.

### Filling the Tank

The water tank can be filled through the water fill inlet located on the transom of the boat. Fill the tank only from a source known to provide safe, pure drinking water. Use only a plastic hose to fill the water tank.

### NOTICE

Be sure to fill the water tank from a source known to provide safe, pure drinking water.


### NOTICE

If you do not use the freshwater system for long periods of time, or only use it seasonally, it is recommended that you disinfect the system before using.

### Fresh Water Pump

The fresh water pump delivers water from the tank to entertainment center faucet, and transom shower. To power the system turn on the WATER PUMP switch located on the dash. Turn off the power to the pump when your boat is not in use or when the fresh water tank is empty.

## Quicksilver 755OP — System & Component Overview and Operation

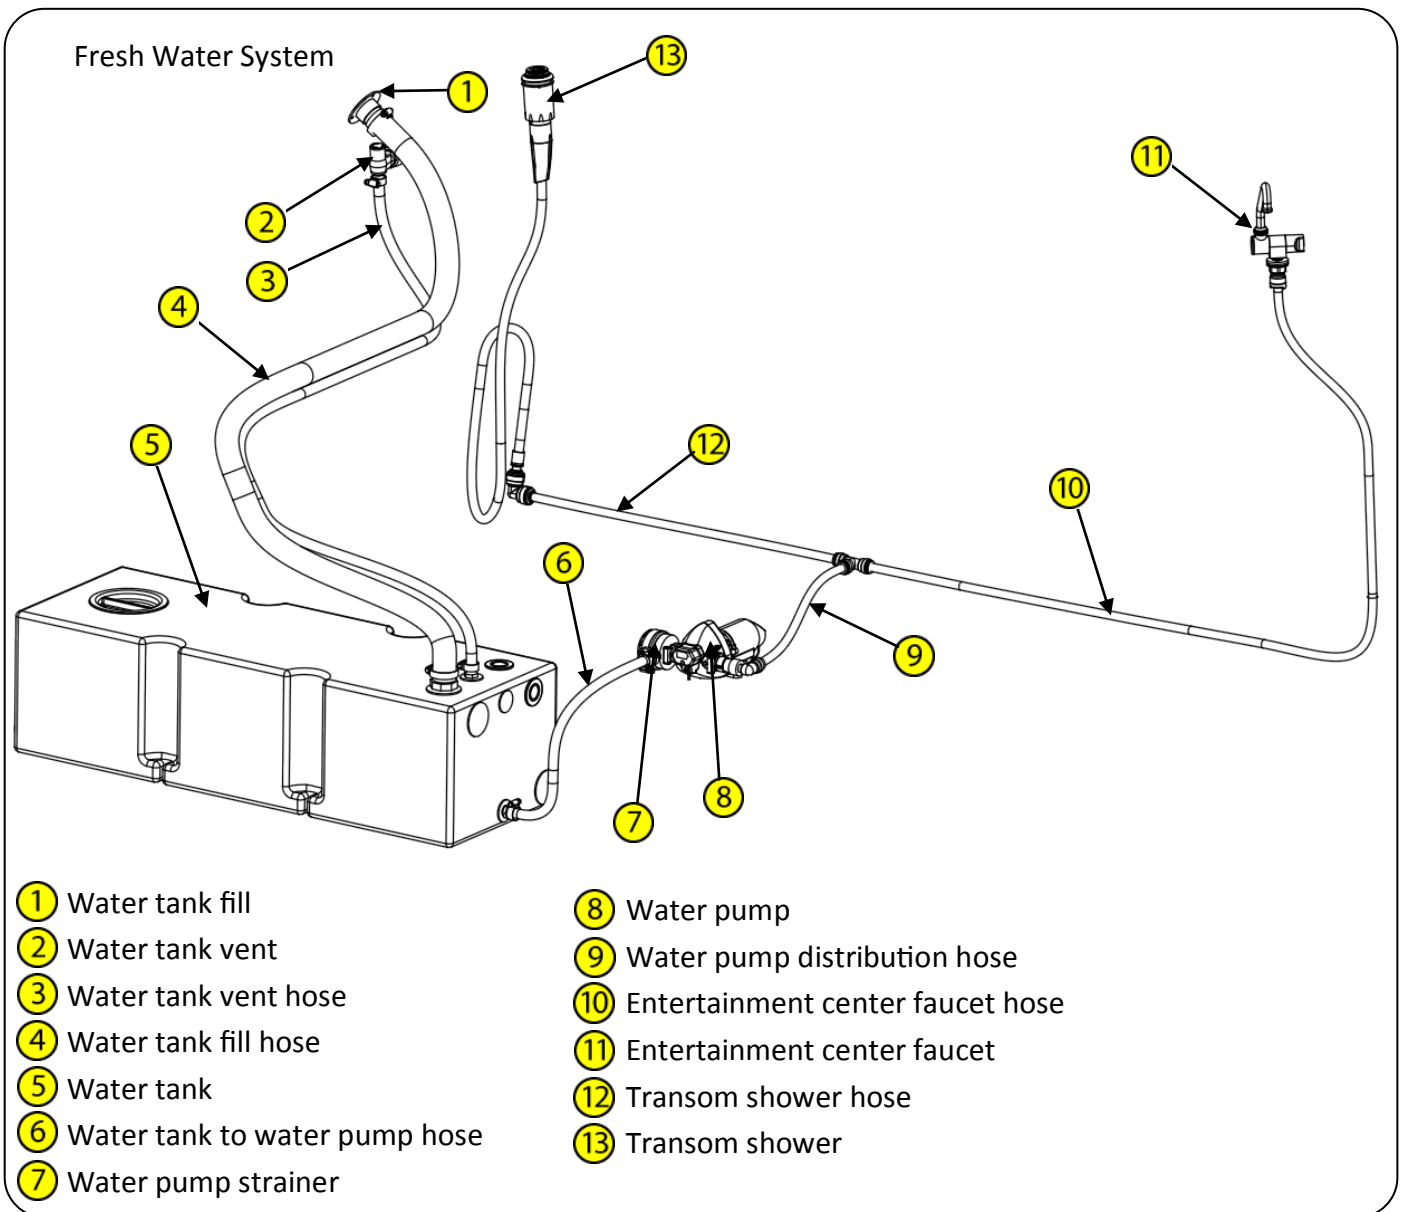

### Disinfect the Fresh Water System

The following is a recommended procedure to disinfect the fresh water system:

1. Flush the entire system thoroughly by allowing potable water to flow through it.
2. Drain the system completely.
3. Fill the entire system with an approved disinfecting solution. Check with your dealer for recommended products, and follow the manufacturer's instructions.
4. After disinfecting, drain the entire system.
5. Flush the entire system thoroughly several more times with potable water.

### Maintenance


Maintenance of the fresh water system will require you to check the fittings and hoses to make sure that there are no leaks.

Before the winter season, the fresh water system must be completely drained to avoid damage.

## Quicksilver 755OP — System & Component Overview and Operation

### 3. Black Water System (optional)

Your vessel may be equipped with a waste containment / disposal system. This includes a toilet water pickup, manual flush toilet, a 27.8 liter holding tank, macerator, discharge seacock, and a dockside pump out connection.

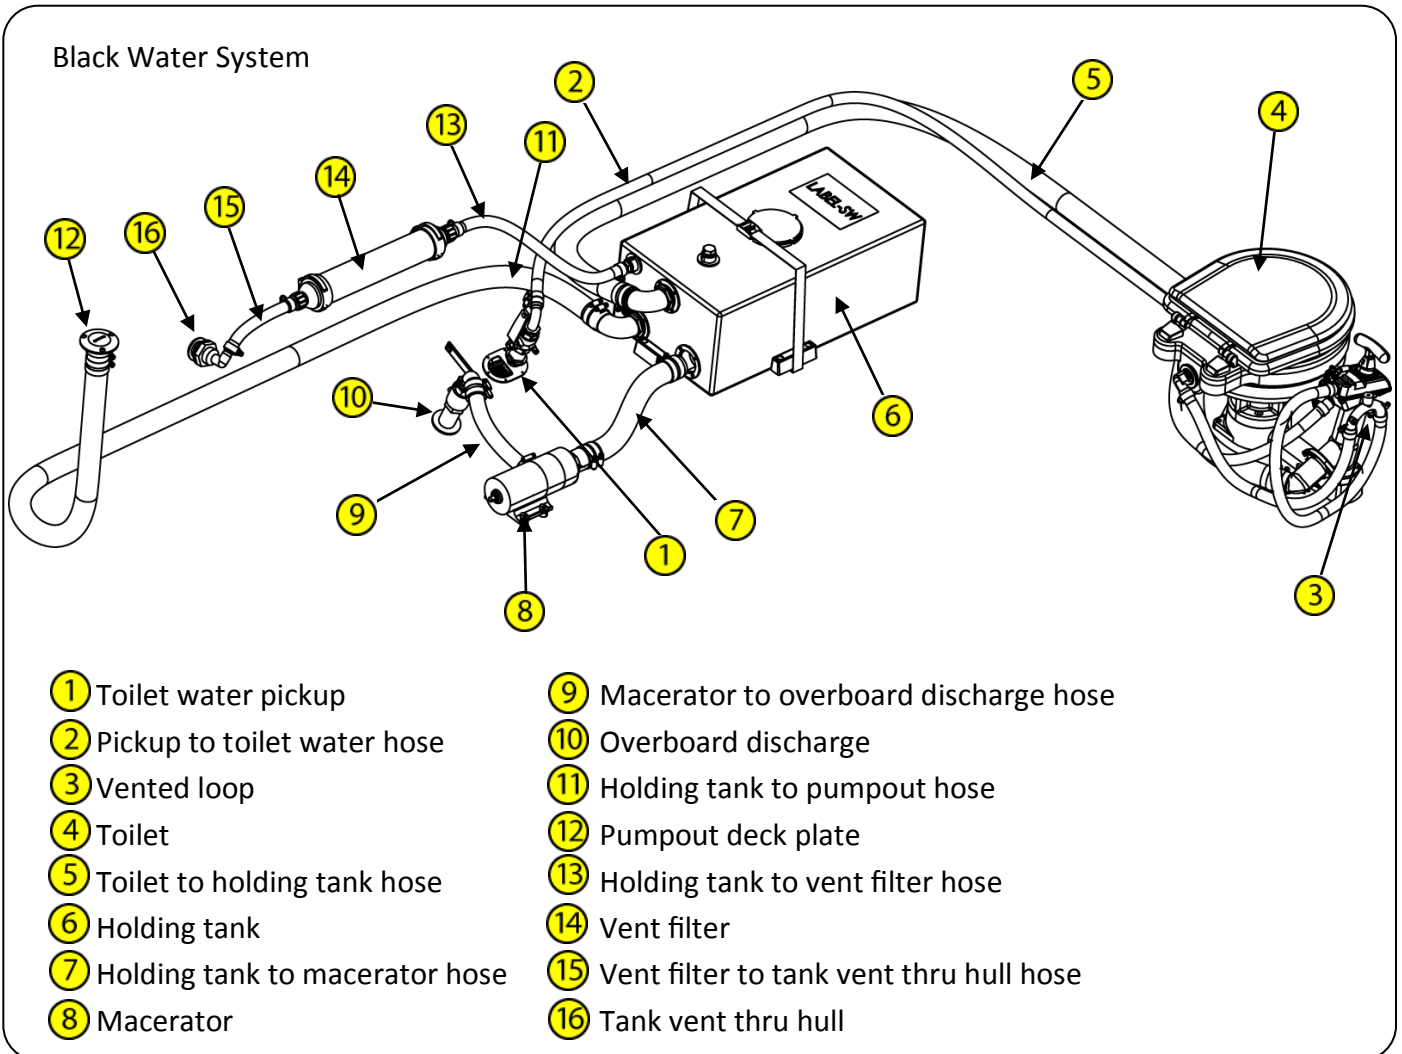

#### NOTICE

This boat is equipped with an overboard discharge seacock. Some countries levy severe penalties for discharging raw sewage and solid waste in waters where it is prohibited. Be aware of local environmental laws, and respect codes of good practice. Demonstrating that the macerator is disabled by locking the system and/or removing the seacock handle may avoid a fine.

#### CAUTION

The toilet water pickup valve should always be in the closed position when not in use. Failure to do so could result in flooding, property damage, and/or loss of life.


#### Operation

Prior to using the toilet, make sure that the toilet water pickup valve is opened. The toilet, located in the cabin, is mounted on a board that slides out of the way when not in use. To use, first rotate the interior step to the up position. Next, simply slide the toilet forward into the cabin to use.


Refer to the toilet owner's manual in regards to specific operation of the toilet. When flushing the toilet, it will take approximately 17 complete up/down strokes for the contents to reach the holding tank. When not in use, the toilet should be slid back into the storage area, and the interior step rotated down for access in and out of the cabin.

## Quicksilver 755OP — System & Component Overview and Operation

### Toilet Operation

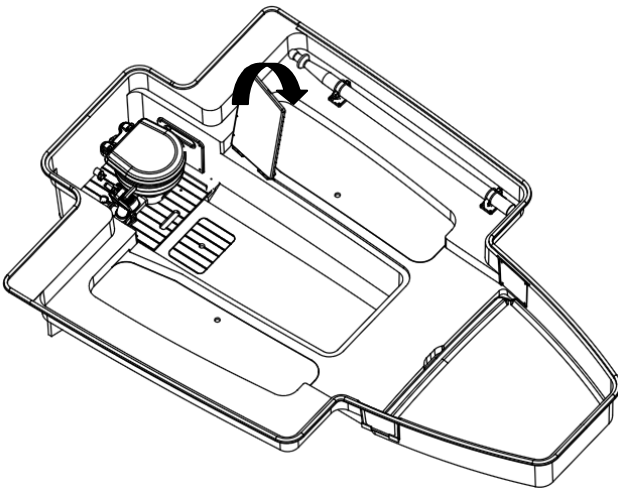

- ① Rotate the interior step so that the toilet will not hit it when sliding into the operational position.

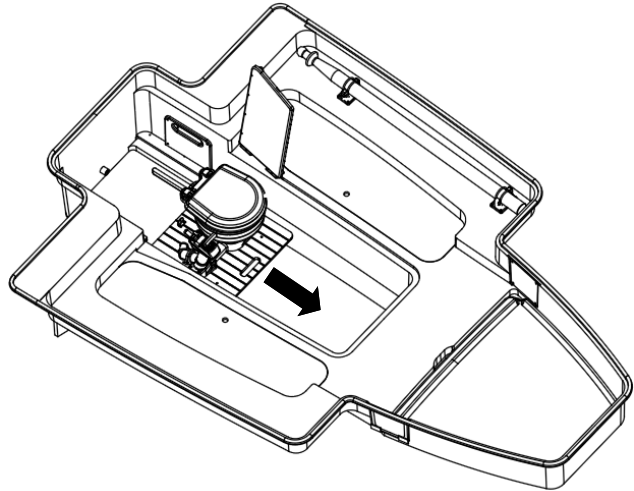

- ② Using the notch in the board, slide the toilet out from the storage position.


### Macerator

The macerator gives the boat operator the means of discharging the holding tank directly overboard through a seacock in the bottom of the hull. The macerator controls are located next to the main battery panel located in the center aft storage box. Since direct overboard discharge is prohibited in many areas, the macerator seacock is normally closed.

#### To Operate the Macerator:

1. Make sure the macerator seacock is in the open position.
2. Press and hold the macerator switch located on the main battery panel. The macerator switch is a momentary switch, which means that it needs to be held in the “ON” position during operation.
3. When the tank is empty, release the macerator switch.
4. Return the macerator seacock to the closed position.

### Macerator Switch Location

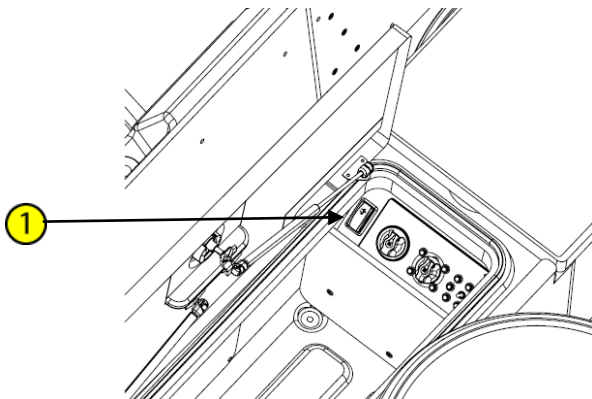

- ① Macerator switch

#### NOTICE

Avoid inadvertent discharge of the black water system. Always keep the macerator seacock closed when not in use.

---

## Quicksilver 755OP — System & Component Overview and Operation

---

### Dockside Pumpout

The dockside pumpout deck plate is located on the deck, on the port transom walkthrough, and is marked with the ISO symbol WASTE. The dockside facility will have the proper connections / fittings to pump the holding tank out.

#### NOTICE

The dockside pumpout deck plate does not have a chain connecting the cap to the deck plate. Use caution not to drop the deck plate cap into the water.

### Maintenance

Maintenance of the waste system will require you to check the fittings and hoses to make sure that there are no leaks. If the system does require maintenance, contact your local dealer. Quicksilver® recommends that you pump out the system before long periods of non-use. If you are storing the boat during the winter, we recommend you winterize the system.

#### To Winterize the Waste System:

1. Empty the holding tank either via the macerator in an approved location or the dockside pumpout.
2. Pump water through the system (via the toilet) to remove any residue waste.
3. Empty the holding tank again, removing all liquids.
4. Pour an environmentally safe antifreeze (Propylene Glycol based) in the toilet and pump throughout the system.

Refer to the toilet manufacturer's requirements for additional winterization procedures.

### 4. Grey Water System (optional)

In certain locations, local laws prohibit water from sinks and showers (excluding transom showers) to drain overboard. Check with local officials on whether or not a grey water system is required where you boat. The grey water system consists of an 80 liter tank, plumbing connections to the entertainment center sink drain, and a pump out fitting.

### Operation

Each time the sink is used, the water drains into the grey water tank by gravity.

### Dockside Pumpout

The dockside pumpout deck plate is located on the port transom deck, and is marked with the ISO symbol WASTE. The dockside facility will have the proper connections / fittings to pump the grey water tank out.

#### NOTICE


The dockside pumpout deck plate does not have a chain connecting the cap to the deck plate. Use caution not to drop the deck plate cap into the water.

### Maintenance

Maintenance of the grey water system will require you to check the fittings and hoses to make sure that there are no leaks. If the system does require maintenance, contact your local dealer.

Quicksilver® recommends that you pump out the system before long periods of non-use. If you are storing the boat during the winter, we recommend you winterize the system.

## Quicksilver 755OP — System & Component Overview and Operation

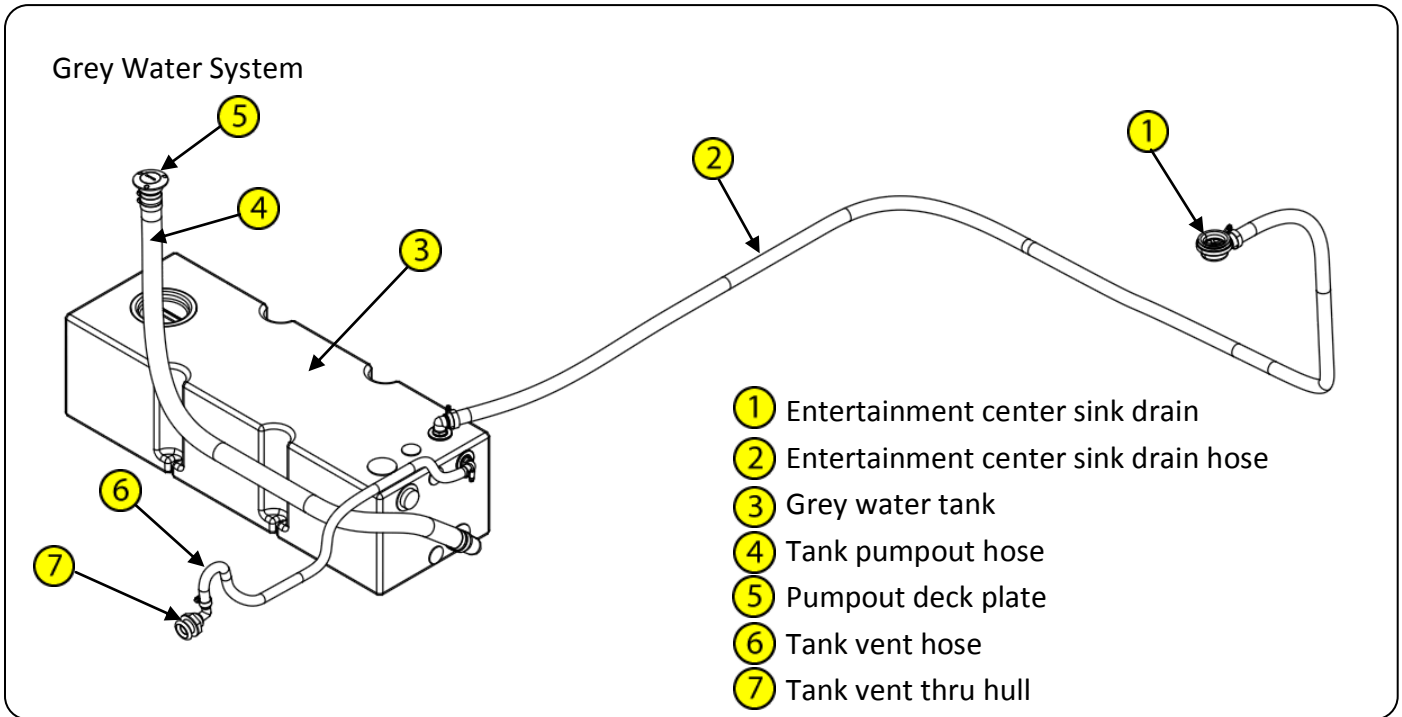

### To Winterize the Grey Water System:

1. Empty the grey water holding tank via the dockside pumpout.
2. Pump water through the system to remove any residue materials.
3. Empty the grey water holding tank again, removing all liquids.
4. Pour an environmentally safe antifreeze (Propylene Glycol based) in each sink and allow to drain or pump to the holding tank.

### 5. Bilge Pumps

Your vessel is equipped with two bilge pumps, with one located in the aft section of the boat, and the second one located in the forward section of the boat. Access to the aft bilge pump is via the motorwell access plate, while access to the forward bilge pump is through a hatch located in the aft berth floor. Both bilge pumps are rated for 500 GPH, and are activated automatically by a built in mercury free float switch when the water in the bilge reaches a predetermined level. You can also manually operate the bilge pump at the console by pressing the bilge pump switch.

Inspect the bilge pump intakes and keep them free of dirt or material which may impede the flow of water through the pump. To clean the pump strainer, depress the lock tabs on both sides of the pump and lift the pump motor.

If water does not come out of the discharge hose:

1. Remove the motor module to see if the impeller rotates with the power on.
2. Remove any debris that may have accumulated in the nozzle section or strainer base.
3. Check hose and connection on hull side for debris and proper connections.

#### **⚠ WARNING**


The bilge pumping system is not designed for damage control.

#### **NOTICE**

Check the function of all bilge pumps at regular intervals. Clear pump inlet from debris.

## Quicksilver 755OP — System & Component Overview and Operation

Typical Bilge Pump System

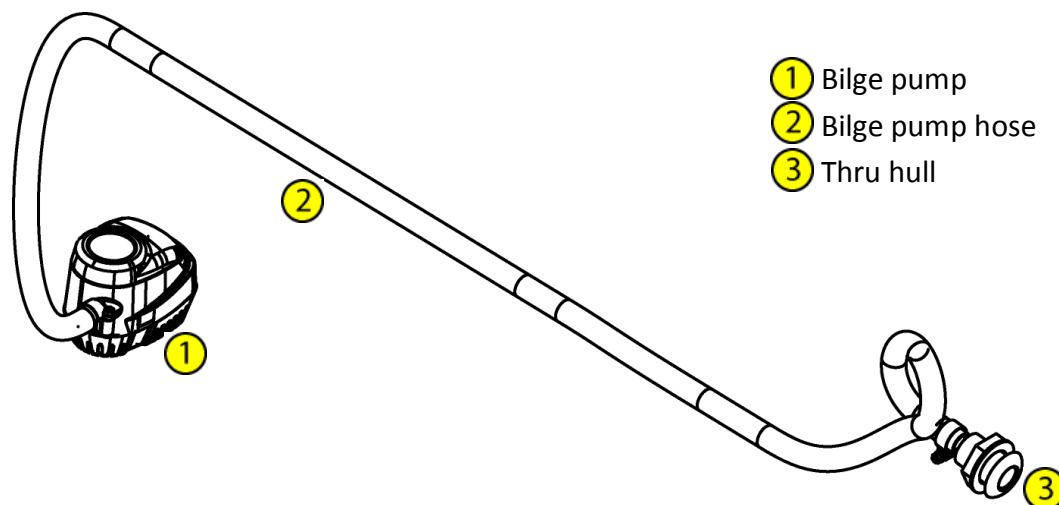

### 6. Fire Suppression

Fire is a serious boating hazard. Boats will burn quickly. Do not remain onboard and fight a fire for more than a few moments. If the fire is out of control and cannot be put out with the fire suppression equipment onboard, abandon ship immediately.

The boat, when in service shall be equipped with the following portable fire extinguisher:

1. Fire Rating 13A 89B C

The boat owner/operator shall:

1. Have the fire fighting equipment checked at the intervals indicated on the equipment.
2. Replace portable fire extinguisher, if expired or discharged, by devices of identical fire fighting capacity.
3. Have fixed systems refilled or replaced when expired or discharged.
4. Ensure that the fire fighting equipment is readily accessible when the boat is occupied.
5. Inform the members of the crew about the location and operation of the fire fighting equipment, the locations of discharge openings in to the engine space, and the locations of escape routes and exits.
6. Keep the bilges clean and check for fuel and gas vapors or fuel leaks frequently.


#### **⚠ WARNING**

Never obstruct passageways to exits or hatches, obstruct safety controls (fuel valves, LPG valves, electrical switches, etc.) obstruct portable fire extinguishers stowed in lockers, or modify any of the craft's system (especially fuel, LPG, or electrical) or allow unqualified personnel to modify any of the craft's system.


The fire extinguisher is located on the port side of the vessel in the interior liner, while the fire port is located on the port side of the L-lounge seating in the cockpit.

## Quicksilver 755OP — System & Component Overview and Operation

Fire Extinguisher

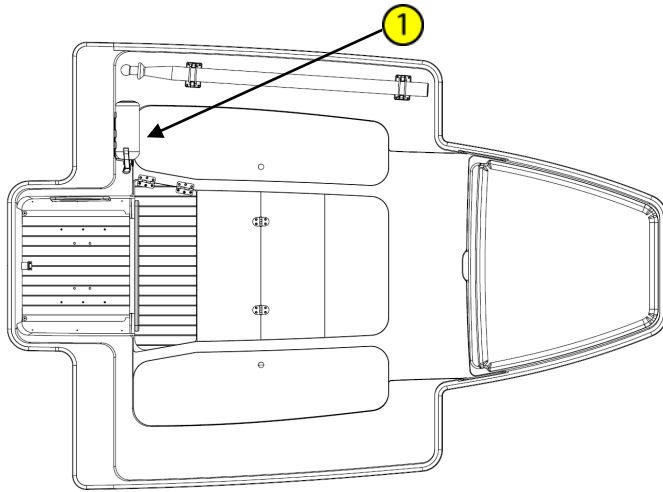

① Fire extinguisher  
② Fire port

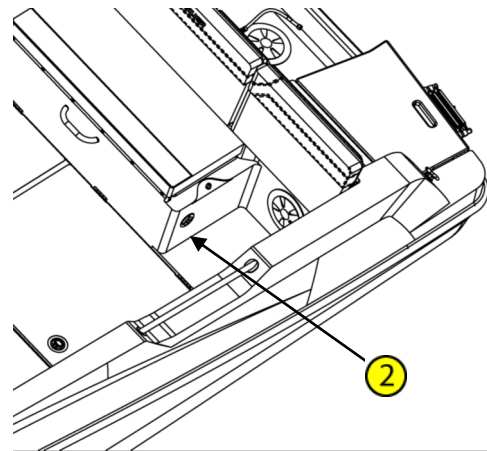

### 7. Carbon Monoxide Monitor

Quicksilver® boats are equipped with carbon monoxide (CO) monitors in the cabin and enclosed berths or staterooms. Carbon Monoxide is an odorless, colorless, and tasteless, extremely toxic gas produced by engines, heaters, stoves or generators. When inhaled it combines with hemoglobin in the blood, preventing absorption of oxygen and is unlikely to be noticed until the person is overcome. Prolonged exposure to low concentration or very short exposure to high concentrations can result in asphyxiation and death.

Symptoms of Carbon Monoxide poisoning include dizziness, headaches, ringing in the ears, nausea, or unconsciousness. GET MEDICAL ATTENTION AS SOON AS POSSIBLE. These symptoms are often confused with seasickness or intoxication, so those affected may not receive the medical attention they need. The poisoning victim's skin often turns cherry red. If CO poisoning is suspected, have the victim breathe fresh air deeply. If breathing stops, resuscitate. A victim often revives, then relapses because organs are damaged by lack of oxygen.

#### Carbon Monoxide Accumulation & Prevention

Carbon Monoxide can accumulate in dangerous concentrations anywhere in or around your boat including on back decks, swim platforms, or in water around generator exhausts. CO can remain in or around your boat at dangerous levels even if your engine is no longer running. To minimize the risk of Carbon Monoxide poisoning, consider the following:


- Make sure that at all times, there is good ventilation throughout the boat. Open all hatches, portlights, or canvas openings to let fresh air circulate.
- Never operate the boat with the canvas enclosure unless there is ventilation throughout the boat (i.e. forward and aft canvas panels are removed to allow air flow through the boat).
- Never operate the boat with only the cabin entry door opened.

In the event that the Carbon Monoxide alarm activates:


- Do not ignore the alarm.
- Evacuate enclosed areas immediately.
- Shut OFF any fuel burning equipment or appliances
- Open hatches, doors, portlights and canvas openings to improve ventilation.
- Head the boat into the wind.

## Quicksilver 755OP — System & Component Overview and Operation


### Accumulation of Carbon Monoxide Examples

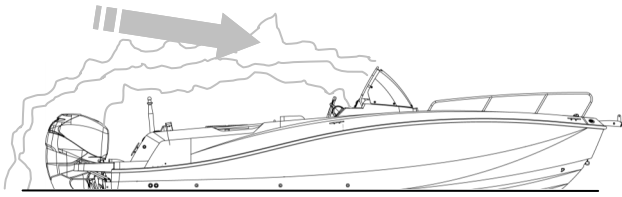


Wind blowing exhaust towards boat occupants

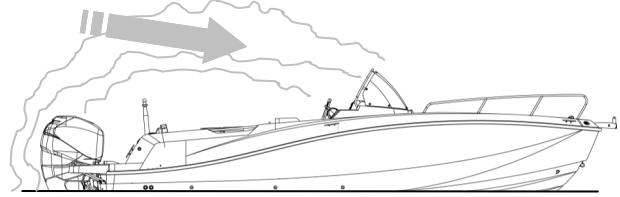

Operating at slow speed or dead in the water

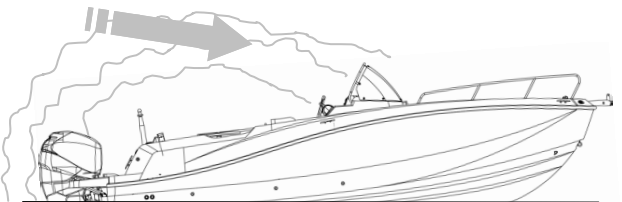

Operating with "bow high" attitude

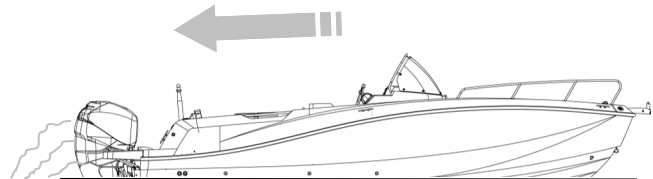

Good air flow — open all hatches, portlights or canvas openings to let fresh air circulate

### Carbon Monoxide Monitor

The CO monitor is an electronic instrument that detects carbon monoxide. The detector is very sensitive and will notify you before dangerous amounts of CO can accumulate which will allow you to take measures to dissipate the gas from the affected areas. When there is a buildup of CO in the cabin, the monitor will alert the occupants by flashing a DANGER light and sounding an alarm. The CO monitor is powered through a breaker on the battery panel in the cockpit.

It is important that you read and understand the CO monitor information and operating instructions. It is extremely important that you become familiar with the CO monitor and its functions.

### Testing the CO Monitor

Test the monitor on your boat at manufacturers required intervals by pushing the TEST button on the side of the unit. If the unit is operating correctly both audible and visual warning indicators will be activated.

### End of Life Signal


Your CO detector may be equipped with an End Of Life (EOL) signal indicating the sensor used in the unit has reached the end of its service life and must be replaced. The signal is activated from a timer that will run for 4 years, 11 months from the date of manufacture. Depending on your monitor, the EOL signal indicator varies, so check the unit's operation manual for further information and instructions.

The EOL signal can be reset for a period of 72 hours (3 days) for a total of up to 30 days. After this time, the unit will continuously signal EOL and will no longer detect CO and **MUST BE REPLACED! DO NOT DISCONNECT THE ALARM UNTIL YOU HAVE A REPLACEMENT ALARM AVAILABLE TO INSTALL! REMOVING THE LITHIUM BATTERY WILL CAUSE THE UNIT TO SIGNAL EOL PERMANENTLY!**

REFER TO OWNER'S MANUAL PACKAGE FOR INSTRUCTIONS AND WARRANTY INFORMATION.

## Quicksilver 755OP — System & Component Overview and Operation

Carbon Monoxide Monitor

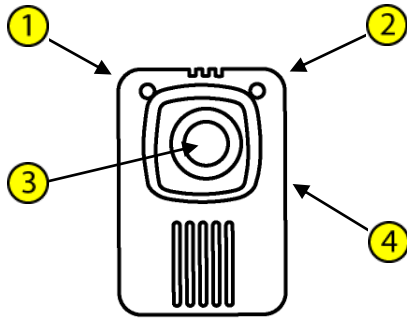

- ① Power indicator light
- ② Alarm indicator light
- ③ Horn
- ④ Test button

### **⚠ DANGER**

Fumes for the engine(s), generator, LPG stoves, and other equipment that burns fuel contain Carbon Monoxide. Carbon Monoxide can kill you. Open all doors, hatches, curtains, and windows to allow fresh air to circulate.

### **⚠ DANGER**

Never ignore an alarm.


### **⚠ CAUTION**

To reduce the risk of Carbon Monoxide poisoning, test the monitor operation when not in use for 10 days or more.


### 8. LPG System (optional)

Your boat's LPG system consists of a stove, a shutoff valve, and a storage tub for a 2kg LPG tank. Quicksilver® does not provide a tank or a regulator with the boat, however, both can be purchased through your authorized Quicksilver® dealer.

LPG System

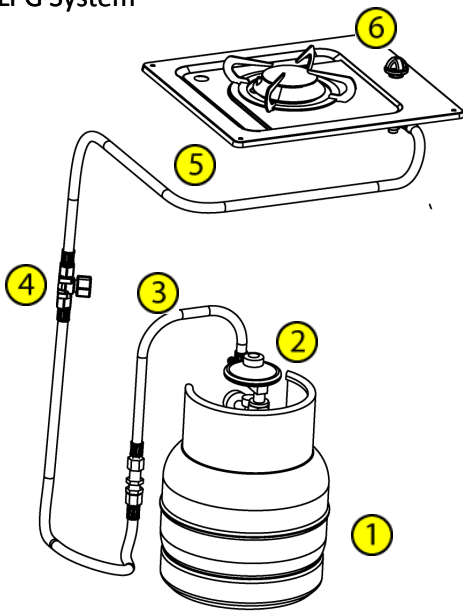

- ① 2kg LPG tank (not supplied)
- ② Regulator (not supplied)
- ③ LPG tank hose
- ④ Shutoff valve
- ⑤ Shutoff valve to stove hose
- ⑥ Stove

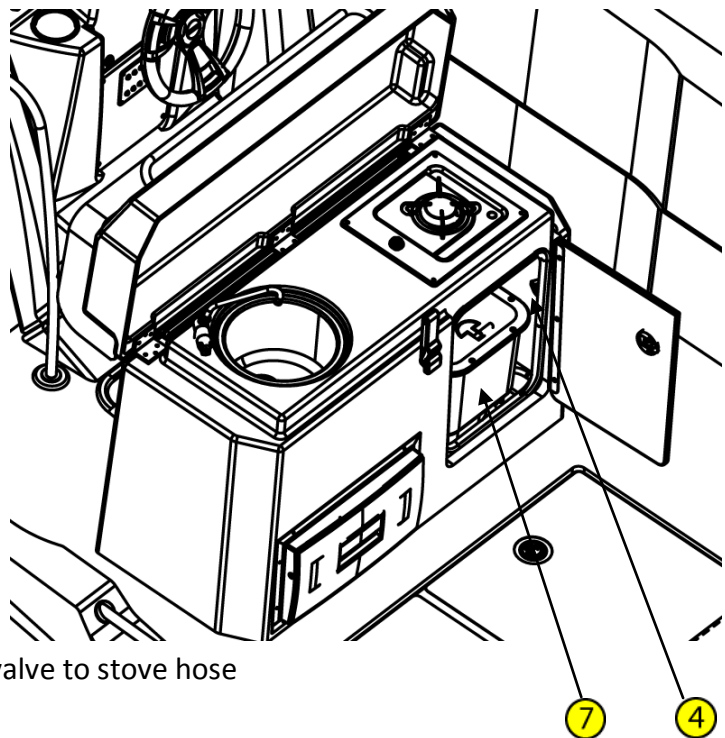

### **NOTICE**

LPG working pressure: Butane = 28mbar, Propane = 37mbar

# Quicksilver 755OP — System & Component Overview and Operation

## ⚠ WARNING

Do not smoke or use open flame when replacing LPG cylinders. Close cylinder valves on empty cylinders before disconnecting for replacement.

## ⚠ WARNING

Ensure that when the LPG stove is on, avoid contact of materials to the open flame. Never leave craft unattended when open flame LPG consuming appliances are in use.

### Stove

There is a single burner LPG stove located in the cockpit entertainment center. Refer to the stove owner's manual for specific details on operation. Do not use stove when high angles of rolling or sustained angles of heel are likely.

### Tank Storage

The LPG tank storage is located on the aft side of the entertainment center. The tank must be firmly secured to the boat with the tank in a horizontal position. Do not relocate or reposition the tank. Do not obstruct access to the LPG tank in any way. Make sure to keep valves on empty cylinders closed and disconnected, and keep protective covers, caps or plugs in place. Do not store spare cylinders in any cockpit tubs. Only keep spare cylinders in ventilated housings on open decks or in gas-tight lockers which are vented overboard and intended for storing LPG tanks. Finally, do not use LPG cylinder housing for storage of any other equipment.

### LPG Shutoff Valve

An inline fuel shutoff valve is located in the forward storage area in the entertainment center. Always close fuel supply line valves and cylinder valve when appliances are not in use. Also, remember to close all valves before refueling and immediately in an emergency. Finally, be sure appliance valves are closed before opening cylinder valve.

### LPG Pipe & Hoses

Your LPG system consists of a combination of hoses and copper pipe connecting the LPG tank to the stove. The hoses in the LPG system must be inspected regularly, at least annually, and replaced if any deterioration is found.

### System Leak Test

Prior to the boat leaving the factory, the LPG system is tested for any potential leaks. However, Quicksilver® recommends that you test the system regularly. Test all connections for leakage by means of the following:

- Before each use, close appliance valves; open LPG cylinder valve; allow indicated gauge pressure to stabilize; close LPG cylinder valve; observe pressure gauge reading near cylinder valve for three minutes; pressure gauge reading should remain constant if no leak in the system is present. **IF PRESSURE GAUGE READING FALLS, LEAK IS PRESENT. DO NOT USE LPG APPLIANCES.**
2. Routine observation of bubble leak detector (if fitted on the system).
3. Manual leak testing with foam-producing, soapy water or detergent solutions (with appliance burner valves closed and cylinder and system valves open); foam-producing solutions for leak detection on gas installations in accordance with EN 14291 meet these requirements.

If a leak is present, shut off the LPG supply at the main supply valve. Extinguish any open flames (heaters, stoves, etc.) and do not operate any electric switches. Finally, evacuate the area if possible. Quicksilver® recommends that any LPG system repairs should be made by your authorized Quicksilver® dealer.

## Quicksilver 755OP — System & Component Overview and Operation

### ⚠ WARNING

Fuel burning open flame appliances consume cabin oxygen and release products of combustion into the craft. Ventilation is required when appliances are in use. Open designated vent openings while appliances are in use. Do not use the stove or oven space heating. Never obstruct ventilation openings.

### ⚠ WARNING

If a leak is detected, shut off the main LPG supply valve and do not use LPG appliances

### ⚠ WARNING

Do not use an LPG system that has leaked until it has been inspected and repaired by a competent person.

### ⚠ WARNING

Do not use solutions containing Ammonia.

### ⚠ CAUTION

Never use flames to check for leaks.

### Changing LPG Cylinders

To replace empty LPG cylinder:

1. Turn off the stove and close the shutoff valve.
2. Close the valve on the LPG cylinder.
3. Remove the regulator by turning the nut clockwise.
4. Replace the empty tank.
5. Inspect the regulator. Make sure that the gasket located on the regulator nut is in good condition. If not, replace regulator gasket or regulator itself.
6. Re-install and tighten the regulator by turning the nut counterclockwise.
7. Check for any leaks before restarting the stove.


### 9. Bow Anchor Windlass (optional)

The anchor windlass located at the bow of the boat assists with the anchoring of your boat by automatically raising and lowering the anchor. The windlass is operated from the helm.

#### Operation

To operate the windlass, the windlass breaker, located on the battery switch panel, must be turned ON. Operation of the windlass at the helm is controlled by a momentary switch used to raise and lower the anchor. Pushing down on the switch will lower the anchor, while pushing up on the switch raises the anchor.

Anchor Windlass

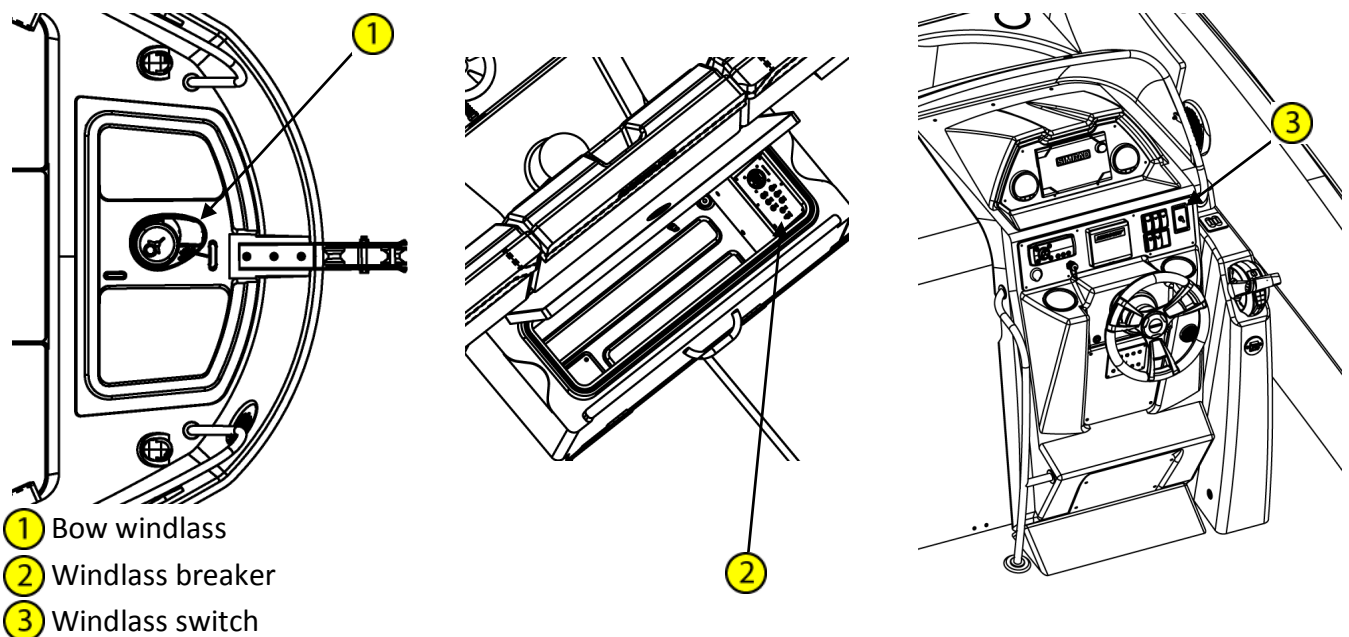

### NOTICE

Before operating the windlass, make sure that the safety lanyard is removed from the anchor

#### Manual operation

In the event that there is a loss of power, the windlass can still be used to raise or lower the anchor manually. If there is a loss of power, check the windlass breaker to see if it needs to be reset. If you reset the breaker and it continues to trip, have your authorized Quicksilver® dealer inspect the system.

In order to manually operate the windlass and lower the anchor into the water, insert the emergency handle (provided by the windlass manufacturer) into the star socket located at the top of the gypsy cover and turn counter-clockwise. This loosens the clutch holding the anchor rode and chain in place and allows the anchor to be deployed into the water. The speed of the rode can be adjusted by turning the handle clockwise. To re-engage the clutch and lock the rode from moving, turn the handle clockwise.

To manually raise the anchor, loosen the clutch by turning the handle counter-clockwise, and pull the anchor up into the boat. Make sure to properly feed the rode and chain through the windlass when pulling up the anchor. When the anchor is up and stowed properly in the bow pulpit, re-engage the clutch by turning the handle clockwise.

#### 10. Steering

Your boat comes equipped with a hydraulic steering system. The basic system for a single engine boat contains a steering wheel, a hydraulic helm pump, a hydraulic steering cylinder, and hydraulic hoses. If you purchase a Mercury Verado® six cylinder engine, the steering system includes an electric power assisted steering pump to aid in the handling of the vessel.

#### Operation

When turning the steering wheel, the helm pump forces hydraulic fluid through hoses to and from the steering cylinder which is connected to the tiller arm on the engine. The cylinder moves the tiller arm to either port and starboard, depending upon the direction the steering wheel is turned.

#### Filling and Maintenance


A hydraulic steering system rarely needs to be refilled after the system is bled. However, if you ever need to add fluid to the system, refer to the steering manufacturer's manual for complete instructions.

On a standard non tilt helm, the fill point is located on the helm itself, in front of the steering wheel. If you have a tilt helm (non L6 Verado), the fill cap is located on the helm pump, under the dash. To gain access to the cap, remove the plug located on the dash in front of the steering wheel. On a six cylinder Verado powered boat, fluid is added at the power assist pump, located in the port aft corner of the cockpit. To access, open the access hatch on the vertical wall. Next, remove the cover on the power assist pump and unscrew the cap.


REFER TO OWNER'S MANUAL PACKAGE FOR INSTRUCTIONS AND WARRANTY INFORMATION.

## Quicksilver 755OP — System & Component Overview and Operation


### Hydraulic Steering — Non Tilt Helm

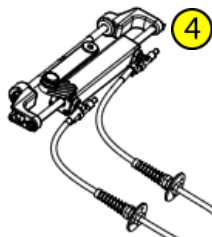



- ① Steering wheel
- ② Helm pump
- ③ Hydraulic fluid lines
- ④ Steering cylinder
- ⑤ Hydraulic fluid fill cap & plug
- ⑥ Tilt helm mechanism

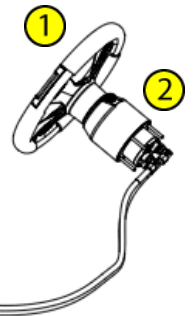


### Hydraulic Steering — Tilt Helm

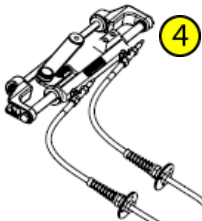

⑤

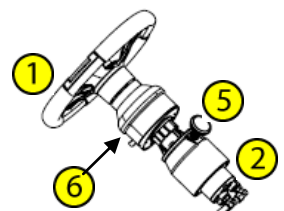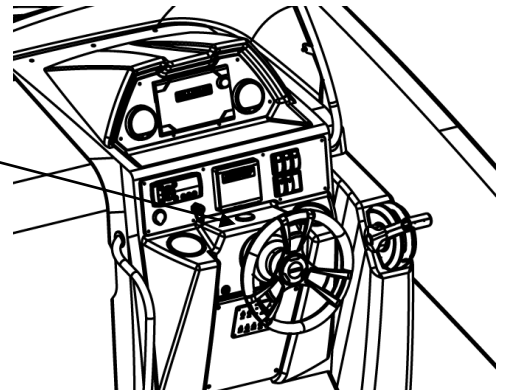

## Quicksilver 755OP — System & Component Overview and Operation

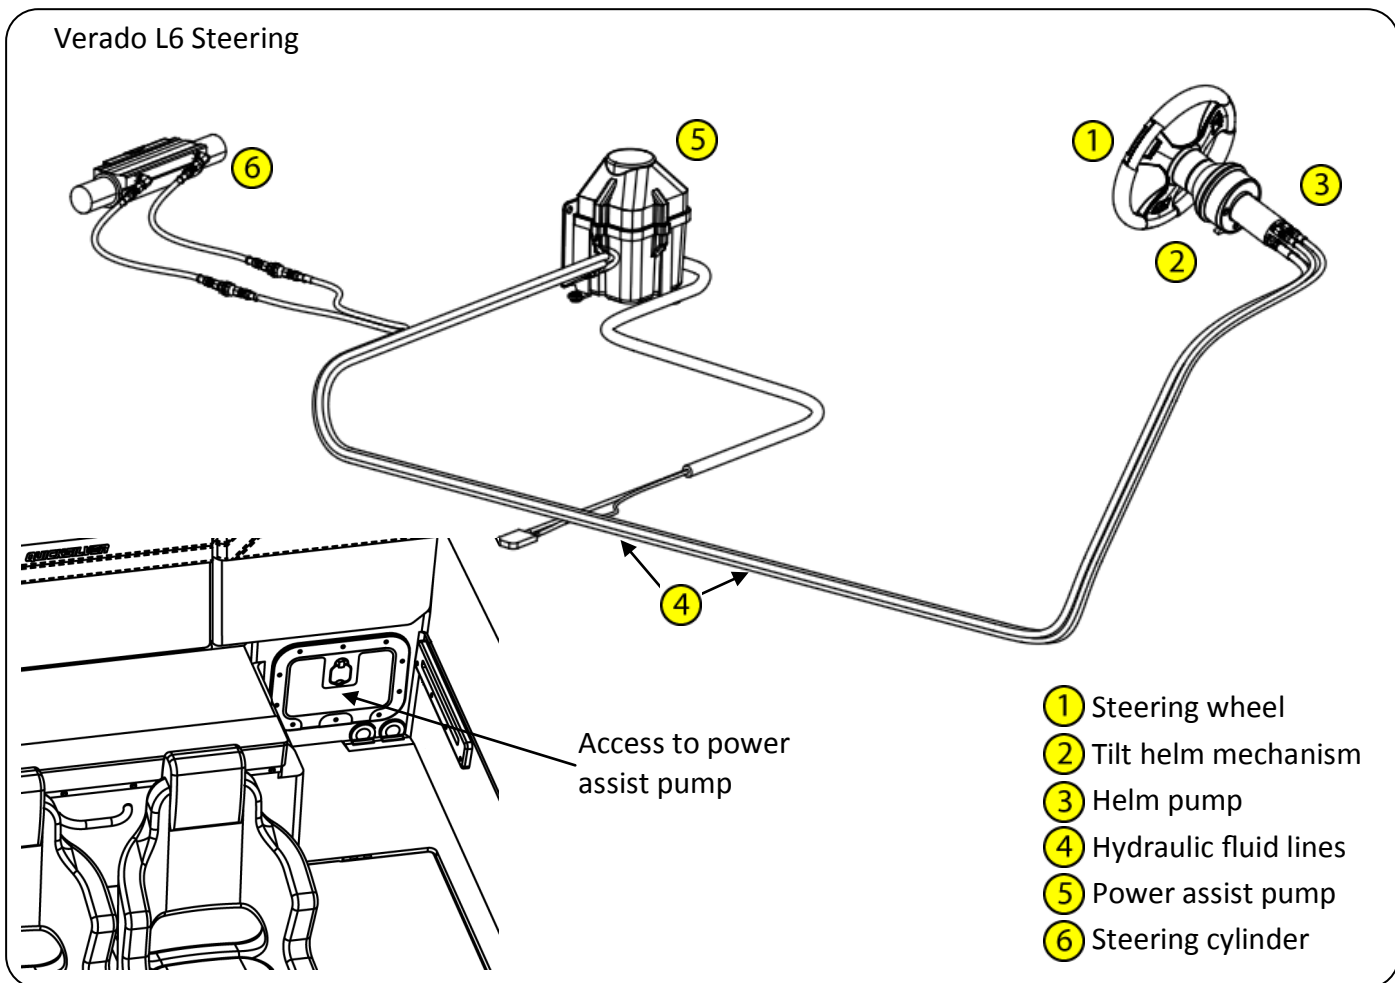

### 11. Engine Controls

Depending on the engine installed on your boat, you will either have a mechanical gear shift/throttle control unit or a “drive by wire” Digital Throttle and Shift (DTS®) control unit. The control unit, located to the starboard side of the steering wheel, activates both the shifting and throttle for the engine.

To start the engine, the control unit must be in the NEUTRAL position. When in neutral, the engine is running, but the propeller is not spinning. There is a throttle only button that when pressed, will allow you to operate the throttle without the propeller spinning. On the mechanical shift controller, the button is located at the center of the throttle control, and when moved back to the center position, the button will automatically re-engage the shifting mechanism.

For the DTS control, the Throttle Only button is located on the control function pad. To engage, press the “Throttle-Only” button on the keypad when the engine is in neutral. A light located above the Throttle-Only button will turn on and the green neutral light will begin to flash. When you place the ERC in gear, the warning horn will beep, however, the propeller is not turning. To disengage, return the ERC lever back to neutral and press the “Throttle-Only” button. The light located above the Throttle-Only button will turn off and the green neutral light stops flashing and remains illuminated.

Moving the control lever forward from neutral engages the forward gear and throttle advance. Moving the control lever backwards from neutral engages the reverse gear and thrust. The throttle lever controls the RPM of the engine and the speed of the boat.

### Power Trim & Tilt


The power trim, located on the side of the gear shift throttle handle, allows you to raise and lower the

## Quicksilver 755OP — System & Component Overview and Operation

engine for trailering and launching the boat. It also allows you to adjust the engine to create the optimum run angle for the boat to achieve best all around performance (fuel consumption, speed).

REFER TO OWNER'S MANUAL PACKAGE FOR INSTRUCTIONS AND WARRANTY INFORMATION.

### Mechanical & DTS Controls

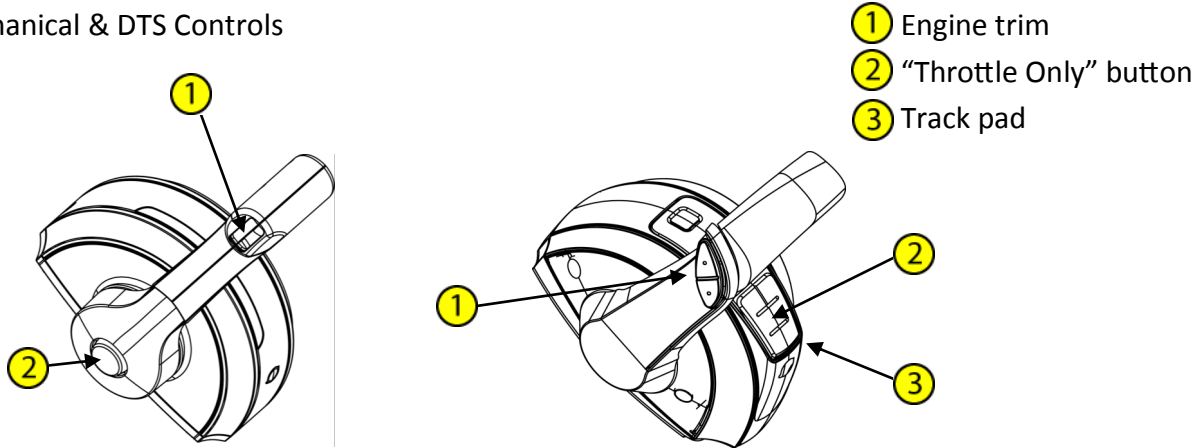


### 12. Emergency Engine Shutdown Switch

Your boat is equipped with an ignition shutdown safety switch. The switch is located at the helm under the engine control unit. The ignition shutdown switch incorporates a shut-off switch and a lanyard. Before operating the boat, one end of the lanyard must be connected to the shut-off switch while the other end is connected to the operator. If an emergency arises where the engine must be shut down, pull the lanyard cord to release it from the shut-off switch, which in turn shuts down the engine. This switch is designed to shut the engine off when the operator of the boat leaves the control station, either accidentally by falling into the boat, or by being ejected overboard.

The lanyard should be long enough to prevent inadvertent activation. Do not let the lanyard become entangled.

### Emergency Engine Shutdown Switch

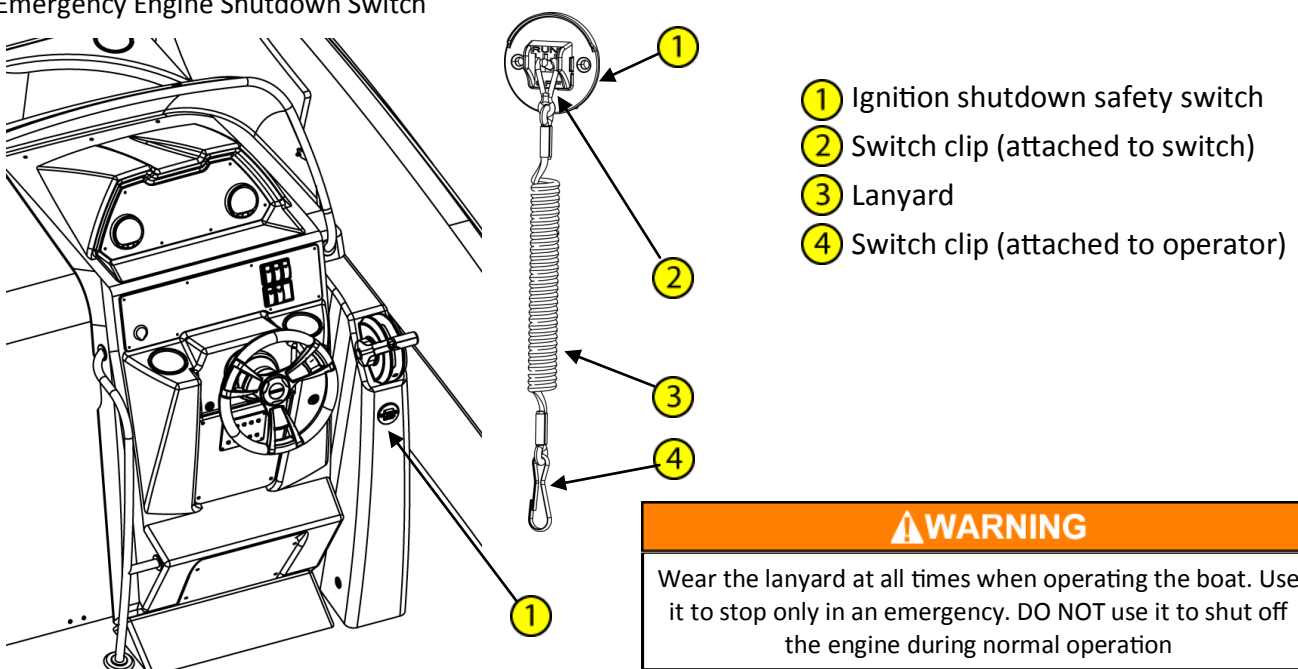

## Quicksilver 755OP — System & Component Overview and Operation

### 13. SmartCraft™ System Gauges

The instrument package on your boat includes a SmartCraft™ tachometer and speedometer multi-gauge system. By pressing the “mode” button on the gauge, specific information vital to the safe operation of the vessel can be displayed. Refer to your SmartCraft™ gauge owner’s manual for specific information on how to get the most out of the multi-gauge display.

### 14. SmartCraft® VesselView4 (optional)


As an option, your boat may be equipped with the SmartCraft™ VesselView4. This unit, in conjunction with the SmartCraft™ gauges, provide additional operational information at the helm. Refer to your SmartCraft™ VesselView4 owner’s manual for specific information on proper setup and operation of the display.

### 15. Trim Tabs (optional)

The trim tabs are located within recesses in the hull at the transom and are used to level the boat (port to starboard) caused by uneven weight distribution, too many people on one side of the vessel, or by strong winds pushing the vessel to one side.

The trim tabs are controlled by switches located at the helm. LED indicators located on the switch indicate the amount of trim tab deflection (one bar indicates the trim tabs are in the up position, while all red bars indicate the trim tabs are fully deployed in the down position). To lower the port bow (boat is running with a starboard list), push the left switch marked DOWN. Alternatively, to lower the starboard bow (boat is running with a port list), push the right switch marked DOWN.

REFER TO OWNER’S MANUAL PACKAGE FOR INSTRUCTIONS AND WARRANTY INFORMATION.

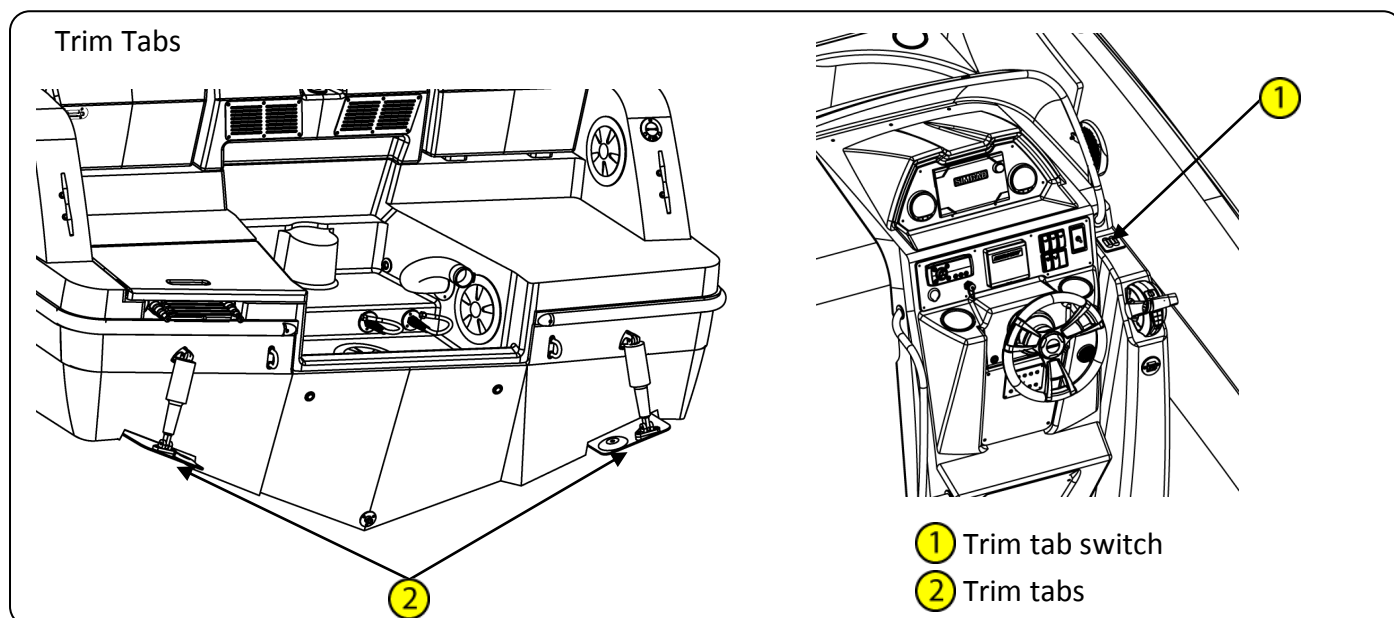


### 16. Stereo (optional)

Your boat may come equipped with a Fusion AM/FM stereo with Bluetooth®. The stereo unit along with a USB port, is located at the helm. The USB port allows you to connect an external music player for music playback thru the boat’s stereo. Alternatively, you can playback music via the Bluetooth® settings on your external music player. There are 4 speakers on the boat, 2 in the forward cockpit and 2 in the aft cockpit.

REFER TO OWNER’S MANUAL PACKAGE FOR INSTRUCTIONS AND WARRANTY INFORMATION.

## Quicksilver 755OP — System & Component Overview and Operation


Stereo

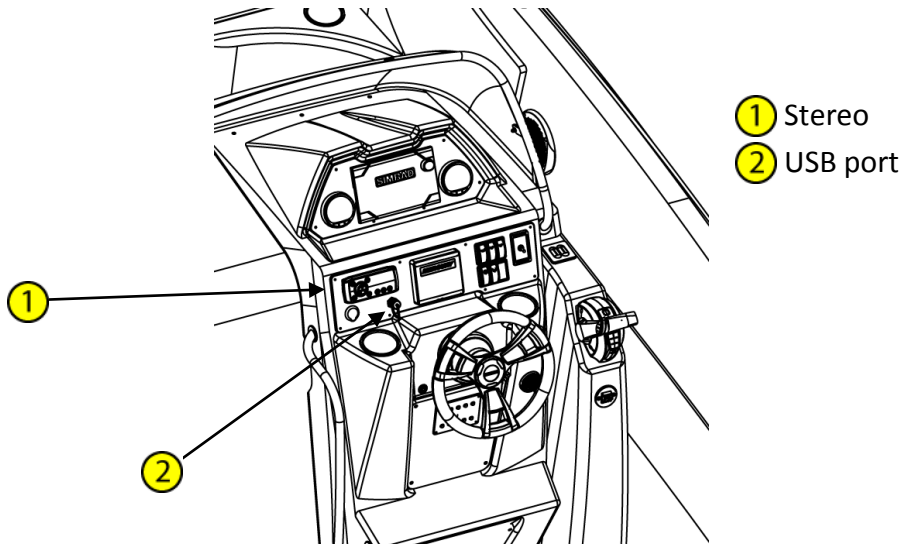

### 17. Port & Starboard Jump Seats

Port and starboard jump seats are included for additional aft seating. The base and cushion are removable to allow for easier entry in and out of the boat. To install the seat, set the base into the slotted bracket on the outboard side of the deck and push the inboard side down so that it engages with the rubber stopper. Next, attach the cushion to the base.

Jump Seat

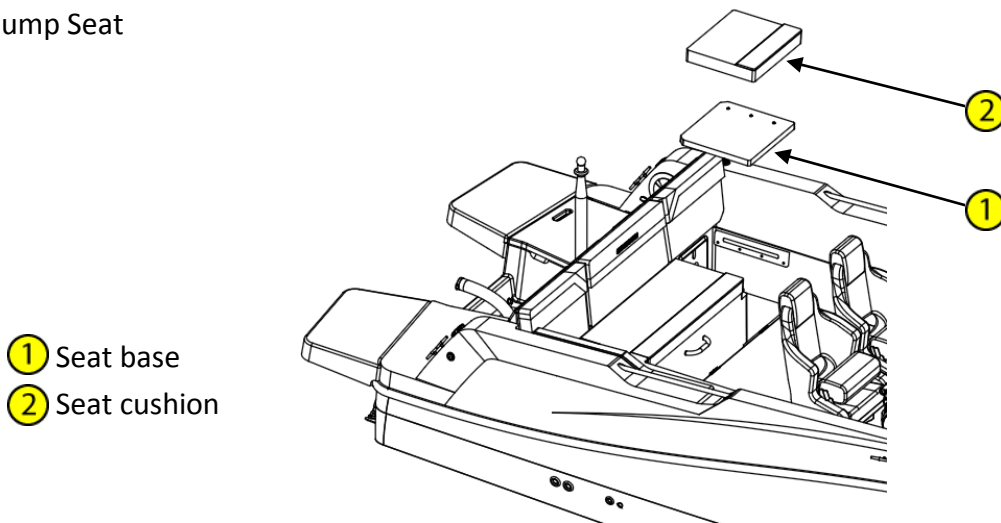


### ⚠ CAUTION

Before using, verify that the jump seat is properly installed securely in place.

### 18. Port & Starboard Flip Seats (optional)


As an option your boat may come equipped with flip seats, located on both the port and starboard side of the cockpit. These seats replace the jump seats, and when not in use, it stores up out of the way in the deck trail. To use, simply pull the rail located on the base of the seat out and down.

## Quicksilver 755OP — System & Component Overview and Operation

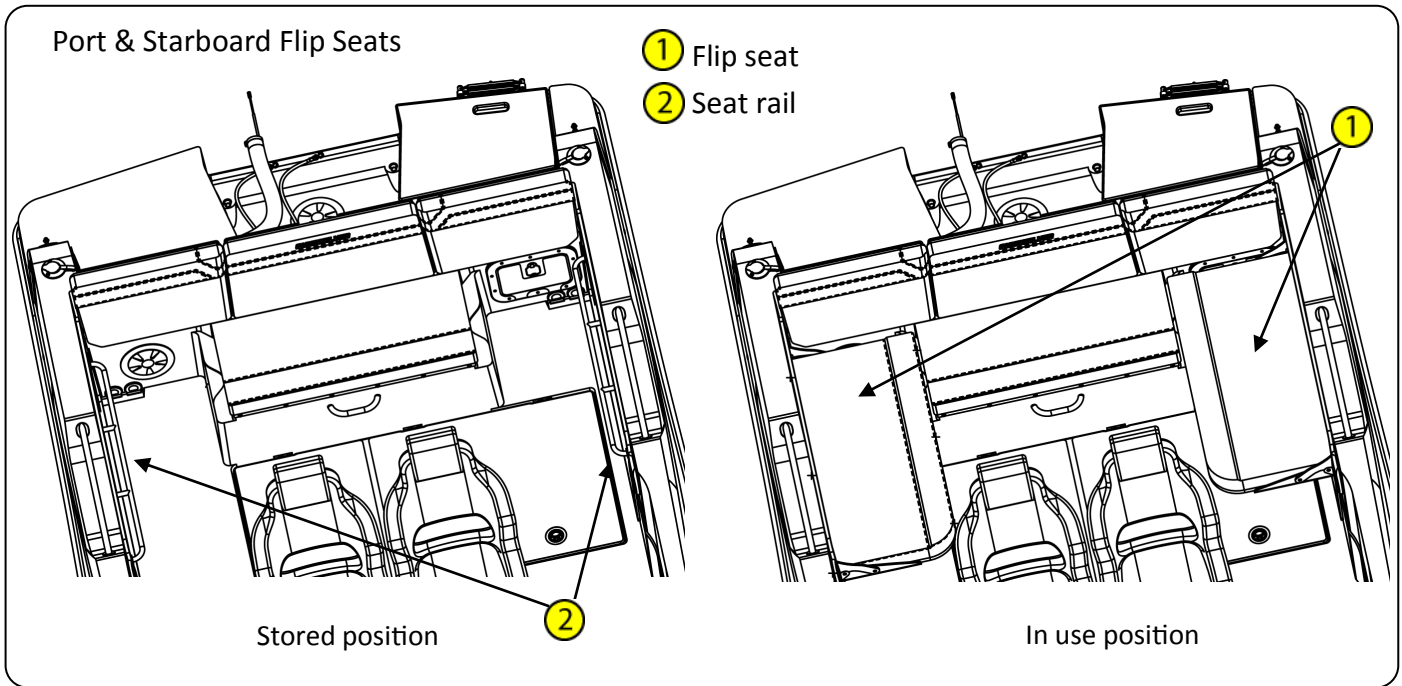

### 19. Aft Cockpit Table

On your boat, a cockpit table is available for entertaining. Depending on the options, there will either be a circular plastic cockpit table or an oval fiberglass table. These tables and table legs are removable and can be stored inside the cabin. To install the table, first remove the plastic cover located in the table base plate. Next, push and lock the table leg into the base plate. Finally, place the table onto the table leg.

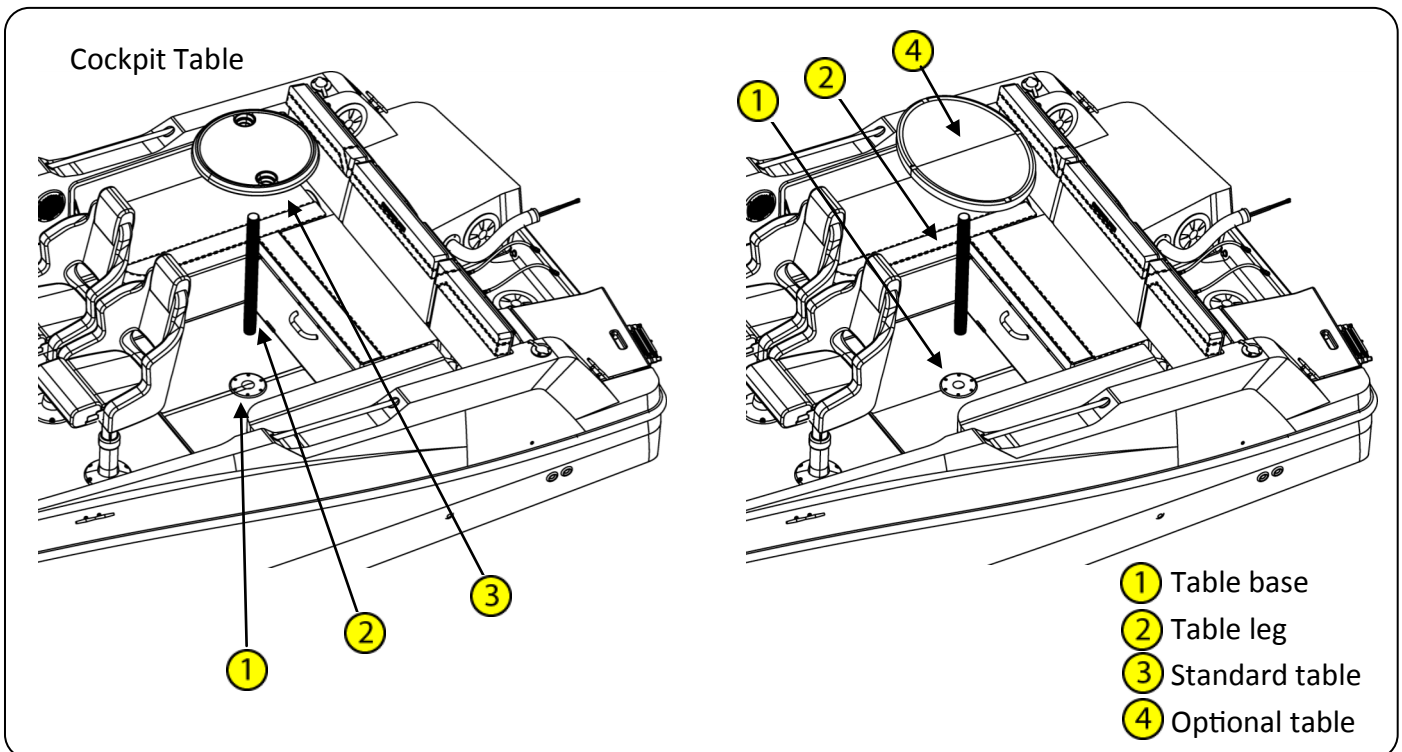

### 20. Ski Pole (optional)


Your boat may come equipped with an optional ski pole for water skiing. To use, remove the ski pole deck plate, located on centerline in front of the motorwell. The ski pylon slides into the deck plate and connects to the ski tow base, located in the bilge.

The ski tow deck plate has rubber O-ring gaskets to minimize the amount of water that could

## Quicksilver 755OP — System & Component Overview and Operation

potentially enter the bilge. Quicksilver® suggests that prior to installing or removing the ski pylon, spray water on the ski pole to help slide it through the deck plate.

When the ski pole is not in use, Quicksilver® recommends that you secure the pole in the cabin.

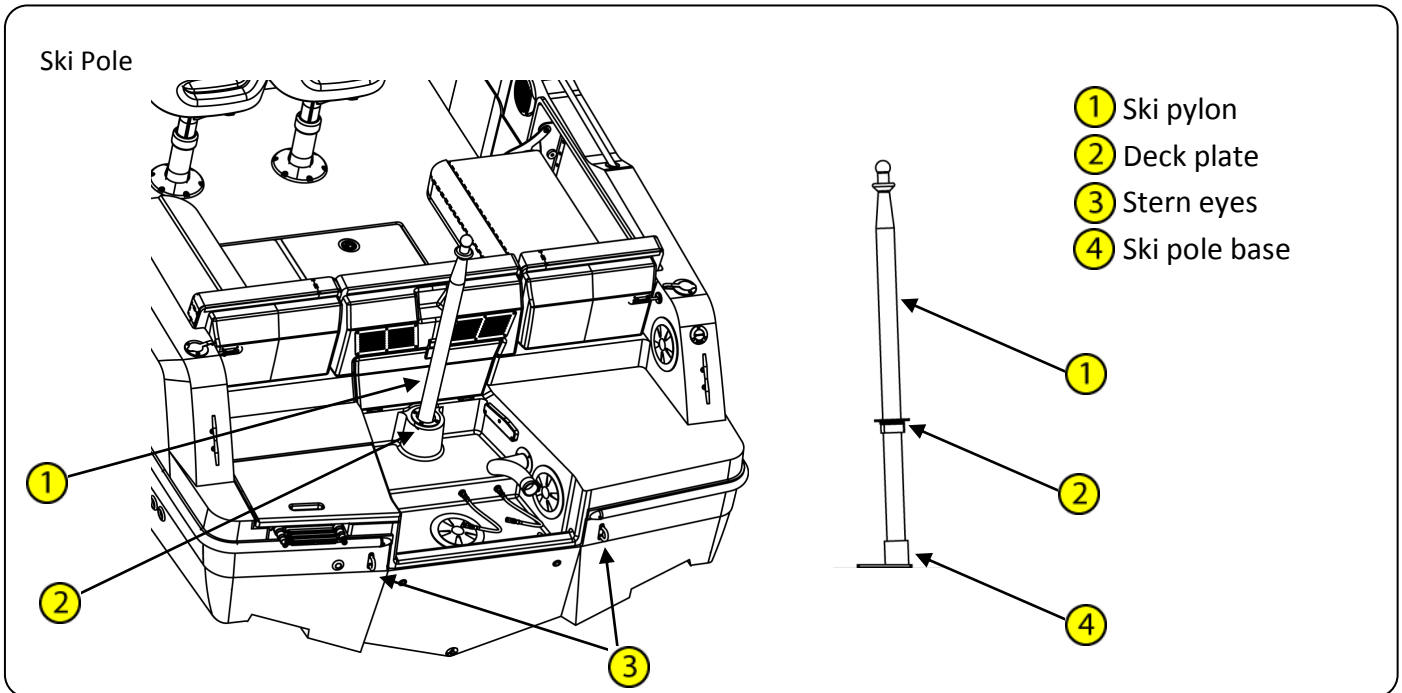

### ⚠ WARNING

The deck plate is a downflooding point. When the ski pole is not in use, verify that the deck plate is properly installed. Failure to do so may result in injury or death.

### NOTICE

Remove the ski pylon from the base before raising engine to trailer mode to avoid any damage to the engine cowl.

The ski pylon is only used for water skiing or wakeboarding. If you are tubing or engaging in other recreational towing, Quicksilver® recommends that you attach the tow rope to the stern eyes at the transom of your boat.

### ⚠ WARNING

Only tow water skis or wakeboards. Do not tow parasails, kits, or other boats. Do not tow more than two persons at one time. Use caution with skier in tow as rope may snap back into cockpit when released. Failure to follow these guidelines may result in injury or death.

## 21. Motorwell Bridge (optional)


An optional motorwell bridge is available which allows for easy passage between the port and starboard swim platforms. To use, remove the latch and rotate the bridge into position. When the boat is underway or the motorwell bridge is not in use, Quicksilver® recommends that the bridge is stored in the vertical position.

### NOTICE


Remove the ski pylon from the base before using the motorwell bridge. Failure to do this will damage both the ski pylon and motorwell bridge.

## Quicksilver 755OP — System & Component Overview and Operation

Motorwell Bridge

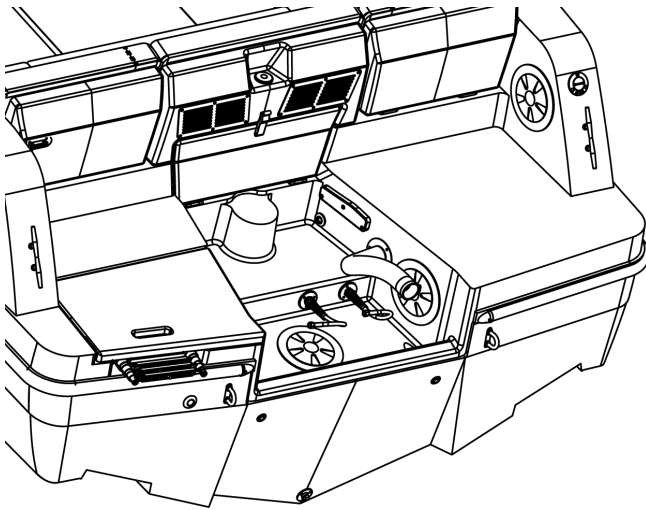

Stored Position

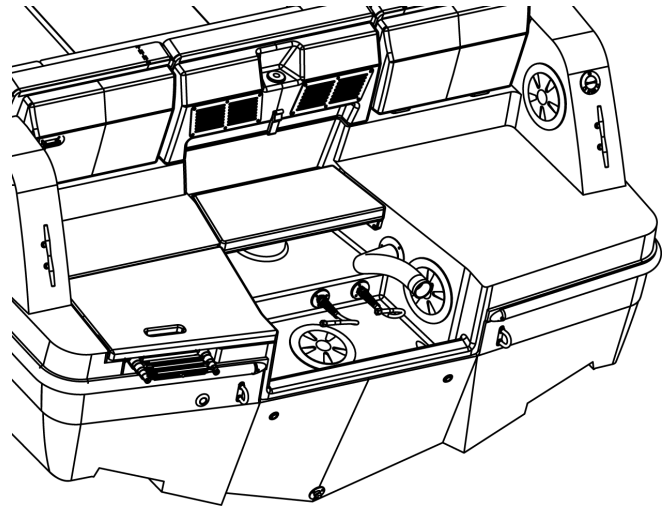


In use Position

### 22. Bow Cockpit Table (optional)


An optional bow cockpit table is available for your boat. Similar to the aft cockpit table, the bow table and table leg is removable and can be stored inside the cabin. To install the table, first remove the plastic cover located in the table base plate. Next, push and lock the table leg into the base plate. Finally, place the table onto the table leg.

When installed, the bow table can slide fore and aft for optimal seating. In the forward position, the table is in the optimal location for people sitting in the forward bow area. In the aft position, the table is now in the optimal location for people sitting on the forward console seat.

Bow Cockpit Table

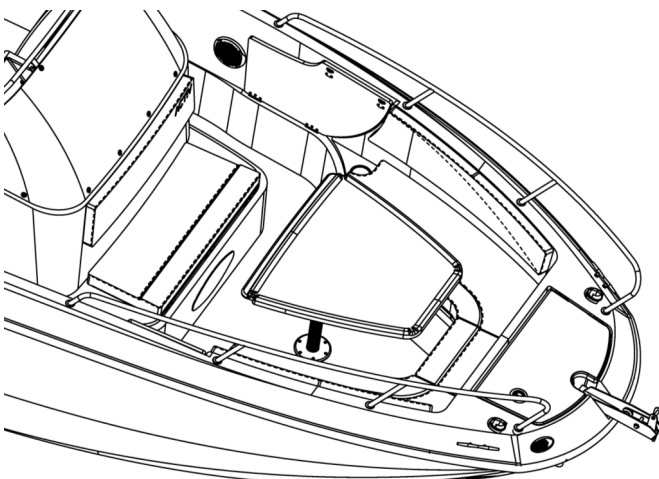

Forward Position

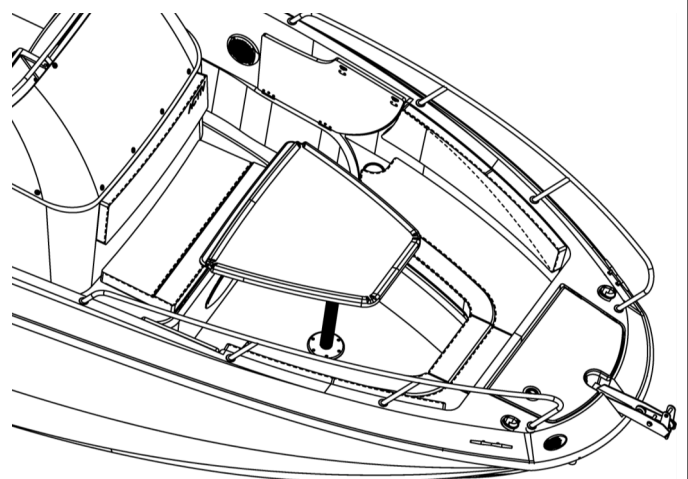

Aft Position

### 23. Bow Sun Lounge (optional)


Along with the bow cockpit table, the forward seating area can convert into a sun lounge. To convert, simply set the cockpit table in the bow area (without the cockpit table leg) into the groove located along the front face of the bow seating area. Next, lower the leg at the aft end of the table to stabilize the table.

## Quicksilver 7550P — System & Component Overview and Operation


To complete the sun lounge, you must install the filler panels located on the forward console seat and the port and starboard cockpit walls. Rotate the plastic panel located on the forward console until it rests on the aft edge of the table. Now, unclip the plastic panels located on port and starboard cockpit wall and rotate the panels down until it rests on the edge of the console and bow seats. Finally, install the cushions.

Along with the table, the cushions store in the cabin when not in use.


### Sun Lounge

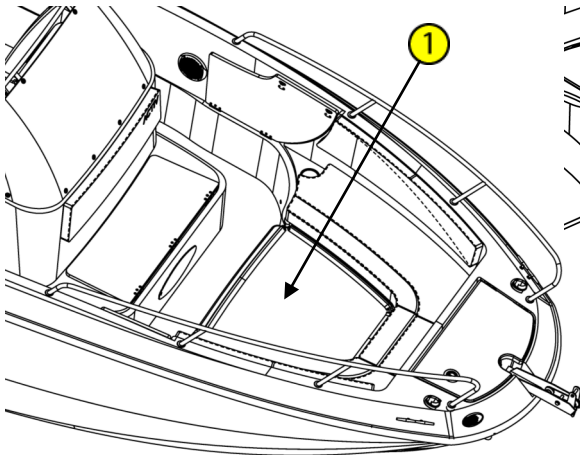


Sun lounge w/ table lowered

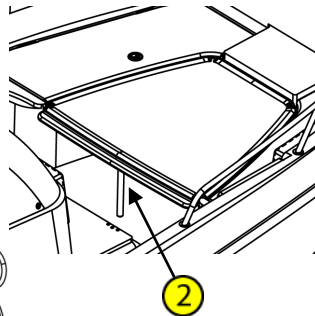

- ① Bow cockpit table
- ② Table support leg
- ③ Console filler board
- ④ Port filler board
- ⑤ Starboard filler board
- ⑥ Console filler pad
- ⑦ Port filler pad
- ⑧ Starboard filler pad
- ⑨ Bow table filler pad
- ⑩ Forward console cushion
- ⑪ Port bow seat cushion
- ⑫ Starboard bow seat cushion
- ⑬ Center bow seat cushion

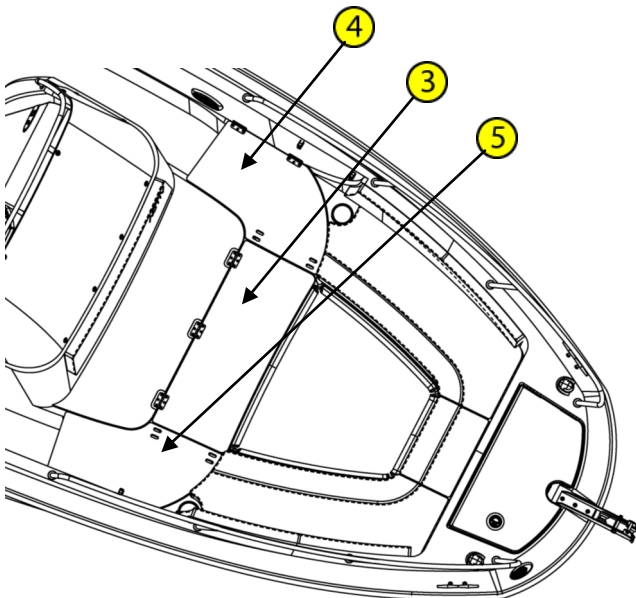

Sun lounge with fillers boards installed

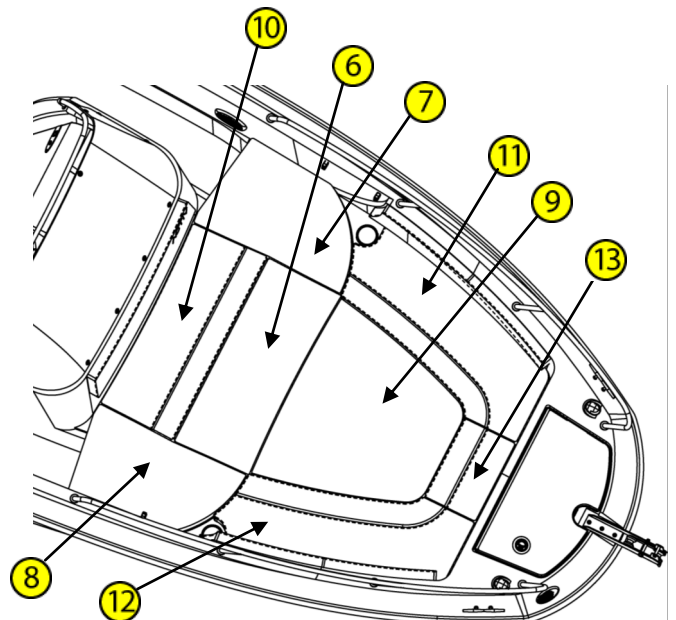

Sun lounge with cushions installed

### 24. Canvas (optional)

As an option, a bimini with a frame, a bimini with vinyl panels that fully encloses the cockpit, and a forward sun awning can be installed on your boat.

#### Bimini

When not in use, the bimini can be stored in an aft position where it does not interfere with the use of the boat. In this position, always make sure that the bimini is secured in the canvas boot. To use the

## Quicksilver 755OP — System & Component Overview and Operation

bimini, remove the canvas boot and rotate the two bimini frames forward and secure the bimini straps to the deck trail. DO NOT OPERATE YOUR BOAT WITHOUT THE BIMINI STRAPS ATTACHED TO THE DECK.


### Bimini with Enclosure

In addition to the bimini, clear vinyl panels can be installed to enclose the cockpit. Each panel attaches to the bimini with a zipper and snaps or studs are used to attach to the deck.


### Sun Awning

A sun awning is available to provide additional shade on the foredeck. Adjustable poles and straps holds the sun awning in place. DO NOT OPERATE THE BOAT WHILE THE SUN AWNING IS IN PLACE.


Bimini

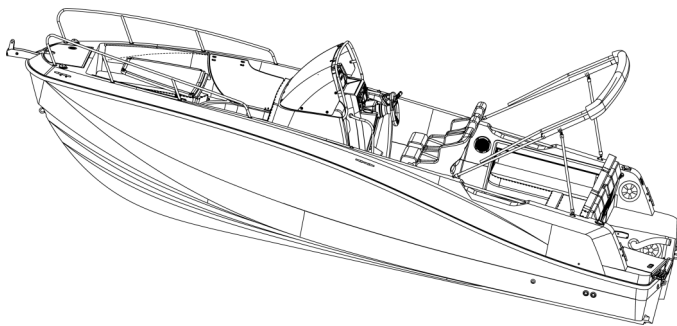


Upright Aft Position

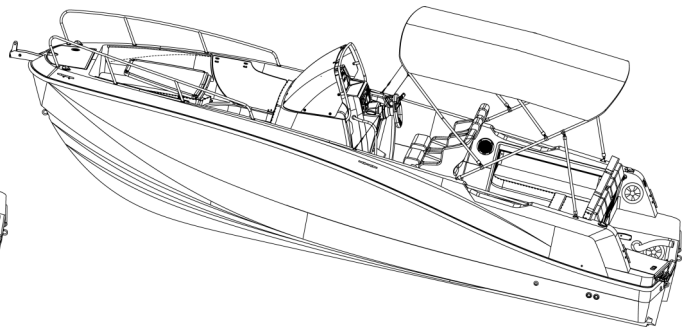

Bimini Deployed

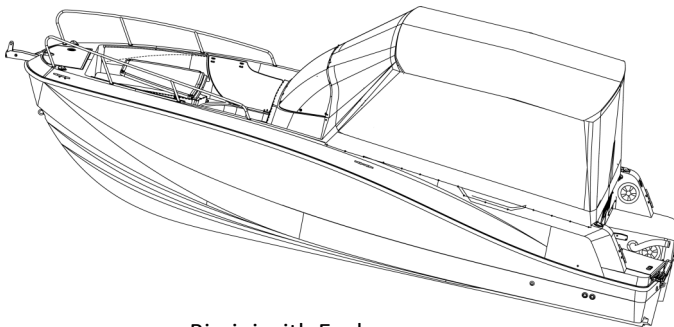

Bimini with Enclosure

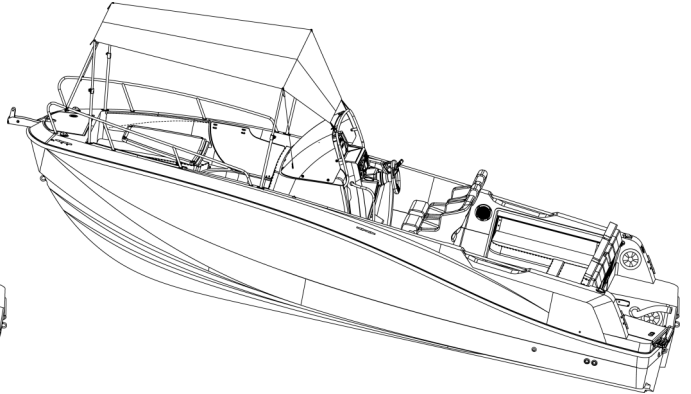

Sun Awning

### NOTICE

NEVER TRAILER THE CANVAS BIMINI, BIMINI WITH ENCLOSURE, OR SUN AWNING IN THE UPRIGHT POSITION. The bimini canvas must be secured in the canvas boot with the rails in the stored position before trailering.

### ⚠ WARNING

NEVER OPERATE THE VESSEL WITH THE CANVAS ENCLOSURE UNLESS THERE IS VENTILATION THROUGHOUT THE BOAT. The forward and aft canvas panels must be removed to allow air flow through the boat so Carbon Monoxide cannot accumulate.

### ⚠ WARNING

Never operate the boat while the sun awning is in place. Serious injury could occur.

---

## Quicksilver 755OP — Electrical Systems

---

### 1. DC Electrical System

The DC electrical system is powered by either one or two batteries, and are kept charged by the engine driven alternator. The battery voltage is indicated by the voltmeter screen located on the SmartCraft™ tachometer, or on the optional Vessel View.

### 2. Batteries

Refer to your engine owner's manual for exact batteries requirements. All batteries in a battery bank should be of the same type, age, and rating.

To remove the battery cables:

1. Turn off all items drawing power from the battery.
2. Turn the battery switches to the OFF position.
3. Remove the negative cable first, then the positive cable.

To replace the cables, install the positive cable first, then the negative cable.

### 3. Battery Boxes

The batteries are located in the aft bilge, and can be accessed through the cockpit storage hatch. Depending on the engine type dictates the number of batteries on your boat. On the a boat that has an L6 Verado, there are two batteries; on all other engines, there is only a single battery. The battery can be installed or removed by loosening the strap and removing the lid on the battery box. They should always be installed and secured with the battery box installed on your boat. This will ensure that the battery will not move around while the boat is underway.

#### ⚠ CAUTION

Never use an open flame in the battery storage area. Avoid striking sparks in the battery area.

#### ⚠ CAUTION

Always disconnect the battery before doing any work on the electrical system. Never turn off the battery switches or disconnect the battery cables while the engines are running.

### 4. Battery Selector Switches

Your vessel is equipped with a battery switch to control the delivery of DC power from the batteries. The battery switch is located in the aft storage tub.

#### Non-L6 Engine Boat

On a non-L6 engine boat, there is a single battery switch that controls a single battery. The battery switch is located on a panel under the center aft seat hatch in the cockpit. When you turn the battery switch to the ON position, power is provided from the battery to the entire boat. To turn on power, rotate the switch clockwise 90 degrees to the ON position.

#### L6 Engine Boat

On a L6 engine boat, there is a single battery switch that controls two isolated battery banks. When you turn the battery switch to the ON position, power is provided from both the port engine battery and the starboard house battery. The battery switch also has the ability to combine battery banks for emergency starting. To turn on power to the boat, rotate the switch clockwise 90 degrees to the ON position. To utilize both battery banks for emergency starting, push the switch in and rotate clockwise 45 degrees.

NOTE: Never operate or turn off the battery switch when the engine is running as it may cause damage to electronic components on the boat. Always operate the switch with the engine and accessories off.

## Quicksilver 755OP — Electrical Systems


### NOTICE

The bilge pumps and stereo memory still draw power from the batteries, even if the switches are set to OFF. This is especially important for the bilge pumps, so that they can operate anytime excess fluid accumulates in the bilge, which can occur when the boat is docked and unattended.


### ⚠ WARNING

Never work on the electrical system while the system is energized. Never leave the craft unattended with the electrical system energized.

#### Non-L6 Battery Switch Operation

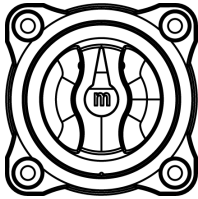


OFF Position

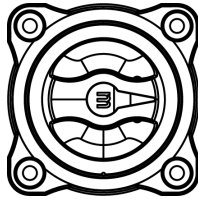


ON Position


#### L6 Engine Battery Switch Operation

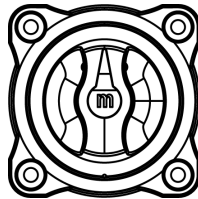

OFF Position

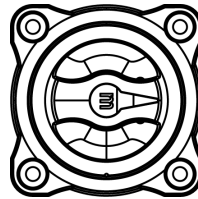

ON Position

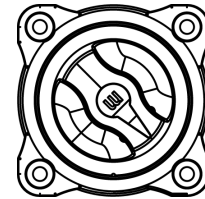

Combine Batteries

### 5. Fuses and Breakers

Your boat will either have fuses or breakers protecting the DC electrical system. If you have to replace a fuse or electrical breaker, replace only with a fuse or breaker of the same rating. The amperage will be marked on the fuse or breaker, and it is recommended that you carry spare fuses or breakers.

### ⚠ WARNING


Use only fuses and breakers having the same amperage rating as the original or as specified. Use of higher amperage fuses or breakers is a fire hazard.

If a fuse or breaker is replaced with one that has a lower amperage, it may not be sufficient to carry the electrical load of the equipment it is connected to and will cause nuisance failures. If a fuse or breaker is replaced with one that has a higher amperage, it will not provide protection against an electrical malfunction and could create a possible fire hazard.


The 755OP has a breaker panel at the helm, located below the steering wheel. There is also additional breakers located on the battery switch panel in the cockpit seat storage tub.

## Quicksilver 755OP — Electrical Systems


### Fuses and breakers

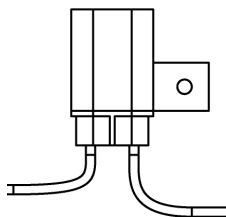


ATO/ATC fuse

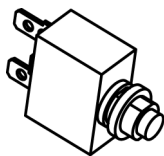

Thermal breaker

 


ANL fuse


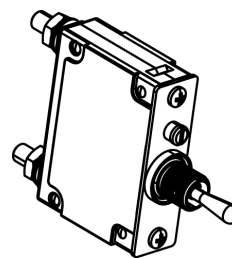


Magnetic breaker

### Battery Panels

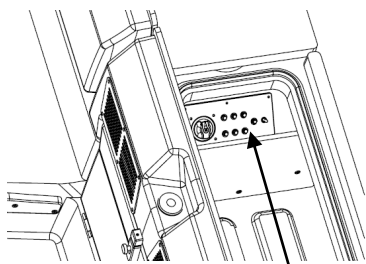


Panel Location

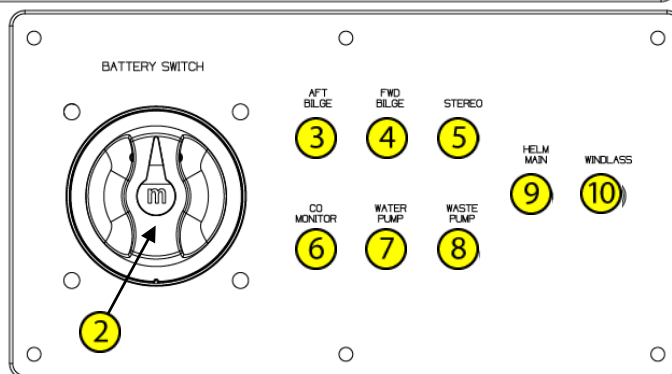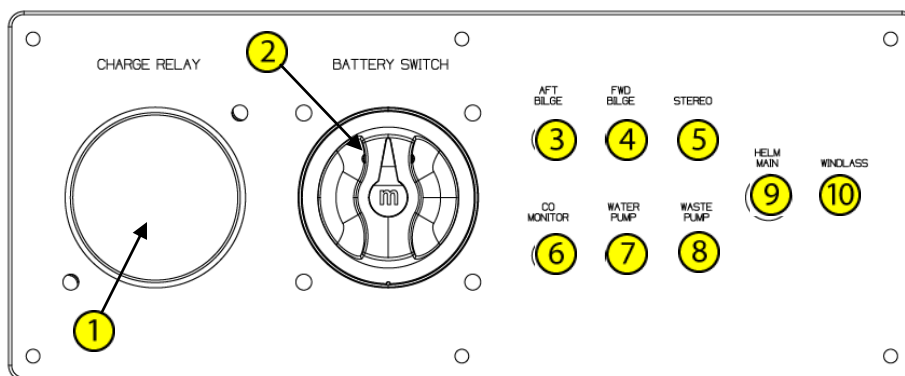

- ① Charge Relay
- ② Battery Switch
- ③ Aft Bilge Breaker—3 Amp
- ④ Forward Bilge Breaker—3 Amp
- ⑤ Stereo Breaker—10 Amp
- ⑥ CO Monitor Breaker—5 Amp
- ⑦ Water Pump Breaker—10 Amp
- ⑧ Waste Pump Breaker—20 Amp
- ⑨ Main Helm Breaker—60 Amp
- ⑩ Windlass Breaker—80 Amp

### DC Helm Panel

- ① Aft bilge breaker — 3 Amp
- ② Forward bilge breaker — 3 Amp
- ③ Horn breaker — 5 Amp
- ④ Navigation lights breaker — 5 Amp
- ⑤ Courtesy lights breaker — 3 Amp
- ⑥ Refer Breaker—10 Amp
- ⑦ 12V outlets breaker — 10 Amp
- ⑧ Stereo breaker — 10 Amp
- ⑨ GPS / Electronics breaker — 5 Amp
- ⑩ Trim tab breaker — 10 Amp

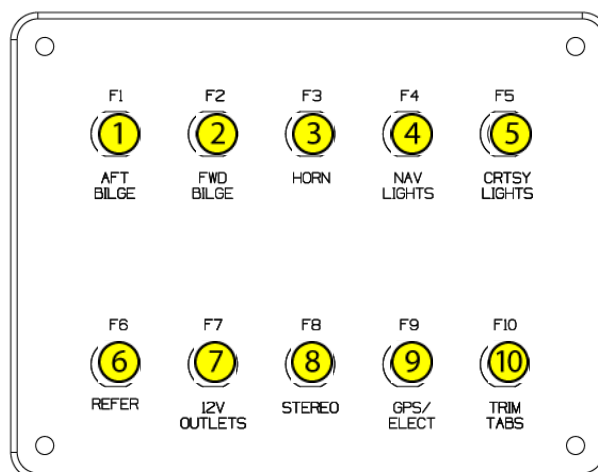


## Quicksilver 755OP — Electrical Systems


### 6. Electrical Schematics

This owner's manual contains electrical schematics and wiring harness illustrations for your boat. These electrical schematics were generated by the Electrical Engineering Department for technical reference and service technicians. Quicksilver® does not recommend that you attempt to work on the boat's electrical system yourself. Instead, we recommend that you take your boat to your local authorized Quicksilver® dealer for service. Quicksilver® reserves the right to change or update the electrical system on any model at any time without notice to the consumer and is not obligated to make any updates to units built prior to the change.


Dual Battery Schematic

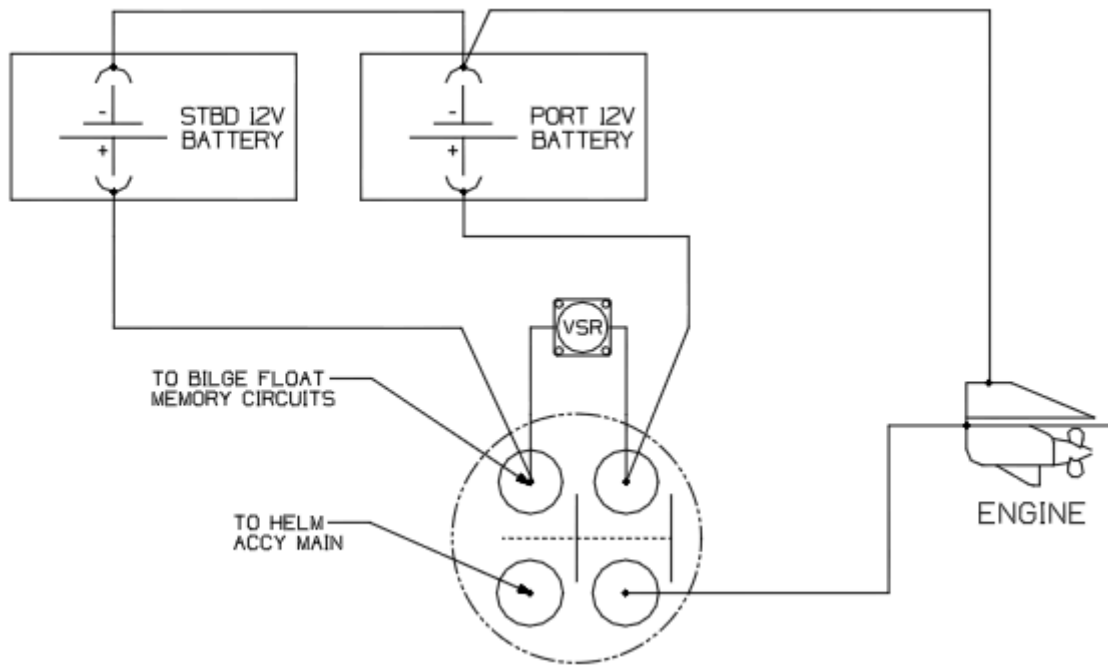

Bow Windlass Schematic

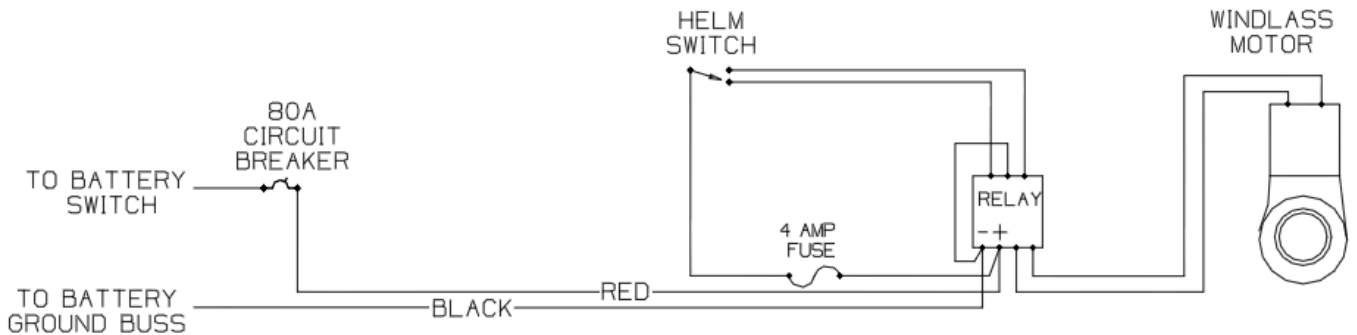

## DC Wiring Schematic

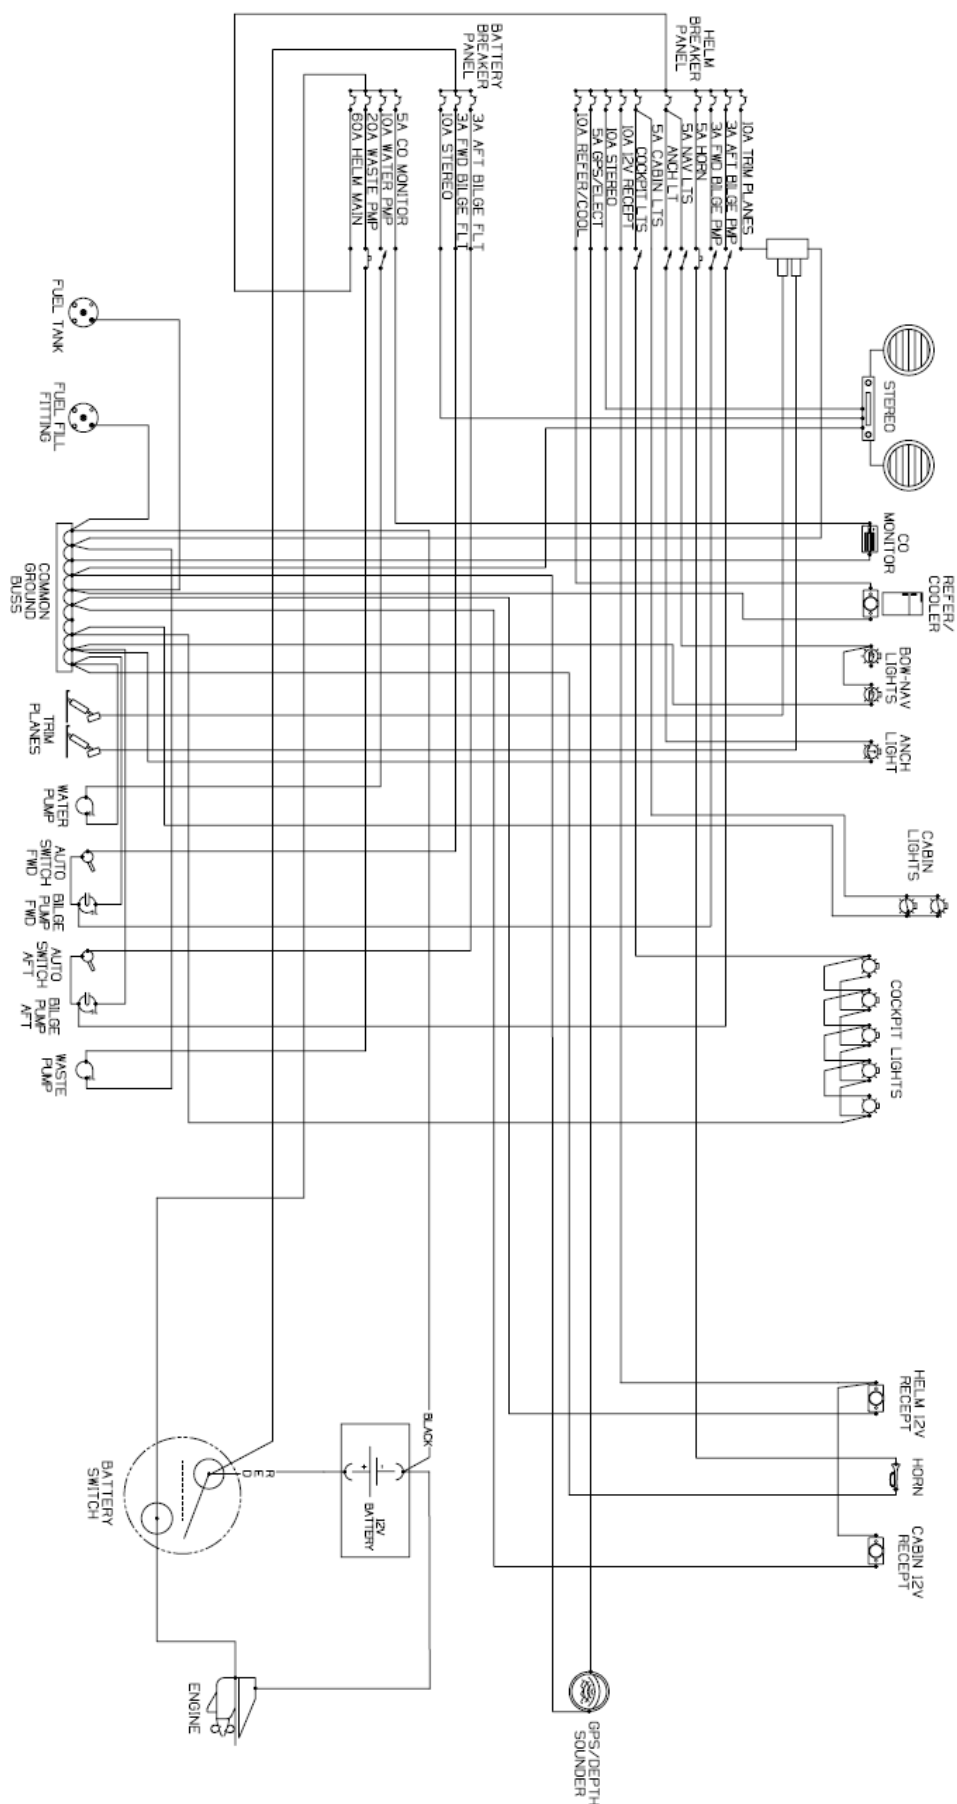

---

# Quicksilver 7550P — Maintenance

---

## 1. Maintenance

Routine inspection, service and maintenance of your boat, systems and components are vital to assure your safety, and will prolong the life of your boat.

The interval between necessary service or maintenance is highly variable, depending on the environment in which your boat will be used. For example, corrosion of boat parts and components will occur far more rapidly in a salt water environment than on a boat which is used in fresh water.

This section provides only general guidelines for the care and cleaning of your boat. It is your responsibility to determine whether maintenance and care intervals need to be accelerated due to your boat usage and/or operating environment. If you have any question regarding maintenance of your boat, contact your local Quicksilver® dealer for additional assistance.

### DANGER

When using chemicals, read all information from the manufacturer regarding safety and handling of the material. Wear proper protective equipment to ensure personal safety. Work only in well ventilated areas and keep all chemicals away from open flames.

### NOTICE

Refer to the individual manufacturer's manuals, which can be found in the Owner's Manual packet, for care and maintenance of equipment and components. In some cases, failure to do so could void the warranty.

## 2. Hull & Deck Surfaces

Fresh water, saltwater and water temperature can all affect the types of growth that you will find on your boat's hull. Any growth will affect the boat's performance and overall look. If it has been a while between inspections you might notice algae or slime growth on the hull. This can be cleaned with a coarse towel or soft bristle brush. The growth should be cleaned immediately after the boat has been removed from the water. If the growth is allowed to dry it will be much harder to remove.

Compounding may be necessary to remove more stubborn stains and chalking from the surface of your boat. If compounding is necessary it must be done after a thorough washing and prior to waxing. If the growth is more severe, you may need to enlist the services of a professional hull cleaning company. Check with your Quicksilver® dealer for recommendations on a compatible rubbing compound for your boat or a professional hull cleaning company in your area.

### Waxing Gel Coat Surfaces

Waxing is necessary to provide added protection to the gel coat. A good cleaning and waxing will also ensure that your boat will be protected and look good longer. Make sure the surface of your boat has received a thorough washing and rinsing and is clean before waxing. Next, verify that any minor scratches or surface pitting is cleaned of compound residue. Use a good quality carnauba wax or a high quality wax designed for marine gel coat. Apply several coats.

### NOTICE

Waxing of the exterior surfaces is recommended to be done at least twice a year to protect the gel coat of your boat.

### Gel Coat Surface Maintenance

If using a pressure washer to clean the hull and deck surfaces of your boat it is important that you use the wide fan nozzle only and move the spray head in a continuous motion. Do not concentrate the high pressure on a small area of the boat surface and never use the fine pinpoint nozzle as the concentrated stream can cause damage to the surface of your boat. Do not pressure wash the helm as the water stream may damage the electronics and gauges as well as other sensitive equipment.

---

## Quicksilver 7550P — Maintenance

---

When staining from build-up does occur, use only cleaning agents that are recommended for marine gel coat. Never use an abrasive cleaner to wash your boat's hull, nor use an abrasive pad to attempt to remove stubborn stains. Never use strong solvents to clean.

### 3. Component Maintenance

#### Stainless Steel

Stainless steel is strong and corrosion resistant, but still requires maintenance to keep its appearance. Frequent routine cleaning of your stainless steel will help maintain the finish.

Quicksilver® recommends that you wash stainless steel components with mild soap and cold or lukewarm water after every use of the boat. If added protection is necessary, apply a cleaning wax.

Even the finest cleaning powders can scratch or burnish a mill-rolled surface. On polished finishes, rubbing or wiping should be done in the direction of the polish lines, not across them.

Crevice corrosion, a brownish coloring which occurs where two pieces of stainless hardware meet is caused by impurities in water and air. It can be easily cleaned with a good grade marine polish using a sponge, cloth or small bristled brush (for nooks and crannies).

#### NOTICE

The cleaner your stainless steel can be kept, the greater the assurance of optimum corrosion resistance. Without proper care even the best stainless steel will corrode.

#### NOTICE

Never use abrasive cleaners, detergents or soft scrub type cleaners to clean stainless steel. Never use abrasive pads, brushes or sponges to attempt to remove stubborn stains. Never use strong solvents or detergents which contain chlorine, and never use silver cleaners.

#### Cushions

Saltwater, salt residue, dirt, ultra-violet rays etc. will take their toll on vinyl products causing them to lose their luster and texture. To clean, remove ordinary dirt and smudges with a mild soap and water solution. Dry with a soft, lint-free cloth or towel. More difficult stains can be cleaned using rubbing alcohol (isopropyl alcohol). Rinse cleaned area with fresh water and dry with a clean, soft, lint-free cloth or towel.

Your cushions are not waterproof. They are constructed of open-cell foam and will absorb and hold water. Do not leave the cushions in standing water or exposed to heavy, prolonged rain. If, in the event your cushions become waterlogged, remove the foam from the cushion, press as much water as you can from the foam and allow to air dry. To prevent mildew, keep the vinyl dry and make sure that moisture does not accumulate between the cushions.

#### ⚠ CAUTION

Solvents are flammable. Exercise proper care. Wear rubber gloves during all cleaning activity. Use caution when cleaning around stitching or decorative trim as these solvents could seriously damage such areas.

#### Canvas

Chafing, fiber wear from dirt and grit and deterioration from ultraviolet light can cause your canvas to degrade over time. The fabric should be cleaned regularly before substances such as dirt, pollen, etc. are allowed to accumulate on and become embedded in the fabric. The canvas can be cleaned without being removed from the installation.

---

## Quicksilver 7550P — Maintenance

---

After each use, especially if used in salt water areas, rinse the canvas completely with fresh cold water.

On a regular basis, brush off any loose dirt, pollen, etc., and hose down with water and clean with a mild solution of a natural soap in lukewarm water (maximum 38°C). Allow the canvas to soak, however, do not let the soap dry. Rinse thoroughly with fresh water. Let the canvas dry completely. Do not store any of the canvas pieces while wet.

The effects of ultraviolet light can sometimes be reduced by chemical treatment of canvas items. Consult your Quicksilver® dealer or check your canvas manufacturer's manual before using any chemical treatments on your canvas.

To clean stubborn stains, soak fabric for approximately twenty minutes in a mild solution consisting of no more than 30 ml of bleach and 15 ml of natural soap per liter of lukewarm water (not to exceed 38° C). Rinse thoroughly in cold water several times, then allow the fabric to air dry completely. Retreat the fabric using an air curing product such to ensure water and stain repellency. Refer to the canvas vendor's recommendation for additional information.

### Zippers & Hardware

Lubricate zippers and fasteners periodically with a clear silicone spray. In the absence of silicone spray, a wax candle can be used to lubricate the zipper track. Replace any missing fasteners or any fasteners showing signs of corrosion.

#### NOTICE

DO NOT use petroleum based products, such as petroleum jelly, on the zippers or fasteners.

### Vinyl Windows

The canvas on your boat may incorporate Eisenglass polycarbonate windows. Regular cleaning, utilizing compatible cleaners, coupled with proper maintenance techniques will significantly improve the vinyl's service life.

#### NOTICE

Never use regular window cleaners, detergents, abrasives, petroleum based products, or alcohol to clean your vinyl windows. Do not handle vinyl with sunscreen on your hands. Sunscreen will permanently cloud the vinyl where handled. Do not fold vinyl panels. Store flat or rolled with smooth paper or soft cloth between layers when dry.

Rinse vinyl thoroughly with clean water to remove any dust, dirt particles, salt water or environmental agents before applying cleaning products. This should be done frequently to avoid build up of salt water, dirt and other environmental contaminants. Using a soft non-abrasive cloth, wash windows inside and out with a mild soap and water solution. Rinse completely with cool water. DO NOT USE DETERGENTS.

Use separate clean, soft cloths or sponges for application of cleaners and polishes (Use the manufacturer's recommended products). Only use a small amount of cleaner or streaking may occur. If you get streaking or a leftover film, rinse the window with clean water.

---

## Quicksilver 7550P — Maintenance

---

Dry the window with a soft cloth or chamois to prevent water spots. Polish with a separate cloth. Don't leave cleaners on for long periods; immediately wash the window. Finally, don't apply cleaners in direct sunlight or at elevated temperatures.

To minimize fine or hairline scratches apply a mild automotive polish and remove with a soft, clean cloth. Do not use abrasive plastic polishes.

### Tempered Glass Windshield

Use commercially available glass cleaners or a mixture of fresh water and vinegar to clean your glass windows, windshield or portlights. Dry with a soft terry cloth towel or chamois.

#### NOTICE

DO NOT use abrasives, harsh chemicals, or metal scrapers on glass.

### Acrylic Windscreens & Windows

The use of a polycarbonate protective cleaner/restorer is recommended to keep your acrylic scratch resistant, clean and minimize the deteriorating effects of sunlight.

To clean, rinse the windscreen/window thoroughly with clean water to remove any dust, dirt particles, salt water or environmental agents before applying cleaning products. Use your bare hand, with plenty of water, to feel and dislodge any stuck-on dirt or foreign particles. This should be done frequently to avoid build up of salt water, dirt and other environmental contaminants.

Using a soft non-abrasive cloth, wash windows inside and out with a mild soap and water solution. Rinse completely with cool water. Do not use detergents. Blot dry with a soft cloth or chamois to prevent water spots.

#### NOTICE

Never use a dry cloth or duster or glass cleaning solutions on acrylic. DO NOT use solvents such as acetone, silicone spray, benzine, carbon tetrachloride, fire extinguisher fluid, dry cleaning fluid, lacquer thinner, glass cleaning solution or harsh detergents on acrylic. These substances will attack the surface of the acrylic.