

WaveRunner



**2002
WaveRunner**

FX140

A blurred, blue-tinted photograph of a person riding a WaveRunner on the water, positioned in the background behind the title text.

OWNER'S/OPERATOR'S MANUAL

**READ THIS MANUAL
CAREFULLY BEFORE OPERATION!**

YAMAHA MOTOR CO., LTD.
F1B-F8199-70

To the owner/operator

Thank you for choosing a Yamaha watercraft.

This Owner's/Operator's Manual contains information you will need for proper operation, maintenance, and care. A thorough understanding of these simple instructions will help you to obtain maximum enjoyment from your new Yamaha. If you have any questions about the operation or maintenance of your watercraft, please consult a Yamaha dealer.

Because Yamaha has a policy of continuing product improvement, this product may not be exactly as described in this Owner's/Operator's Manual. Specifications are subject to change without notice.

This manual should be considered a permanent part of this watercraft and should remain with it even if the watercraft is subsequently sold.

EJU01204

Important manual information:

In this manual, information of particular importance is distinguished in the following ways:



The Safety Alert Symbol means
ATTENTION! BECOME ALERT!
YOUR SAFETY IS INVOLVED!

⚠ WARNING

Failure to follow WARNING instructions could result in severe injury or death to the machine operator, passengers, a bystander, or a person inspecting or repairing the watercraft.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the watercraft.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

EJU00991

**WaveRunner FX140
OWNER'S/OPERATOR'S MANUAL
©2002 by Yamaha Motor Co., Ltd.
1st Edition, February 2002
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in USA**

CONTENTS



GENERAL AND SAFETY INFORMATION

1

FEATURES AND FUNCTIONS

2

OPERATION

3

MAINTENANCE AND CARE

4

TROUBLESHOOTING AND EMERGENCY PROCEDURES


5

APPENDIX

6

**READ THIS OWNER'S/OPERATOR'S MANUAL CAREFULLY
BEFORE OPERATING YOUR WATERCRAFT.**

GENERAL AND SAFETY INFORMATION

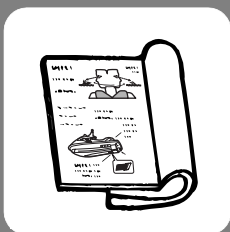


Identification numbers	1-1
Primary Identification (PRI-ID) number	1-1
Hull Identification Number (HIN)	1-1
Engine serial number	1-1
Emission control information	1-2
Approval label of Emission control certificate	1-2
Manufactured date label	1-2
Important labels	1-3
Label location	1-3
Warning labels	1-4
Caution labels	1-8
Other labels and tags	1-9
 Safety information	1-11
Limitations on who may operate the watercraft	1-11
Cruising limitations	1-12
Operation requirements	1-13
Recommended equipment	1-15
Hazard information	1-16
Watercraft characteristics	1-16
Water-skiing	1-17
Safe boating rules	1-19
Enjoy your watercraft responsibly	1-19



EJU01830

Identification numbers

Record the Primary Identification (PRI-ID) number, Hull Identification Number (HIN) and engine serial number in the spaces provided for assistance when ordering spare parts from a Yamaha dealer. Also record and keep these ID numbers in a separate place in case your watercraft is stolen.

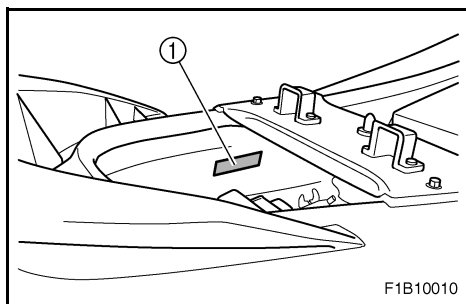


EJU01831

Primary Identification (PRI-ID) number

MODEL	FX1000-A	PRI-ID	F1B
YAMAHA MOTOR MANUFACTURING CORPORATION OF AMERICA. ASSEMBLED IN U.S.A. FROM AMERICAN AND JAPANESE COMPONENTS. ASSEMBLÉ AUX ÉTATS-UNIS DE PIÈCES AMÉRICAINES ET JAPONAISES.			

F	1	B	-						
---	---	---	---	--	--	--	--	--	--

The PRI-ID number is stamped on a label ① attached inside the engine compartment.

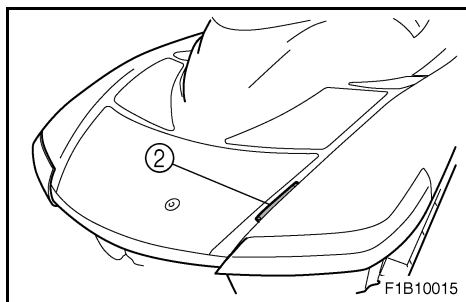


EJU01205

Hull Identification Number (HIN)

Y	A	M								
---	---	---	--	--	--	--	--	--	--	--

The HIN is stamped on a plate ② attached to the aft deck.

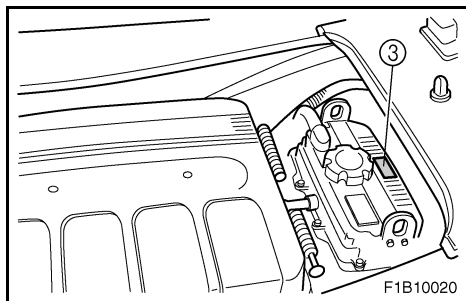


EJU00997

Engine serial number

YAMAHA										
YAMAHA MOTOR CO., LTD. MADE IN JAPAN PAYÉ D'ORIGINE JAPON										

The engine serial number is stamped on a label ③ attached to the engine unit.

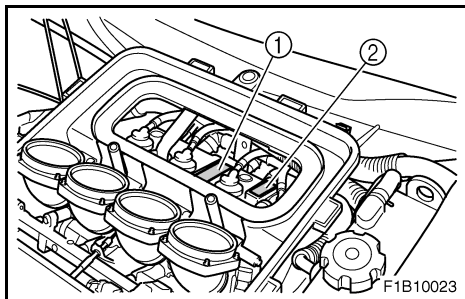

EJU01846


Emission control information

This engine conforms to 2002 U.S. Environmental Protection Agency (EPA) regulations for marine SI engines.

EJU01779

Approval label of Emission control certificate

This label is attached to the top of the cylinder head and to the bulkhead.

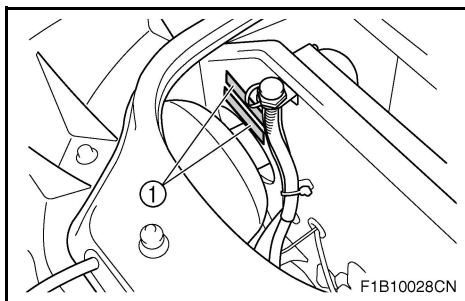

① Emission control information label

EMISSION CONTROL INFORMATION		EM
ENGINE FAMILY :		
THIS ENGINE CONFORMS TO 2002 U.S. EPA REGULATIONS FOR MARINE SI ENGINES.		
FELs :	g/kW-hr	ADVERTISED POWER :
DISPLACEMENT :	cm ³	FUEL : UNLEADED REGULAR GASOLINE
YAMAHA MOTOR CO.,LTD.		

INFORMATION ANTIPOLLUTION		EM
CATÉGORIE DU MOTEUR :		
CE MOTEUR EST CONFORME AUX NORMES U.S. 2002 EPA POUR MOTEURS NAUTIQUES SI.		
FELs :	g/kW-hr	PUISSANCE AFFICHÉE :
CYLINDRÉE :	cm ³	CABURANT : ESSENCE NORMALE SANS PLOMB
YAMAHA MOTOR CO.,LTD.		

EJU01780

Manufactured date label

This label is attached to the top of the cylinder head.

② Manufactured date label

YAMAHA						
Manufactured:	<table border="1"><tr><td> </td><td> </td><td> </td><td> </td><td> </td></tr></table>					




EJU00998

Important labels

EJU01351

Label location

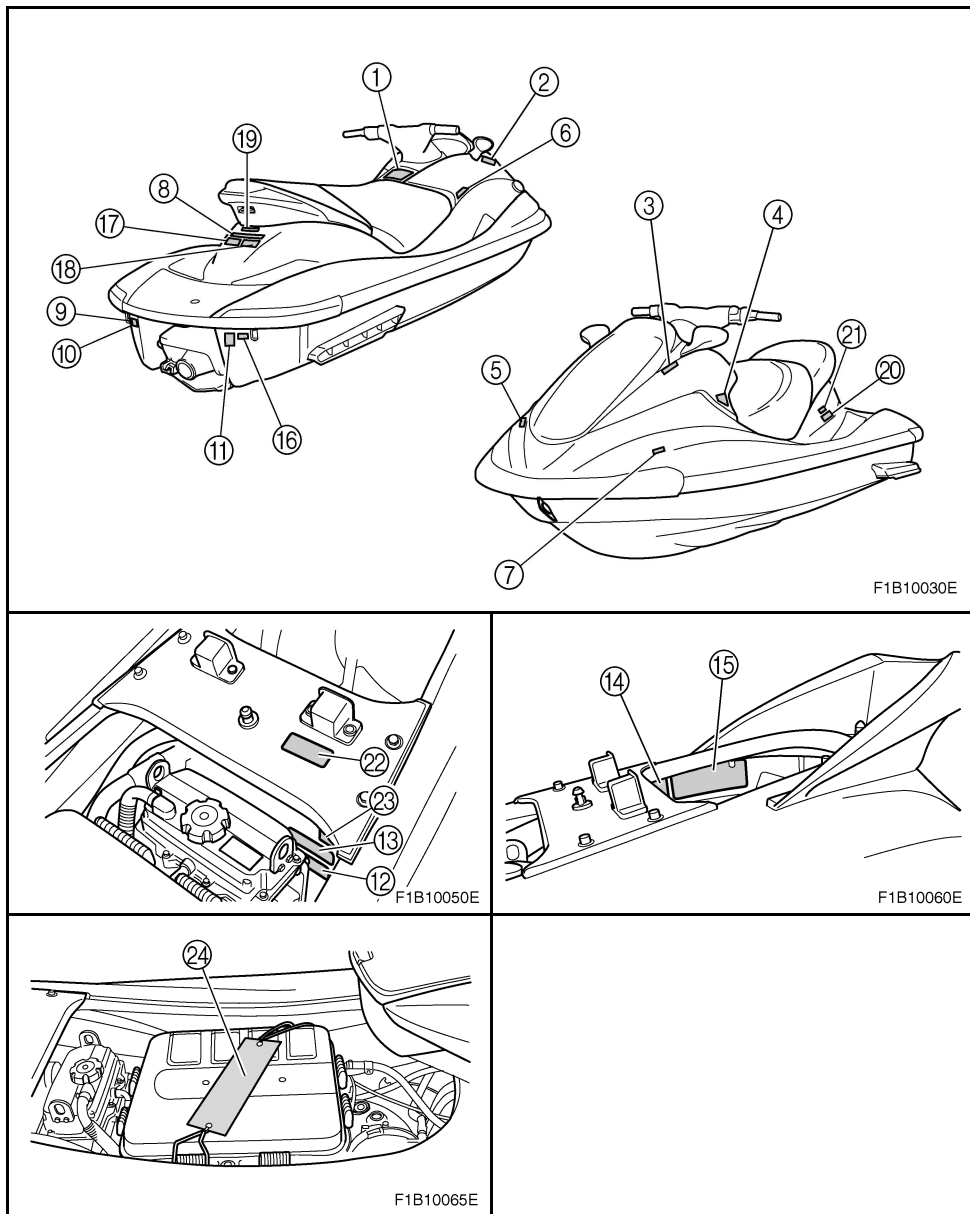



EJU01352

Warning labels

①

WARNING

To reduce the risk of SEVERE INJURY or DEATH:

WEAR A PERSONAL FLOTATION DEVICE (PFD). All riders must wear an authority-approved PFD that is suitable for personal watercraft (PWC) use.

WEAR PROTECTIVE CLOTHING. Severe internal injuries can occur if water is forced into body cavities as a result of falling into water or being near jet thrust nozzle. Normal swimwear does not adequately protect against forceful water entry into rectum or vagina. All riders must wear a wet suit bottom or clothing that provides equivalent protection (See Owner's Manual). Footwear, gloves, and goggles/glasses are recommended.


KNOW BOATING LAWS. Yamaha Motor Co., Ltd. recommends a minimum operator age of 16 years old. Know the operator age and training requirements for your state. A boating safety course is recommended and may be required in your state.

ATTACH ENGINE SHUT-OFF CORD (LANYARD) to wrist and keep it free from handlebars so that engine stops if operator falls off. After riding, remove cord from PWC to avoid unauthorized use by children or others.

READ AND FOLLOW OWNER'S MANUAL



RIDE WITHIN YOUR LIMITS AND AVOID AGGRESSIVE MANEUVERS to reduce the risk of loss of control, ejection, and collision. This is a high performance boat — not a toy. Sharp turns or jumping wakes or waves can increase the risk of back/spinal injury (paralysis), facial injuries, and broken legs, ankles, and other bones. Do not jump wakes or waves. **DO NOT APPLY THROTTLE WHEN ANYONE IS AT REAR OF PWC** — turn engine off or keep engine at idle. Water and/or debris exiting jet thrust nozzle can cause severe injury. **KEEP AWAY FROM INTAKE GRATE** while engine is on. Items such as long hair, loose clothing, or PFD straps can become entangled in moving parts resulting in severe injury or drowning. **NEVER RIDE AFTER CONSUMING DRUGS OR ALCOHOL.**

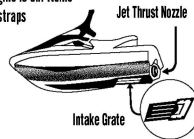

WARNING

Collisions result in more INJURIES AND DEATHS than any other type of accident for personal watercraft (PWC).

TO AVOID COLLISIONS:

SCAN CONSTANTLY for people, objects, and other watercraft. Be alert for conditions that limit your visibility or block your vision of others.

OPERATE DEFENSIVELY at safe speeds and keep a safe distance away from people, objects, and other watercraft.

- Do not follow directly behind PWCs or other boats.
- Do not go near others to spray or splash them with water.
- Avoid sharp turns or other maneuvers that make it hard for others to avoid you or understand where you are going.
- Avoid areas with submerged objects or shallow water.

TAKE EARLY ACTION to avoid collisions. Remember, PWCs and other boats do not have brakes.

DO NOT RELEASE THROTTLE WHEN TRYING TO STEER away from objects — you need throttle to steer. Always check throttle and steering controls for proper operation before starting PWC. Follow navigation rules and state/province and local laws that apply to PWCs. See Owner's Manual for more information.



YAMAHA

F1B-U41B1-10



2

⚠️ AVERTISSEMENT

Afin de limiter les risques de BLESSURES GRAVES, voire MORTELLES: PORTER UN GILET DE SAUVETAGE. Tout utilisateur doit porter un gilet de sauvetage homologué pour les scooters des mers. PORTER DES VÊTEMENTS PROTECTEURS. Le choc infligé par la pénétration forcée d'eau dans les orifices corporels lors d'une chute ou lors du contact avec le jet d'eau de la pompe risque de provoquer des lésions graves. Le port d'un simple maillot de bain ne constitue pas une protection adéquate contre la puissance de pénétration de l'eau dans le rectum et/ou le vagin. Tout utilisateur doit porter le pantalon d'une tenue de plongée ou tout autre vêtement offrant une protection semblable. (Voir le manuel d'utilisation.) Le port de chaussures, de gants et de lunettes de plongée est recommandé. CONNAÎTRE LES LOIS DE NAVIGATION. La Yamaha Motor Co., Ltd. recommande la limite d'âge de pilotage de 16 ans. Vérifier l'âge du pilote ainsi que les exigences quant à l'âge prévues par la législation locale. Il est préférable, et parfois requis par certaines législations, de suivre un cours de sécurité maritime. ATTACHER LA LANIÈRE DE L'INTERRUPTEUR D'ARRÊT DU MOTEUR au poignet et l'éloigner du guidon afin que le moteur se coupe bien en cas de chute. Après utilisation, retirer la lanière du scooter afin de prévenir toute utilisation par des enfants ou des personnes non-autorisées.

YAMAHA



F1B-U41B1-20

3

 
⚠️ AVERTISSEMENT

Afin de limiter les risques de BLESSURES GRAVES, voire MORTELLES:

RESPECTER SES LIMITES ET ÉVITER LES MANŒUVRES BRUTALES afin de limiter tout risque de perte de contrôle, d'éjection et de collision. Il s'agit d'un véhicule à hautes performances et pas d'un jouet. Des virées brusques ou le saut de sillages ou de vagues accroît le risque de blessures au dos, voire de paralysie, de blessures au visage et de fractures diverses. Ne jamais sauter des sillages ni des vagues.

NE PAS DONNER DES GAZ LORSQUE QUELQU'UN SE TROUVE DERRIÈRE LE VÉHICULE: couper le moteur ou laisser tourner au ralenti. Eau et/ou débris projetés par la pompe pourraient causer des blessures graves.

NE PAS S'APPROCHER DE LA GRILLE D'ADMISSION lorsque le moteur tourne. Cheveux longs, vêtements amples ou lanières de gilet de sauvetage risquent d'être happés, ce qui pourrait provoquer des blessures, ou même une noyade.



YAMAHA

F1B-U41B1-30

NE JAMAIS PILOTER APRÈS AVOIR ABSORBÉ DE L'ALCOOL, DES DROGUES OU CERTAINS MÉDICAMENTS.

LIRE ET RESPECTER LES INSTRUCTIONS DONNÉES DANS LE MANUEL D'UTILISATION.

4

⚠️ AVERTISSEMENT

Les collisions sont la cause principale des BLESSURES ET DÉCÈS d'utilisateurs de scooter des mers. POUR ÉVITER LES COLLISIONS: ÊTRE CONSTAMMENT à l'affût de personnes, d'objets et d'autres bateaux. Être conscient des conditions limitant sa visibilité ou celle des autres embarcations. PILOTER AVEC PRUDENCE à des vitesses raisonnables et garder une distance de sécurité entre le scooter et toute personne, objet et embarcation.

- Ne pas suivre une autre embarcation de trop près.
- Ne pas se rapprocher d'autrui en vue de l'éclabousser.
- Éviter les virages brusques ou toute manœuvre qui risque de mettre un autre pilote en danger ou qui l'empêche de pouvoir déterminer clairement la direction que l'on prend.
- Éviter les endroits où flottent des objets et les eaux peu profondes.

REAGIR RAPIDEMENT en vue d'éviter les collisions. Garder à l'esprit que les bateaux n'ont pas de freins.

NE PAS LACHER LES GAZ LORSQUE L'ON ESSAYE DE S'ÉLOIGNER d'objets: une poussée est nécessaire à la direction du scooter des mers. Toujours s'assurer avant le départ que l'accélérateur et la direction fonctionnent correctement. Suivre les lois de navigation ainsi que les législations nationales, provinciales et locales concernant les scooters des mers. Voir le manuel d'utilisation pour plus d'informations.

YAMAHA

F1B-U41B2-00



5

⚠ WARNING	⚠ AVERTISSEMENT
Gasoline is highly flammable and explosive. A fire or explosion could cause severe injury or death. Shut engine off. Refuel in well ventilated area away from flames or sparks. Do not smoke. Avoid spilling gasoline. Wipe up spilled gasoline immediately. Remove all seats to ventilate fuel vapors from engine compartment before starting engine. Do not start engine if there is a fuel leak or a loose electrical connection.	L'essence est très inflammable et explosive. Un incendie ou une explosion risquent de provoquer des blessures graves, voire mortelles. Couper le moteur. Faire le plein dans un endroit bien aéré et éloigné de toute flamme ou étincelle. Ne pas fumer. Éviter de renverser de l'essence. Essayer immédiatement toute coulure d'essence. Déposer les selles pour évacuer les vapeurs d'essence du compartiment du moteur avant de mettre le moteur en marche. Ne jamais mettre le moteur en marche en cas de fuite d'essence ou si un branchement électrique est desserré.
REGULAR UNLEADED GASOLINE ONLY	ESSENCE NORMALE SANS PLOMB UNIQUEMENT

F1B-U415B-10

6

⚠ WARNING
REVERSE SHIFT LEVER OPERATION: • Shift only while engine is idling or off. • Reverse is for low speed maneuvering only. • Do not use reverse function to slow down or stop PWC as it could cause you to lose control, be ejected, or impact handlebars. • Make sure that there are no obstacles or people behind you before shifting to reverse.
⚠ AVERTISSEMENT
FONCTIONNEMENT DU LEVIER D'INVERSION DE MARCHE: • Inverser la marche uniquement lorsque le moteur tourne au ralenti ou lorsqu'il est coupé. • La marche arrière est destinée exclusivement aux manœuvres à vitesse réduite. • Ne pas sélectionner la marche arrière en vue de ralentir ou d'arrêter le scooter des mers, car il y a risque de perte de contrôle, d'éjection ou de heurt sur le guidon. • S'assurer qu'il n'y a ni obstacle ni personne derrière le scooter avant d'engager la marche arrière.

F0V-U41D5-30

7

⚠ AVERTISSEMENT
APPLICABLE POUR LA FRANCE SEULEMENT • En France : permis de conduire et immatriculation obligatoire. • Navigation en mer autorisée entre 300 mètres et 1 mille nautique. • Entre 0 et 300 mètres, se référer aux instructions nautiques locales affichées. • Sinon, règle générale : vitesse maxi 5 nœuds (9Km/h) dans cette zone. • Utiliser les chenaux obligatoires de sortie lorsqu'ils existent. • Respecter les règles de priorité. • Gilet de sauvetage obligatoire-Fusée et bout de remorquage à bord. • Ne jamais conduire sous l'influence de l'alcool ou de drogues. • Consulter la météo avant de sortir en mer. • Une conduite responsable et un contrôle quotidien de votre machine suivant le manuel d'entretien YAMAHA seront garants de votre sécurité.

YAMAHA

GJ3-U416H-00



8

⚠ WARNING

- Severe internal injuries can occur if water is forced into body cavities as a result of being near jet thrust nozzle.
- Wear a wetsuit bottom or clothing that provides equivalent protection.
- Do not board PWC if operator is applying throttle.

⚠ AVERTISSEMENT

- Le choc infligé par la pénétration forcée d'eau dans les orifices corporels lors du contact avec le jet de la pompe risque de provoquer des lésions graves.
- Porter le pantalon d'une tenue de plongée ou tout autre vêtement offrant une protection semblable.
- Ne pas embarquer lorsque le pilote donne des gaz.

(F1B-U41E2-10)

9

⚠ WARNING

IMPROPER UPRIGHTING CAN CAUSE INJURY.

- Shut engine off, and be sure engine shut-off cord is removed from engine shut-off switch.
- Do not put hand in intake grate.
- Make sure that you are not hit by PWC as it comes over.

TO TURN OVER:

- Pull PWC over with left hand on ride plate while pushing down on gunwale with right hand/foot.

⚠ AVERTISSEMENT

UNE MAUVAISE TECHNIQUE DE REDRESSEMENT RISQUE D'ÊTRE LA CAUSE DE BLESSURES.

- Couper le moteur et s'assurer de retirer la lanière de l'interrupteur d'arrêt du moteur.

- Ne pas introduire la main dans la grille d'admission.
- Veiller à ne pas se cogner au scooter qui se redresse.


POUR REDRESSER:

- Faire basculer le scooter en plaçant la main gauche sur le pont et en appuyant sur le plat-bord à l'aide de la main droite ou du pied droit.

YAMAHA

F0P-U41D3-10

10

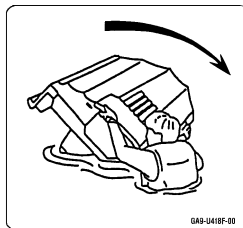

GAS-U41BF-01

11

⚠ WARNING**⚠ AVERTISSEMENT**

Pinch hazard. Stay clear of reverse gate during operation.

Risque de pincement. Ne pas approcher la pelle d'inversion pendant son utilisation.

YAMAHA

F0P-U416R-10

12

⚠ WARNING

Do not touch or remove electrical parts when starting or running the engine.

YAMAHA

6R7-83623-40

13

⚠ AVERTISSEMENT

Ne pas toucher ou retirer les pièces électriques lors du démarrage ou de la marche du moteur.

YAMAHA


6R7-83623-50



EJU01353

Caution labels

 
14

CAUTION	
BATTERY REMOVAL: • Disconnect both battery leads and battery breather hose before removing battery. BATTERY INSTALLATION: • Connect red lead to positive (+) terminal. • Connect black lead to negative (-) terminal. • Reversing leads will damage electrical system. • Make sure that breather hose is connected after installation.	

YAMAHA

F0P-U418B-00

 
15

ATTENTION	
DÉPOSE DE LA BATTERIE: • Déconnecter les deux câbles et la durit de mise à l'air de la batterie avant de déposer celle-ci. REPOSE DE LA BATTERIE: • Connecter le câble rouge à la borne positive (+). • Connecter le câble noir à la borne négative (-). • L'inversion des câbles provoquera l'endommagement du système électrique. • Après la repose, s'assurer que la durit de mise à l'air est correctement branchée.	

YAMAHA

F0P-U418B-10

16

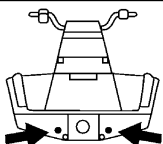CAUTION	ATTENTION
 BEFORE LAUNCHING: See Owner's Manual for draining procedure. Make sure stern drain plugs are tightened securely.	AVANT LE LANCEMENT: Se référer au manuel d'utilisation pour procéder à la purge du scooter. S'assurer que les bouchons de purge à la poupe sont serrés correctement.

YAMAHA

F0P-U418G-10

17

CAUTION
HANDGRIP IS FOR BOARDING AND SPOTTING ONLY. Do not use to tow objects, lift PWC, or attach tie downs, otherwise damage could occur.
ATTENTION
LA POIGNÉE EST DESTINÉE UNIQUEMENT À L'EMBARCATION ET À L'OBSERVATION. Ne pas utiliser pour remorquer, soulever ou amarrer le scooter, sous peine de l'endommager.

(F1B-U41E2-10)

18

CAUTION
• Cleat is for mooring or pulling a water skier. • Do not use cleat to lift PWC, otherwise damage could occur.
ATTENTION
• Le taquet est destiné à l'amarrage et à la traction d'un skieur nautique. • Ne pas utiliser le taquet afin de soulever le scooter, sous peine de l'endommager.

(F1B-U41E2-10)



EJU01860

Other labels and tags

⑰

FIRE EXTINGUISHER CONTAINER COMPARTIMENT DE L'EXTINCTEUR

F1B-U41F5-10

⑳

AFTER OPERATION

After removing from water:

- Flush jet pump and hull with fresh water.
Remove stern drain plugs.
- Start engine and rapidly squeeze and release throttle lever for 10-15 seconds to drain any water remaining in exhaust system.
- Refer to Owner's Manual for maintenance and storage information.

APRÈS L'UTILISATION

Après avoir retiré le scooter de l'eau:

- Rincer la pompe de propulsion et la coque à l'eau claire. Retirer les bouchons de purge de la poupe.
- Mettre le moteur en marche, puis actionner et relâcher rapidement le levier d'accélération de façon répétée pendant 10 à 15 secondes afin de purger toute l'eau du circuit d'échappement.
- Entretenir et entreposer le scooter des mers conformément aux instructions données dans le manuel d'utilisation.

(F1B-U419E-00)

㉑

RATED PERSON CAPACITY: 3
MAXIMUM LOAD: 240 kg (530 lb)
CAPACITÉ MAXIMALE: 3 personnes
CHARGE MAXIMALE: 240 kg(530 lb)

(F1B-U419E-00)

㉒


HUILE MOTEUR

HUILE RECOMMANDÉE

SAE 10W-30
API SE, SF, SG, SH, SJ

YAMAHA

F1B-U41F3-10

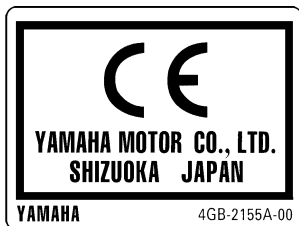**E****23****24**

IMPORTANT NOTICE TO DEALER	AVIS IMPORTANT AUX CONCESSIONNAIRES	販売店様への重要な連絡
 ENGLISH The engine oil tank is empty. Before operating the engine, be sure to fill the tank with oil. Remove this tag after filling the tank.	 FRANÇAIS Le réservoir d'huile moteur est vide. Avant de mettre le moteur en marche, il faut s'assurer de remplir le réservoir d'huile. Retirer cette étiquette après avoir rempli le réservoir d'huile.	 日本語 エンジンオイルは入っていません。 使用前に必ずエンジンオイルを入れて 下さい。 この注意書きは、エンジンオイルを 入れたのちに取り外して下さい。
60E-6410M-00 YAMAHA MOTOR CO., LTD.		

NOTE:

A Yamaha dealer removes this tag 24 after adding engine oil to the oil tank.

If this tag is not removed, check if the specified oil of the recommended type has been added to correct level.



EJU01177



Safety information


The safe use and operation of this watercraft is dependent upon the use of proper riding techniques, as well as upon the common sense, good judgment, and expertise of the operator. Every operator should know the following requirements before riding the watercraft.

- Before operating the watercraft, read the Owner's/Operator's Manual, the Riding Practice Guide, the Riding Instruction card and all warning and caution labels on the watercraft. Also, watch the Basic Orientation Video provided with your watercraft. These materials should give you an understanding of the watercraft and its operation.
- Never allow anyone to operate this watercraft until they too have read the Owner's/Operator's Manual, the Riding Practice Guide, the Riding Instruction card and all warning and caution labels, and if possible watched the Basic Orientation Video. Showing them the video may help reinforce the information contained in these materials.

EJU01207

Limitations on who may operate the watercraft

- Yamaha recommends a minimum operator age of 16 years old.
Adults must supervise use by minors.
Know your local operator age and training requirements.

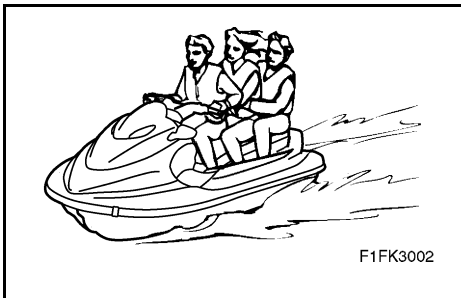

- This watercraft is designed to carry the operator and up to 2 passengers. Never exceed the maximum load limit or allow more than 3 persons (or 2 persons if a water-skier is being pulled) to ride the watercraft at one time.


Maximum load: 240 kg (530 lb)
Load is the total weight of cargo, operator and passengers.

- Do not operate the watercraft with any passengers on board until you have considerable practice and experience riding alone. Operating the watercraft with passengers requires more skill. Take the time to become accustomed to the handling characteristics of the watercraft before trying any difficult maneuvers.




EJU01001

Cruising limitations

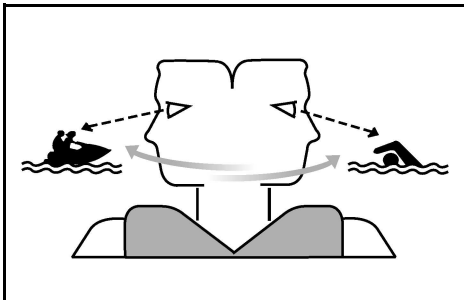

- Scan constantly for people, objects, and other watercraft. Be alert for conditions that limit your visibility or block your vision of others.
- Operate defensively at safe speeds and keep a safe distance away from people, objects, and other watercraft.
- Do not follow directly behind watercraft or other boats.
- Do not go near others to spray or splash them with water.
- Avoid sharp turns or other maneuvers that make it hard for others to avoid you or understand where you are going.
- Avoid areas with submerged objects or shallow water.
- Ride within your limits and avoid aggressive maneuvers to reduce the risk of loss of control, ejection, and collision.
- This is a high performance boat—not a toy. Sharp turns or jumping wakes or waves can increase the risk of back/spinal injury (paralysis), facial injuries, and broken legs, ankles and other bones. Do not jump wakes or waves.

- Do not operate the watercraft in rough water, bad weather or when visibility is poor; this may lead to an accident causing injury or death. Be alert to the possibility of adverse weather. Take note of weather forecasts and the prevailing weather conditions before setting out on your watercraft.
- As with any water sport, you should not ride your watercraft without someone else near by. If you ride further than swimming distance from shore, you should ride by another boat or watercraft, but make sure you stay a safe distance away. It's good common sense!

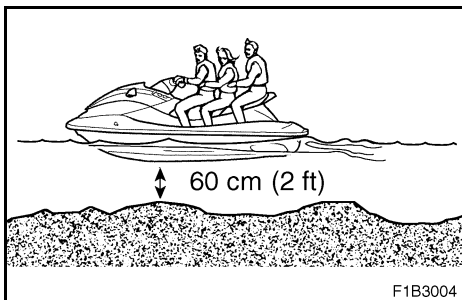

- Never operate in water that is less than 60 cm (2 ft) deep, otherwise you increase your chance of hitting a submerged object, which could result in injury.




- This watercraft is not equipped with lighting required for night operation. Do not operate the watercraft after sunset or before dawn, otherwise you increase the risk of colliding with another boat, which could result in severe injury or death.

EJU01208

Operation requirements

- All riders must wear a personal flotation device (PFD) that is approved by the appropriate authorities and suitable for personal watercraft use.
- Wear protective clothing. Severe internal injuries can occur if water is forced into body cavities as a result of falling into water or being near the jet thrust nozzle. Normal swimwear does not adequately protect against forceful water entry into rectum or vagina. All riders must wear a wetsuit bottom or clothing that provides equivalent protection. Such clothing includes thick, tightly woven, sturdy and snug-fitting apparel such as denim, but does not include spandex or similar fabrics, like those used in bicycle shorts.

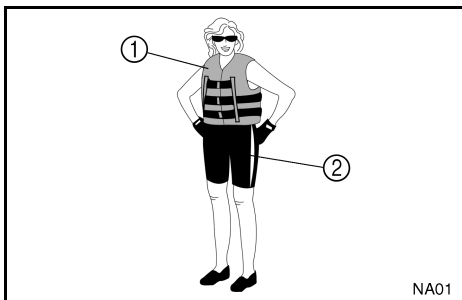

① Authority-approved PFD

② Wetsuit bottom

- Eye protection is recommended to keep wind, water, and glare from the sun out of your eyes while you operate your watercraft. Restraining straps for eyewear are made which are designed to float should your eyewear fall in the water. Footwear and gloves are recommended.



- You must decide whether to wear a helmet while you ride for recreation. You should know that a helmet could help protect you in certain kinds of accidents and that it could injure you in others.

A helmet is designed to provide some head protection. Although helmets cannot protect against all foreseeable impacts, a helmet might reduce your injuries in a collision with a boat or other obstacle.

A helmet may have potential safety hazards, as well. Falling into the water could risk the chance of the helmet catching water, commonly known as “bucketing,” and the resulting strain on your neck could cause choking, severe and permanent neck injuries, or death. A helmet could also increase the risk of an accident if it reduces your vision or hearing, or if it distracts you or increases your fatigue.

How should you decide if a helmet's potential safety benefits outweigh its potential risks for you? Consider your particular riding conditions. Consider factors such as your riding environment and your riding style and ability. Also consider the likelihood of traffic congestion, and the water surface conditions. If you decide to wear a helmet based upon your riding circumstances, choose one carefully. Look for a helmet designed for personal watercraft use, if possible. If you will be engaging in closed-course competition, follow the helmet requirements of the sanctioning organization.




- NEVER operate the watercraft after consuming alcohol or taking other drugs.
- For reasons of safety and proper care of the watercraft, always perform the pre-operation checks listed on page 3-5 before operating the watercraft.
- The operator and passengers should always keep both feet in the footwell when the watercraft is in motion. Lifting your feet increases your chances of losing your balance, and your feet being hit by objects outside the watercraft. Do not give a ride to children if their feet cannot reach the floor of the footwell.



- Passengers should firmly hold on to the person in front of them.
- Always consult your doctor on whether it is safe for you to ride this watercraft if you are pregnant or in poor health.



- Do not attempt to modify this watercraft! Modifications to your watercraft may reduce safety and reliability, and render the watercraft unsafe or illegal for use.

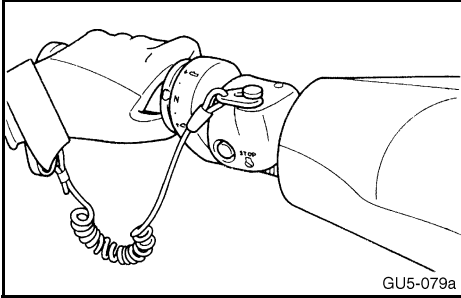

- Attach the engine shut-off cord (lanyard) to wrist and keep it free from the handlebars so that the engine stops if the operator falls off. After riding, remove the engine shut-off cord from the watercraft to avoid accidental starting or unauthorized use by children or others.
- Scan carefully for swimmers and stay away from swimming areas. Swimmers are hard to see and you could accidentally hit someone in the water.
- Avoid being hit by another boat! You should always take the responsibility to watch for traffic; other boaters may not be watching for you. If they do not see you, or you maneuver more quickly than other boaters expect, you risk a collision.
- Maintain a safe distance from other boats or watercraft, and also watch for boats' ski ropes or fishing lines. Obey the "Safe boating rules," and be sure to check behind you before making a turn. (See Safe boating rules on page 1-19.)

EJU01382

Recommended equipment

The following items should be carried on board your watercraft:

- Sound-signaling device
You should carry a whistle or other sound-signaling device that can be used to signal other boats.
- Visual distress signals
It is recommended that an authority-approved pyrotechnic device be stored in a waterproof container on your watercraft. A mirror can also be used as an emergency signal. Contact your Yamaha dealer for more information.
- Watch
A watch is helpful so you will know how long you have been operating.
- Towline
A towline can be used to tow a disabled watercraft in an emergency.



EJU01781

Hazard information

- Never start the engine or let it run for any length of time in an enclosed area. Exhaust fumes contain carbon monoxide, a colorless, odorless gas that may cause loss of consciousness and death within a short time. Always operate the watercraft in an open area.
- Hot oil tank, muffler, and engine surfaces can cause serious burns. Do not touch the oil tank, muffler, or engine immediately after turning the engine off.


EJU01847

Watercraft characteristics


- Jet thrust turns the watercraft. Releasing the throttle completely produces only minimum thrust. If you are traveling at speeds above trolling, you will have rapidly decreasing ability to steer without throttle. You may still have some turning ability immediately after releasing the throttle, but once the engine slows down, the watercraft will no longer respond to handlebar input until you open the throttle again or you reach a trolling speed. Practice turning in an open area without obstructions until you have a good feel for this maneuver.
- This watercraft is water-jet propelled. The jet pump is directly connected to the engine. This means that jet thrust will produce some movement whenever the engine is running. There is no “neutral” position. You are in either “forward” or “reverse,” depending upon the shift lever position.
- Do not use the reverse function to slow down or stop the watercraft as it could cause you to lose control, be ejected, or impact the handlebars.
This could increase the risk of back/spinal injury (paralysis), facial injuries, and broken legs, ankles, and other bones. You could also damage the shift mechanism.
- Reverse can be used to slow down or stop during slow speed maneuvering, such as when docking. Once the engine is idling, shift to reverse and gradually increase engine speed. Make sure that there are no obstacles or people behind you before shifting into reverse.



- Keep away from intake grate ① while the engine is on. Items such as long hair, loose clothing, or PFD straps can become entangled in moving parts resulting in severe injury or drowning.
- Never insert any object into the jet thrust nozzle ② while the engine is running. Severe injury or death could result from coming in contact with the rotating parts of the jet pump.

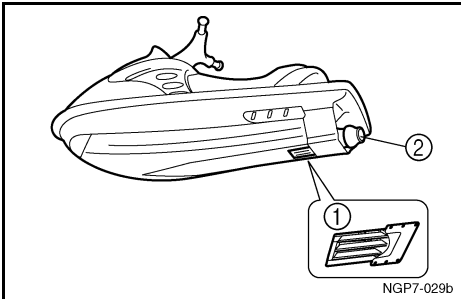

- Stop the engine and remove the clip ③ from the engine shut-off switch ④ before removing any debris or weeds, which may have collected around the jet intake.

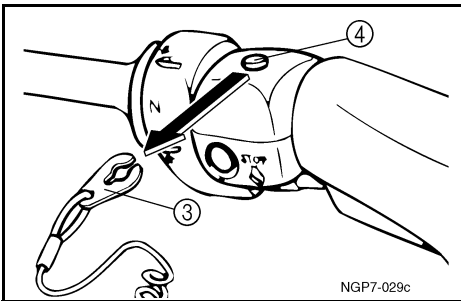


EJU01863

Water-skiing

You can use the watercraft for water-skiing if it has the seating capacity to carry the operator, a rearward-facing spotter, and the water-skier when he or she is not skiing.

The watercraft must also have a cleat ① designed to pull a ski towrope; do not attach the towrope to any other location.

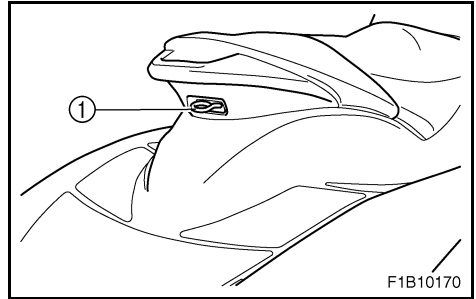

It is the watercraft operator's responsibility to be alert to the safety of the water-skier and others. Know and follow all local water-skiing regulations in effect for the waters in which you will be operating.

The operator should be comfortable carrying passengers before attempting to pull a skier.



The following are some important considerations for minimizing risks while water-skiing.

- The skier should wear an approved PFD, preferably a brightly colored one so boat operators can see the skier.
- The skier should wear protective clothing. Severe internal injuries can occur if water is forced into body cavities as a result of falling into the water. Normal swimwear does not adequately protect against forceful water entry into rectum or vagina. The skier should wear a wetsuit bottom or clothing that provides equivalent protection.



- A second person should be on board as a spotter to watch the skier; in many places it is required by law. Let the skier direct the operator's control of speed and direction with hand signals.

The spotter should sit securely on the passenger seat and hold onto the hand-grip ② with feet firmly on the floor of the footwell for proper balance while facing to the rear to watch the skier's hand signals and his or her condition.

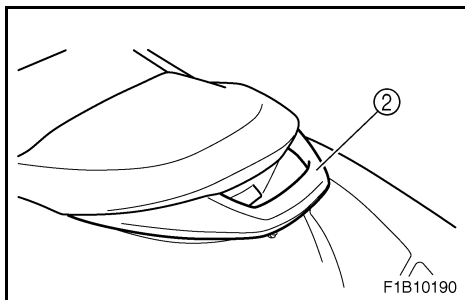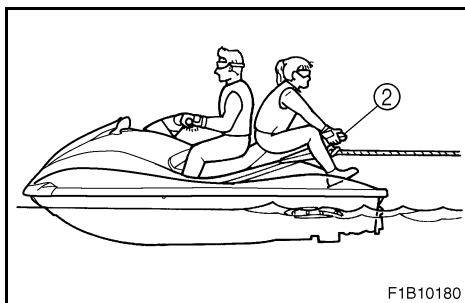

- When preparing to pull a skier, operate the watercraft at the slowest possible speed until the watercraft is well away from the skier and slack in the towrope is taken up. Make sure that the rope is not looped around anything. After checking that the skier is ready and that there is no traffic or other obstacles, apply enough throttle to raise the skier.
 - Make smooth, wide turns. The watercraft is capable of very sharp turns, which could exceed the abilities of the skier. Keep the skier at least 50 m (150 ft), about twice the distance of a standard towrope, from any potential hazard.
 - Be alert to the hazard of the towrope handle snapping back at the watercraft when the skier falls or is unable to get up on the skis.
 - Towing heavy or bulky objects other than skiers, such as another boat or watercraft, can cause loss of steering control and create a hazardous condition. If you must tow another boat in an emergency situation, operate slowly and cautiously.
- Your control while pulling a skier is affected by the skier's ability, as well as water and weather conditions.



Safe boating rules

Your Yamaha watercraft is legally considered a powerboat. Operation of the watercraft must be in accordance with the rules and regulations governing the waterway on which it is used.

Enjoy your watercraft responsibly

You share the areas you enjoy when riding your watercraft with others and with nature. So your enjoyment includes a responsibility to treat these other people, and the lands, waters, and wildlife with respect and courtesy.

Whenever and wherever you ride, think of yourself as the guest of those around you. Remember, for example, that the sound of your watercraft may be music to you, but it could be just noise to others. And the exciting splash of your wake can make waves others won't enjoy. Avoid riding close to shoreline homes and waterfowl nesting areas or other wildlife areas, and keep a respectful distance from fishermen, other boats, swimmers, and populated beaches. When travel in areas like these is unavoidable, ride slowly and obey all laws.

Remember that pollution can be harmful to the environment. Do not refuel or add oil where a spill could cause damage to nature. Remove your watercraft from the water and move it away from the shoreline before refueling. And keep your surroundings pleasant for the people and wildlife that share the waterways: don't litter!

When you ride responsibly, with respect and courtesy for others, you help ensure that our waterways stay open for the enjoyment of a variety of recreational opportunities.

FEATURES AND FUNCTIONS



Location of main components2-1


Operation of controls and other

functions	2-5
Rear seat	2-5
Front seat	2-6
Hood	2-7
Fuel tank filler cap	2-7
Engine stop switch	2-7
Engine shut-off switch	2-8
Throttle lever	2-8
Start switch	2-9
Cooling water pilot outlet	2-9
Steering system	2-10
Tilt lever	2-10
Shift lever	2-11
Quick Shift Trim System (QSTS)	
selector	2-12
Handgrip	2-13
Multifunction meter	2-14
Storage compartments	2-19



EJU01008

Location of main components

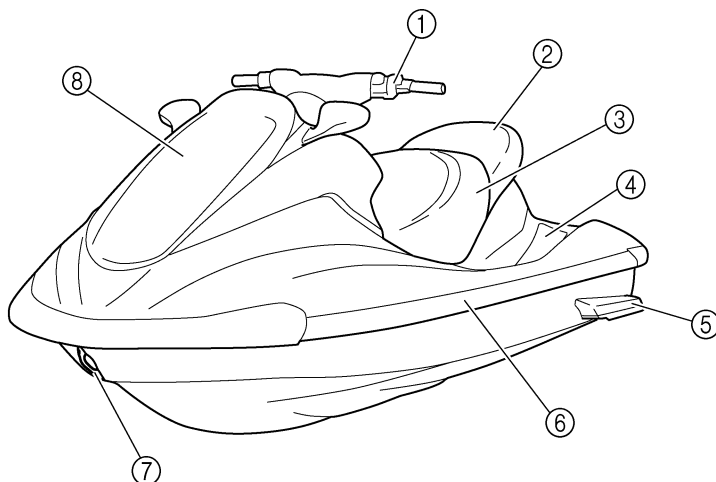

F1B20010

① **Handlebars**

Use to control direction.

② **Rear seat**

③ **Front seat**

④ **Footwell**

Use to place feet for balance.

To keep proper balance while facing to the rear to watch the skier.


⑤ **Sponsons**

⑥ **Gunwale**

⑦ **Bow eye**


Use to attach rope for transporting, mooring or towing the watercraft in an emergency.

⑧ **Hood**

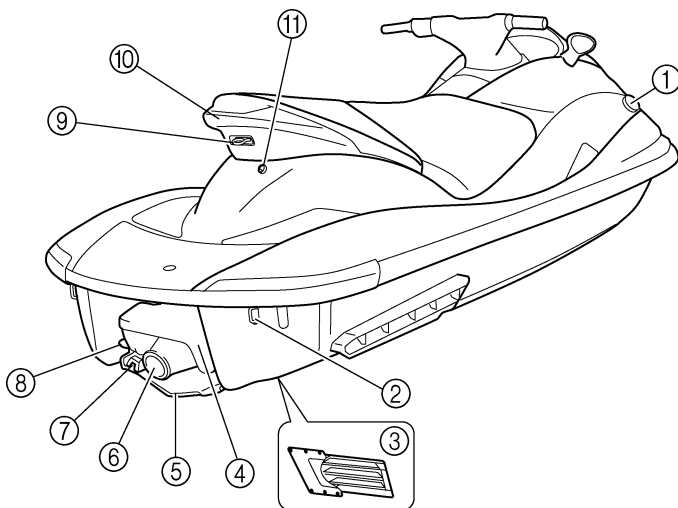


F1B20020

- | | |
|--|---|
| ① Fuel tank filler cap | ⑦ Speed sensor |
| ② Stern eye
Use to attach rope for transporting or mooring. | ⑧ Stern drain plugs
Use to drain water in the bilge when the watercraft is on dry land. |
| ③ Intake grate
Prevents debris from getting into the jet pump. | ⑨ Cleat
Use to attach a towrope for pulling water-skier, or a rope for mooring the watercraft. |
| ④ Reverse gate
Controls direction of jet thrust when in reverse. | ⑩ Handgrip
Use for support when boarding the watercraft or when seated facing rearward and acting as a spotter for a water-skier. |
| ⑤ Ride plate | ⑪ Electric bilge pilot outlet |
| ⑥ Jet thrust nozzle
Changes the direction of jet thrust according to handlebar position. | |

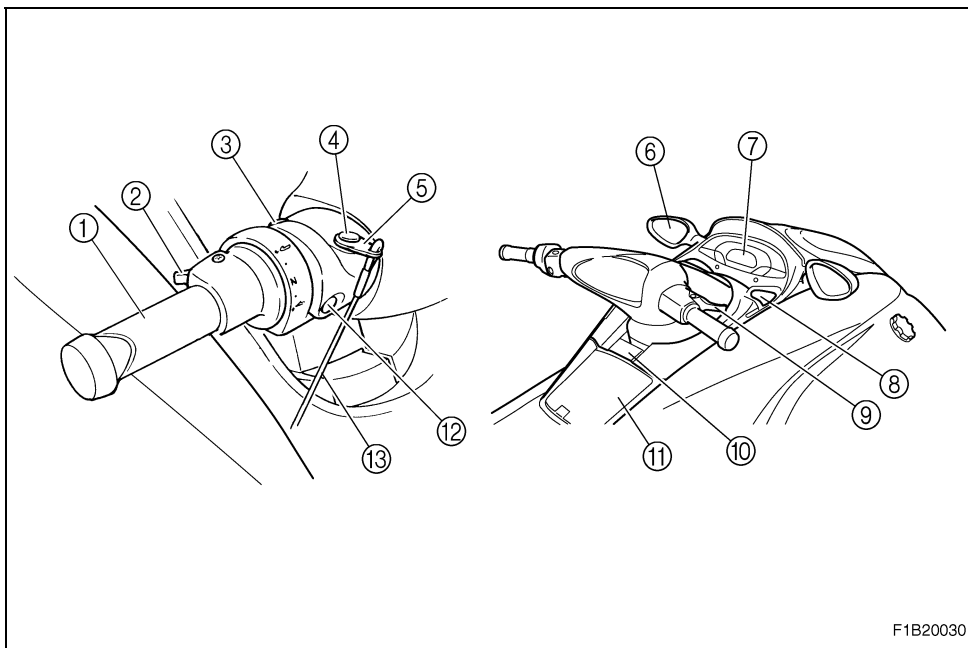


F1B20030


- ① **Quick Shift Trim System (QSTS) selector**
Use to select the trim angle of the watercraft.
- ② **QSTS shift lock lever**
- ③ **Start switch**
Push to start the engine.
- ④ **Engine shut-off switch**
Remove the clip to stop the engine and disable it from starting.
- ⑤ **Clip**
Insert into the engine shut-off switch to enable starting of the engine.
Remove to stop the engine or prevent accidental starting of the engine or unauthorized use of the watercraft.
- ⑥ **Adjustable rearview mirrors**
- ⑦ **Multifunction meter**
Use to check watercraft operation.
- ⑧ **Shift lever**
Use to put the watercraft into forward or reverse.
- ⑨ **Throttle lever**
Use to accelerate and decelerate.
- ⑩ **Tilt lever**
Use to adjust the tilt of the handlebars.
- ⑪ **Glove compartment**
- ⑫ **Engine stop switch**
Push to stop the engine normally.
- ⑬ **Engine shut-off cord (lanyard)**
Attach to wrist so that the engine stops if the operator falls off the watercraft.

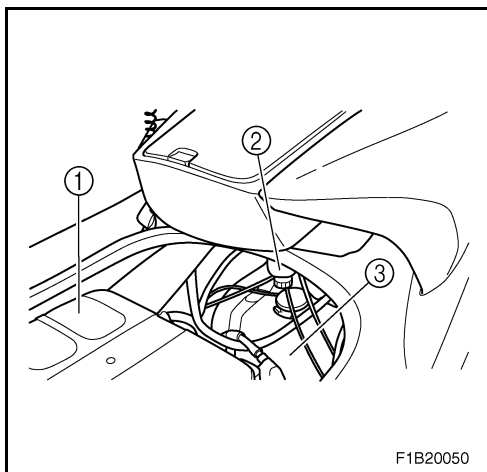

F1B20050

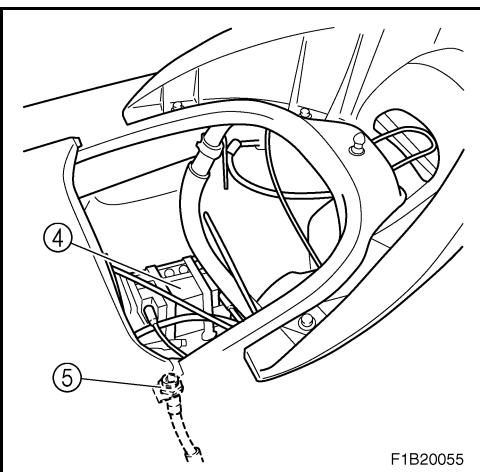


F1B20055

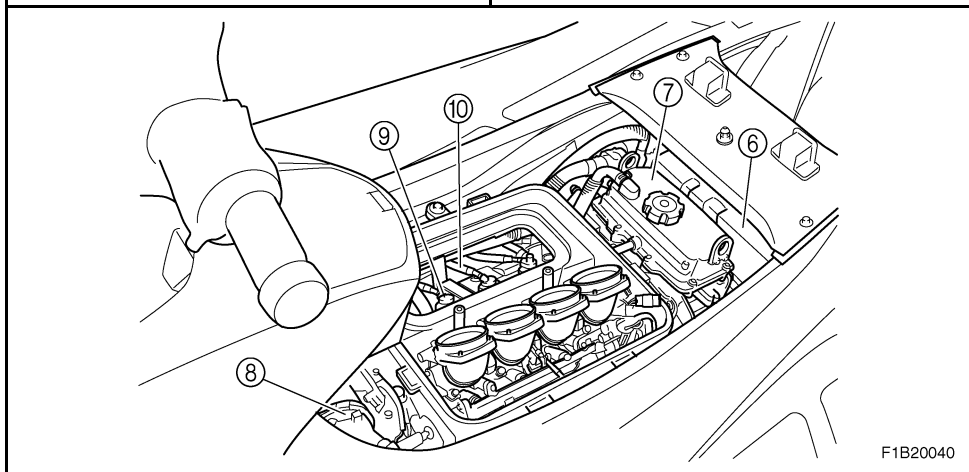

F1B20040

- | | |
|---|-------------------------------|
| ① Air filter case | ⑧ Muffler |
| ② Water separator | ⑨ Spark plugs/Spark plug caps |
| ③ Fuel tank | ⑩ Spark plug lead |
| ④ Battery | |
| ⑤ Flush hose connector | |
| Use to flush the engine cooling water passages. | |
| ⑥ Electrical box | |
| Protects electrical components from water. | |
| ⑦ Oil tank | |

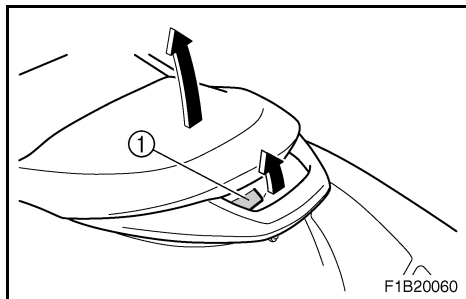

EJU01009


Operation of controls and other functions

EJU01211

Rear seat


To remove the rear seat:

Pull the rear seat latch ① up, and then pull the seat off.

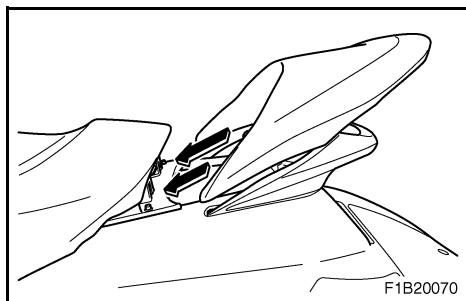

To install the rear seat:

Insert the projections on the front of the seat into the stays on the deck, and then push the rear of the seat down to lock it in place securely.

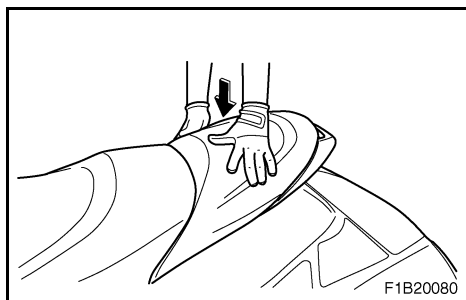





EJU01859

Front seat

To remove the front seat:

1. Remove the rear seat.
2. Pull the front seat latch ① up, and then pull the seat off.

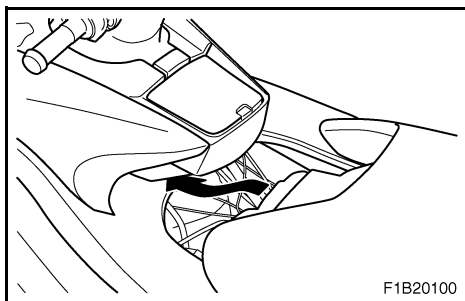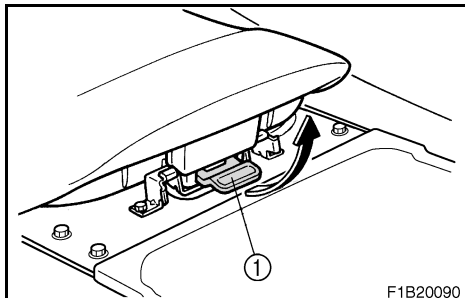



To install the front seat:

1. Insert the projections on the front of the seat into the stays on the deck, and then push the rear of the seat down to lock it in place.
2. Install the rear seat.

NOTE:

Make sure that the seats are properly secured before operating the watercraft.

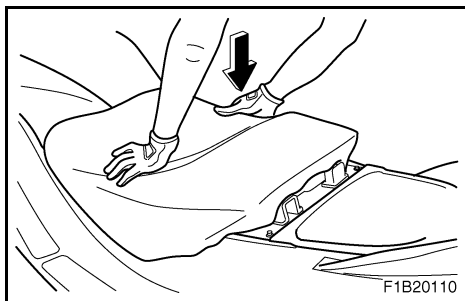

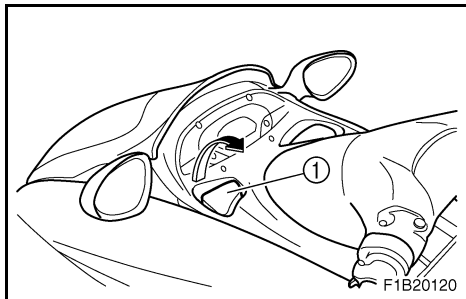


EJU01783

Hood

The hood release lever ① is located on the port (left) side of the watercraft.


To open the hood, pull the hood release lever up, and then lift the hood up.

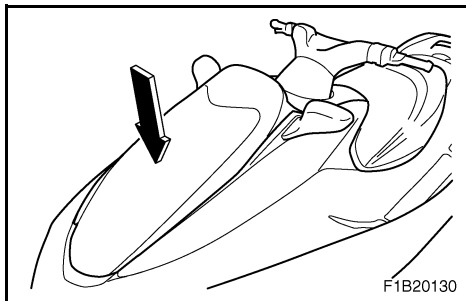

To close the hood, push the hood down to lock it in place.

NOTE:

Make sure that the hood is properly secured before operating the watercraft.

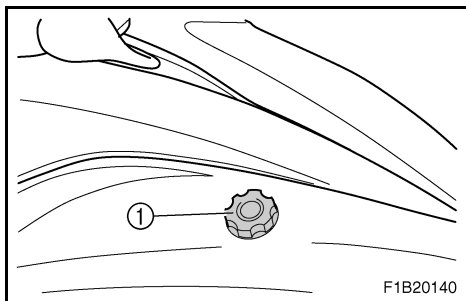


EJU01012

Fuel tank filler cap

To remove the fuel tank filler cap ①, turn it counterclockwise.

NOTE:

Make sure that the fuel tank filler cap is properly secured before operating the watercraft.

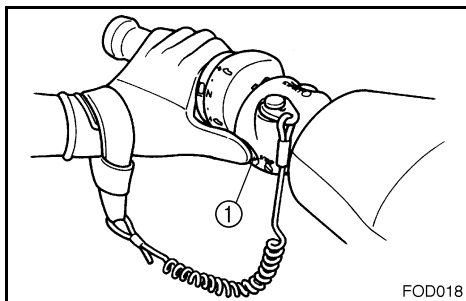

EJU01015

Engine stop switch

Push this switch ① (red button) to stop the engine normally.






EJU01016

Engine shut-off switch

Insert the clip ①, on the end of the engine shut-off cord ②, under the engine shut-off switch ③ (black button). The engine will stop automatically when the clip is removed from the switch, such as if the operator falls off the watercraft.

⚠ WARNING

- Always attach the engine shut-off cord to your wrist and the clip to the engine shut-off switch **BEFORE** starting the engine.
- To prevent accidental starting of the engine or unauthorized use by children or others, always remove the clip from the shut-off switch when the engine is not running.

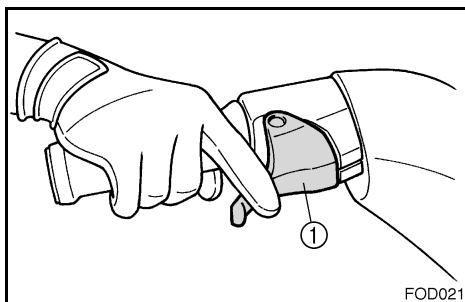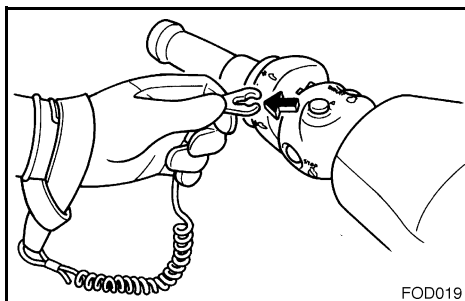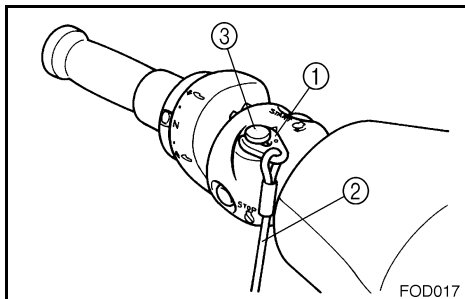


EJU01018

Throttle lever

Squeeze the throttle lever ① to increase engine speed.

Release the throttle lever to decrease engine speed or to return it to the idle position.

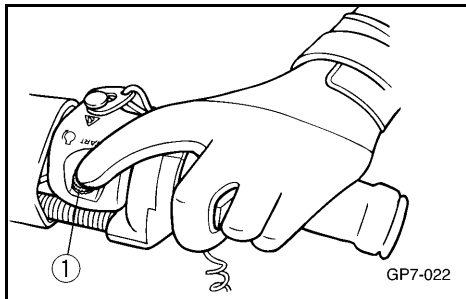


EJU01861

Start switch

Push the start switch ① (green button) to start the engine.

NOTE:

The engine will not start when the clip is removed from the engine shut-off switch or if the throttle lever is squeezed.

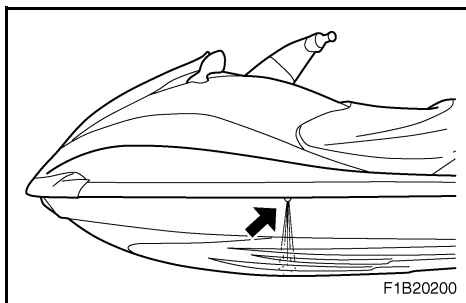

EJU01784

Cooling water pilot outlet

This watercraft is equipped with cooling water pilot outlets.

When the engine is running, cooling water is circulated in the engine, and then it is discharged from the pilot outlets.

To check for proper operation of the cooling system, check that water is being discharged from the port (left) pilot outlet. If water is not being discharged from this outlet, cooling water may not be circulating in the engine. When this occurs, stop the engine and check for the cause. (See pages 2-18 and 5-3 for further instructions.)

NOTE:

- If the cooling water passages are dry, it will take about 60 seconds for the water to reach the outlet after the engine is started.
- Water discharge may not be constant at idle, therefore, open the throttle a little to check that water discharges properly.
- Water discharge may not be constant at the starboard (right) pilot outlet, however, if it is constant at the port (left) pilot outlet, the cooling system is operating normally.




EJU01021

Steering system

Your watercraft can be steered by turning the handlebars ① the same direction you wish to travel.

When the handlebars are turned, the angle of the jet thrust nozzle ② is changed, and the direction of the watercraft is changed accordingly. Since the strength of the jet thrust determines the speed and direction of a turn, the throttle must always be open when attempting a turn, except at trolling speed.

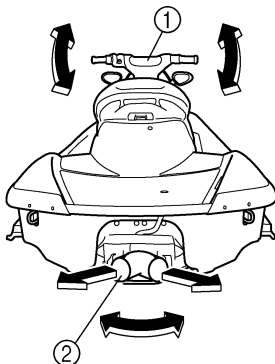

F1B20210

EJU01217


Tilt lever

The tilt lever ① is located in front of the glove compartment and is used to adjust the tilt of the handlebars.


To adjust the tilt, pull the tilt lever up, and then move the handlebars up or down to the desired position.

⚠ WARNING


- **Never touch the tilt lever during operation, otherwise the handlebars may suddenly change position, which may lead to an accident.**
- **Be sure to fasten the tilt lever properly after adjusting the handlebar position. If the handlebars are not properly fastened, they may suddenly change position, which may lead to an accident.**

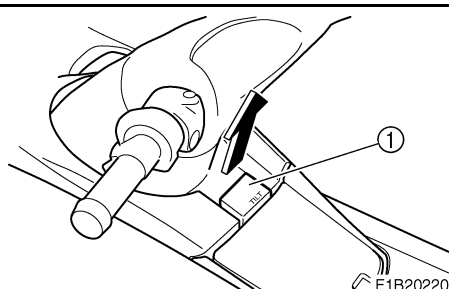

F1B20220

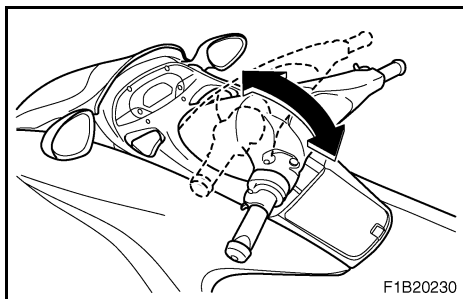

F1B20230

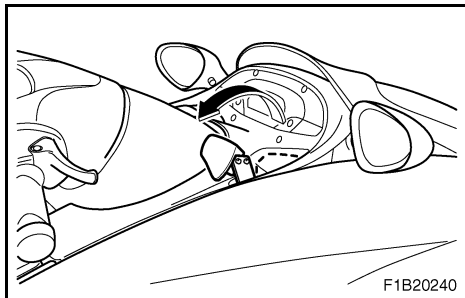

EJU01877

Shift lever

The shift lever is located on the starboard (right) side of the watercraft and is used to control the reverse gate, which allows the watercraft to move into reverse or forward.

When in the reverse position, the watercraft can be launched from a trailer, or backed up out of tight spots where you cannot turn around easily.

To shift into reverse:

1. Release the throttle, and then let the engine speed return to idle.
2. Pull the shift lever toward you.

⚠ WARNING

- Make sure that the throttle is completely released and that the engine is at idle before shifting into reverse.
- Do not use the reverse function to slow down or stop the watercraft as it could cause you to lose control, be ejected, or impact the handlebars.
- Use reverse for slow-speed maneuvering only.
- Make sure that there are no obstacles or people behind you before shifting into reverse.
- Do not touch the reverse gate while the shift lever is being operated, otherwise you could be pinched.

To shift into forward:

1. Release the throttle, and then let the engine speed return to idle.
2. Push the shift lever away from you.



EJU01785

Quick Shift Trim System (QSTS) selector

The QSTS selector ① is located at the left handlebar grip and is used to adjust the trim angle of the watercraft.

Operating the QSTS selector changes the angle of the jet thrust nozzle vertically. This changes the trim angle of the watercraft.

There are 5 positions: 2 bow down positions ① and ②, neutral “N,” and 2 bow up positions ③ and ④.

To change the trim angle:


1. Reduce engine speed to 4,000 r/min or less.
2. Squeeze the shift lock lever ②, and then turn the QSTS selector to the desired position.
3. Release the shift lock lever to lock the QSTS selector.

CAUTION:



Do not turn the QSTS selector while operating the watercraft at full throttle, otherwise damage could occur to the QSTS.

The neutral “N” position will provide good performance for most operating conditions.


To enhance particular types of performance, select bow down or bow up.

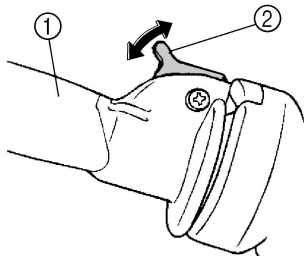

GP7-025

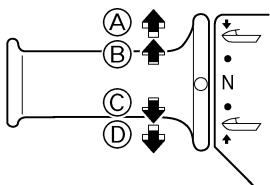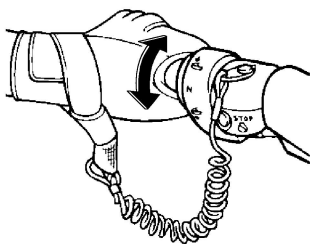

F1B20260

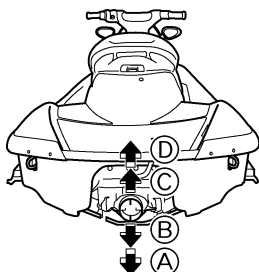



EJU01023

Bow down

Turn the grip to (A) or (B) and the bow will go down while the watercraft is on plane.

Bow down puts more of the bow in the water. This gives the watercraft more “hook,” which enhances turning performance. This position will also help the watercraft get up on plane more quickly.

At higher speeds, however, the watercraft will have greater tendency to “bow steer” and follow waves and wakes in the water. Fuel economy and maximum speed are also reduced.


EJU01024

Bow up

Turn the grip to (C) or (D) and the bow will go up while the watercraft is on plane.

Bow up puts less of the bow in the water. There is less water resistance, so straight-ahead acceleration when on plane and top speed are enhanced.

In some conditions, however, the watercraft may tend to “porpoise” (hop in the water). If the watercraft is porpoising, choose neutral or bow down.

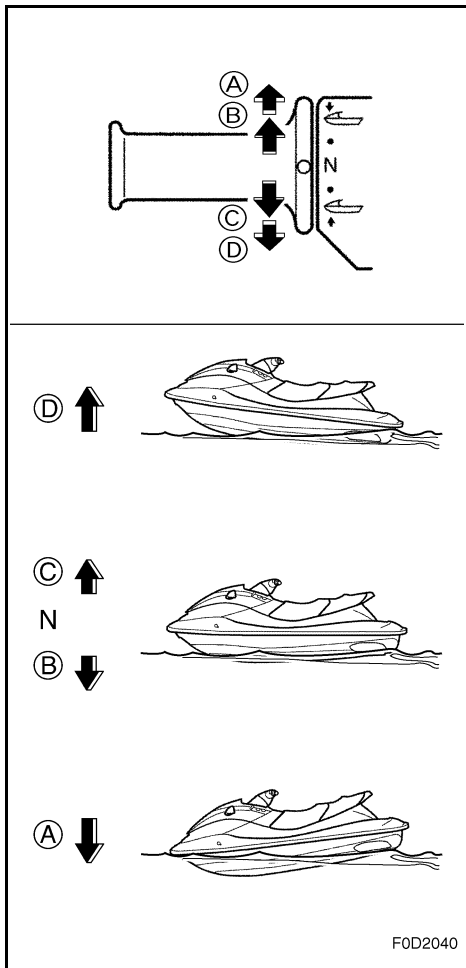

F0D2040


EJU01219

Handgrip


The handgrip ① provides a handhold for boarding the watercraft and for a spotter when facing rearward.

CAUTION:

Do not use to tow objects, lift watercraft, or attach tie downs, otherwise damage could occur.

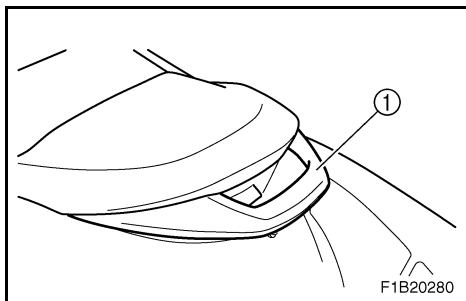

F1B20280

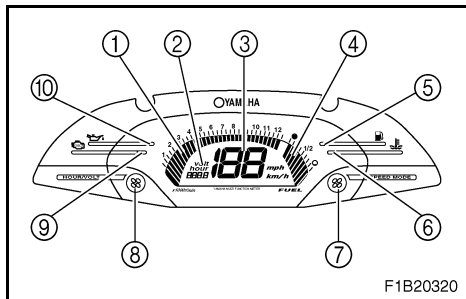

F1B20320

EJU01786

Multifunction meter

This meter contains the following functions for help and convenience in operating the watercraft.


- ① Tachometer
- ② Hour meter/Voltmeter
- ③ Speedometer
- ④ Fuel meter
- ⑤ Fuel warning indicator
- ⑥ Engine overheat warning indicator
- ⑦ Speedometer display select switch
- ⑧ Hour meter/Voltmeter display select switch
- ⑨ Check engine warning indicator
- ⑩ Oil pressure warning indicator

CAUTION:

Do not run the engine for more than 15 seconds when checking the operation of the meter on land. The engine could overheat.

NOTE:

- When the engine is started, all displays light up for 2 seconds and the buzzer sounds 2 times. Then, the meter starts to operate normally.
- The current display will continue to operate for 25 seconds after the engine stops.

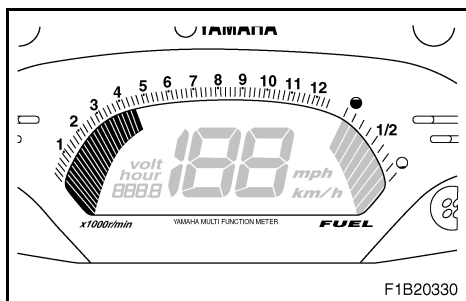


F1B20330

EJU01787

Tachometer

The engine speed (r/min) is displayed by segments. Each segment indicates a 250 r/min increment.

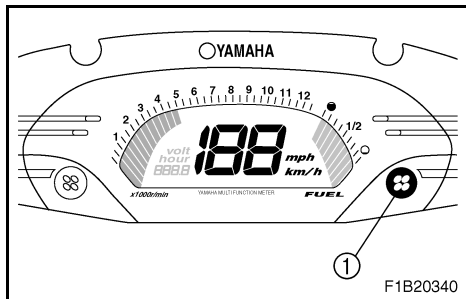


EJU01788

Speedometer

The meter shows the watercraft speed against water.

NOTE:

To switch the speedometer display between kilometers and miles, push the speedometer display select switch ① for at least 2 seconds.

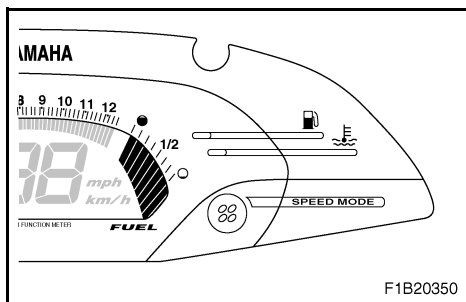

EJU01789

Fuel meter

The fuel meter is provided for convenient fuel level checking while riding. The fuel meter has eight segments which show the amount of fuel remaining in the fuel tank.

NOTE:

The fuel level is most accurate when the watercraft is sitting level on a trailer or in the water.




EJU01790

Hour meter/Voltmeter

NOTE:

To switch the display between the hour meter and voltmeter, push the hour meter/voltmeter display select switch ① for at least 2 seconds.

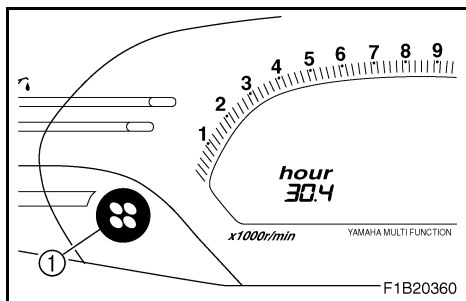

Hour meter

The hour meter is provided to make it easy to follow the maintenance schedule.


The meter shows the hours of engine operation that have elapsed since the watercraft was new.

Voltmeter

The voltmeter is provided to display the voltage of the battery.

The voltmeter displays 12 volts or more when the battery voltage is within specification.

If the voltage displayed is low, beach the watercraft and, if necessary, have a Yamaha dealer check the charging system.

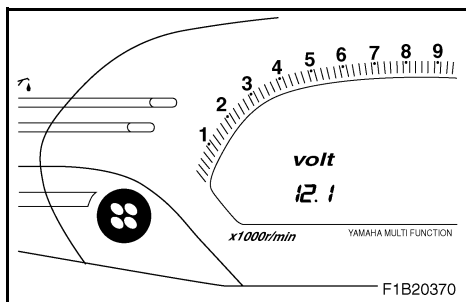



EJU01791

Check engine warning indicator

If a sensor malfunction or a short circuit is detected, the warning indicator begins to blink and the buzzer sounds intermittently.

If this occurs, reduce the engine speed, beach the watercraft, and have a Yamaha dealer check the engine.

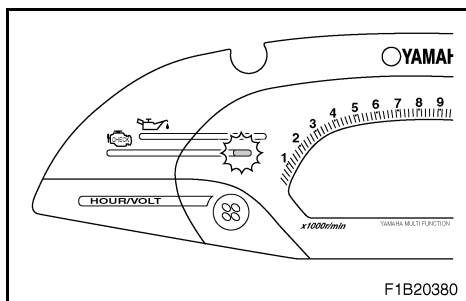

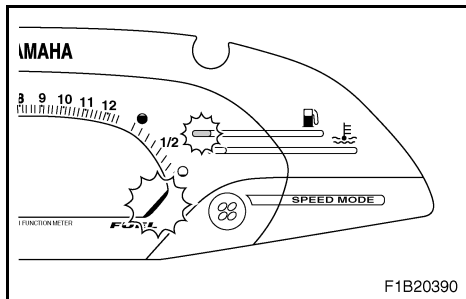


EJU01792

Fuel warning indicator

If the fuel remaining in the tank drops to about 13 L (3.4 US gal, 2.9 Imp gal), the lowest fuel level segment and the fuel warning indicator begin to blink, and the buzzer sounds intermittently.

If this occurs, fill the fuel tank at the first opportunity.

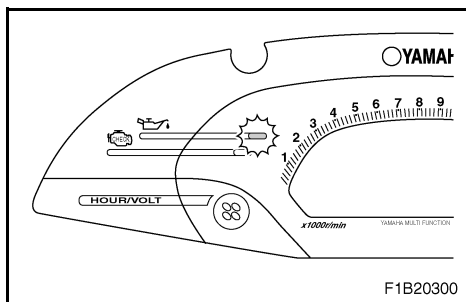

EJU01793

Oil pressure warning indicator

If the oil pressure does not rise to specification, the oil pressure warning indicator come on and the buzzer begins to sound continuously. At the same time, the engine speed reduction control is activated.

If this occurs, reduce the engine speed, beach the watercraft, and have a Yamaha dealer check the oil pressure.

NOTE: _____
Press any button on the multifunction meter to stop the buzzer.



EJU01794

Engine overheat warning indicator

This model is equipped with an engine overheat warning system.

If the engine starts to overheat, the overheat warning indicator blinks for 5 seconds, and then it comes on. The buzzer also begins to sound intermittently, and then it sounds continuously. At the same time, the engine speed reduction control is activated when the engine runs over 3,000 r/min.

If this occurs, immediately reduce the engine speed and beach the watercraft, and check for water discharge at the port (left) cooling water pilot outlet. If there is no discharge of water, check the intake grate and impeller for clogging.

⚠ WARNING




Before attempting to remove weeds or debris from the intake grate or impeller, shut the engine off and remove the clip from the engine shut-off switch. Severe injury or death could result from coming in contact with the rotating parts of the jet pump.

CAUTION:

If you cannot locate and correct the cause of the overheating, consult a Yamaha dealer. Continuing to operate at higher speeds could result in severe engine damage.

NOTE:

Press any button on the multifunction meter to stop the buzzer.

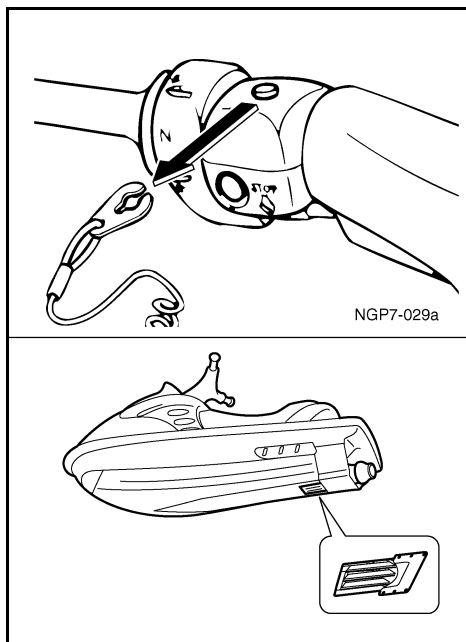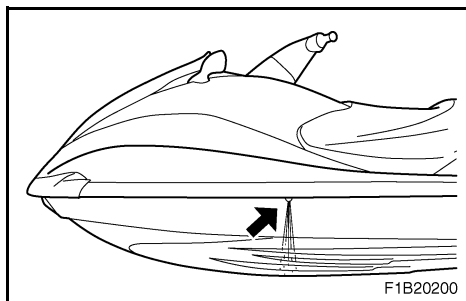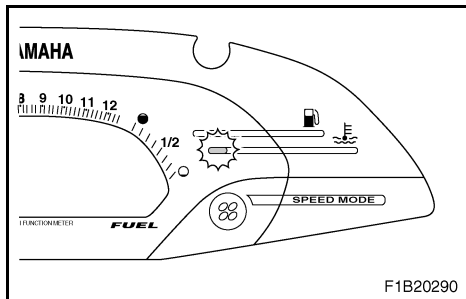







EJU01236

Storage compartments

A front storage compartment, a glove compartment, and seat storage compartments are provided.

NOTE:

- Make sure that the storage compartments are properly secured before operating the watercraft.
- The storage compartments are not designed to be waterproof. If you carry objects that must be kept dry, such as the manuals, put them in a waterproof bag.

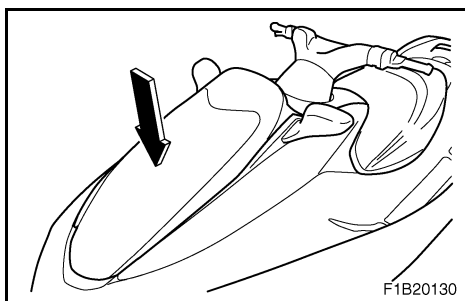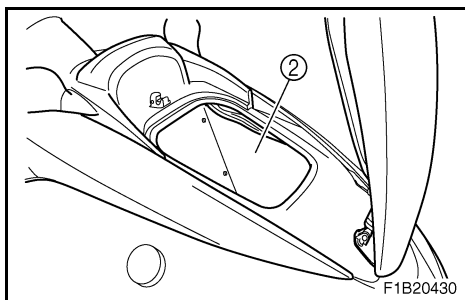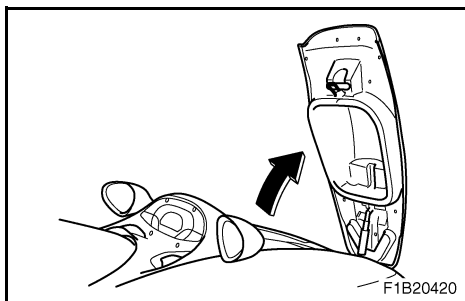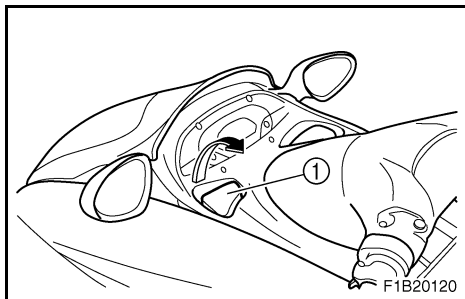

EJU01795

Front storage compartment

The front storage compartment ② is located at the bow.

To open the front storage compartment, pull the hood release lever ① up, and then open the hood.

To close the front storage compartment, push down on the rear of the hood until it latches securely.

NOTE:


Make sure that the front storage compartment is properly secured before operating the watercraft.

Front storage compartment:

Capacity: 75.0 L

(19.8 US gal, 16.5 Imp gal)

Load limit: 5.0 kg (11 lb)

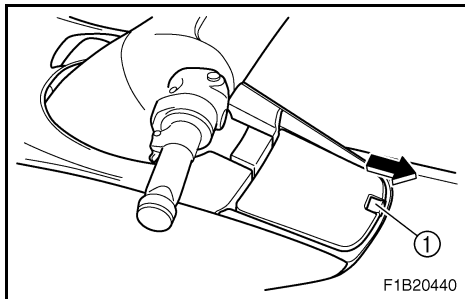

EJU01796

Glove compartment

A glove compartment ② is located in front of the seat.


To open the glove compartment, slide the latch ① toward you, and then lift up the lid.

To close the glove compartment, push the lid down until it locks securely.

NOTE:

A removable beverage holder ③ is provided in the glove compartment.


Do not use the beverage holder when operating the watercraft.

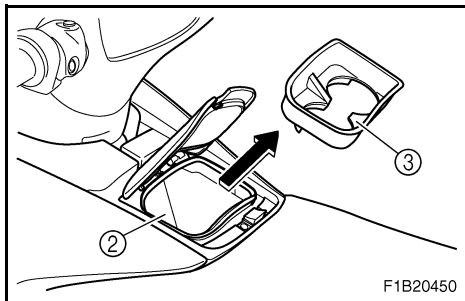

Glove compartment:

Capacity: 10.0 L (2.6 US gal, 2.2 Imp gal)

Load limit: 1.0 kg (2.2 lb)

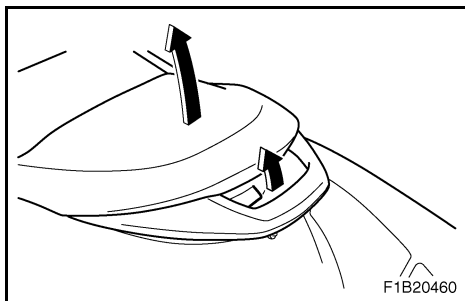

EJU01797

Seat storage compartment


The seat storage compartment ① is located under the rear seat.

To open the seat storage compartment, remove the rear seat. (See page 2-5 for rear seat removal and installation procedures.)

Seat storage compartment:

Capacity: 15.0 L (4.0 US gal, 3.3 Imp gal)


Load limit: 9.0 kg (19.8 lb)

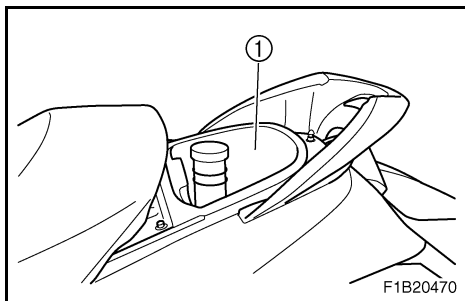



—MEMO—

OPERATION

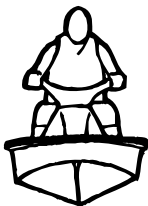

Fuel and oil	3-1
Gasoline	3-1
Engine oil	3-3
Filling the fuel tank	3-4
Pre-operation checks	3-5
Pre-operation check list	3-5
Pre-operation check points	3-6
Operation	3-16
Engine break-in	3-16
Launching the watercraft	3-17
Starting the engine	3-18
Stopping the engine	3-20
Leaving the watercraft	3-20
Operating your watercraft	3-21
Getting to know your watercraft	3-21
Learning to operate your watercraft	3-21
Riding watercraft with passengers	3-22
Starting the watercraft	3-23
Boarding and starting in deep water	3-25
Capsized watercraft	3-27
Turning the watercraft	3-29
Stopping the watercraft	3-31
Beaching the watercraft	3-32
Docking the watercraft	3-32
Reverse on waterways	3-33
Rough water operation	3-33
Post-operation checks	3-34
Transporting	3-36



EJU01798

Fuel and oil

This watercraft is equipped with a 4-stroke engine. Conventional 2-stroke engine oil cannot be used.

The engine utilizes an electronic fuel injection system to deliver the optimal air-fuel mixture ratio required by the engine. With optimal combustion conditions, this system is able to increase startability and improve fuel economy.

EJU01042

Gasoline

⚠ WARNING

GASOLINE AND ITS VAPORS ARE HIGHLY FLAMMABLE AND EXPLOSIVE!

- Do not smoke when refueling, and keep away from sparks, flames, or other sources of ignition.
- Stop engine before refueling.
- Refuel in a well-ventilated area. Do not stand or sit on the watercraft while refueling in case of fire.
- Take care not to spill gasoline. If gasoline spills, wipe it up immediately with dry rags. Always properly dispose of gasoline-soaked rags.
- Avoid overfilling the fuel tank. Stop filling when the fuel level just reaches the bottom of the filler tube. Do not fill up the filler tube because fuel expands as it warms up and could overflow.
- Tighten the filler cap securely after refueling.
- If you should swallow some gasoline, inhale a lot of gasoline vapor, or get gasoline in your eyes, get immediate medical attention.
- If any gasoline spills onto your skin, immediately wash with soap and water. Change clothing if gasoline spills on it.

**CAUTION:**

Use only fresh gasoline that has been stored in clean containers.

Recommended gasoline:

Regular unleaded gasoline with a minimum octane rating of

86 (Pump octane number) = $(R+M)/2$

90 (Research octane number)

EJU01832

Gasohol

There are two types of gasohol: gasohol containing ethanol and that containing methanol.

Gasohol containing ethanol can be used if ethanol content does not exceed 10% and the fuel meets minimum octane ratings.

Gasohol containing methanol is not recommended by Yamaha because it can cause fuel system damage or engine performance problems.



EJU01799

Engine oil

Use a combination of the recommended SAE and API oil classifications shown in the chart below.

SAE		API
-4	32	SE
		SF
		SG
		SH
		SJ
		F1B30020

CAUTION: _____

Use only 4-stroke engine oil.




EJU01800

Filling the fuel tank

CAUTION:

Be careful when refueling. Avoid getting water or other contaminants in the fuel tank. Contaminated fuel can cause poor running or engine damage.

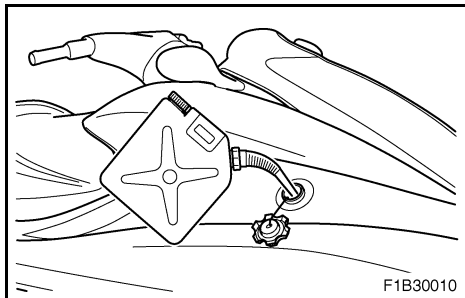

1. Remove the rear and front seats. (See pages 2-5 and 2-6 for seat removal and installation procedures.)
2. Open the fuel tank filler cap, and slowly add fuel to the fuel tank.
3. Stop filling when the fuel just reaches the bottom of the filler tube on the fuel tank. Do not fill into the filler tube, because fuel could spill out.

Fuel tank capacity:

Total: 70.0 L (18.5 US gal, 15.4 Imp gal)



EJU01346

Pre-operation checks

EJU01801

Pre-operation check list

Before operating this watercraft, perform the checks in the following check list. See the accompanying text in this chapter for details on how to perform the checks.


⚠ WARNING

If any item in the pre-operation check list is not working properly, have it inspected and repaired before operating the watercraft, otherwise an accident could occur.

ITEM	ROUTINE	PAGE
Engine compartment	Remove all seats to ventilate engine compartment. Check for fuel vapors or loose electrical connections	3-6
Bilge	Check for water and fuel residue and remove if necessary	3-9
Throttle	Check that the throttle lever springs back	3-12
Steering system	Check for proper steering system operation	3-12
Shift lever and reverse gate	Check for proper operation	3-13
Fuel	Check fuel level and add if necessary Check hoses and tank for leakage	3-6
Engine oil	Check oil level and add if necessary	3-7
Water separator	Check for water and drain if necessary	3-8
Battery	Check electrolyte level and battery condition	3-10
Front and rear seats	Check that the seats are properly secured	2-5, 6
Hull/Deck	Check the hull and deck for cracks or other damage	—
Jet unit	Check for debris and remove if necessary	3-14
Fire extinguisher	Check the condition and replace if necessary	3-11
Engine shut-off cord	Check condition and replace if frayed or broken	3-14
Switches	Check the start switch, engine stop switch and engine shut-off switch for proper operation when the watercraft is in the water	3-15
Cooling water pilot outlet	Check that water is discharged while the engine is running and the watercraft is in the water	3-15
Multifunction meter	Check for warning indications and proper operation	3-15

NOTE:

Pre-operation checks should be made thoroughly each time the watercraft is used. This procedure can be completed in a short time. It is worth the time spent to assure safety and reliability.

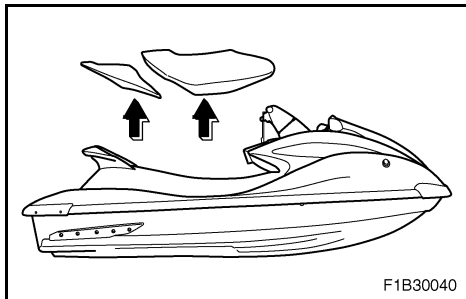

EJU01048

Pre-operation check points

EJU01878

Engine compartment

Ventilate the engine compartment before each use.

To ventilate the engine compartment remove the rear and front seats. (See pages 2-5 and 2-6 for seat removal and installation procedures.) Allow the engine compartment to remain open for a few minutes to allow any fuel vapors to escape. Also, check for loose electrical connections.

⚠ WARNING

Failure to ventilate the engine compartment could result in fire or explosion. Do not start the engine if there is a fuel leak or a loose electrical connection.

EJU01802

Fuel level

Check the fuel system for leakage, cracks or malfunctions before each use. (See page 4-10 for check points and correct procedures.)

1. Remove the fuel tank filler cap to release any pressure that might have built up in the fuel tank.
2. Remove the rear and front seats. (See pages 2-5 and 2-6 for seat removal and installation procedures.)
3. Check the fuel level in the tank and replenish if necessary. (See page 3-4 for filling instructions.)





EJU01803

Engine oil level

Check the engine oil level before each use.

CAUTION:

- The watercraft is shipped from the factory without engine oil.
Be sure to check the engine oil level before operating the watercraft for the first time.
- Do not run the engine with too much or not enough oil in the oil tank. Oil could flow into the air filter case and the engine could be damaged.

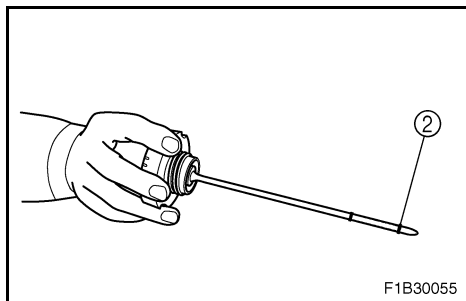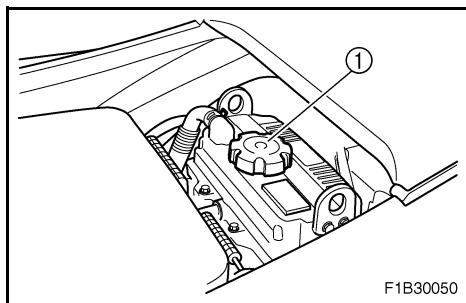

Checking the engine oil level:


1. Place the watercraft in a horizontal position.
2. Remove the rear and front seats. (See pages 2-5 and 2-6 for seat removal and installation procedures.)
3. Remove the oil tank filler cap ① and check that the oil level is at least at the minimum level mark ② on the dipstick.
4. If the oil level is below the minimum level mark, pour enough oil so that the oil level is at the minimum level mark on the dipstick, and then install the filler cap. If the oil level is at the minimum level mark, the watercraft can be operated normally. If adding engine oil to the oil tank, it is recommended to check the oil level again as follows.

NOTE:


The oil level on the dipstick raises approximately 60 mm (2.4 in) per 1 L (1.1 US qt, 0.9 Imp qt) of engine oil added to the oil tank.

**Checking the engine oil level again:**

1. Launch the watercraft, and then start the engine.
2. Run the engine at 7,000 r/min for 5 minutes or more and at trolling speed for 2–3 minutes, and then turn the engine off.
3. Remove the oil tank filler cap, wipe the dipstick clean, insert it back into the filler hole, and then remove it again to check the oil level.
4. If the engine oil is below the minimum level mark, add sufficient oil of the recommended type to raise it to the correct level. If the engine oil is above the maximum level mark ③, extract sufficient oil to lower it to the correct level.

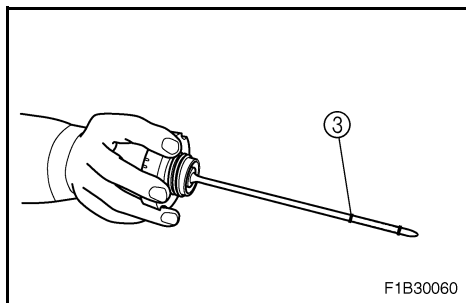**NOTE:**

- The engine oil should be between the minimum and maximum level marks.
- To check the engine oil level accurately, be sure to adequately warm the engine up.

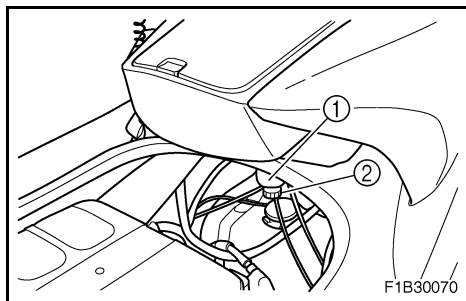

EJU01833

Water separator

Check the water separator ① for water. Normally the water separator is empty. The water separator retains any water entering through the fuel tank breather hose if the watercraft is capsized.

If water remains in the water separator, drain it by removing the drain screw ②. Install the drain screw after draining the water separator.



EJU01804

Bilge

Check for moisture and fuel residue in the bilge.

This watercraft is equipped with a conventional jet vacuum bilge draining system and an electric bilge draining system. The electric bilge draining system is operated when the engine is running. When excess water reaches the water inlet of the electric bilge pump, the water is discharged from the electric bilge pilot outlet ① at the stern.

A small quantity of water will remain in the bilge and should be removed manually. To remove any residual water, perform the following procedure.

CAUTION:



If starting the engine after it has capsized, do not operate the engine at full open throttle when water is being discharged from the electric bilge pilot outlet at the stern. Excessive water in the bilge can splash into the engine which could cause damage.

To remove water from the bilge:

1. Remove the stern drain plugs.
2. Raise the bow of the watercraft until the water drains.
3. After the water has drained, wipe the bilge with dry rags to make sure that the bilge is thoroughly dry.
4. Install the drain plugs.

CAUTION:

- Make sure that the stern drain plugs are tightened securely before launching the watercraft.
- Clean any foreign materials, such as dirt or sand, from the drain plug threads before installing the drain plugs.

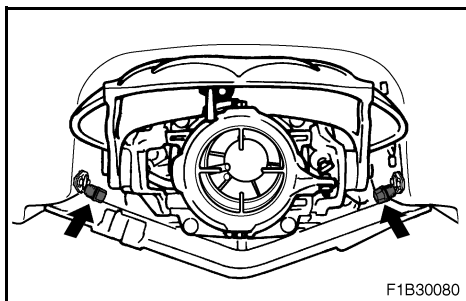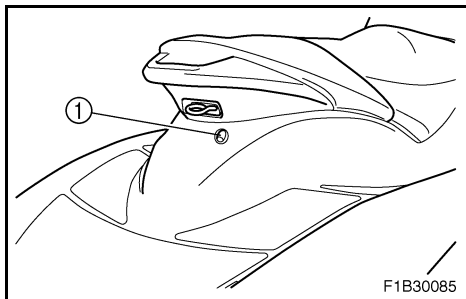



EJU01054


Battery

Check the battery condition and the electrolyte level.

Check that the battery leads are tightened securely and there is no corrosion on the battery terminals.

⚠ WARNING

The battery must always be fully charged and in good condition. Loss of battery power may leave you stranded. Never operate the watercraft if the battery does not have sufficient power to start the engine or if it shows any other signs of decreased power.

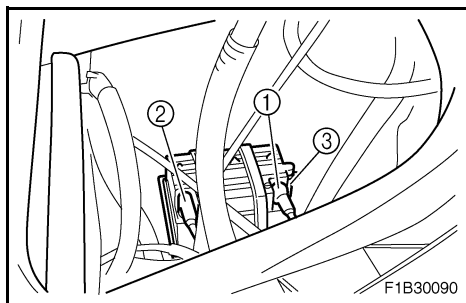

Make sure that the breather hose is properly connected and that it is not damaged or obstructed.

Make sure that the battery is securely held in place.

- ① Positive (+): Red lead
- ② Negative (-): Black lead
- ③ Breather hose



EJU01864

Fire extinguisher



Check that there is a full fire extinguisher on board. The fire extinguisher container ① is located in the seat storage compartment.

To open the fire extinguisher container cap ②, turn it counterclockwise.

After inserting the fire extinguisher make sure that the container cap is tightened securely.

NOTE:

- See the instructions supplied by the fire extinguisher manufacturer for checking the fire extinguisher. Always keep the extinguisher in the fire extinguisher container.
- Always carry a fire extinguisher on board. A fire extinguisher is not standard equipment with this watercraft. If you do not have one, contact a Yamaha dealer or a fire extinguisher dealer to obtain one meeting the proper specifications.

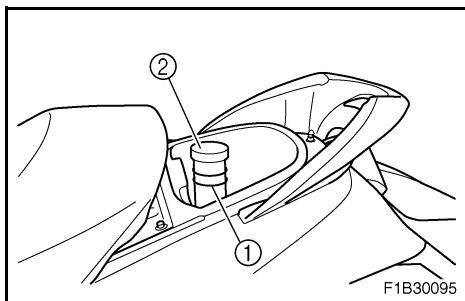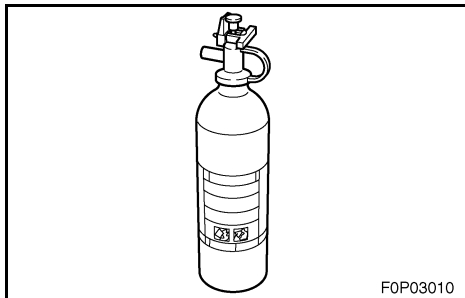




EJU01834

Throttle

Squeeze and release the throttle lever several times to make sure that there is no hesitation in its travel. It should be smooth over the complete range, and spring back to the idle position when released.

⚠ WARNING

Before starting the engine, always check the operation of the throttle lever.

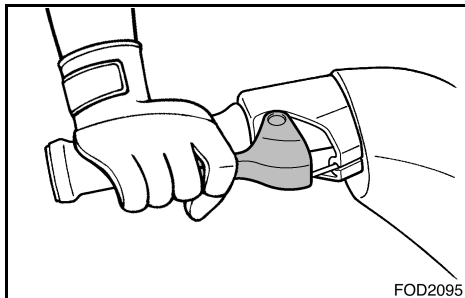

FOD2095


EJU01848

Steering system


Check for looseness in the handlebars.

Turn them as far as possible to the right and left to make sure that operation is smooth and unrestricted throughout the whole range. Make sure that the jet thrust nozzle also changes directions as the handlebars are turned, and that there is no free play between the handlebars and the jet thrust nozzle.

Check that the handlebars are locked in position. (See "Tilt lever" on page 2-10 for more information.)

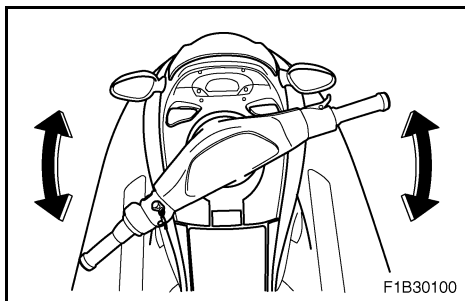

F1B30100

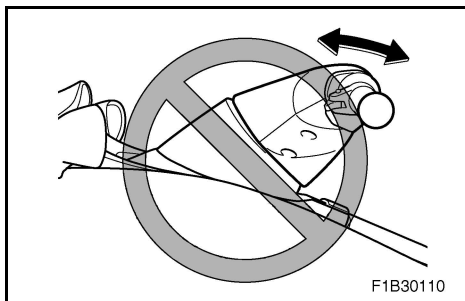

F1B30110




EJU01245

Shift lever and reverse gate

Check for proper operation of the shift lever and reverse gate.


Make sure that the reverse gate goes down to its stopper position when the shift lever is pulled up.

Also, make sure that the reverse gate goes up to its stopper position when shift lever is pushed down.

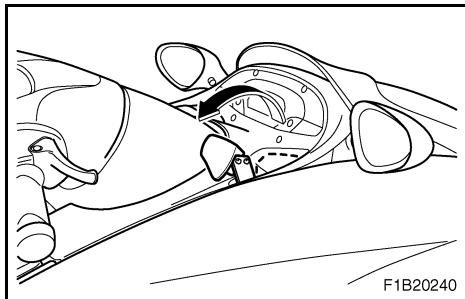

⚠ WARNING

- Make sure that the throttle is completely released and that the engine is at idle before shifting into reverse.
- Do not use the reverse function to slow down or stop the watercraft as it could cause you to lose control, be ejected, or impact the handlebars.
- Use reverse for slow-speed maneuvering only.
- Make sure that there are no obstacles or people behind you before shifting into reverse.
- Do not touch the reverse gate while the shift lever is being operated, otherwise you could be pinched.

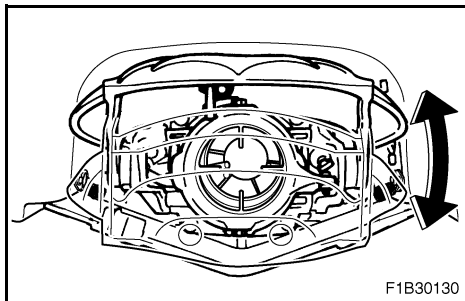



EJU01058



Jet unit

Carefully check the jet intake for weeds, debris, or anything else that might restrict the intake of water. If the intake is clogged, cavitation could occur, reducing jet thrust, and possibly damaging the jet pump.

In some cases, the engine may overheat because of lack of cooling water, and damage to the engine could result. Engine cooling water is fed to the engine by the jet pump. (See page 5-3 for jet intake cleaning procedures.)

⚠ WARNING


- Keep away from intake grate while engine is on. Items such as long hair, loose clothing, or PFD straps can become entangled in moving parts resulting in severe injury or drowning.
- Stop the engine and remove the clip from the engine shut-off switch before removing any debris or weeds, which may have collected around the jet intake.

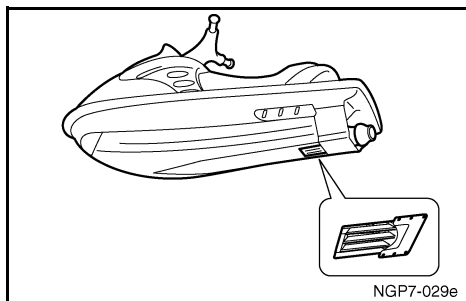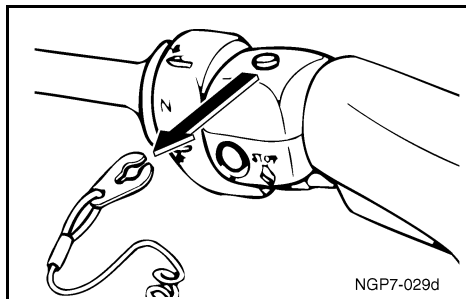


EJU01059

Engine shut-off cord (lanyard)

Check that the engine shut-off cord is not frayed or broken. If the cord is damaged, replace it; never try to repair it or tie it together.

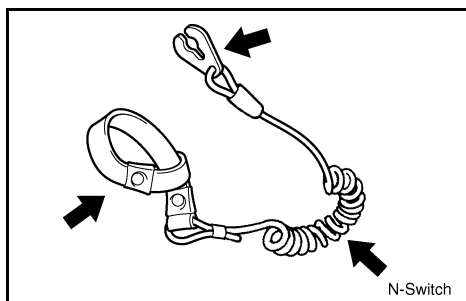

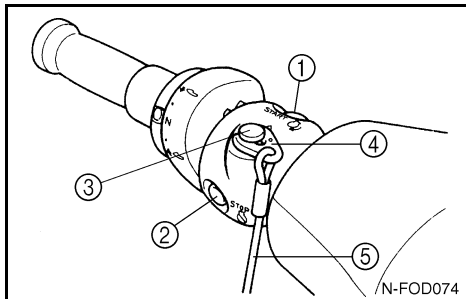


EJU01835

Switches

Check the start switch ①, the engine stop switch ②, and the engine shut-off switch ③ for proper operation.


To check these switches, place the watercraft in the water to provide adequate cooling. Start the engine, and then pull the engine shut-off cord ⑤ to remove the clip ④ from the engine shut-off switch. Verify that the engine stops immediately. (See pages 2-7 to 2-9 for information on proper operation of the start switch, the engine stop switch and the engine shut-off switch.)

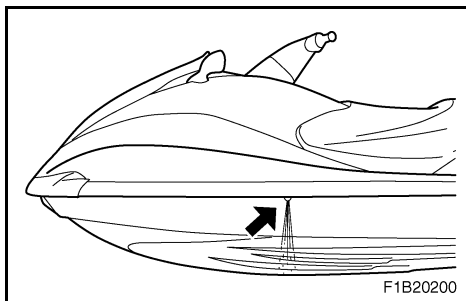

EJU01806

Cooling water pilot outlet

Check that water comes out from the port (left) pilot water outlet while the engine is running and the watercraft is in the water. (See page 2-9 for further instructions.)

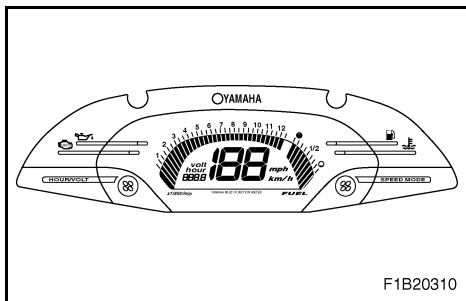

EJU01246

Multifunction meter

Check the operation of the multifunction meter. (See pages 2-14 to 2-18 for operation of the meter.)



EJU01836


Operation

⚠ WARNING

Before operating your watercraft, become familiar with all controls. Consult your Yamaha dealer about any control or function you do not fully understand. Failure to understand how controls work could cause an accident or prevent you from avoiding an accident.

CAUTION:

Make sure that the stern drain plugs are securely tightened before launching the watercraft.

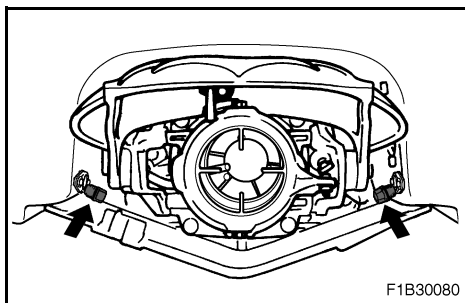

EJU01807

Engine break-in

The engine break-in period is essential to allow the various components of the engine to wear and polish themselves to the correct operating clearances. This ensures proper performance and promotes longer component life.

CAUTION:

The watercraft is shipped from the factory without engine oil.

Be sure to check the engine oil level before operating the watercraft for the first time. (See page 3-7 for engine oil checking procedures.)

1. Launch the watercraft and start the engine. (See page 3-18 for engine starting procedures.)



2. For the first 5 minutes, run the engine at trolling speed only. For the 30 minutes of operation after that, keep the engine speed below 5,000 r/min. For the 1 hour of operation after that, keep the engine speed below 8,000 r/min.
3. Proceed with normal operation.

CAUTION:

Failure to follow the engine break-in procedure could result in reduced engine life or even severe engine damage.

EJU01247

Launching the watercraft

Make sure that there are no obstructions behind you.

After the watercraft is in the water, start the engine. Shift into reverse and move the watercraft back slowly. If there are waves, someone should make sure that the watercraft is not pushed into the trailer before backing away.




EJU01808

Starting the engine

⚠ WARNING

Never start the engine or let it run for any length of time in an enclosed area. Exhaust fumes contain carbon monoxide, a colorless, odorless gas that may cause loss of consciousness and death within a short time. Always operate the watercraft in an open area.

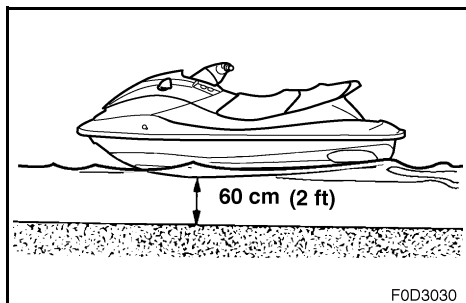



1. Launch the watercraft in water free from weeds and debris and at least 60 cm (2 ft) deep.

⚠ WARNING

Never operate in water that is less than 60 cm (2 ft) deep, otherwise you increase your chance of hitting a submerged object, which could result in injury.

CAUTION:

Never operate in water that is less than 60 cm (2 ft) deep, otherwise pebbles or sand could be sucked into the jet intake, causing impeller damage or engine overheating.

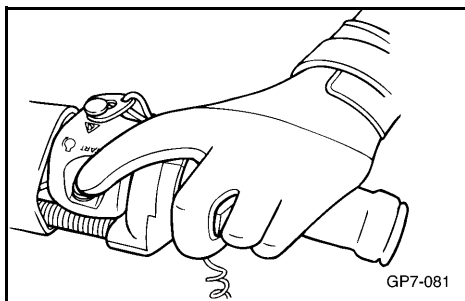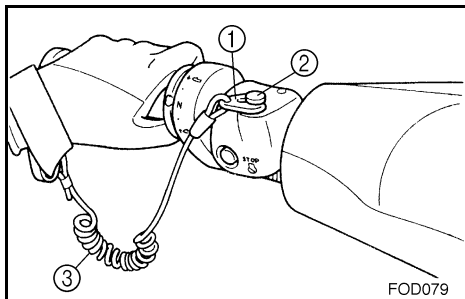

2. Attach the clip ① to the engine shut-off switch ②. Also, attach the engine shut-off cord ③ to your left wrist.

⚠ WARNING

Check that the engine shut-off cord is not frayed or broken, and keep it free from the handlebars so the engine stops if the operator falls off. The engine shut-off cord may not pull free if wrapped around the handlebars when the operator falls off, allowing the watercraft to continue to run and cause an accident.

NOTE:

It is not possible to start the engine with the clip removed from the engine shut-off switch.

3. Push the start switch (green button).


NOTE:

The engine will not start if the throttle lever is squeezed.

4. Release the start switch as soon as the engine starts to run.

CAUTION:

- **Never push the start switch while the engine is running.**
- **Do not operate the start switch for more than 5 seconds, otherwise the battery will be discharged and the engine will not start. Also, the starter motor may be damaged. If the engine does not start in 5 seconds, release the start switch, wait 15 seconds, and then try again.**

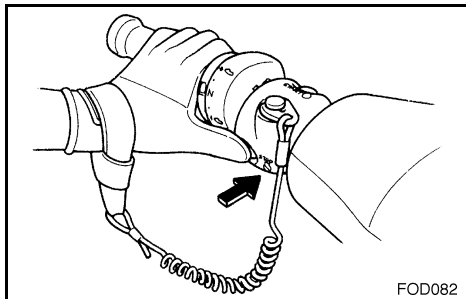

EJU01066

Stopping the engine

To stop the engine, release the throttle lever, and then push the engine stop switch (red button).

⚠ WARNING

You need throttle to steer. Shutting off the engine can cause you to hit an obstacle you are attempting to avoid. A collision could result in severe injury or death.

EJU01067

Leaving the watercraft

If leaving the watercraft, remove the engine shut-off cord to reduce the chance of accidental starting or unauthorized use by children or others.



EJU01068

Operating your watercraft

EJU01250

Getting to know your watercraft

Operating your watercraft requires skills acquired through practice over a period of time. Take the time to learn the basic techniques well before attempting more difficult maneuvers.

Operating your new watercraft can be a very enjoyable activity, providing you with hours of pleasure. However, it is essential to familiarize yourself with the operation of the watercraft to achieve the skill level necessary to enjoy riding safely. Before operating this watercraft, read this Owner's/Operator's Manual, the Riding Practice Guide, and all warning and caution labels on the watercraft. Pay particular attention to the safety information on pages 1-11 to 1-18. These materials should give you an understanding of the watercraft and its operation.

Remember: This watercraft is designed to carry the operator and up to 2 passengers. Never exceed the maximum load limit or allow more than 3 persons (or 2 persons if a water-skier is being pulled) to ride the watercraft at one time.

Maximum load: 240 kg (530 lb)

Load is the total weight of cargo, operator and passengers.


EJU01070

Learning to operate your watercraft

Before operating the watercraft, always perform the pre-operation checks listed on page 3-5. The short time spent checking the watercraft will reward you with added safety and reliability.

Check all local laws before operating your watercraft.

Operate defensively at safe speeds and keep a safe distance away from people, objects, and other watercraft. Select a wide area to learn in, where you have good visibility and light boat traffic.

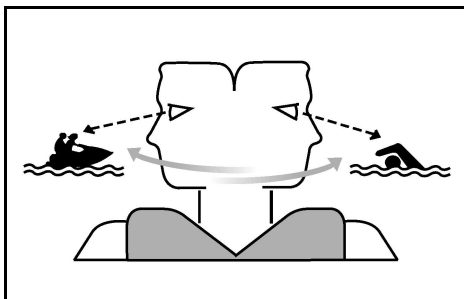

Use the buddy system—operate with someone nearby. Scan constantly for people, objects, and other watercraft. Be alert for conditions that limit your visibility or block your vision of others.

Attach the engine shut-off cord (lanyard) to your wrist and keep it free from the handlebars so that the engine stops if the operator falls off.

Wear a personal flotation device (PFD). All riders must wear an authority-approved PFD that is suitable for personal watercraft use.



Wear protective clothing. Severe internal injuries can occur if water is forced into body cavities as result of falling into the water or being near the jet thrust nozzle. Normal swimwear does not adequately protect against forceful water entry into rectum and vagina. All riders must wear a wetsuit bottom or clothing that provides equivalent protection.

Such clothing includes thick, tightly woven, sturdy and snug-fitting apparel such as denim, but does not include spandex or similar fabrics like those used in bicycle shorts. A full wetsuit can also protect against hypothermia (subnormal body temperature) and abrasions.

Footwear and gloves are recommended.

Eye protection is recommended to keep wind, water, and glare from the sun out of your eyes while you operate your watercraft. Restraining straps for eyewear are made which are designed to float should your eyewear fall in the water.

You should grip the handlebars firmly and keep both feet on the floor of the footwell. Do not attempt to ride with passengers until your operating skills are fully developed.

EJU01865

Riding watercraft with passengers

When 2 or 3 persons (including the operator) are on board, the watercraft handles differently, and is not as easy to maneuver, so operating it requires a higher degree of skill. Before attempting to operate the watercraft with passengers on board, the operator must practice operating the watercraft alone enough to be able to acquire the necessary skills.

The passengers must always wear an authority-approved PFD that is approved by the appropriate authorities and wetsuit bottom or equivalent.

⚠ WARNING

Do not apply throttle when anyone is at rear of watercraft. Turn engine off or keep engine at idle. Water and/or debris exiting the jet thrust nozzle can cause severe injury. Passengers should not attempt to board the watercraft if the operator is applying throttle.

Do not give a ride to children whose feet cannot reach the floor of the footwell. Passengers should hold on firmly to the person in front of them and keep both feet in the footwell.

⚠ WARNING

When passengers are on board, make sure that they are holding on firmly and have feet in the footwell before you start to accelerate.

When pulling a skier, the spotter should face to the rear while holding the handgrip with both hands. The spotter should always sit astride the seat with his or her feet placed firmly on the floor of the footwell for proper balance. Follow all local laws regarding skiing such as skier-down flags, rearward-facing spotter, and other requirements.





EJU01837

Starting the watercraft

⚠ WARNING

- Scan constantly for people, objects, and other watercraft. Be alert for conditions that limit your visibility or block your vision of others.
- Operate defensively at safe speeds and keep a safe distance away from people, objects, and other watercraft.
- Do not follow directly behind watercraft or other boats. Do not go near others to spray or splash them with water. Avoid sharp turns or other maneuvers that make it hard for others to avoid you or understand where you are going. Avoid areas with submerged objects or shallow water.
- Take early action to avoid collisions. Remember watercraft and other boats do not have brakes. Do not release the throttle when trying to steer away from objects—you need throttle to steer.
- Practice reboarding in shallow water before riding in deep water.

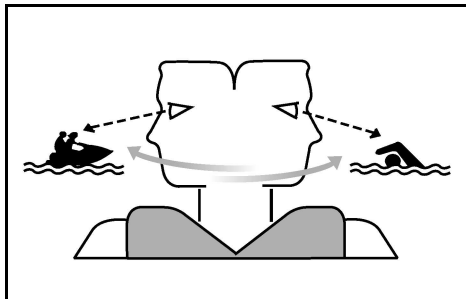

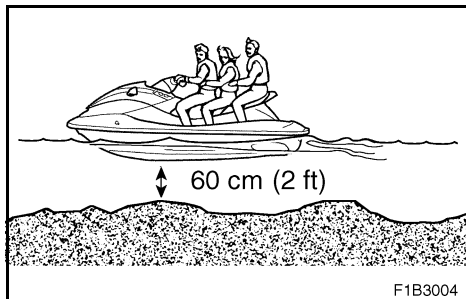

EJU01073

Starting and boarding in shallow water

1. Do not start the engine in less than 60 cm (2 ft) of water. Put the watercraft in water that is deep enough, and then board the watercraft from the side or the rear.
2. Attach the engine shut-off cord to your left wrist, and then install the clip to the engine shut-off switch.
3. Grip the handlebars with both hands, place both feet on the floor of the foot-well, start the engine, and start off.

EJU01074

Starting from a dock

1. Board the watercraft from the side.
2. Attach the engine shut-off cord to your left wrist, and then install the clip to the engine shut-off switch.
3. Push the watercraft away from the dock, grip the handlebars with both hands, place both feet on the floor of the foot-well, start the engine, and start off.






EJU01075

Boarding and starting in deep water

⚠WARNING

- Operator and passenger should practice getting on board in shallow water before riding in deep water. Boarding in deep water requires more skill.
- The fatigue and exposure that could result after unsuccessful attempts to get back on the watercraft may increase the risk of injuries and drowning.

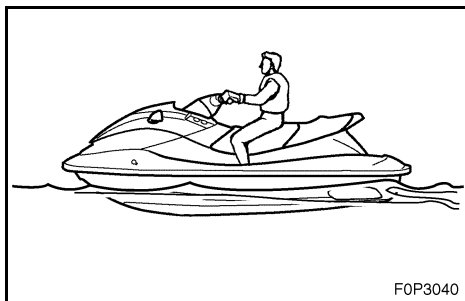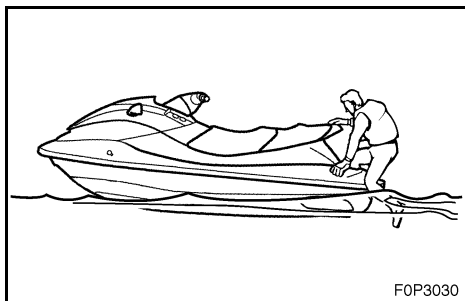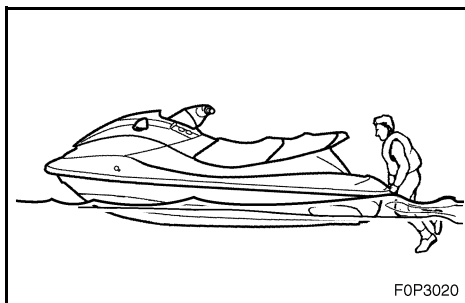

EJU01838

Boarding alone

1. Swim to the rear of the watercraft and place both hands on the boarding platform, pull yourself up, and then grasp the handgrip with one hand.
2. Pull yourself up to a kneeling position on the platform, and then move to the seat and sit astride.
3. Attach the engine shut-off cord to your left wrist, and then install the clip to the engine shut-off switch.
4. Grip the handlebars firmly with both hands, place both feet on the floor of the footwell, start the engine, and then look in all directions before starting off.

⚠WARNING

Before starting off, make sure that there are no boats, obstructions, or swimmers around you.




EJU01849


Boarding with passengers

⚠WARNING


Severe internal injuries can occur if water is forced into body cavities as a result of being near the jet thrust nozzle. Do not apply throttle until each passenger is seated with his or her feet on the floor of the footwell and is holding on to the person in front of him or her.

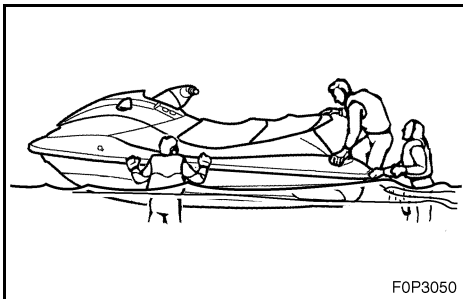


F0P3050

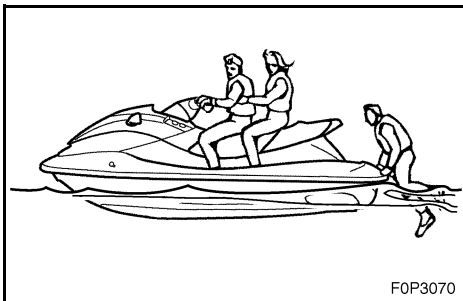

F0P3070

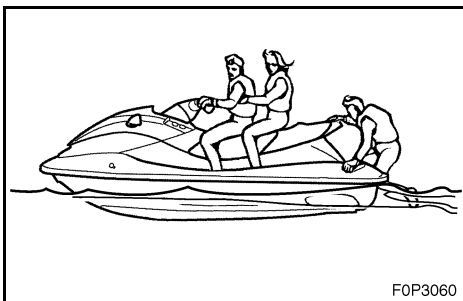

F0P3060

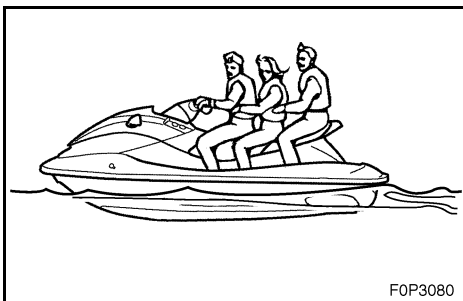

F0P3080

1. Climb on board as noted in the previous section, and sit astride the seat. Attach the engine shut-off cord to your left wrist, and then install the clip to the engine shut-off switch.
2. Have the passenger move to the rear of the watercraft.
3. Have the passenger get on board and sit on the seat. If a second passenger is getting on, have him or her follow the same procedure.




NOTE:

When a passenger is getting on board, both he and the operator should try to balance the watercraft.

4. The operator should check to see that the passengers have their feet on the floor of the footwell and that they are securely holding on to the person in front of them.
5. Start the engine, look in all directions, and then accelerate to planing speed.

⚠WARNING

Before starting off, make sure that there are no boats, obstructions, or swimmers around you.

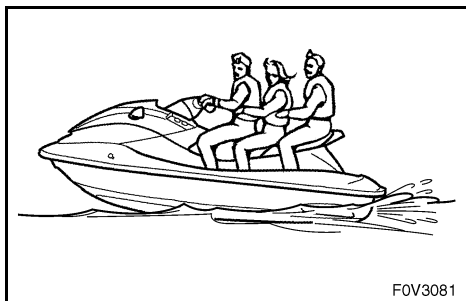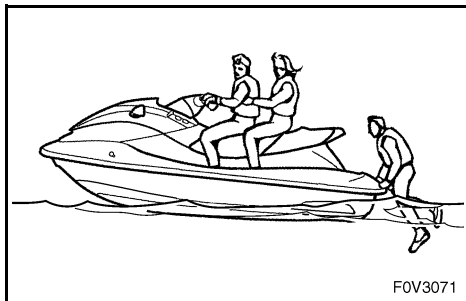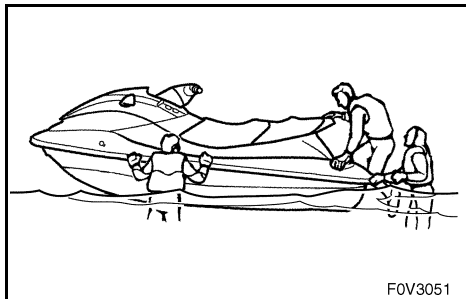**NOTE:**

The heavier the total weight of the operator and passengers, the more difficult it will be to balance the watercraft. Do not operate the watercraft when the total weight exceeds 240 kg (530 lb) including any cargo. If it is difficult to balance the watercraft at a standstill, proceed as follows:

1. The passenger must steady the watercraft while the operator is boarding. The operator pulls him or herself up to a kneeling position on the platform, and then moves to the seat and sits astride to balance the watercraft.
2. The operator attaches the engine shut-off cord to his or her left wrist, and then installs the clip to the engine shut-off switch.
3. The operator starts the engine and lets it run at idle.
4. The passenger pulls him or herself up to a kneeling position, and then crawls onto the seat as the watercraft accelerates.
5. The operator gradually increases speed to balance the watercraft.



EJU01810

Capsized watercraft

If the watercraft capsizes, follow the procedures below carefully to prevent damage or injury.

⚠ WARNING**IMPROPER UPRIGHTING CAN CAUSE INJURY:**

- Make sure that the engine shut-off cord is removed from the engine shut-off switch.
- Do not put your hand in the intake grate.
- Watch so you are not hit by the watercraft as it comes over.

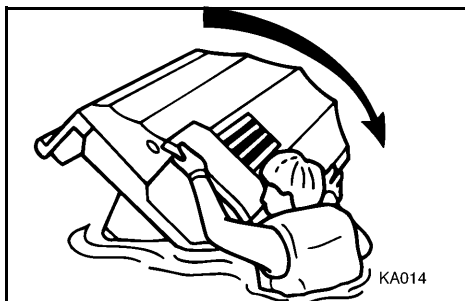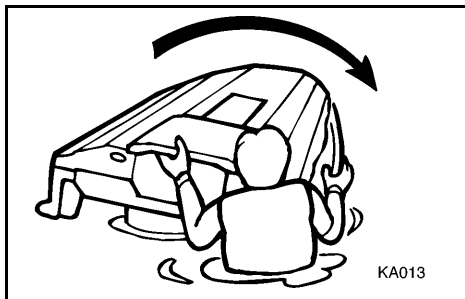**CAUTION:**

If the watercraft capsizes, release the throttle lever immediately. Oil could flow into the air filter case and the engine could be damaged.

1. Remove the clip from the engine shut-off switch.
2. Swim to the rear of the watercraft. Pull the watercraft over with your left hand on the ride plate while pushing down on the gunwale with your right hand and foot.

NOTE:

If the port (left) side of the capsized watercraft is tilting upward, first tilt the watercraft so the port (left) side is down by using your weight to press down on the gunwale.

CAUTION:

Do not turn the watercraft over counter-clockwise, otherwise water may leak into the engine and cause damage.

3. Start the engine, and then head for shore to inspect the engine for water damage.



EJU01839

Turning the watercraft

Steering control depends on the combination of handlebar position and the amount of throttle.

Water sucked in through the intake grate is pressurized by the impeller in the jet pump. As the pressurized water is expelled from the pump through the jet thrust nozzle, it creates thrust to move and steer the watercraft. The higher the engine speed, the more thrust is produced.



The amount of jet thrust, in addition to the position of the handlebars, determines how sharply you turn.

- A. More throttle produces higher thrust, so the watercraft will turn more sharply.
- B. Less throttle produces lower thrust, so the watercraft will turn more gradually.
- C. Releasing the throttle completely produces only minimum thrust. If you are traveling at speeds above trolling, you will have rapidly decreasing ability to steer without throttle. You may still have some turning ability immediately after releasing the throttle, but once the engine slows down, the watercraft will no longer respond to handlebar input until you apply throttle again or you reach trolling speed.

At trolling speed, the watercraft can be turned gradually by handlebar position alone using just the amount of thrust available at idle.

- D. If the engine is stopped while riding, there is no thrust. The watercraft will go straight even though the handlebars are turned.

You need throttle to steer.

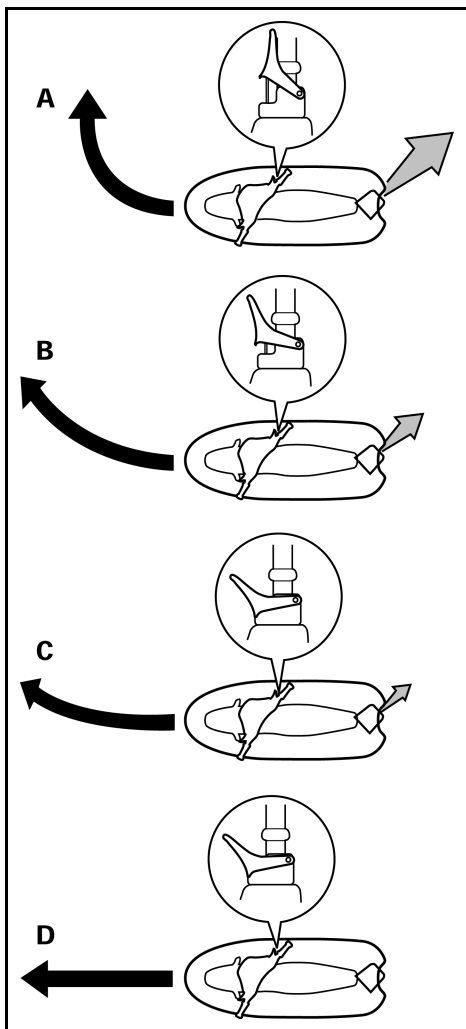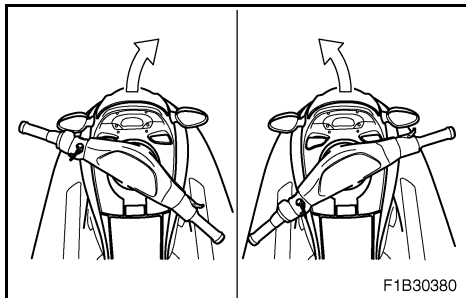

**⚠ WARNING**


- Do not release the throttle when trying to steer away from objects—you need throttle to steer. A collision could result in severe injury or death.
- When operating at higher speeds, make gradual turns or slow down before turning. Sharp high-speed turns may cause the watercraft to slide sideways or spin, throwing the operator and passengers overboard which could cause an injury.



EJU01850

Stopping the watercraft

The watercraft is not equipped with a separate braking system. It is stopped by water resistance when the throttle lever is released. From full speed, the watercraft comes to a complete stop in approximately 100 m (330 ft) after the throttle is released and the engine is stopped, although this distance will vary depending on many factors, including gross weight, water surface conditions, and wind direction. The watercraft slows down as soon as the throttle lever is released, but will coast for a distance before fully stopping. If you are not sure you can stop in time before hitting an obstacle, apply throttle and turn in another direction.

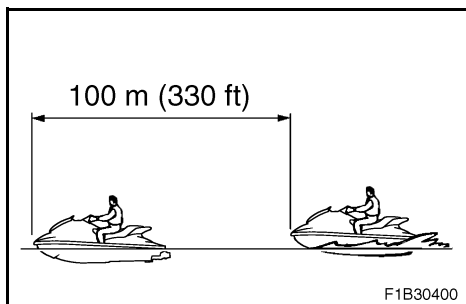

⚠ WARNING

- Allow adequate stopping distance.
- Take early action to avoid collisions. Remember, watercraft and other boats do not have brakes.
- Operate defensively at safe speeds and keep a safe distance away from people, objects, and other watercraft to give you time to stop.
- Do not shut the engine off when slowing down in case you need engine power to steer away from a boat or other obstacle that comes into your path.
- Do not use the reverse function to slow down or stop the watercraft as it could cause you to lose control, be ejected, or impact the handlebars.



EJU01081

Beaching the watercraft

1. Make sure no obstructions, boats or swimmers are near the beach. Release the throttle lever about 100 m (330 ft) before you reach the intended beaching area.
2. Approach the beach slowly and stop the engine before reaching land.
Remember: you need throttle to steer.
3. Get off the watercraft and pull it up on the beach.


CAUTION:

Small pebbles, sand, seaweed, and other debris can be pulled into the jet intake and impair or damage the impeller. Always stop the engine and get off before beaching the watercraft.

EJU01082

Docking the watercraft

1. Make sure that no obstructions, boats or swimmers are close to the watercraft. Reduce speed about 100 m (330 ft) away from the dock.
2. Slowly approach the dock and stop the engine just before coming alongside it.

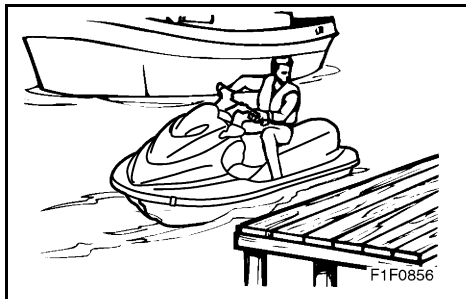

EJU01254

Reverse on waterways

Reverse can be used for slow speed maneuvering when it is necessary to back up out of tight spots where you cannot turn around. Reverse can only be used to slow down or stop during low speed maneuvering, such as when docking.

Once the engine is idling, shift to reverse and gradually increase engine speed. Make sure that there are no obstacles or people behind you before shifting to reverse.

EJU01255

Rough water operation

The force of landing after jumping can cause a strong impact on both the watercraft and the operator and passengers. It is possible for the operator to hit his or her chest or jaw on the watercraft body or handlebars and be injured. Do not operate the watercraft with your chin right above the handlebars or with your feet outside the watercraft. Operating in rough water or jumping waves can also crack the watercraft body or damage internal parts. Avoid operating in rough water or bad weather conditions.



EJU01866

Post-operation checks

Always perform the following post-operation checks after operating the watercraft.

1. Remove the watercraft from the water.
2. Wash down the hull, handlebars, and jet unit with fresh water.
3. Remove the seat and check the engine compartment for water. To drain excess water, remove the stern drain plugs, and then raise the bow of the watercraft enough to allow water in the bilge to drain out.


NOTE:

This watercraft is equipped with a jet vacuum bilge draining system and an electric bilge draining system that remove water from the engine compartment while you are underway. However, some residual water will remain. (See “Bilge” on page 3-9 for more information.)

4. Put the watercraft in a horizontal position.
5. Flush the cooling system to prevent it from clogging with salt, sand, or dirt. (See page 4-1 for flushing procedures.)
6. Drain residual water from the exhaust system by alternately squeezing and releasing the throttle lever for 10 to 15 seconds while the engine is running.

CAUTION:

Do not run the engine for more than 15 seconds on land. The engine could overheat.

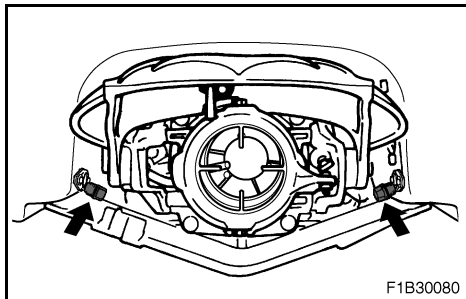



7. If the watercraft will be stored for a week or more, lubricate internal engine components to help prevent corrosion. (See page 4-3 for lubrication procedures.)
8. Rinse the engine and engine compartment with a small amount of water.

CAUTION:

Do not use high pressure when rinsing the engine or engine compartment as severe engine damage could result.

9. Wipe the engine and engine compartment dry with a clean cloth (repeat step 3, if necessary).
10. Wipe the hull, handlebars, and jet unit dry with a clean cloth.
11. Spray a rust inhibitor on metallic parts to minimize corrosion.
12. Allow the engine compartment to air dry completely before installing the seat.




EJU01811

Transporting

When transporting the watercraft on a trailer, secure the tie downs to the trailer through the bow eye and stern eye.

CAUTION:

- Do not route ropes or tie downs over the seat, as they may leave permanent marks on the seat's surface. Also, wrap the ropes or tie downs with towels or rags where they touch the body of the watercraft to avoid scratching or damage.
- Before putting the watercraft on the trailer or transporting it, be sure to put the shift lever in the forward position, otherwise the reverse gate may hit an obstruction, which may cause damage.

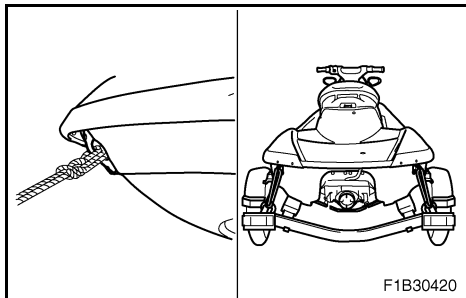



—MEMO—

EJU01086

MAINTENANCE AND CARE



Storage	4-1
Flushing the cooling system	4-1
Lubrication	4-3
Fuel system	4-4
Battery	4-5
Cleaning the watercraft	4-6
Maintenance and adjustments	4-7
Owner's/Operator's Manual and tool kit	4-8
Periodic maintenance chart	4-9
Inspecting the fuel system	4-10
Changing the engine oil	4-12
Checking the air filter element	4-14
Inspecting the steering cable	4-15
Inspecting the shift cable	4-15
Inspecting and adjusting the throttle cable	4-15
Inspecting the QSTS mechanism	4-16
Cleaning and adjusting the spark plugs	4-17
Lubrication points	4-19
Inspecting the battery	4-22
Adjusting the fuel injection system	4-24
Replacing the fuse	4-25
Specifications	4-26



EJU01812

Storage

Storage for prolonged periods of time, such as winter storage, requires preventative maintenance to ensure against deterioration. It is advisable to have the watercraft serviced by a Yamaha dealer prior to storage. However, the following procedures can be performed by the owner.



EJU01813

Flushing the cooling system

Flushing the cooling system is essential to prevent the cooling system from being clogged with salt, sand, or dirt.

CAUTION:

- **Do not supply water to the cooling water passages when the engine is not running. The water could flow back through the muffler into the crankcase causing severe engine damage.**
- **Do not run the engine for more 15 seconds without supplying water, otherwise the engine may overheat.**

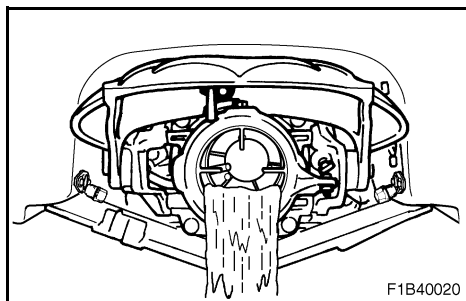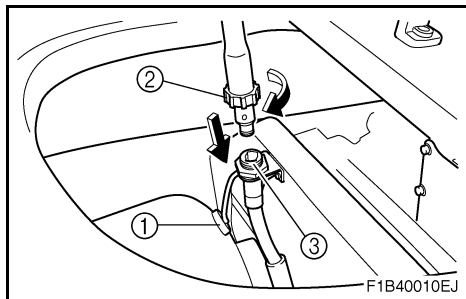

1. Put the watercraft on land in a horizontal position.
2. Remove the rear seat and seat storage compartment. (See page 2-5 for seat removal and installation procedures.)
3. Open the flushing hose connector cap ①, and then insert the garden hose adapter ② into the flushing hose connector ③ and turn it until it is securely connected.
4. Connect the garden hose adapter to a water tap using a hose.
5. Start the engine, and then immediately turn the water supply on until water flows out continually from the jet nozzle.
6. Run the engine at idling speed for about 3 minutes watching the engine condition. If the engine stops while flushing, turn the water supply off immediately and repeat the above steps.
7. Turn the water supply off, and then force the remaining water out from the cooling passages by alternately squeezing and releasing the throttle lever for 10 to 15 seconds.
8. Stop the engine.
9. Remove the garden hose adapter and secure the cap.





EJU01867

Lubrication

⚠ WARNING

Do not spray flammable rust inhibitor products on engine surfaces while the engine is hot. The sprayed substance or propellants could catch fire.

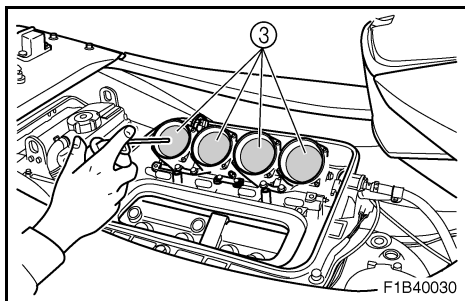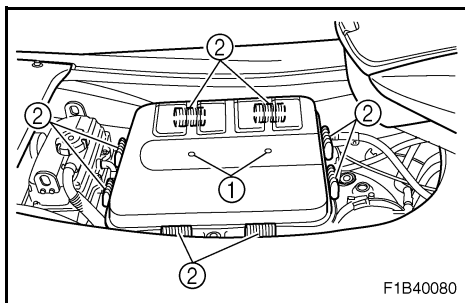

1. Remove the rear and front seats. (See pages 2-5 and 2-6 for seat removal and installation procedures.)
2. Remove the air filter case cover screws ①, slide the locks ② open, and then remove the case cover.
3. Remove the air filter case cover and air filter element.
4. Spray a rust inhibitor into each intake opening ③ for 3 seconds.
5. Install the air filter element and air filter case cover.
6. Start the engine in a well-ventilated area and let it run at idle for 15 seconds.

CAUTION:

Do not run the engine for more than 15 seconds. The engine could overheat.

7. Lubricate all cables such as the throttle and steering cables.

NOTE:

Use a suitable marine grease applicator to pressure lubricate the cables and purge out any moisture between the inner and outer cables.

8. Lubricate the areas of the watercraft specified under Lubrication points on page 4-19.



EJU01868

Fuel system

⚠ WARNING

GASOLINE AND ITS VAPORS ARE HIGHLY FLAMMABLE AND EXPLOSIVE!

- Do not smoke when refueling, and keep away from sparks, flames, or other sources of ignition.
- Stop engine before refueling.
- Refuel in a well-ventilated area. Do not stand or sit on the watercraft while refueling in case of fire.
- Take care not to spill gasoline. If gasoline spills, wipe it up immediately with dry rags. Always properly dispose of gasoline-soaked rags.
- Avoid overfilling the fuel tank. Stop filling when the fuel level just reaches the bottom of the filler tube. Do not fill up the filler tube because fuel expands as it warms up and could overflow.
- Tighten the filler cap securely after refueling.
- If you should swallow some gasoline, inhale a lot of gasoline vapor, or get gasoline in your eyes, get immediate medical attention.
- If any gasoline spills onto your skin, immediately wash with soap and water. Change clothing if gasoline spills on it.

Top off the fuel tank with fresh gasoline and add fuel stabilizer and conditioner to the fuel tank by following the manufacturer's instructions carefully.

NOTE:

Use of fuel stabilizer and conditioner eliminates the need to drain the fuel system. If the fuel system is to be drained instead, consult a Yamaha dealer.



EJU01840

Battery

If the watercraft will not be used for more than a month, disconnect the negative (-) lead first, then the positive (+) lead and breather hose, and then remove the battery from the watercraft.

Clean the battery casing using fresh water.

If the battery terminals are dirty or corroded, clean them with a wire brush.

Fully charge the battery, and then store it in a cool, dark place.

Apply Yamaha marine grease or Yamaha grease A to the battery terminals.

Check the battery at least every 2 months and fully charge it if necessary.

CAUTION:

The battery may not be usable again if you store it for a long period without charging it. Charge the battery periodically.

NOTE:

The condition of the battery can be known by checking the specific gravity of the electrolyte. However, you can also know the condition of the battery by measuring the voltage at both battery terminals. Charge the battery if the voltage is less than 12 volts.

Specific gravity (for reference): 1.28 at 20 °C (68 °F)
--

It is recommended to have a Yamaha dealer check the specific gravity and to charge the battery. If you maintain the battery yourself, be sure to read and follow the instructions provided with the battery tester and charger you use.



EJU01093

Cleaning the watercraft

Clean the watercraft before storing it for a long period.

1. Wash down the hull, handlebars, and drive unit with fresh water.
2. Rinse the engine and bilge area with fresh water. Drain off all water and wipe up remaining moisture with clean, dry rags.
3. Spray the engine's exterior with a rust inhibitor and lubricant.
4. Wax the hull with a non-abrasive wax.
5. Wipe all vinyl and rubber components, such as the seat and engine compartment seals, with a vinyl protectant.



Maintenance and adjustments


Periodic inspection, adjustment and lubrication will keep your watercraft in the safest and most efficient condition possible. Safety is an obligation of the watercraft owner. The most important points of watercraft inspection, adjustment and lubrication are explained on the following pages.

See your Yamaha dealer for genuine Yamaha replacement parts and optional accessories designed for your watercraft.

Remember that failures that are the result of the installation of parts or accessories which are not qualitatively equivalent to genuine Yamaha parts are not covered by the limited warranty.

⚠ WARNING

- **Be sure to turn off the engine when you perform maintenance unless otherwise specified, otherwise an accident or injury could result from unexpected operation, moving parts, or electric shock. If the owner is not familiar with watercraft servicing, this work should be done by a Yamaha dealer. Improperly serviced components could fail or stop operating correctly, which could result in an accident.**
- **Modifications to this watercraft not approved by Yamaha may cause loss of performance or excessive noise, or render it unsafe for use. Consult a Yamaha dealer before attempting any changes.**

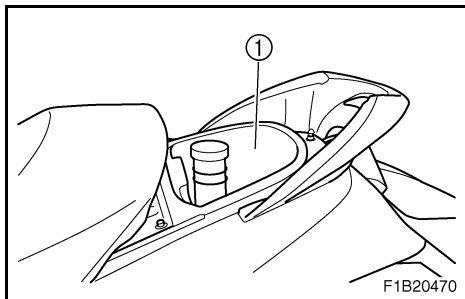


EJU01875

Owner's/Operator's Manual and tool kit

It is advisable always to carry the Owner's/Operator's Manual and tool kit ② with you whenever you use the watercraft. For your convenience, a storage compartment ① is provided on the watercraft for the manual and tool kit.

NOTE:

To protect these materials from water damage, it would be a good idea to put them in a waterproof bag.

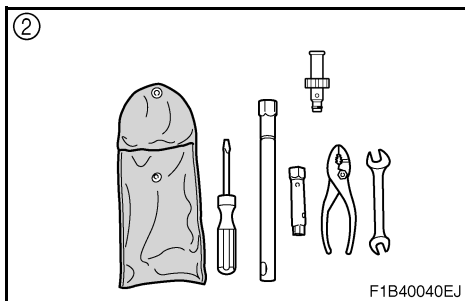

The service information included in this manual is intended to provide you with the necessary information for completing your own preventive maintenance and minor repairs. The tools provided in the tool kit are sufficient for this purpose.



EJU01815

Periodic maintenance chart

The following chart gives general guidelines for periodic maintenance. However, depending on your operating conditions maintenance may need to be performed more frequently.

● This mark indicates maintenance that you may do yourself.

○ This mark indicates work to be done by a Yamaha dealer.

MAINTENANCE INTERVAL ITEM		INITIAL			THEREAFTER EVERY		PAGE
		10 hours	50 hours	100 hours	100 hours	200 hours	
			6 months	12 months	12 months	24 months	
Spark plug	Inspect, clean, adjust	●	●	●	●		4-17
Lubrication points	Lubricate			●	●		4-19
Intermediate housing	Lubricate	○*1		●*2	●*2		4-21
Fuel system	Inspect			○	○		4-10
Fuel tank	Clean			○	○		4-11
Fuel filter	Inspect, clean			○	○		4-11
Trolling speed	Inspect	○		○	○		4-24
Throttle shaft	Inspect			○	○		—
Cooling water passages	Flush	● (after every use)					4-1
Water inlet strainer	Inspect, clean			○	○		—
Bilge strainer	Clean			○	○		—
Electric bilge pump strainer	Inspect, clean			○	○		—
Impeller	Inspect		●	●	●		—
Steering cable	Inspect		●	●	●		4-15
Steering master	Inspect	○		○	○		—
QSTS mechanism	Inspect, adjust	● (before every use)		○	○		4-16
Shift cable and mechanism	Inspect, adjust			○	○		4-15
Throttle cable	Inspect, adjust			●	●		4-15
Stern drain plugs	Inspect, replace			○	○		3-9
Battery	Inspect	● (inspect fluid level before every use)		○	○		—
Rubber coupling	Inspect					○	—
Engine mount	Inspect					○	—
Nuts and bolts	Inspect	○		○	○		—
Air filter	Inspect					●	4-14
Engine oil	Replace	○		○	○		4-12
Engine oil filter	Replace					○	—
Valve clearance	Inspect, adjust					○	—

*1: Grease capacity: 33.0–35.0 cm³ (1.11–1.18 oz)

*2: Grease capacity: 6.0–8.0 cm³ (0.20–0.27 oz)



EJU01816

Inspecting the fuel system

⚠ WARNING

Gasoline is highly flammable and explosive. Failure to check for and repair any fuel leakage could result in fire or explosion. A fire or explosion can cause severe injury or death. Shut off the engine. Do not smoke. Avoid spilling gasoline.

Fuel in hose is pressurized.

Fuel can spray out and cause injury or a fire hazard if fuel line is disconnected.

Do not attempt to run engine with fuel line disconnected.

Check the fuel system for leaks, cracks, or malfunctions. If any problem is found, consult a Yamaha dealer.

Check:

- Fuel tank for water or dirt.
- Fuel tank cap (seal) for damage.
- Fuel tank for damage, cracks or leakage.
- Fuel hose joint for leakage.
- Fuel hose for cracks or other damage.
- Air bleeding passages for leakage.




EJU01817

Fuel filter

The fuel filter should be checked, cleaned, or replaced every 12 months or every 100 hours of operation. Have a Yamaha dealer check, clean, or replace the fuel filter if necessary.

⚠ WARNING

Do not try to replace the fuel filter yourself. An incorrectly installed filter can leak gasoline, which could lead to fire or explosion. If necessary, have a Yamaha dealer replace the fuel filter.

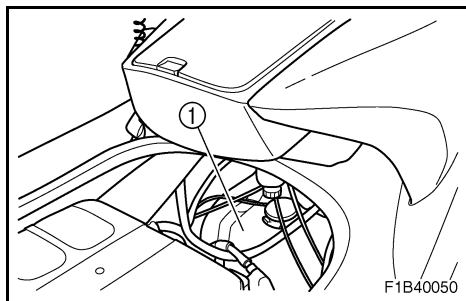

EJU01841

Fuel tank

Check the fuel tank ① for leakage or water in the tank. If water is found in the fuel system or if the fuel tank needs to be cleaned, have a Yamaha dealer service the watercraft.



EJU01818

Changing the engine oil

⚠ WARNING

Engine oil is extremely hot immediately after the engine is turned off. Coming into contact with or getting any engine oil on your clothes could result in burns.

CAUTION:

- Do not run the engine with too much or not enough oil in the oil tank. Oil could spray out or the engine could be damaged.
- Be sure to change the engine oil after the first 10 hours of operation, and every 100 hours thereafter or at the start of a new season, otherwise the engine will wear quickly.

The oil filter should be replaced every two years or every 200 hours of operation. Have a Yamaha dealer replace the oil filter if necessary.

It is recommended to have a Yamaha dealer change the engine oil. However, if you choose to change the oil on your own refer to the service manual for this watercraft.

NOTE:

Dispose of used oil according to local regulations.

Recommended engine oil:

See page 3-3.

Oil quantity:

With oil filter replacement:

2.2 L (2.3 US qt, 1.9 Imp qt)

Without oil filter replacement:

2.0 L (2.1 US qt, 1.8 Imp qt)

Total amount:

4.3 L (4.5 US qt, 3.8 Imp qt)

**CAUTION:**

If oil is leaking or the oil pressure warning indicator comes on when the engine is running, immediately turn the engine off and have a Yamaha dealer check the watercraft. Continuing to operate the engine under such conditions could cause severe engine damage.



EJU01819

Checking the air filter element




The air filter element should be checked every 12 months or every 100 hours of operation.


To check the air filter:

1. Remove the rear and front seats. (See pages 2-5 and 2-6 for seat removal and installation procedures.)
2. Remove the air filter case cover screws ①, slide the locks ② open, and then remove the case cover.
3. Remove the air filter element and check it for dirt and oil. Replace the air filter element if there is any oil buildup, or every 2 years or every 200 hours of operation.
4. Install the air filter element in the air filter case, and then install the case cover.

CAUTION:

- Make sure that the air filter element is installed in the filter case properly.
- Do not start the engine with the air filter element removed, otherwise the pistons and cylinders could be damaged.
- If cleaning the air filter element, use cold or lukewarm water and let it air dry completely. Do not use detergent or solvent to clean the air filter element, or dry it with heat or compressed air, otherwise it could be damaged.

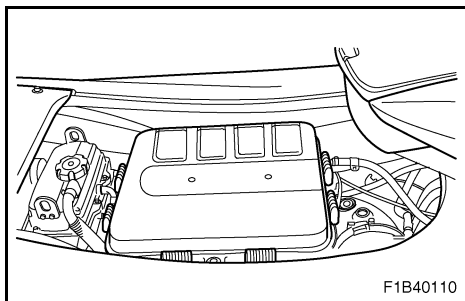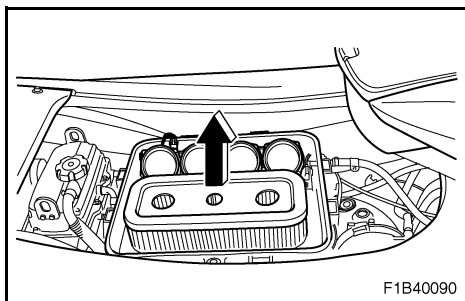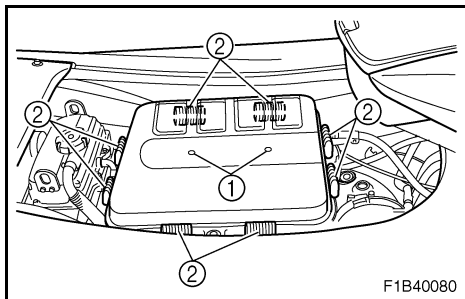

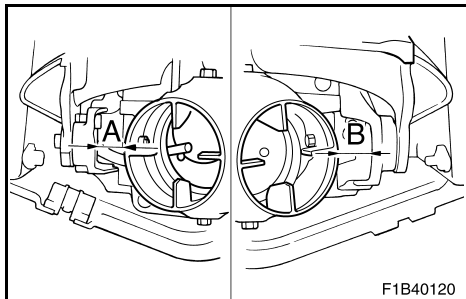

EJU01851


Inspecting the steering cable

Check for smooth operation of the handlebars and jet thrust nozzle.

Turn the handlebars as far as possible to the right and left and check that the distance between the jet thrust nozzle and the bracket of the reverse gate are equal on right and left sides.

Distance A and B: $A = B$

If steering is stiff or misadjusted, have a Yamaha dealer service it.

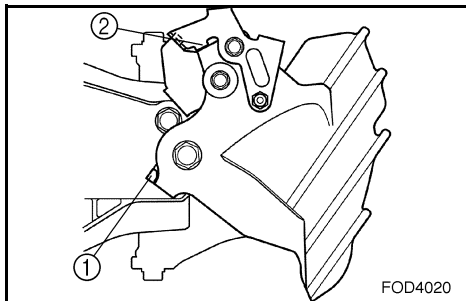


EJU01852

Inspecting the shift cable

Place the shift lever in the reverse position.

Make sure that the reverse gate makes contact with the stopper ① on the bracket, and that the arm ② makes contact with the reverse gate.

If the reverse gate does not reach the correct positions, have a Yamaha dealer service it.

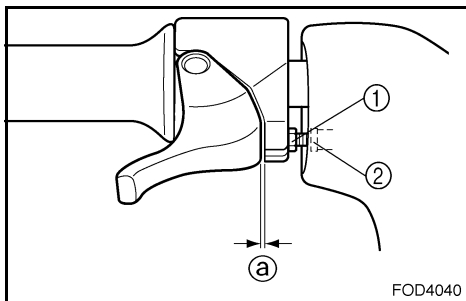

EJU01104

Inspecting and adjusting the throttle cable

Check that the throttle cable moves back to the set position smoothly and that free play is within specification.

1. Squeeze and release the throttle lever. If the lever does not return smoothly, have a Yamaha dealer service it.
2. Adjust free play ③ by loosening the lock nut ① and turning the adjuster ②.

Throttle lever free play:
4–7 mm (0.16–0.28 in)






EJU01842

Inspecting the QSTS mechanism

Check that the shift lock lever moves back to the lock position smoothly, that the QSTS selector locks and unlocks properly, and that the jet thrust nozzle moves up or down.

1. Squeeze and release the shift lock lever.
2. Check that the QSTS selector locks when the lever is released.
3. Check that the selector turns smoothly when the lever is squeezed and held in place.
4. Check that the angle of the jet thrust nozzle changes when the selector is shifted from neutral to bow up or bow down.

If the mechanism does not work properly, have a Yamaha dealer service it.

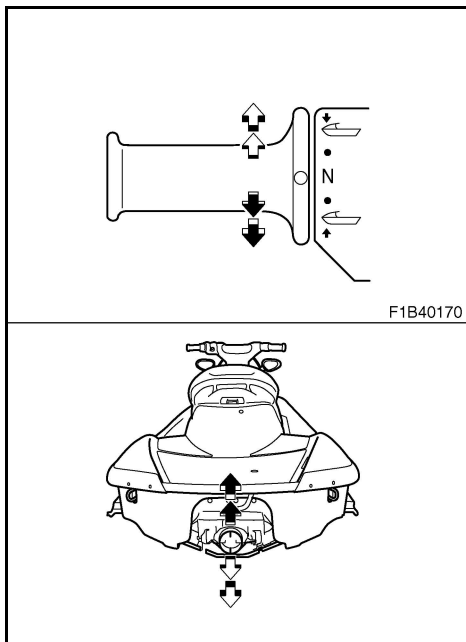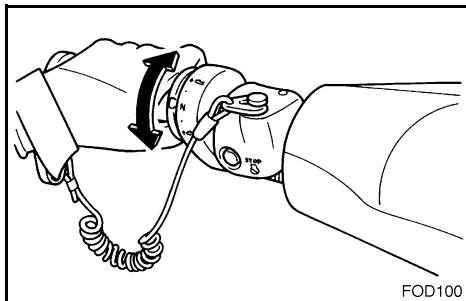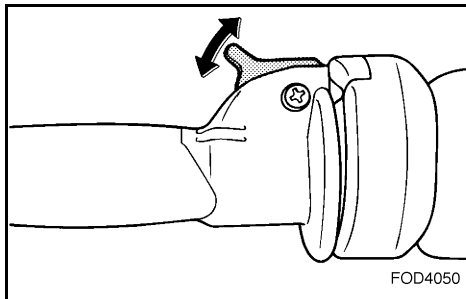



EJU01820

Cleaning and adjusting the spark plugs

The spark plug is an important engine component and is easy to inspect. The condition of the spark plug can indicate something about the condition of the engine. For example, if one spark plug shows a distinctly different color, the engine could be defective. Do not attempt to diagnose any problems yourself. Have a Yamaha dealer service the watercraft.

Remove and inspect the spark plug periodically; heat and deposits will cause the spark plug to slowly break down and erode. If electrode erosion becomes excessive, or if carbon and other deposits are excessive, replace the spark plug with the specified plug.

Removing the spark plug:

1. Remove the air filter case cover and air filter element. (See page 4-14 for air filter removal and installation procedures.)
2. Remove the spark plug.

Specified spark plug: NGK CR9EB


Measure the spark plug gap ① with a wire thickness gauge. Adjust the gap to specification if necessary.

Spark plug gap:
0.7–0.8 mm (0.028–0.031 in)

To install the spark plug:

1. Clean the gasket surface.
2. Wipe any dirt from the threads of the spark plug.
3. Screw the spark plug to the correct torque.

Spark plug tightening torque:
12.5 N·m (1.25 kgf·m, 9 ft·lb)

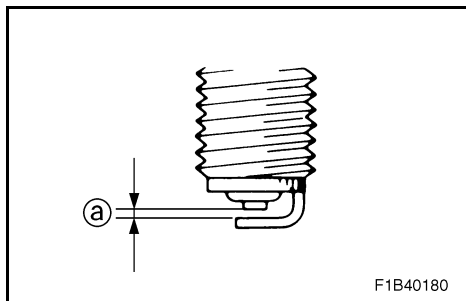

**NOTE:** _____

- Wipe off any water on the spark plug or inside the cap before installing the spark plug cap. Push the spark plug cap down until it is securely installed.
- If a torque wrench is not available when you are fitting a new spark plug, a good estimate of the correct torque is 1/4 turn to 1/2 turn past finger tight with the spark plug wrench included in the tool kit. Have the spark plug adjusted to the correct torque with a torque wrench as soon as possible.

⚠ WARNING _____

Be careful not to damage the insulator when removing or installing a spark plug. A damaged insulator could allow sparks to escape, which could lead to explosion or fire.

4. Install the air filter element in the air filter case, and then install the air filter case cover.




EJU01822


Lubrication points

To keep moving parts sliding or rotating smoothly, coat them with water-resistant grease.


Recommended water-resistant grease:
Yamaha Marine Grease/
Yamaha Grease A

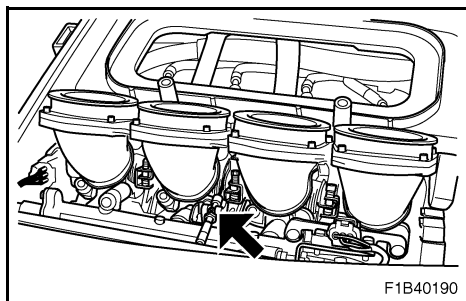


- Throttle cable (throttle body end)

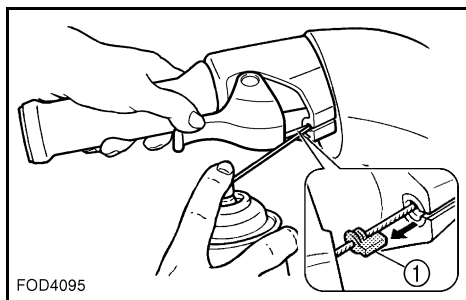


- Throttle cable (handlebar end)
Pull the throttle lever and remove the seal ①. Spray a rust inhibitor into the outer cable. Refit the seal securely.

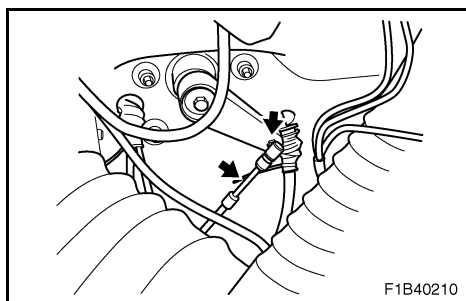


- Steering cable (handlebar end)

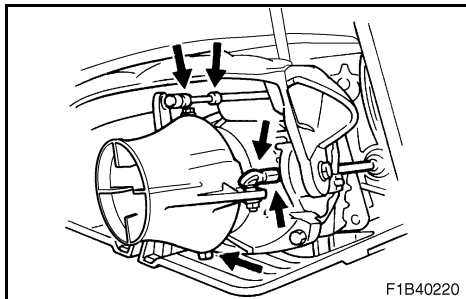


- Steering cable (nozzle end)
- Nozzle pivot shaft
- QSTS cable (nozzle end)

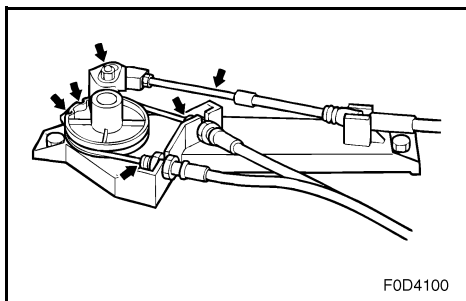


- QSTS cables (pulley end)

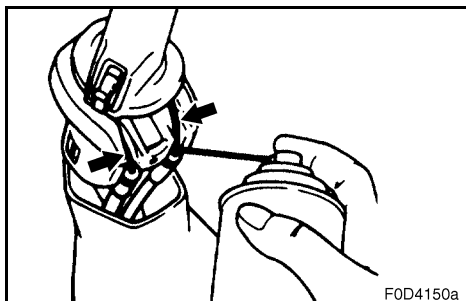


- QSTS cables (handlebar end)
Remove the QSTS cable housing. Spray a rust inhibitor into the outer cable. Reinstall the QSTS cable housing.

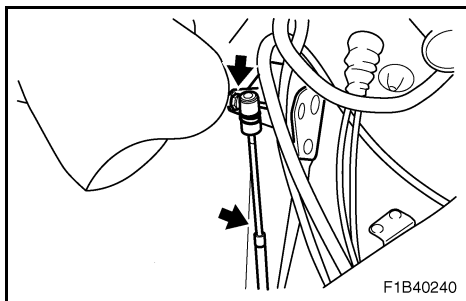

- Shift cable (lever end)

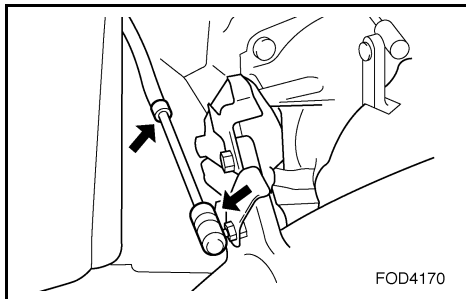

- Shift cable (reverse gate end)

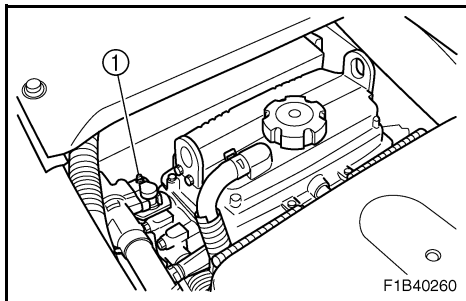

- Intermediate housing

Using a grease gun, fill the intermediate housing with water-resistant grease through the grease nipple ①.

Grease quantity:

Initial 10 hours or 1 month:

33.0–35.0 cm³ (1.11–1.18 oz)

Every 100 hours or 12 months:

6.0–8.0 cm³ (0.20–0.27 oz)



EJU01843

Inspecting the battery

Check the level of the battery electrolyte and make sure that the negative and positive leads are securely tightened.

⚠ WARNING

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. Electrolyte contains sulfuric acid. Avoid contact with skin, eyes or clothing.

Antidotes

External: Flush with water.

Internal: Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Call physician immediately.


Eyes: Flush with water for 15 minutes and get prompt medical attention.

Batteries produce explosive gases. Keep sparks, flame, cigarettes, etc., well away. If using or charging the battery in an enclosed space, make sure that it is well ventilated. Always shield your eyes when working near batteries.

KEEP OUT OF THE REACH OF CHILDREN.

CAUTION:

- **Be careful not to place the battery on its side.**
- **Be sure to remove the battery from the battery compartment when adding electrolyte or charging the battery.**
- **When checking the battery, make sure that the breather hose is connected to the battery and that it is not obstructed.**

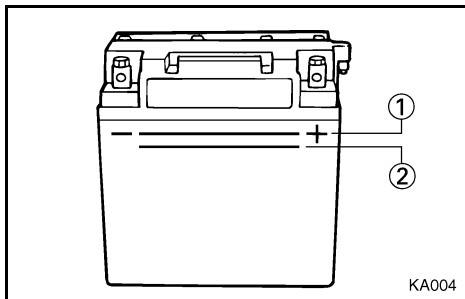**To replenish the battery:**

1. Make sure that the electrolyte level is between the upper ① and lower ② level marks.
2. Refill the battery with distilled water if necessary.

CAUTION:


Normal tap water contains minerals that are harmful to a battery. Use only distilled water for replenishing the battery.

To recharge the battery:**CAUTION:**

Do not attempt to charge a battery hastily. Battery life could be shortened.

It is recommended to have a Yamaha dealer charge the battery. If you charge the battery yourself, carefully read the battery charger instructions before charging and follow the points below.

1. Remove all caps from the battery cell.
2. Add distilled water to the specified level if the electrolyte level is low.
3. Set the charging rate to 1.9 ampere and charge the battery slowly until the explosive gases are discharged vigorously from the battery cells.

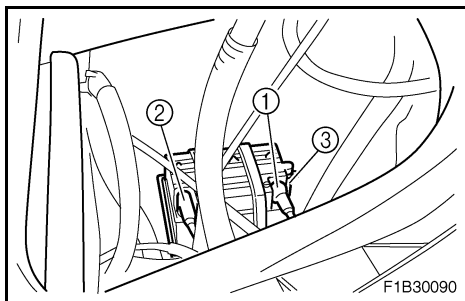**To connect the battery terminals:**

1. Make sure that the connections are correct when you insert the battery in the watercraft.
2. Make sure that the breather hose is properly connected and that it is not damaged or obstructed.
3. Make sure that the battery is securely held in place.

- ① Positive (+): Red lead
- ② Negative (-): Black lead
- ③ Breather hose



EJU01823

Adjusting the fuel injection system

The fuel injection system is a vital part of the engine and requires very sophisticated adjustment. Adjustment should be left to a Yamaha dealer who has the professional knowledge and experience to do so.

CAUTION:

The fuel injection system was set at the Yamaha factory after many tests. If the settings are changed by someone who does not have the necessary technical knowledge, poor engine performance and damage may result.



EJU01824

Checking the trolling speed

1. Put the watercraft in the water.
2. Start the engine and warm it up. Use the tachometer in the multifunction meter to check the trolling speed.

Trolling speed: 1,600–1,800 r/min

If the trolling speed is out of specification, have a Yamaha dealer make this adjustment.

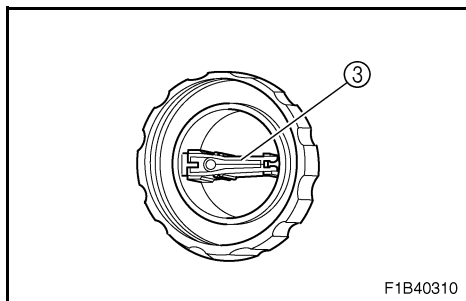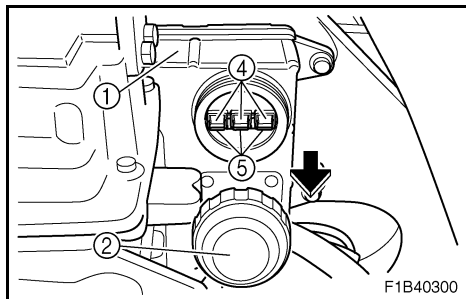

EJU01825

Replacing the fuse

The fuse is in the electrical box ①.

To replace the fuse:

1. Remove the cap ②.
2. Replace the fuse ④ with the spare fuse ⑤ of the correct amperage by using the special tool ③ on the reverse side of the cap.

Fuse amperage:

20 A (main)

3 A (meter)

3 A (bilge pump)

⚠WARNING

Do not use fuses of higher amperage than those recommended. Substitution of a fuse of improper rating can cause extensive electrical system damage and possible fire.



EJU01826

Specifications

ITEM	MODEL	Unit	FX140
WATERCRAFT CAPACITY			
Maximum people on board		Number of people	3
Maximum load capacity		kg (lb)	240 (530)
DIMENSIONS			
Length		mm (in)	3,340 (131.5)
Width		mm (in)	1,230 (48.4)
Height		mm (in)	1,160 (45.7)
Dry weight		kg (lb)	362 (798)
PERFORMANCE			
Maximum output		kW (PS) @ r/min	103.0 (140) @ 10,000
Maximum fuel consumption		L/h (US gal/h, Imp gal/h)	44 (11.6, 9.7)
Cruising range at full throttle		hr.	1.59
Trolling speed		r/min	1,600–1,800
ENGINE			
Engine type			4-stroke
Number of cylinders			4
Engine displacement		cm ³ (cu in)	998 (60.9)
Bore & stroke		mm (in)	74 × 58 (2.91 × 2.28)
Compression ratio			11.4:1
Lubrication system			Dry sump
Cooling system			Water cooled
Starting system			Electric starter
Ignition system			TCI
Spark plug			CR9EB (NGK)
Spark plug gap		mm (in)	0.7–0.8 (0.028–0.031)
Battery capacity		V-AH	12-19
Charging system			Flywheel magneto



ITEM	MODEL	Unit	FX140
DRIVE UNIT			
Propulsion system			Jet pump
Jet pump type			Axial flow, single stage
Impeller rotation			Counterclockwise (viewed from rear)
Transmission			Constant mesh 1-speed
Jet thrust nozzle horizontal angle	Degree		24 + 24
Jet thrust nozzle trim angle	Degree		-10, -5, 0, 5, 10
FUEL AND OIL			
Recommended fuel			Regular unleaded gasoline
Minimum octane rating	PON RON		86 90
Recommended engine oil			SAE 10W-30 API SE, SF, SG, SH, SJ
Fuel tank capacity			
Total	L (US gal, Imp gal)		70 (18.5, 15.4)
Engine oil quantity			
With oil filter replacement	L (US qt, Imp qt)		2.2 (2.3, 1.9)
Without oil filter replacement	L (US qt, Imp qt)		2.0 (2.1, 1.8)
Total amount	L (US qt, Imp qt)		4.3 (4.5, 3.8)

EJU01115

TROUBLESHOOTING AND EMERGENCY PROCEDURES

Troubleshooting	5-1
Troubleshooting chart	5-1
Emergency procedures	5-3
Cleaning the jet intake and impeller	5-3
Jumping the battery	5-5
Towing the watercraft	5-7
Submerged watercraft	5-8



EJU01116

Troubleshooting

If you have any trouble with your watercraft, use this section to check for the possible cause.

If you cannot find the cause, or if the procedure for replacement or repair is not described in this Owner's/Operator's Manual, have a Yamaha dealer perform the necessary service.

EJU01827

Troubleshooting chart

TROUBLE	POSSIBLE CAUSE		REMEDY	PAGE
Engine does not start	Starter motor does not turn over			
	Engine shut-off switch	Clip not in place	Install clip	2-8
	Fuse	Burned out	Replace the fuse and check wiring	4-25
	Battery	Run down	Recharge	4-22
		Poor terminal connections	Tighten as required	4-22
		Terminal corroded	Clean	4-5
	Starter motor	Faulty	Have serviced by Yamaha dealer	—
	Starter motor turns over			
	Throttle lever	Squeezed	Release	2-8
	Fuel	Empty	Refill as soon as possible	3-4
		Stale or contaminated	Have serviced by Yamaha dealer	4-10
	Fuel tank	Water or dirt present	Have serviced by Yamaha dealer	4-11
	Spark plug	Fouled or defective	Clean or replace	4-17
	Spark plug cap	Not connected or loose	Connect properly	4-17
		Connected to wrong cylinder	Connect properly	4-17
	Fuel injection system	Fuel pump faulty	Have serviced by Yamaha dealer	—



TROUBLE	POSSIBLE CAUSE		REMEDY	PAGE
Engine runs irregularly or stalls	Fuel	Empty	Refill as soon as possible	3-4
		Stale or contaminated	Have serviced by Yamaha dealer	4-10
	Fuel tank	Water or dirt present	Have serviced by Yamaha dealer	4-11
	Spark plug	Fouled or defective	Replace	4-17
		Incorrect heat range	Replace	4-17
		Gap incorrect	Adjust	4-17
	Spark plug cap	Loose	Connect properly	4-17
		Cracked, torn, or damaged	Replace	—
	Electrical wiring	Loose connection	Tighten or connect properly	—
Warning light or indicator blinks	Fuel injection system	Jet nozzle clogged	Have serviced by Yamaha dealer	—
	Fuel level	Empty	Refill as soon as possible	3-4
	Engine overheated	Jet intake clogged	Clean	5-3
	Check engine warning	Faulty sensors	Have serviced by Yamaha dealer	—
Watercraft slow or loses power	Cavitation	Jet intake clogged	Clean	5-3
		Impeller damaged or worn	Have serviced by Yamaha dealer	—
	Engine over-heat warning	Engine speed reduction control activated	Clean jet intake and cool engine	2-18
	Oil pressure warning	Engine speed reduction control activated	Add oil	2-17
	Spark plug	Fouled or defective	Replace	4-17
		Incorrect heat range	Replace	4-17
		Gap incorrect	Adjust	4-17
	Spark plug caps	Loose	Connect properly	4-17
	Electrical wiring	Loose connection	Tighten or connect properly	—
	Fuel	Stale or contaminated	Have serviced by Yamaha dealer	4-10
	Air filter	Clogged	Clean or replace	4-14
		Oil buildup	Replace	4-14



EJU01118

Emergency procedures

EJU01119

Cleaning the jet intake and impeller

If weeds or debris get caught in the intake or impeller, cavitation can occur, causing jet thrust to decrease even though engine speed rises. If this condition is allowed to continue, the engine will overheat and may seize. If there is any sign that the jet intake or impeller is clogged with weeds or debris, beach the watercraft and check the intake and impeller. Always stop the engine before beaching the watercraft.



⚠ WARNING

Before attempting to remove weeds or debris from the jet intake or impeller areas, shut the engine off and remove the clip from the engine shut-off switch. Severe injury or death could result from contact with the rotating parts of the jet pump.

1. Turn the watercraft on its side as shown.

CAUTION:

- Place a suitable clean cloth or carpeting underneath the watercraft to protect it from abrasions and scratches.
- Always turn the watercraft over onto its port (left) side.
- When turning the watercraft on its side, support the bow so the handlebars cannot be bent or damaged.

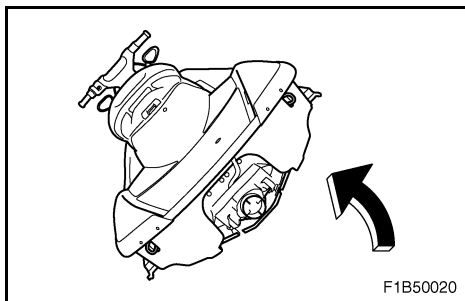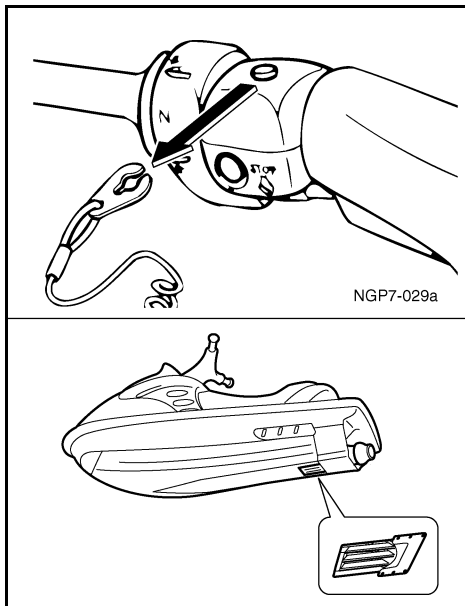



2. Remove any weeds or debris from around the drive shaft, impeller, pump housing, and jet thrust nozzle.

If debris is difficult to remove, consult your Yamaha dealer.

CAUTION:

Always avoid operating your watercraft in areas where weed growth is thick. If traveling in weeded areas is unavoidable, operate the engine alternately at partial throttle and full throttle. Weeds tend to accumulate more at a steady speed and at trolling speed. If weeds clog the intake or impeller area and cause cavitation, follow the cleaning procedure above.



EJU01844

Jumping the battery

If the watercraft battery has run down, the engine can be started using a 12-volt battery and jumper cables.

⚠ WARNING

Battery electrolyte is poisonous and dangerous, causing severe burns, etc. Electrolyte contains sulfuric acid. Avoid contact with skin, eyes or clothing.

Antidotes


External: Flush with water.

Internal: Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Call physician immediately.

Eyes: Flush with water for 15 minutes and get prompt medical attention.

Batteries produce explosive gases. Keep sparks, flame, cigarettes, etc. well away. If using or charging the battery in an enclosed space, make sure that it is well ventilated. Always shield your eyes when working near batteries.

KEEP OUT OF THE REACH OF CHILDREN.

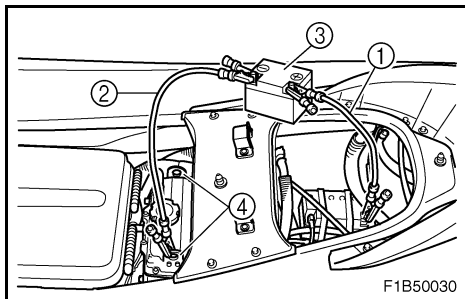

EJU01845

Connecting the jumper cables

1. Connect the positive (+) jumper cable ① to the positive (+) terminals of both batteries.
2. Connect one end of the negative (-) jumper cable ② to the negative (-) terminal of the booster battery ③.
3. Connect the other end of the negative (-) cable to an engine hanger ④.

CAUTION:

Do not connect the end of the jumper cable to the negative (-) terminal on the watercraft battery! Be sure all connections are secure and correct before attempting to start the engine. Any wrong connection may damage the electrical system.

4. Start the engine, and then disconnect the cables by reversing the steps above.

CAUTION:

- Never push the start switch while the engine is running.
- Do not operate the start switch for more than 5 seconds, otherwise the battery will be discharged and the engine will not start. Also, the starter motor may be damaged. If the engine does not start in 5 seconds, release the start switch, wait 15 seconds, and then try again.



EJU01828


Towing the watercraft

If the watercraft becomes inoperative in the water, it can be towed to shore.

If the watercraft must be towed in an emergency using a towline, the operator should ride the watercraft, holding onto the handlebars.

CAUTION:

- Tow the watercraft at 5 mph (8 km/h) or less, otherwise water could enter the air intake and exhaust passages and flood the engine compartment and engine if it is towed too fast.
- Tow the watercraft using the bow eye ① only.
- The bow must be kept up out of the water during towing to prevent water from entering the engine compartment.

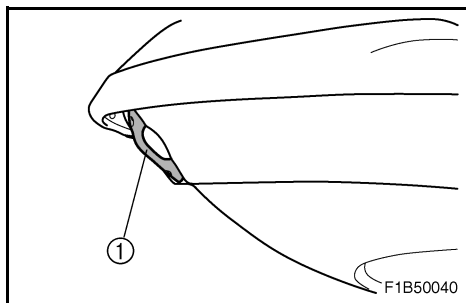

⚠ WARNING

- The watercraft should only be towed in an emergency.
- The towline should be long enough so that the watercraft will not collide with the towing boat when slowing down. A good rule of thumb is a towline that is three times the combined length of the towing boat and the watercraft.
- The operator of the towing boat must keep speed to a minimum and avoid traffic or obstacles which could be a hazard to the rider on the watercraft.



EJU01829

Submerged watercraft

If the watercraft is submerged or flooded with water, follow the procedure below and consult a Yamaha dealer as soon as possible. Failure to do so may result in serious engine damage!

In an emergency:

1. Beach the watercraft and remove the stern drain plugs to drain the water from the engine compartment. (See page 3-9 for further instructions.)
2. Install the stern drain plugs.
3. Have the watercraft inspected by a Yamaha dealer as soon as possible.




—MEMO—

EJU01124

APPENDIX

Index 6-1

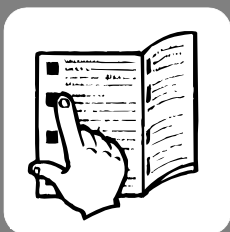



Index

A

Adjusting the fuel injection system 4-24
Approval label of Emission control
certificate 1-2

B

Battery 3-10, 4-5
Beaching the watercraft 3-32
Bilge 3-9
Boarding alone 3-25
Boarding and starting in deep water 3-25
Boarding with passengers 3-26
Bow down 2-13
Bow up 2-13

C

Capsized watercraft 3-27
Caution labels 1-8
Changing the engine oil 4-12
Check engine warning indicator 2-16
Checking the air filter element 4-14
Checking the trolling speed 4-24
Cleaning and adjusting the spark
plugs 4-17
Cleaning the jet intake and impeller 5-3
Cleaning the watercraft 4-6
Connecting the jumper cables 5-6
Cooling water pilot outlet 2-9, 3-15
Cruising limitations 1-12

D

Docking the watercraft 3-32

E

Emergency procedures 5-3
Emission control information 1-2
Engine break-in 3-16
Engine compartment 3-6
Engine oil 3-3
Engine oil level 3-7
Engine overheat warning indicator 2-18
Engine serial number 1-1
Engine shut-off cord (lanyard) 3-14

Engine shut-off switch 2-8
Engine stop switch 2-7
Enjoy your watercraft responsibly 1-19

F

Filling the fuel tank 3-4
Fire extinguisher 3-11
Flushing the cooling system 4-1
Front seat 2-6
Front storage compartment 2-19
Fuel and oil 3-1
Fuel filter 4-11
Fuel level 3-6
Fuel meter 2-15
Fuel system 4-4
Fuel tank 4-11
Fuel tank filler cap 2-7
Fuel warning indicator 2-17

G

Gasohol 3-2
Gasoline 3-1
Getting to know your watercraft 3-21
Glove compartment 2-20

H

Handgrip 2-13
Hazard information 1-16
Hood 2-7
Hour meter/Voltmeter 2-16
Hull Identification Number (HIN) 1-1

I

Identification numbers 1-1
Important labels 1-3
Inspecting and adjusting the throttle
cable 4-15
Inspecting the battery 4-22
Inspecting the fuel system 4-10
Inspecting the QSTS mechanism 4-16
Inspecting the shift cable 4-15
Inspecting the steering cable 4-15

J

Jet unit 3-14
Jumping the battery 5-5

**L**

Label location	1-3
Launching the watercraft	3-17
Learning to operate your watercraft	3-21
Leaving the watercraft	3-20
Limitations on who may operate the watercraft	1-11
Location of main components	2-1
Lubrication	4-3
Lubrication points	4-19

M

Maintenance and adjustments	4-7
Manufactured date label	1-2
Multifunction meter	2-14, 3-15

O

Oil pressure warning indicator	2-17
Operating your watercraft	3-21
Operation	3-16
Operation of controls and other functions	2-5
Operation requirements	1-13
Other labels and tags	1-9
Owner's/Operator's Manual and tool kit	4-8

P

Periodic maintenance chart	4-9
Post-operation checks	3-34
Pre-operation check list	3-5
Pre-operation check points	3-6
Pre-operation checks	3-5
Primary Identification (PRI-ID) number ...	1-1

Q

Quick Shift Trim System (QSTS) selector	2-12
--	------

R

Rear seat	2-5
Recommended equipment	1-15
Replacing the fuse	4-25
Reverse on waterways	3-33
Riding watercraft with passengers	3-22
Rough water operation	3-33

S

Safe boating rules	1-19
Safety information	1-11
Seat storage compartment	2-20
Shift lever	2-11
Shift lever and reverse gate	3-13
Specifications	4-26
Speedometer	2-15
Starting and boarding in shallow water	3-24
Starting from a dock	3-24
Starting the engine	3-18
Starting the watercraft	3-23
Start switch	2-9
Steering system	2-10, 3-12
Stopping the engine	3-20
Stopping the watercraft	3-31
Storage	4-1
Storage compartments	2-19
Submerged watercraft	5-8
Switches	3-15

T

Tachometer	2-14
Throttle	3-12
Throttle lever	2-8
Tilt lever	2-10
Towing the watercraft	5-7
Transporting	3-36
Troubleshooting	5-1
Troubleshooting chart	5-1
Turning the watercraft	3-29

W

Warning labels	1-4
Watercraft characteristics	1-16
Water separator	3-8
Water-skiing	1-17



Printed in USA
March 2002—0.7 × 1 CR
F1B-F8199-70
(FX1000-A)
(E)

Printed on recycled paper