

7 Standard tools



Orders

The tools can be ordered directly, stating the order number, from:

WILBAER

Wilhelm Bäcker GmbH & Co.KG

Postfach 14 05 80

42826 Remscheid

Germany

Tel.: +49 (0) 2191 9339-0

Fax: +49 (0) 2191 9339-200

E-mail: info@wilbaer.de


Web: <http://www.deutz-tools.com>

8005**Compression pressure tester**

for diesel engines


10 - 40 bar

Checking compression pressure

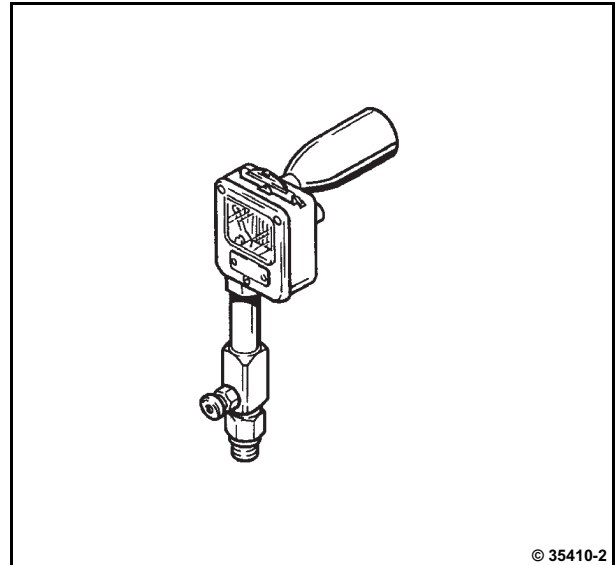**8008****Nozzle tester**


with spray mist collecting vessel

Check injection nozzles

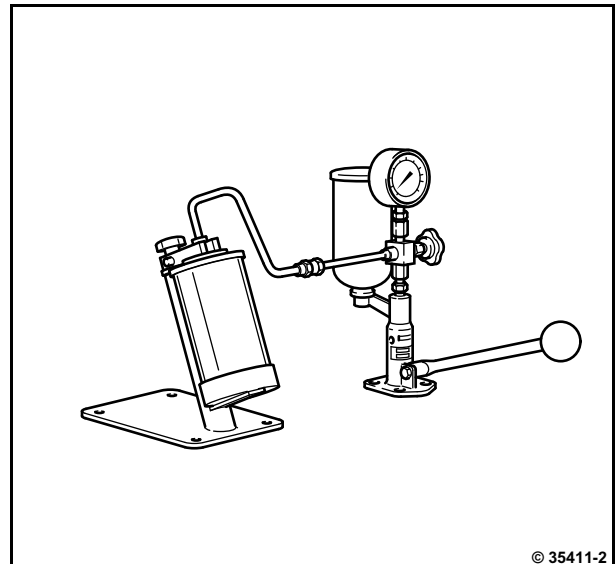**8011****Hose clip pliers**

Loosen and fasten hose clips

e. g. fuel return pipe

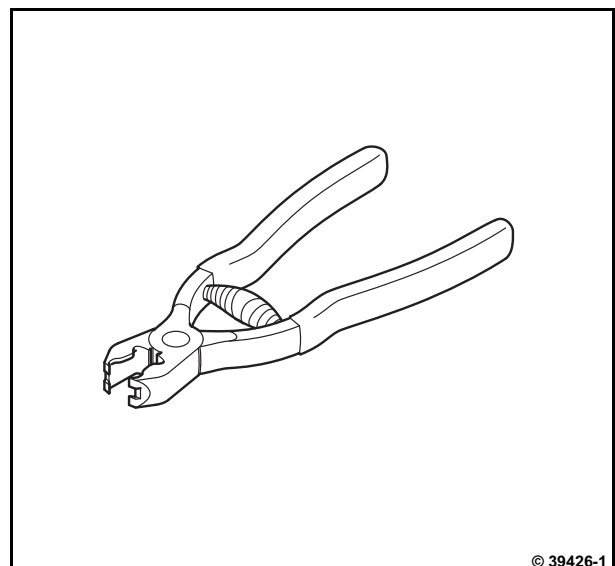


8015

Socket wrench insert

SW 14, reinforced

Unscrew and tighten big end bearing screws.

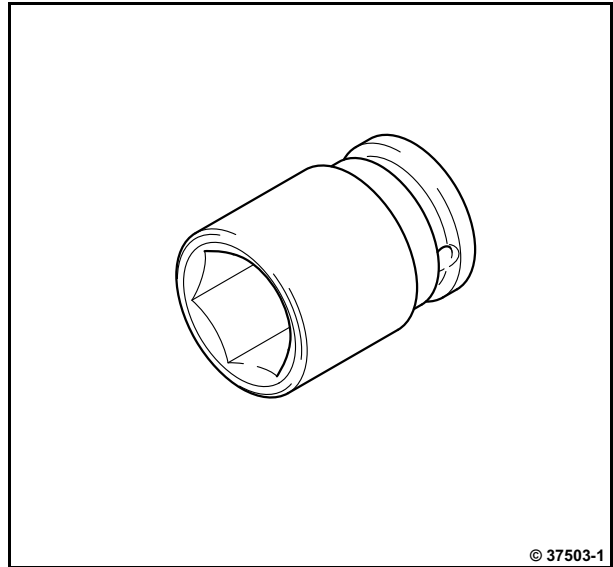


8016

Socket wrench insert

SW 17, reinforced

Unscrew and tighten flywheel screws.

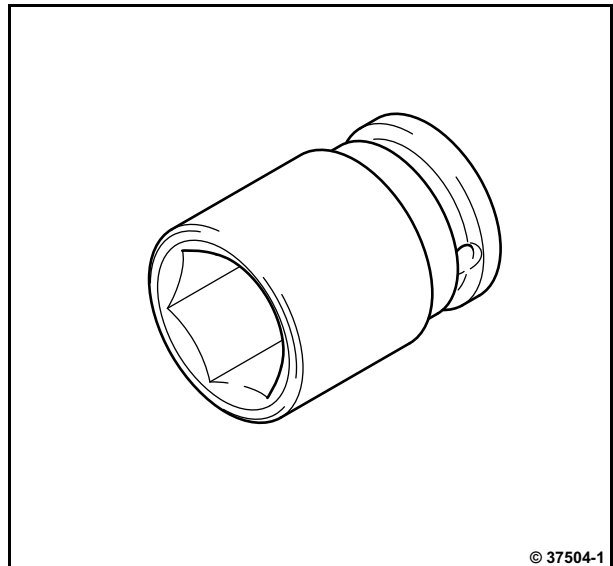


8018

Claw wrench


SW 17, reinforced

Unscrew and tighten union nuts of the injection pipes.

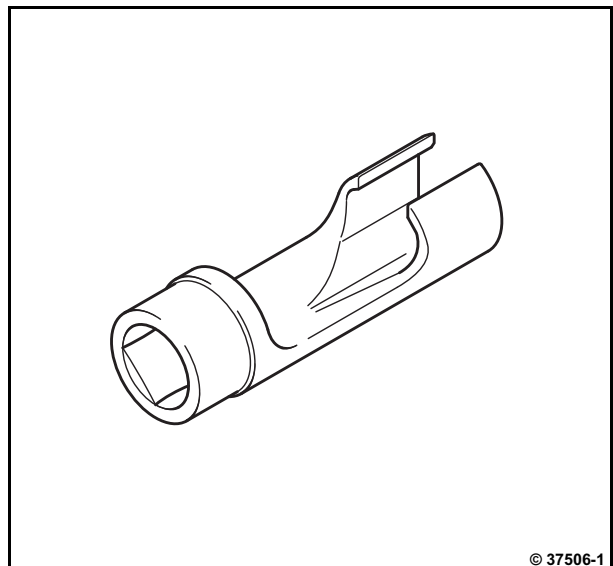


8024**Assembly pliers**

e. g. removing valve stem seals

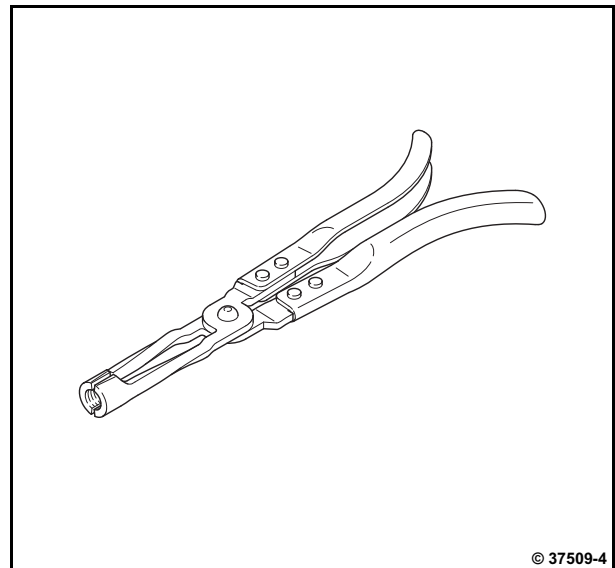**8115****V-belt tension measuring device**

150 to 600 N

Check V-belt tension

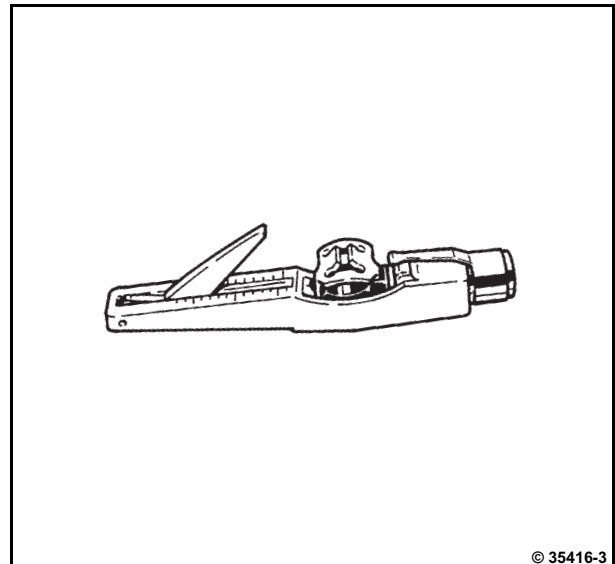**8198****Pricker**


Removing rotary shaft lip seal



8190

Rotation angle disc

with magnet (e. g. setting valve clearance)

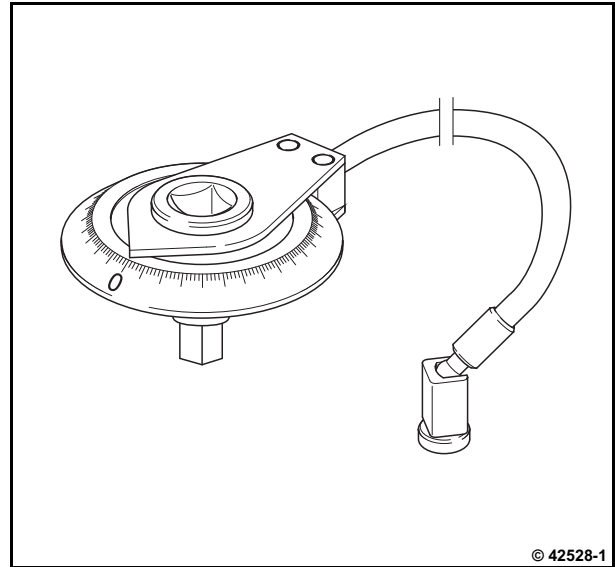

© 42528-1

8191

Socket wrench insert

with slotted screwdriver insert (8x1.6)
(e. g. setting valve clearance)




© 43060-0

8196

Open end wrench adapter

Size 13,
for torque wrench
Tighten lock nut of the valve clearance setting screw.

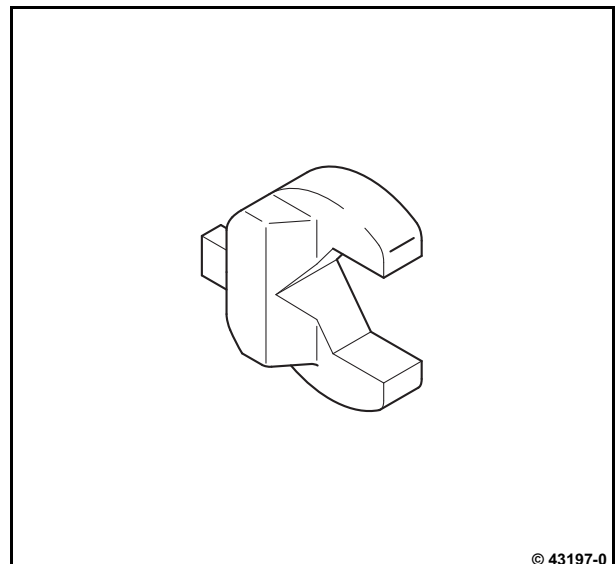

© 43197-0

9017**Assembly lever**

e. g. removing and installing valves

