



Electrical system

**Industrial engines
DC09, DC13, DC16**

**Marine engines
DI09, DI13, DI16**



Introduction	3
Different requirements	3
Grounding.....	3
Abbreviations	3
Safety during electric welding.....	3
 Batteries and alternators	 4
Batteries.....	4
Battery cables	5
Connection of batteries.....	6
Battery master switch.....	7
Alternator charging for marine engines	8
Marine engines with split ground system.....	9
 Electrical cables	 10
Routing cables	10
Calculating cable cross-section	11
Splicing and repair	14
 Connection to engine	 16
Connection to engine without Scania base system.....	16
Current consumption of the electrical system	17
Engine interface.....	18
Pin numbering for connectors	21
Connection of starter motor or alternator	25
Connection of coolant level monitor	26
Connection of oil level sensor	30
Connection of water separating prefilter on marine engines (PDE engines)	32
 Engine control unit.....	 33
Operating voltage	33
Protection class.....	33
Connection of limp home mode	34

Engine running signal.....	36
----------------------------	----

Work description for connectors.....	37
Connector for engine interface	37
Connector for engine control unit.....	40



Introduction

Different requirements

S6 engine control units are used for PDE engines. S8 engine control units are used for XPI engines.

There are two different requirements for the electrical installation of S6 and S8: with or without Scania's base system. This installation manual does not describe Scania's electrical system. Information about the electrical systems can be found in

- 03:02 Coordinator and base system,
- 03:03 Instrumentation 2.0.

Grounding

In this document the term ground is used. Ground means that there is a connection to the battery negative terminal (U31).

Abbreviations

Abbreviations used in this document are listed in the table below.

Abbreviation	Explanation
EGR	Emission control system (Exhaust Gas Recirculation)
PDE	Fuel injection system (unit injector)
S6	Engine control unit for PDE engines
S8	Engine control unit for XPI engines
SCR	Emission control system (Selective Catalytic Reduction)
SDP3	Scania Diagnos & Programmer 3
XPI	Fuel injection system (extra high pressure injection)

Abbreviations for voltage

The abbreviations in the table below are used to describe different types of voltage. Unless otherwise specified, always +24 V.

Abbreviation	Explanation
U15	Starter key voltage (15 voltage)
U30	Battery voltage

Safety during electric welding



IMPORTANT!

When carrying out welding work on and near the engine, disconnect the battery and alternator leads. Pull out the multi-pin connector for the engine control unit as well.

Connect the welding clamp as close to the welding site on the component as possible. The welding clamp must not be connected to the engine, or so that the current can cross a bearing.

When welding is finished:

1. Connect the alternator and engine control unit cables first.
2. Then connect the batteries.



Batteries and alternators

Batteries

Use lead batteries of the starter battery type. This type of battery is able to deliver high current even at low temperatures for long enough for the engine to start.

Connect two 12 V batteries in series for 24 V system voltage.

If standard lead acid batteries are used, Scania recommends batteries with a starting capacity of min. 160 Ah and a cold cranking amperage of 800 A for all engine types.

In warm climates in which the temperature only briefly falls below 0°C, batteries with a starting capacity of min. 118 Ah and a cold cranking amperage of 490 A at 0°C may be used for all engine types.

The battery capacity indicates how high a current a battery can be discharged at for 20 hours at ambient temperature. A 100 Ah battery can, for example, be discharged at max. 5 A for 20 hours.

At low temperatures, the battery capacity is reduced considerably as shown in the following table:

Battery capacity at +20°C	Battery capacity at -18 °C
100%	50%
70%	35%
40%	25%

The cold cranking amperage above indicates the highest current with which a 12 V battery can be loaded at -18°C so that the terminal voltage after 30 seconds is a minimum of 8.4 V and the discharge time to 6 V is no less than 120 seconds.



Note:

If the engine is fitted with an alternator, the battery master switch must not be switched off or the batteries disconnected when the engine is running. Voltage peaks can damage components in the alternator and the charge regulator.

The batteries in stand-by generator sets must be checked for their state of charge and fluid level and charged if required. Batteries may be charged either during the normal test drive (once a month) for approx. 1 hour or using a battery charger and timer.

Boost charge and continuous trickle charge shorten the service life of the batteries.

Battery cables

When manufacturing battery cables, dimension the cables between the battery and starter motor as depicted in the diagram. This indicates the minimum permissible cable cross-section at different lengths for the various engine types.

The cable length in the diagram relates to the total length of both positive and negative cables.

Minimum permissible cable cross-section is 70 mm². If the ambient temperature constantly exceeds +10°C, the minimum permissible cable cross-section is 50 mm².

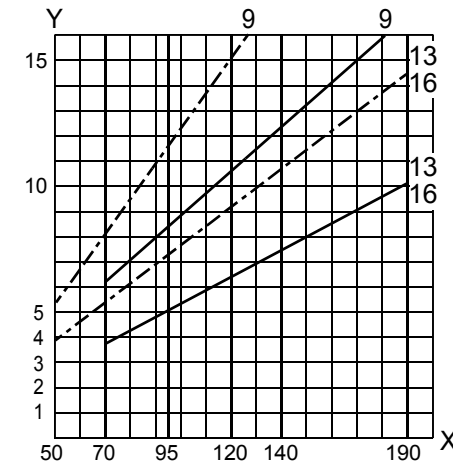


Diagram for dimensioning of battery cables

The dotted lines apply at a constant ambient temperature of more than 10°C.
The unbroken lines apply at an ambient temperature of -20°C.

Y = Total cable length in metres

X = Cable cross-section in mm²



Connection of batteries

Connect the battery cables correctly, i.e. negative (-) to the engine ground point and positive (+) to the starter motor terminal screw 30.

Note:

The alternator rectifier diodes will be damaged if these cables are connected incorrectly.

Do not disconnect the connections while the engine is running, as this may damage the charge regulator.

- Removing: Always disconnect the negative cable before the positive cable.
- Fitting: Always connect the positive cable before the negative cable to reduce the risk of short-circuiting the battery with the tool.
- Make sure that the battery box, batteries and battery cable terminals are clean.
- Do not bang the battery cable terminals. Terminal posts and cell plates come off easily.
- Lubricate battery cable terminals and terminal posts using a thin layer of Vaseline or grease.



Battery master switch

If a battery master switch is installed between the starter motor and the batteries, it must be positioned as close to the batteries as possible.


The power must not be switched off directly after switching off the engine. In order for the control units to store operational data and switch off any systems, it is important to allow a 10 second delay before switching off the power.



IMPORTANT!

The SCR system may need up to 30 minutes to cool the reductant doser in extreme conditions. The battery master switch must not be switched off before then.

Status for post-running is sent out in CAN message DLN7. More information is available in the CAN interface installation manual.

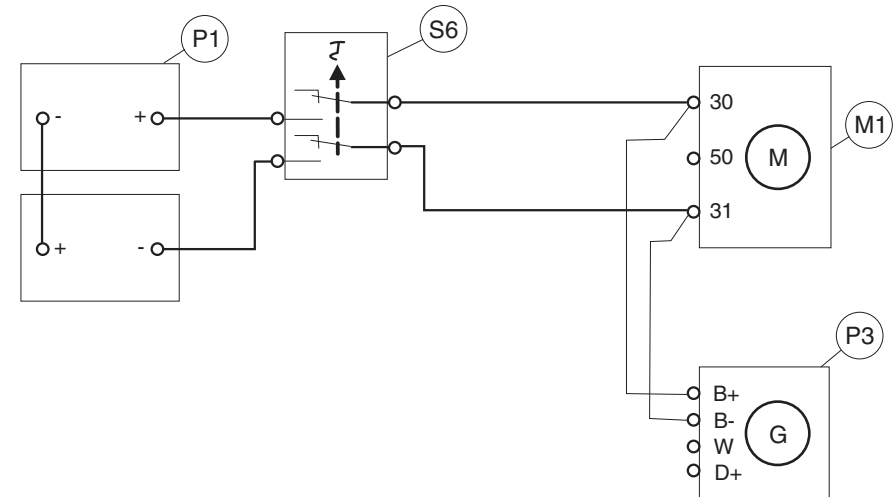

335 784

Mechanical battery master switch

M1 = Starter motor

P1 = Battery

P3 = Alternator 1


S6 = Mechanical battery master switch



Alternator charging for marine engines

In order for the alternator to start charging, the B+ terminal of the alternator must have +24 V. For certain engine installations, it may be necessary to use an electronic battery insulator in order for B+ to receive +24 V. Refer to the illustration for connection of the battery insulator.

1. Engine control unit
2. Alternator 2 (only with double alternators)
3. Battery insulator
4. Input to battery insulator
5. Ground
6. Output from battery insulator
7. Output from battery insulator
8. 15 voltage to battery insulator

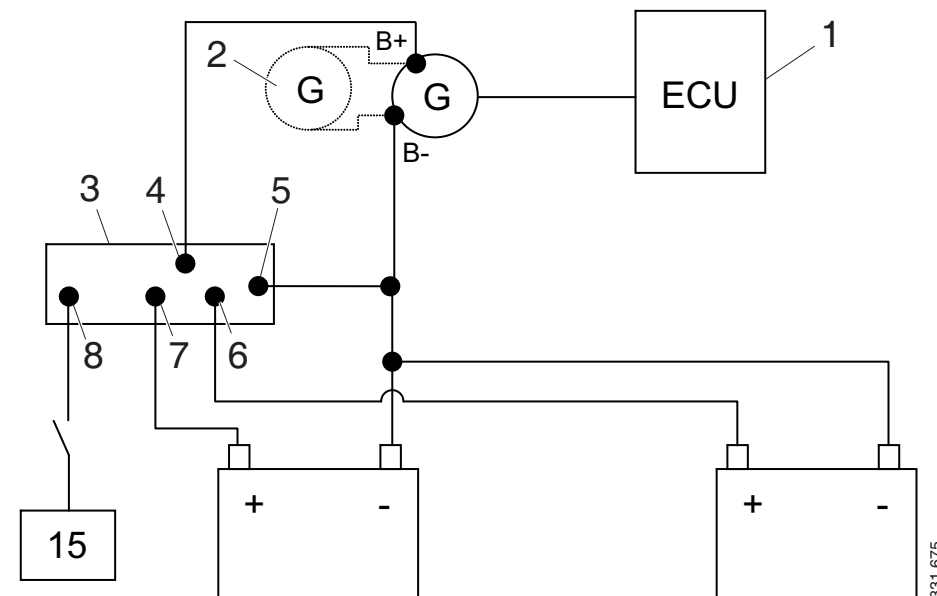




Marine engines with split ground system

When double alternators controlled from the engine control unit charge different battery groups, the battery negative terminals must be connected together, otherwise a fault code is generated.

1. Engine control unit
2. Ground connection between batteries

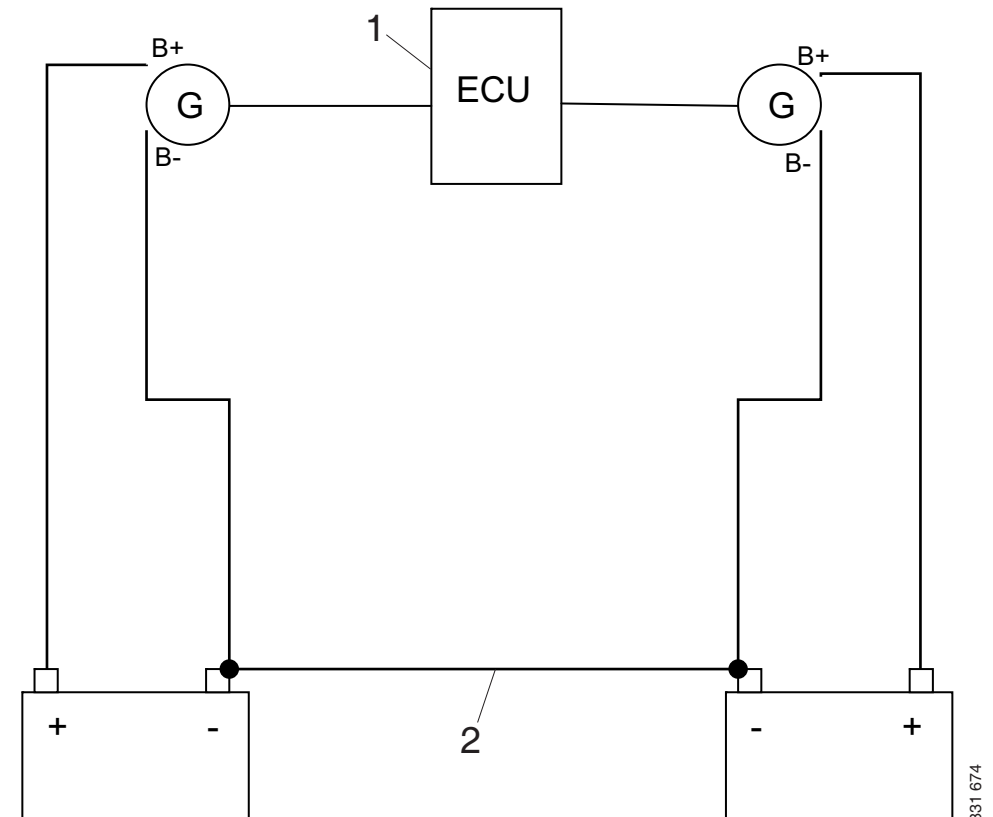

331 674



Electrical cables

Routing cables

When engines are supplied without instrumentation, all cables from the engine, except for the starter and alternator cables, should be collected together on a junction block or in a junction box and then continued with an extension cable to the instrument panel or central electric unit.

Do not place the junction box or junction block directly on the engine as this will expose it to harmful vibrations. Protect it from water, oil, heat and mechanical damage.

Ideally, route the cables along the bottom part of the engine where there is least movement.

When routing electrical cables, there must be no risk of chafing. Use chafing covers if there is such a risk. The cables must not touch any sharp edges, radius < 0.5 mm, e.g. sharp edges or ends of threaded screws.

When the cables are clamped to rubber hoses, the cable must not interfere with the movement of the hose.

The cables must be long enough so that they are not stretched.

The distance between the cable clamps, e.g. cable ties, should be 350-400 mm.

The cables must be routed as far away from hot areas, > 70°C, as possible. The following minimum distance applies if there is no heat shield:

- Exhaust pipe upstream of silencer, front part of silencer – 100 mm.
- Exhaust pipe downstream of silencer, rear part of silencer – 60 mm.
- Exhaust pipe, engine and cab heater – 40 mm.
- Coolant pipe, engine – 60 mm.

A conventional cable harness and CAN cable harness can be routed side by side without interference.



Calculating cable cross-section

Use the following formula to calculate the cable cross-section:

$$u_f = I \times \frac{0.0175 \times L}{A}$$

U_f = Permissible voltage drop, V

I = Current consumption, A

L = Length of cable, m

A = Cable cross-section, mm²

0.0175 = copper resistance when $L = 1$ m and $A = 1$ mm² at +15°C.

The highest permissible voltage drop for cables between alternator, starter motor and battery is 2.5% or 0.6 V. For other cables, the highest permissible voltage drop is 5.0% or 1.2 V.

Each connection point gives a voltage drop of 0.1 V at connection points and 0.3 V at joints.

When installing an electrical component with a known load (I , ampere) and location, which gives the cable length (L), the necessary cable cross-section is calculated as follows:

$$A = I \times \frac{0.0175 \times L}{U_f}$$

The voltage drop for connection points and any joints must be subtracted from the maximum permissible voltage drop before calculating the cable cross-section.

**Note:**

In 2 pin systems, both the positive and the negative cables must be included in the cable length.

**REQUIREMENT!**

The minimum permissible cross-section for cables routed on the engine is 1.5 mm² for reasons of strength.

The minimum permissible cable cross-section for a specific load also depends on which type of electrical cable is used.

Scania recommends the use of PVC 105°C electrical cable type RK.

Maximum permissible current and cable length for RK 105°C cable at different cable cross-sections.

Cable cross-section, (mm ²)	Current, A ¹	Uf = 2.5% = 0.6 V Length, m (max) ²	Uf = 5.0% = 1.2 V Length, m (max) ^b
0.75 ³	8	3.2	6.4
1.0 ^c	8	3.2	8.6
1.5	16	3.2	6.4
2.5	20	4.3	8.6
4.0	27	5.1	10.1
6.0	36	5.7	11.4
10	51	6.7	13.4
16	70	7.8	15.6

1. Maximum permissible current under continuous load.



2. For cable lengths above these values the highest permissible voltage drop determines the cable cross-section.
3. The minimum permissible cable cross-section for cables that are routed on the engine is 1.5 mm².



Splicing and repair

It is advisable to renew the entire cable if the cable is damaged or when carrying out a conversion.

If the cable must be spliced, this should preferably be done with the aid of watertight DIN connectors such as Cannon Sure Seal, Deutsch series DT or the equivalent.

Alternatively the cable can be repaired by using a jointing sleeve with glue and shrinking tubing. The sleeve must be appropriate for the cable cross-section.

DIN connectors and jointing sleeves with glue can be ordered from Scania dealers.

Position the joint in a well protected location so that it is not subjected to mechanical loading.

Fitting the jointing sleeve with glue

1. Remove the damaged part of the cable. Position the joints so that they are not subjected to bending. Strip off 7-8 mm of insulation at each end.
2. Strip off 7-8 mm of insulation at each end of the new cable.
3. Use shrinking tubing. The length of the shrinking tubing should be at least three times the length of the jointing sleeve. Cut a length of shrinking tubing and slide it onto the cable.
4. Fit the jointing sleeve so that the cable ends reach the bottom of the sleeve. Use a sleeve that is appropriate for the cable cross-section.
5. Crimp the sleeve at the peeled off parts of the cable ends using a crimping tool.
6. Apply heat from the centre of the sleeve and outwards using a hot air gun which is fitted with a reflector, until the ends of the sleeve shrink and glue seeps out.



IMPORTANT!

Do not heat too much.



7. Press the ends of the jointing sleeve gently using flat-nose pliers. Take care not to damage the plastic! Check that the glue has seeped out all around the cable.
8. Thread the shrinking tubing over the jointing sleeve, and heat the tube until the joint is tight and strong.
9. Test the joint.



Connection to engine

This section describes the engine interface for the different engine types. The engine interface is configured differently, depending on the engine type.

If the customer has not ordered the Scania base system, the customer must connect his system to the engine interface himself.

Connection to engine without Scania base system

The CAN cables must comply with SAE J1939-15, i.e. they must be unshielded, twisted cables (40 turns/m). Maximum recommended length is 40 metres.

The engine control unit has an integrated resistor of 120 ohms. In a CAN network, two resistors must be located between the CAN cables (CAN high and CAN low) at the ends of the CAN bus. The Scania coordinator has no integrated resistor.

Therefore, position a resistor of 120 ohms as close to the other end of the CAN network as possible. The Scania base system has an integrated resistor of 120 ohms. As a result, a resistor is not necessary.



Current consumption of the electrical system

The table below indicates guide values for how much current different consumers in the electrical system use.

Consumer	Current (A)
Engine control units S6, S8	Average: Approximately 3.5-4 A Short term top value of each injection: approx. 15 A
SCR control unit EEC3	Approximately 4 A, excluding heating of hoses and components An additional 10 A is needed for heating
Coordinator	Max 1.5 A
EGR valve	Nominal value: 2 A Top value: 4.5 A
Exhaust brake actuator ¹	Nominal value: 2 A Top value: 5 A
Variable geometry turbocharger ¹	Nominal value: 2.5 A Top value: 6 A


1. Stage IV/Tier 4f only.




Engine interface

Industrial engines - Stage IV/Tier 4f

Pos.	Connector	Interface
1	C4001	Customer interface to engine control unit
2	C4000	Diagnostics
3	C4002	Voltage to SCR system, EGR system and exhaust brake actuator
4	C4022	SCR system, cable harness comes with the engine
5	C4071	Voltage to variable geometry turbocharger and warning lamps for the SCR system

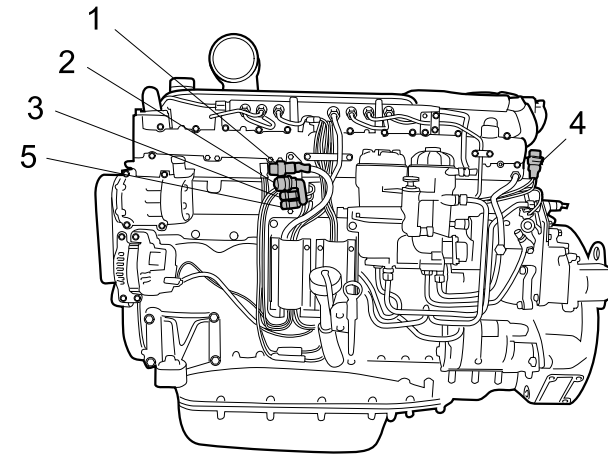

DC09, DC13

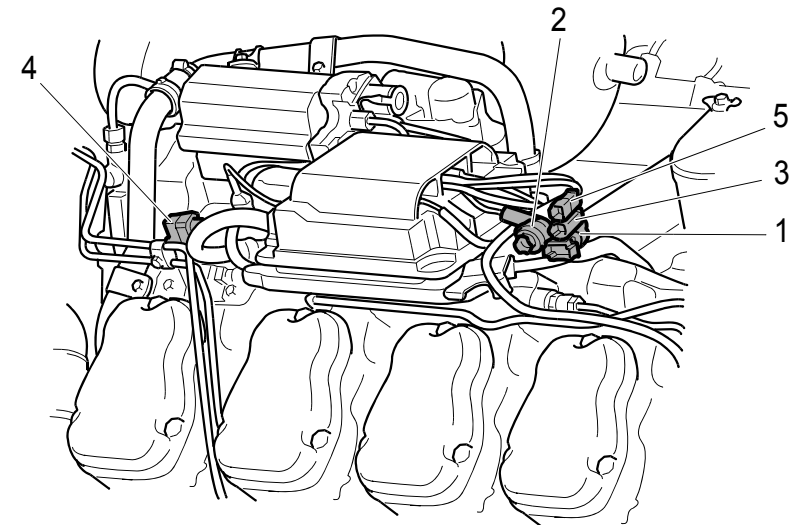

DC16

336 024


349 089




Industrial engines - Stage III B/Tier 4i and less restrictive emission laws

Pos.	Connector	Interface
1	C4001	Customer interface to engine control unit
2	C4000	Diagnostics
3	C4002 ¹	Customer interface to SCR system or EGR system
4	C4022 ¹	SCR system, cable harness comes with the engine

1. Stage III B/Tier 4i only.

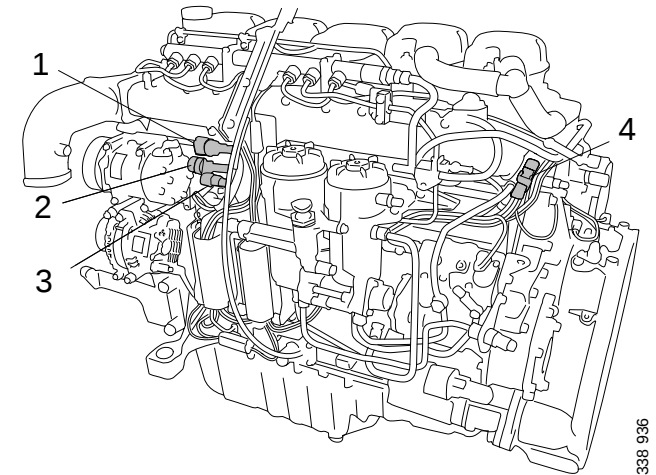

DC09, DC13

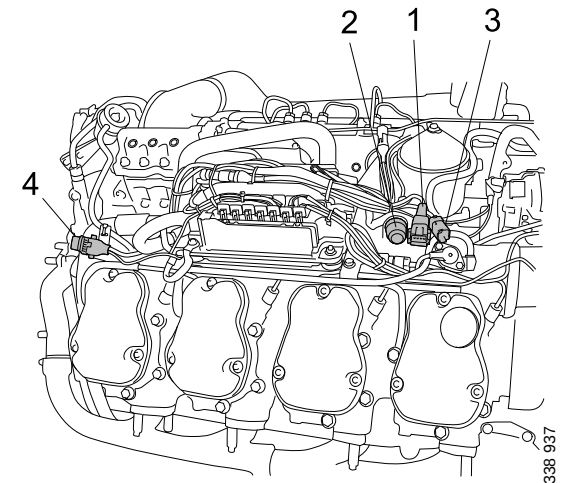


DC16



Marine engines

Pos.	Connector	Interface
1	C4001	Customer interface to engine control unit
2	C4000	Diagnostics
3	C4002	Connection of limp home mode

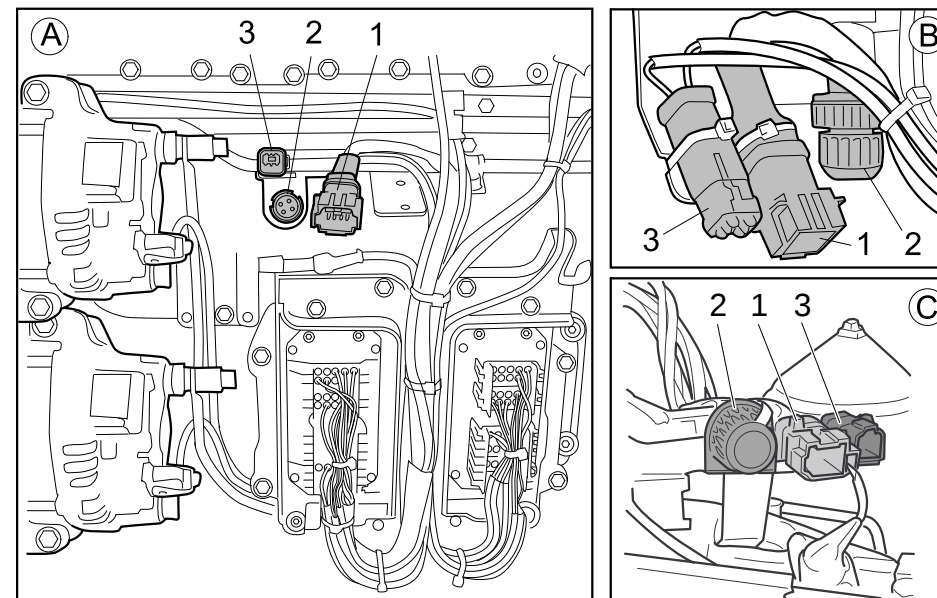

A DI09
B DI13
C DI16

336 026




Pin numbering for connectors

C4001: Connector for engine control unit

Pin	Function	Comments
1	U30 to engine control unit	Cable area 2.5 mm ² , fuse 20 A
2	U31, ground	Cable area 2.5 mm ²
3	U15 to engine control unit	Cable area 1.5 mm ² , fuse 10 A
4	U30 to engine control unit	Cable area 2.5 mm ² , fuse 20 A
5	U31, ground	Cable area 2.5 mm ²
6	CAN high	Use electrical cables which are twisted 40 turns per metre with gold-plated pins
7	CAN low	
8	Engine running ¹ +24 V	Cable area 1.5 mm ²

1. See instructions in the Engine running signal section.

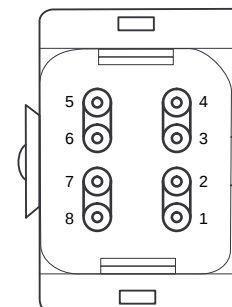

Connector C4001 on the engine viewed from the electrical cable input side


339 183



C4002 on industrial engines: Connector for SCR and EGR system

XPI engines with SCR and EGR system - Stage IV/Tier 4f

Pin	Function	Comments
1	U30 to SCR system	Cable area 2.5 mm ² , fuse 20 A
2	Ground to SCR system	Cable area 2.5 mm ²
3	U15 to SCR system	Cable area 1.5 mm ² , fuse 10 A
4	Not used	To be plugged
5	Ground to EGR system/exhaust brake actuator	Cable area 2.5 mm ²
6	U15 to EGR system/exhaust brake actuator	Cable area 2.5 mm ² , fuse 20 A

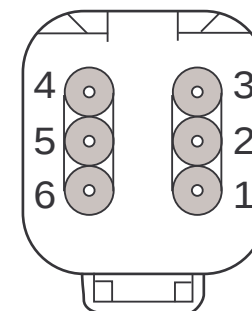

Connector C4002 on the engine viewed from the electrical cable input side

XPI engines with SCR system - Stage IIIB/Tier 4i

Pin	Function	Comments
1	U15 to SCR system	Cable area 1.5 mm ² , fuse 10 A
2	Not used	To be plugged
3	+24 V to warning lamp for low reductant level	Cable area 1.5 mm ²
4	Ground to warning lamp for low reductant level	Cable area 1.5 mm ²
5	+24 V to warning lamp for SCR malfunction	Cable area 1.5 mm ²
6	Ground to warning lamp for SCR error	Cable area 1.5 mm ²



PDE engines with EGR system - single-speed engine

Pin	Function	Comments
1	U15 to EGR system	Cable area 1.5 mm ² , fuse 10 A
2	U31, ground	Cable area 1.5 mm ²
3	Not used	To be plugged
4	Not used	To be plugged
5	Not used	To be plugged
6	Not used	To be plugged


C4002 on marine engines: Connector for connecting limp home mode

Pin	Function	Comments
1	Not used	To be plugged
2	Ground connection to potentiometer	Cable area 1 mm ²
3	Signal from potentiometer to engine control unit ¹	Cable area 1 mm ²
4	+5 V to potentiometer	Cable area 1 mm ²
5	+24 V if there is a fault on the accelerator pedal	Cable area 1 mm ²
6	+24 V to indicator lamp when the remote control lock is activated	Cable area 1 mm ²

1. More information about connection is available in the Connection of limp home mode section.

Note:

Electrical cables to C4002-2, C4002-3 and C4002-4 must be twisted 35-40 turns per metre.

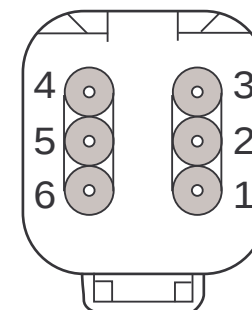

Connector C4002 on the engine viewed from the electrical cable input side


339 194



C4071: Connector for voltage to variable geometry turbocharger and warning lamps for the SCR system

This connector is only fitted on industrial engines certified according to Stage IV/Tier 4f.

Pin	Function	Comments
1	U30 to variable geometry turbo-charger	Cable area 2.5 mm ² , fuse 20 A
2	Ground to variable geometry turbo-charger	Cable area 2.5 mm ²
3	+24 V to warning lamp for low re-ductant level	Cable area 1.5 mm ²
4	+24 V to warning lamp for SCR mal-function	Cable area 1.5 mm ²

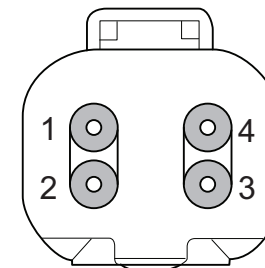

Connector C4071 on the engine viewed from the electrical cable input side

338 666



Connection of starter motor or alternator

When connecting electrical cables between the battery and starter motor or alternator, cable terminals in the sizes specified below must be used.

Industrial engines

Alternator 100A	
Battery positive	M8

Alternator 150A	
Battery positive	M10

Starter motor	
Battery positive	M10
Ground connection near starter motor	M10

Marine engines

Alternator	
Battery positive	M8
Battery negative	M10

Starter motor	
Battery positive	M10
Battery negative	M12



Note:

If several battery groups are to be connected to the alternator and separated, battery voltage is required on the positive terminal in order for the alternator to start charging.

Connection of coolant level monitor

Scania recommends that the cooling system be fitted with a coolant level monitor to warn when the coolant drops below a specific level.



REQUIREMENT!


If the cooling system temperature monitor has an alarm temperature above 100°C, a coolant level monitor must be installed. A coolant level monitor is always a requirement when there is no operator continuously monitoring the engine monitoring system.

Customers who use their own coolant level monitor connected to the engine control unit must activate this function via SDP3.

Connect coolant level monitor to connector T8 as follows:

Pin	Function
A	+5 V to coolant level monitor
B	Ground to coolant level monitor
C	Signal from coolant level monitor to engine control unit

The following voltage levels are required from the coolant level monitor depending on if the level monitor is closing or breaking:

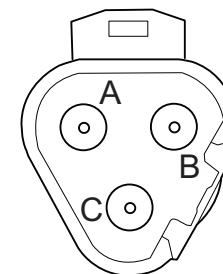

Connector T8 for connecting coolant level monitor



Type of level monitor	Voltage level	
Closing	0-0.5 V	fault code
	0.5-2.26 V	low coolant level
	2.26-4.5 V	adequate coolant level
	4.5-5.0 V	fault code
Breaking	0-0.5 V	fault code
	0.5-2.26 V	adequate coolant level
	2.26-4.5 V	low coolant level
	4.5-5.0 V	fault code

If the coolant level monitor is a closing or breaking level monitor it is possible to achieve the correct voltage levels by installing a resistor net between connector T8 and the coolant level monitor. An example of what this type of resistor net looks like is shown in the illustration to the right.


Use contact housing kit 1 456 342 to connect the coolant level monitor.

Contact housing kit 1 456 342 for connecting the coolant level monitor contains the following parts:

Qty	Part No.	Designation
1	1 383 572	Socket
1	1 349 112	Locking part
5	1 361 119	Cable terminal, round pin

Use the following tools for contact housing kit 1 456 342:

- Hand crimping tool 588 206
- Dismantling tool 99 591

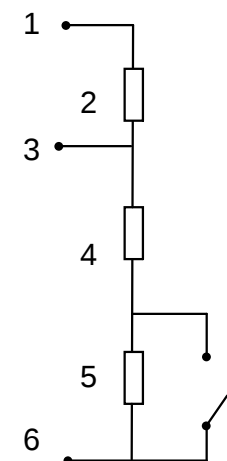


Example of resistor net between connector T8 and coolant level monitor

1. 5 V
2. Resistor 330 ohms
3. Signal
4. Resistor 120 ohms
5. Resistor 470 ohms
6. 0 V
7. Coolant level monitor




Connecting a coolant level monitor on an industrial engine

On industrial engines the coolant level monitor is connected to connector T8, which is positioned as shown in the figures.

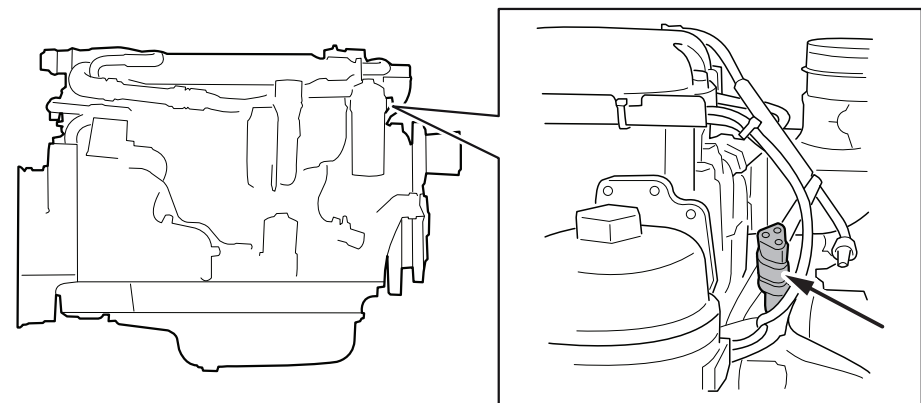

Connecting a coolant level monitor on a DC09 and DC13

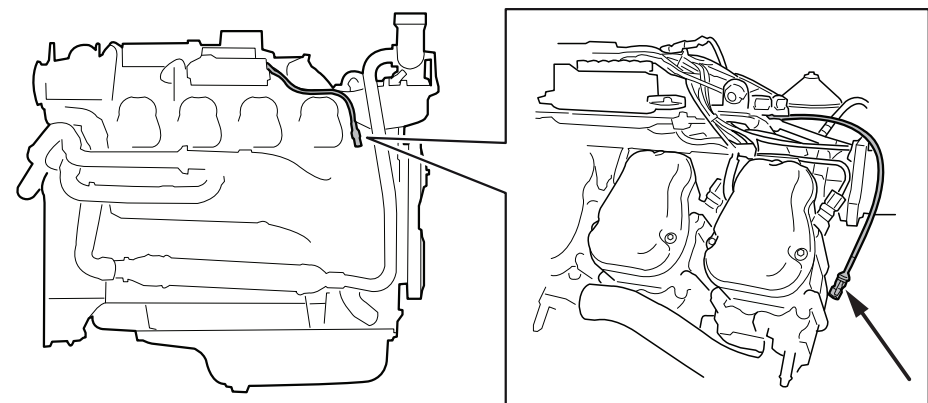

Connecting a coolant level monitor on a DC16




Coolant level monitor on marine engines with heat exchanger


On engines with heat exchanger, the cooling system is supplied with a coolant level monitor that warns when the coolant level is below a set level.

On the DI09 and DI13, the coolant level monitor is positioned at the very bottom on the front of the expansion tank. On DI16, it is positioned on the underside of the expansion tank.

DI09, DI13

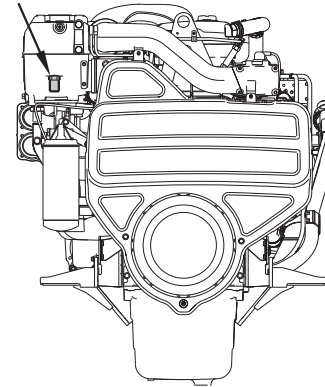

DI16

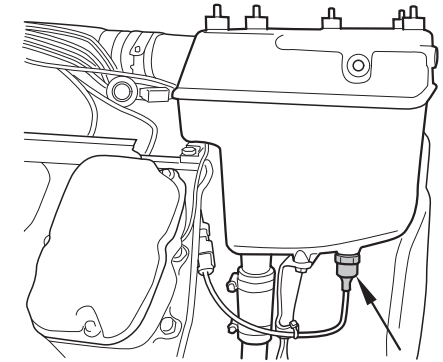

337 380


Coolant level monitor on marine engines with heat exchanger

Connection of coolant level monitor on marine engines with keel cooling


Engines with keel cooling can be supplied with or without coolant level monitor. If the Scania coolant level monitor is not used, Scania recommends that the cooling system be fitted with a coolant level monitor from another manufacturer.

On the DI09 and DI13, it is connected in the front, upper part of the exhaust manifold with thread M18x1.5. On the DI16, it is connected in connector T8 at the top left of the front of the engine.

DI09, DI13

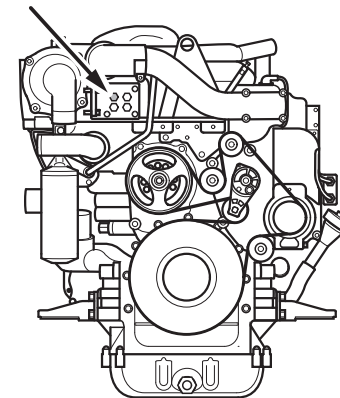

DI16

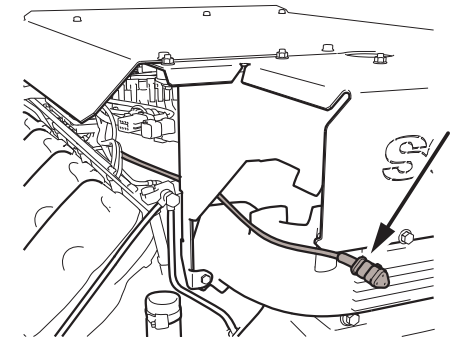

337 381

Connection of coolant level monitor on marine engines with keel cooling



Connection of oil level sensor

On XPI engines the oil level sensor may be connected to the engine control unit. The oil level values are then read via CAN.

On PDE engines, the customer connects the T110 oil level sensor. The customer can also choose to connect the sensor on XPI engines. The oil level is then read using the voltage levels. Refer to next page.

Connect the oil level sensor as follows:


Pin	Function
1	+5 V to oil level sensor
2	Ground to oil level sensor
3	Signal from oil level sensor
4	Not used

The following parts are required to connect the oil level sensor:

Qty	Part No.	Designation
1	1 757 720	Contact housing
3	1 427 160	Cable terminal, round pin
1	1 347 493	Locking part
1	1 342 966	Plug

Use the following tools:

- Hand crimping tool 588 206
- Dismantling tool 99 591

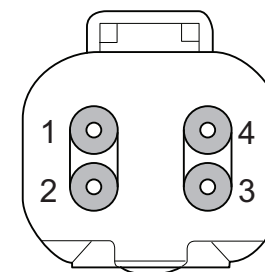

Connector T110 on the engine viewed from the electrical cable input side

338 666



The tables below show the oil level limit values grouped according to displacement:

DC09, DI09		
Limit value	Voltage (V)	Level (mm)
Min. alarm level	2.2	42.4
Min. level	2.7	54.5
Max. level	3.5	74.2
Max alarm level	4.1	89.2

DC13, DI13		
Limit value	Voltage (V)	Level (mm)
Min. alarm level	1.8	33.5
Min. level	2.4	48.0
Max. level	3.3	69.8
Max alarm level	3.9	86.0

DC16, DI16		
Limit value	Voltage (V)	Level (mm)
Min. alarm level	1.7	29.1
Min. level	2.4	48.3
Max. level	3.6	78.4
Max alarm level	4.3	95.5


The measuring range of the oil level sensor is 0.2-4.8 V.



Connection of water separating prefilter on marine engines (PDE engines)

Connect the warning lamp as follows:

Pos.	Connection
1.	Black (A), ground.
2.	Red (B), +12/24 V to prefilter.
3.	Yellow (C), signal when the sensor detects the maximum water level in the filter.
4.	Fuse, 1 A.
5.	Lamp, max. 12 W.

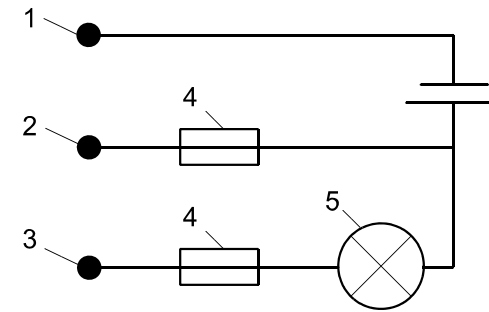

Prefilter connectors.

357 112



Engine control unit

Operating voltage

For the engine control unit to function according to specification, the voltage must be 22-30 V. The normal voltage is 28 V.

Protection class

S8

The S8 engine control unit has IP class 6K9K when all connectors are connected to the engine control unit.

The S8 engine control unit has IP class 5K4 when the connectors are not connected to the engine control unit.

S6

The S6 engine control unit has IP class 6K9K when all connectors are connected to the engine control unit.

The S6 engine control unit has IP class 40 when the connectors are not connected to the engine control unit.



Connection of limp home mode

Limp home mode can be used if the accelerator pedal fails.

For industrial engines with PDE, connect limp home mode to connector A2 on the engine control unit.

For industrial engines with XPI, connect limp home mode to connector A6 on the engine control unit.

For marine engines, connect limp home mode using connector C4002 in the engine interface. Also see section C4002 on marine engines.


Note:

Existing connections must be put back to the same position.


Pin, industrial PDE	Pin, industrial XPI	Pin, marine PDE	Function
A2-5	A6-4	C4002-2	Ground connection to potentiometer
A2-7	A6-5	C4002-4	+5 V to potentiometer
A2-8	A6-10	C4002-3	Signal from potentiometer to engine control unit 0-100% throttle = 0.485-2.693 V ¹

1. A fault code is generated if the value from the potentiometer is below 0.1 V or above 4.9 V.

Use electrical cables which are twisted 40 turns per metre.

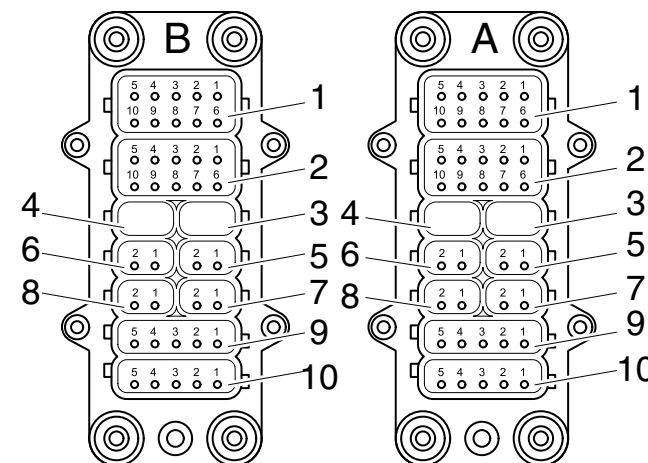

Engine control unit for PDE engines

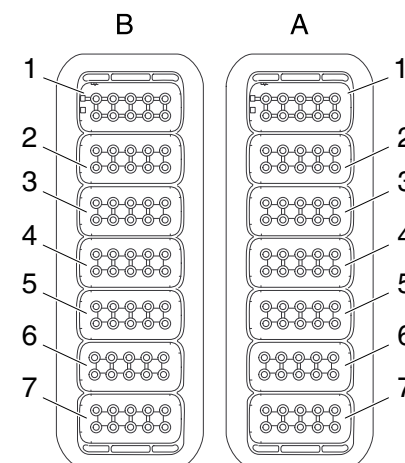

Engine control unit for XPI engines



The following parts are needed in order to connect a backup accelerator pedal to the engine control unit connector A2 (PDE) or A6 (XPI):

Qty	Part No.	Designation
3	1 380 386	Socket
3	1 380 388	Seal

The following tools are required:


- Hand crimping tool 588 204
- Dismantling tool 99 592




Engine running signal

When the engine is stationary, the voltage on the engine control unit output for engine running signal is not 0 V, but 14 V because of a pull-up resistor. Depending on how the signal should be read, there are two different ways.

- If 0 V is to be detected, a relay which switches between 24 V and 0 V can be connected.
- If the signal should be read from a threshold voltage of approx. 2-3 V, a resistor can be connected.

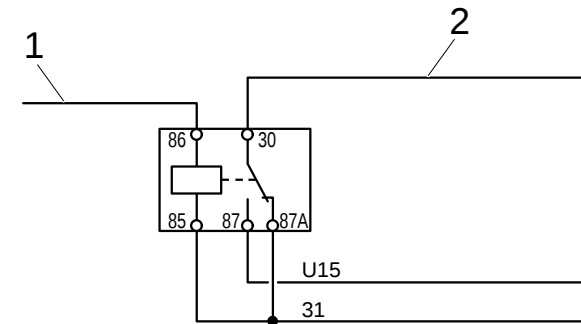

1. Engine running signal output from the control unit, 14 V.
2. Engine running: 24 V. Engine stationary: 0 V.

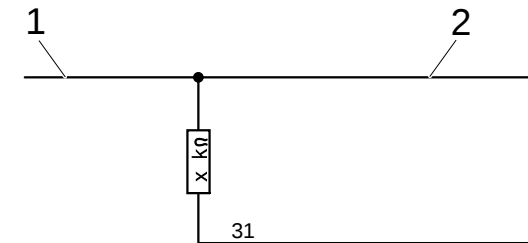

1. Engine running signal output from the control unit, 14 V.
2. Resistance

- 5.6 kohms provides a voltage of approximately 3.0 V.
- 4.7 kohms provides a voltage of approximately 2.5 V.
- 3.3 kohms provides a voltage of approximately 1.85 V.

339 495


339 189



Work description for connectors

Connector for engine interface

The work description depicts a 2-pin connector, but the procedure is the same for 6 and 8-pin connectors.

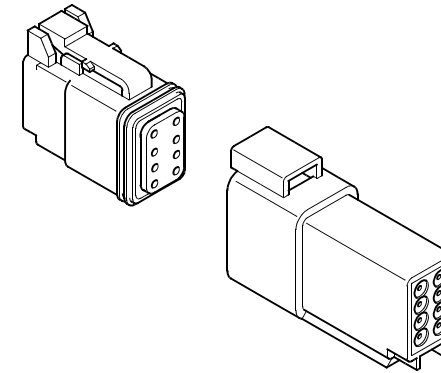

Deutsch connector

343 120


Female

1. Release the secondary locking device by placing tool 588 214 in the slot in the contact housing.

Note:

The locking device may be stuck. Be careful not to lose the locking device.

588 214

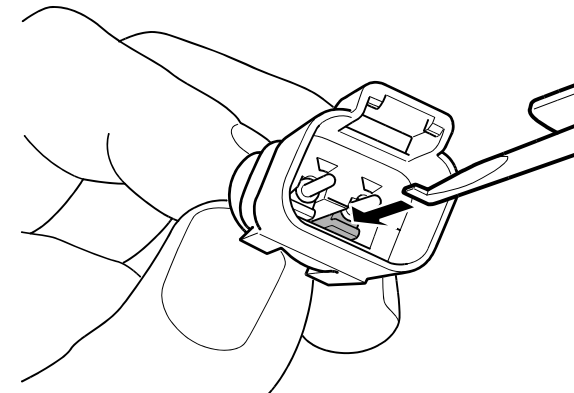


343 121



2. Tool 588 214 should be turned 90° to keep it in place under the secondary lock.
3. Pull out the locking device from the contact housing.

588 214


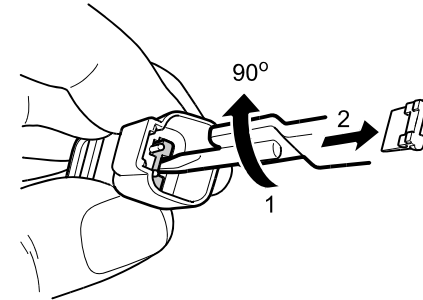


343 118

Note:

Note: Push in the cable terminal using the cable to make it easier to release the primary lock.

4. Release the primary lock by bending away the plastic tongue securing the cable terminal using tool 588 214 or a small screwdriver.
5. Pull out the cable terminal using the cable.

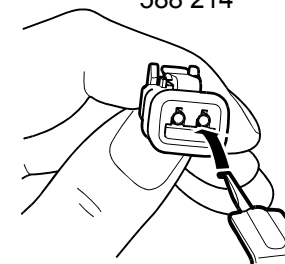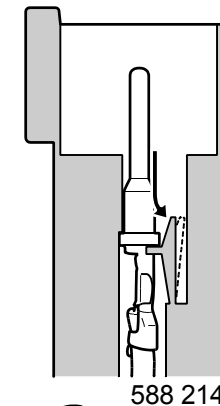

343 116




Male

1. Release the secondary lock by removing the cover from the contact housing.



Note:

Push in the cable terminal using the cable to make it easier to release the primary lock.

2. Release the primary lock by bending away the plastic tongue securing the cable terminal using tool 588 214 or a small screwdriver.
3. Pull out the cable terminal using the cable.

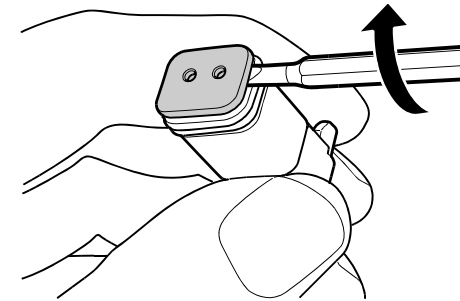

343 119

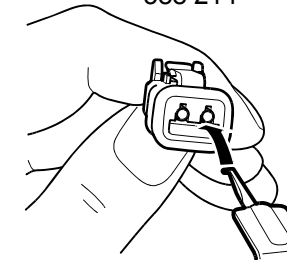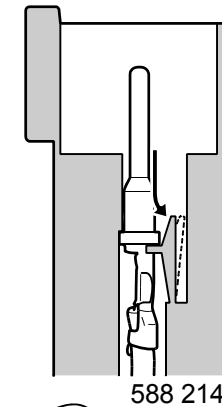

343 116



Connector for engine control unit

1. Connector
2. Secondary lock
3. Cable connection 0.5-1.0 mm² or 1.5-2.5 mm² tin
4. Seal 1.2-2.1 mm diameter (red) or 1.9-3.0 mm diameter (grey) depending on the diameter of the cable casing.
5. Cable
6. Plug

Assembly instructions

- A. Press together at the stripped end and the lower section of the seal.
- B. The rear section of the seal should be aligned with the housing after assembly.
- C. The rear section of the seal must be aligned with the edge of the insulation.

