



Owners Manual

Dual Console Series



Table of Contents

I Introduction

- Dealer / Customer responsibilities
- Registration
- Insurance

II Safety

- Regulations
- Equipment
- Passenger safety
- Rules of the road
- Hazardous conditions
- Alcohol
- Carbon monoxide
- Fire
- Flooding

III Controls

- Ignition
- Choke
- Safety shut down
- Shift / Throttle / Trim
- Steering
- Instruments: Fuel Gauge, Water Temperature, Volt, Tachometer, Speedometer, Trim, Options
- Switches: Bilge Pump, Lights, Trim,

IV Systems

- Sea Water
- Fuel/ Oil
- Electrical
- After Market Accessories

V Trailering and Launching

- Classification and Capacity
- Hitch
- Load Distribution
- Launching and Retrieving

VI Operation and Performance

- Loading
- Fueling
- Starting
- Torque
- Trim
- Prop

VII Service and Care

- Fiberglass / Gelcoat
- Marine growth
- Plexiglass

Stainless Steel/ Aluminum

Canvas

Upholstery: Vinyl, Fabric

Corrosion Protection

Winterization, Storage, Mooring

VIII Appendix

Boat ID

Trouble Shooting Chart

Nautical Terms

Specifications

Warranty

Introduction

Congratulations! You are now the proud owner of a new Pro Line Dual Console fishing boat.

Welcome into the proud family of satisfied Pro Line owners. Every expedition lets you enjoy the outstanding features designed into every boat we construct. Your new Pro Line is more than just a boat, it's a lifestyle.

Pro Line's commitment to the needs and wishes of the professional sport fisherman has resulted in a superior fishing craft, providing you with comfort, performance, security and fishability. All of our boats comply with U.S. Coast Guard (USCG) safety regulations, and are designed, and crafted in accordance with the National Marine Manufacturers Association (NMMA), American Boat and Yacht Council (ABYC) standards, and the optional Common European directive (CE). This manual (to be kept onboard your Pro Line) is designed to provide you with information necessary for safe, efficient operation and care of your new Pro Line. To maximize your enjoyment and safety, take the time now to carefully review the documentation in your owners pack and this manual, and really get to know your boat.

Dealer's Duties

Your dealer's responsibilities include but are not limited to:

- Pre-delivery verification of proper rigging and operation.
- Providing adequate orientation in general operation of your Pro Line including explanation of specific safety considerations regarding the use of systems and components.
- An explanation of owners packet literature and warranty registration cards for all separately warranted equipment and accessories.
- Explaining local and out of area service procedures during and out of warranty periods.

Customer Responsibilities

- Be proficient in boat handling and safety.- **THIS MANUAL IS NOT INTENDED TO PROVIDE COMPLETE TRAINING ON ALL ASPECTS OF GENERAL BOAT OPERATION.**
- Read and understand the limited warranty.
- Read all literature and instructions and use and maintain all equipment as directed.
- Examine the boat at time of delivery to ensure that all systems are functioning normally.
- Learn about and operate boat in accordance with local, state and federal laws, regulations and **registration** requirements.
- The owner is legally responsible for all liabilities of operation - secure **insurance protection.**

Safety

Your Pro Line boat has been constructed with safety in mind, however the ultimate safety of you and your passengers is in your hands. Plan your trips carefully. Insure ample fuel supply and reserve. Tell someone where you are going and when you expect to return. Keep current charts onboard. Read and observe USCG boating safety circulars.

Regulations

The USCG is the authority of all the waterways. State boating regulations are enforced by local authorities. You are subject to marine traffic laws and "Rules of the Road" for both federal and state waterways, and must submit to boarding if requested by proper authority.

There are many publications available from the Coast Guard concerning regulations and more. For additional information call the boating safety hot line at 1(800)368-5647.

Equipment

USCG regulations require the following equipment while operating your boat:

- Fire extinguisher
- Personal Flotation Device (PFD) for each occupant
- One throwable PFD
- Sound signal device
- Navigational lights if operated at night
- Sight signal (flare- night, orange flag- day) when in coastal waters or great lakes.
- Anchor and sufficient line

In addition, here is a list of suggested equipment you should have aboard your Pro Line:

- | | |
|---------------------------------------|-------------------------------------|
| • First aid kit and blankets | • Binoculars or telescope |
| • Sea anchor with line | • Local charts and compass |
| • Mooring lines and fenders | • Water proof flashlight |
| • Bailing device | • 2 way radio (with proper license) |
| • Combination oar / boat hook | • EPIRB (emergency beacon) |
| • Tool kit and lubricant | • Floating key chain & spare keys |
| • Spare prop, nut & washer | • Navigation device |
| • Spare fasteners, hose clamps, plugs | • Emergency food and water |
| • Spare fuses and bulbs | • Water proof matches or lighter. |

Passenger Safety

You are responsible for the safety and conduct of your passengers, make sure that:

- You instruct passengers on proper use and location of PFD's; children and non-swimmers should wear one at all times.
- When underway each passenger is in a safe location, and knows to keep the boat balanced.
- At least one other person knows how to operate the boat in case of emergency.
- They are aware of dangers of the prop, and the possibility of sudden maneuvers and jolts.
- You turn the engine off and remove key when swimmers are near the prop or using the dive platform.
- All keep away from lines under stress should they break and recoil.

Rules of the Road

Know and use the rules of the road, the information here is only a brief overview. For detailed

information, contact the USCG.

Audible warning signals:

- One short horn blast: starboard course change.
- Two short horn blasts: port course change.
- Three short horn blasts: astern operation.
- Five horn blasts: doubt about previous signal, or danger.
- One Five second blast every minute: for fog operation

When overtaking, the give-way vessel announces intention with horn blast(s) and waits for same response, then completes maneuver.

When approaching head on both boats give way after giving appropriate horn blast. (preferable to starboard).

When crossing a vessel converging from starboard has right of way, port vessel gives way (both acknowledge with one short horn blast).

Know and observe navigational buoys and markers.

Give way to craft under sail.

Hazardous Conditions

Keep track of weather developments and avoid hazardous conditions if possible. When forced to operate your Pro Line in storm conditions:

- Wear PFD's
- Stow loose gear and equipment.
- Place heavy items as low as possible.
- Head for the easiest to reach safe location.
- Reduce speed. If the boat leaves the water, you're moving too fast.
- If power fails, rig a sea anchor off the bow (an empty ice chest in a pinch).
- Stay with boat if it capsizes, unless it is burning out of control.

Alcohol

Don't drink and drive. If you have been drinking have someone drive who has not been drinking. Never operate a boat under the influence of drugs or alcohol.

Carbon Monoxide

Be aware of and avoid conditions that can cause carbon monoxide poisoning (see USCG boating safety circular 77). Sources of carbon monoxide include any gas or diesel engine, any flame such as a charcoal grill, stove or heater. Carbon monoxide can accumulate to deadly levels in enclosed spaces. Always ventilate occupied areas of vessel with fresh clean air.

Fire

Be aware of and avoid conditions that lead to accidental fire. Guard against and watch for fuel spills and leaks. Inspect wiring for damage or exposure that could lead to short circuits or arcing. Make sure those who smoke are vigilant against their ignition source starting a fire. Don't allow smoking while fueling. Keep a USCG approved fire extinguisher aboard at all times. Inspect the fire extinguisher regularly, learn how (and instruct others) to properly use it. Only use water to fight a fire as a last resort and then only after making arrangements to abandon the boat if a fire should get out of control.

If a fire is burning out of control and you must abandon the boat keep the following in mind:

- Abandon the boat into the wind to minimize burn risk from floating fuel.
- Wear a PFD unless you must swim under burning fuel.
- If swimming under burning fuel throw a PFD outside of the burning area and swim under

the burning fuel to it.

Flooding

Be aware of and avoid conditions that can cause your boat to flood with water.

Possible causes of flooding include; damage to hull or thru-hull fitting, waves washing into the boat, water entering cockpit due to improper loading.

If water enters the boat faster than the bilge pump can expel it, the boat will become flooded and may swamp, capsize, or sink.

Controls

Ignition

The ignition switch has three positions; off, on, start. To start the engine; attach safety lanyard, turn the key clockwise against the spring pressure to the start position, as soon as the engine starts release clockwise pressure allowing spring tension to return switch to the on position. If the engine fails to start in 5 seconds of cranking allow the starter to cool 10 seconds and repeat.

For detailed instructions see engine manual.

Choke

The choke is only used to aid in starting a cold engine. Operation varies with manufacture, consult your engine manual.

Safety Shut Down

The Safety shut down switch shuts off the engine in case the operator is thrown from the boat or helm. To ensure proper function always attach the lanyard securely to the operator.

Shift/ Throttle

Your Pro Line can be ordered with several different shift/ throttle systems. Refer to the owner's packet to find the manual pertaining to your particular installation.

The shift lever has three positions; forward, neutral, reverse. The shift function occurs in the first portion of the lever travel. After the transmission is shifted into gear, further movement of the lever advances the throttle. To move forward, push the lever ahead, pull back for reverse.

Centralize the lever to the detent for neutral. The shift lever is equipped with a neutral safety switch to prevent the motor from starting in gear. Practice shifting a few times without the engine running to develop a feel for the range and friction of the system. The initial short movement of the lever to engage the transmission should be made firmly to avoid causing gear clash.

CAUTION: Use care in shifting to avoid advancing the throttle more than intended. Practice in an safe area away from obstacles until familiar with the feel.

The throttle can be operated independently for starting. Refer to the engine/ drive manuals in your owners packet for specific information. If attempting to start an engine this way, keep a hand on the throttle to pull it back as the engine clears to prevent over speed.

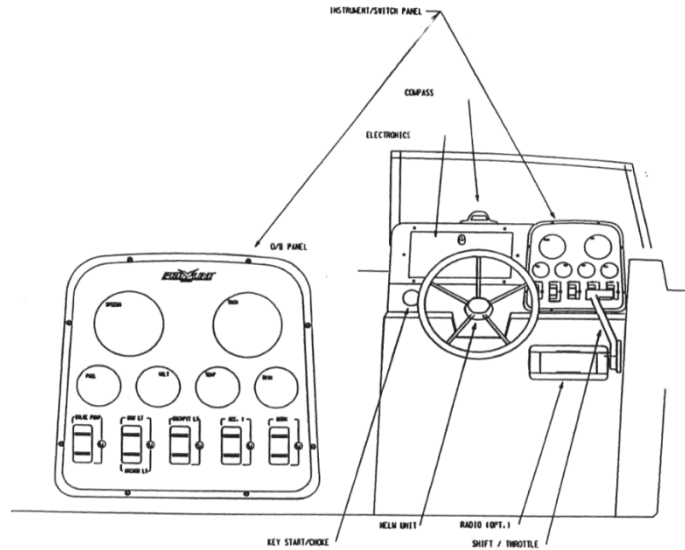


Fig 1 Helm Area

Steering

Your Pro Line is equipped with a self contained hydraulic steering system. When the steering wheel is turned the helm pump pumps fluid to the steering cylinder, causing the boat to turn. Always check the operation of the steering before starting the engine.

Periodically check the fluid level and fill if necessary. Beware of adding too much fluid especially if the ambient temperature is cold because subsequent expansion could cause leaking or damage to your system (refer to manual in packet). Every 24 hours of operation check all nuts, caps, and hose fittings for tightness. Check that the hoses are not chafing, or kinking on sharp corners. Also check that hose ends are not damaged or distorted by the clamps.

The fluid should be changed yearly under normal conditions, twice yearly for heavy use.

If your steering does not operate properly first check for; drive entanglements, fluid level, hoses / fittings for leaks, and / or air in the system.

Instruments

Your Pro Line's instrumentation will vary from model to model and engine to engine, therefore the following descriptions are general; refer to your engine manual for specifics.

Fuel Gauge

Differences in temperature, humidity, speed and trim can affect the actual accuracy of this gauge in service. It is important to verify the fuel flow in gal./hr. for your boat and make note of your gauge position with respect to time for different RPM settings. No gauge can give 100% accuracy. If you notice unusually high or low fuel consumption, investigate further to see if the engine is using more fuel than normal or the gauge has failed.

Water Temperature

The water temperature gauge indicates the internal water temperature of your engine. Your engine is equipped with a thermostat to quickly bring the engine up to its optimum operating temperature range of 150 to 170 degrees f. All outboard engines are also equipped with a audio alarm system

indicating a over heat condition, if the gauge or alarm indicates a over heat condition, immediately shut the engine off, lift the drive and inspect water intakes for obstructions such as aquatic vegetation or mud. After finding the source of the overheating, restart engine and confirm water flow, if water does not flow within five seconds shut the engine off.

Volt

The volt meter indicates battery voltage; normal reading is between 12 to 15.5 volts. A low reading indicates too heavy of a load or a dysfunction in the charging system. Too high of a voltage indicates a fault of the charging circuitry and continued operation will damage the battery.

Tachometer

The tachometer indicates the revolutions per minute (RPM) of your engine. Do not operate the engine beyond the limits stated in your engine manual. Abnormally low tach. readings (for a given throttle setting) indicates loss of power, or an prop entangled with weeds or trash; check the prop first. A reading higher than normal indicates a ventilating or cavitating prop, or prop/ drive damage.

Speedometer

The speedometer indicates the speed of your boat in Miles per hour (MPH).


The gauge operates by sensing water impact pressure from the pitot tube mounted on the transom. (or integrated into the lower drive unit of the motor). If the gauge fails to give a reading, suspect a blocked pickup.

Trim

The trim gauge indicates the in (down) and out (up) position of the drive unit in relation to the hull. (see Trimming your boat p.18)

Options

Optional instrumentation for your Pro Line includes: fish locator / depth finder, VHF radio, GPS navigation aids, etc. Refer to the manuals supplied.

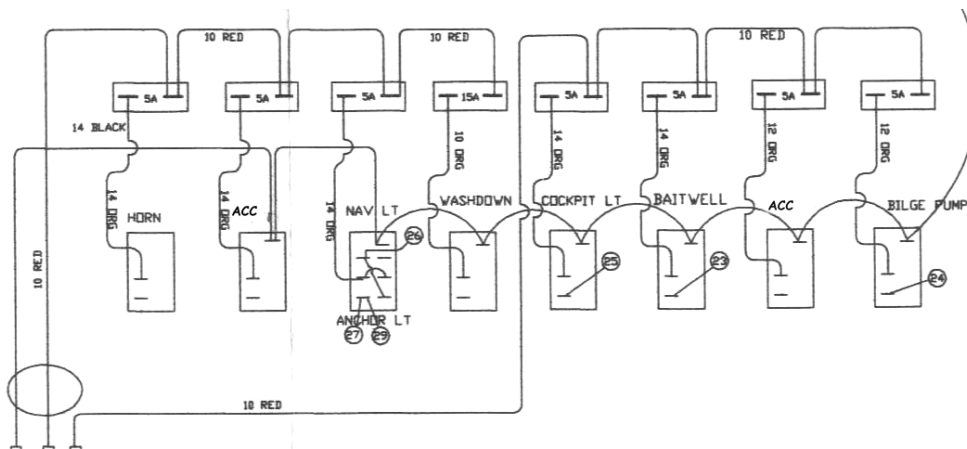

Switches

Bilge Pump

Your Pro Line is equipped with an automatic bilge pump system with a manual override. The pump is located in the bilge at the keel. The pump is mounted as low as possible. If the pump runs for a long time it may mean that water is entering the bilge faster than the pump can expel it. Investigate and correct the cause immediately. The automatic float switch is wired directly to the battery terminal through an in-line fuse. Keep the bilge area clean and free from debris that could clog ports. The helm switch overrides normal automatic operation on the primary pump. Circuit breakers are located at the helm. Keep the battery charged that the bilge pump is attached to. If the battery is discharged and flooding occurs the boat could swamp, causing damage and possible loss of life or property.

Lights

For operation at night, your Pro Line is equipped with navigation and anchor lights to indicate your position to other boaters. While running after dark the nav. lights are required to be on and visible to other boaters, visually verify operation and lack of obstructions. Lights are also provided for the cockpit, helm and head.

Breaker Switches


The wiring on your Pro Line is protected by circuit breaker or fuse. Breakers are located beside the switches or on the main breaker panel on the transom panel. If a device stops working first suspect the circuit breaker is tripped (or fuse blown).

A tripped breaker will protrude from its set position, indicating that the circuit has been overloaded. Turn off the device(s) on the circuit then reset the breaker by pushing in once. If the breaker does not reset or if it resets and then pops out again after the device is turned back on, then a short circuit exists or your device may be damaged, overloaded or faulty. Correct the problem and then reset the breaker. If the breaker continues to pop and you are certain the device, switch and wiring are in good repair; either the breaker is too small for the load or is faulty. Reduce the load or replace the breaker.

Systems

Sea Water System

The bait-well switch controls a pump mounted on a seacock in the bilge. An overflow tube is provided that is inserted into the drain to allow circulation to keep bait alive. The pump is mounted just above the bilge pump in the bilge. The pump is equipped with a pressure switch. Turn the main switch off if the pump is not going to be used soon. Raw water is taken in by the thruhull fitting with a seacock. A strainer on the pump filters the raw water. The filter must be cleaned as needed to avoid pump damage. Seacocks on all below water line fittings should be closed when not in use.

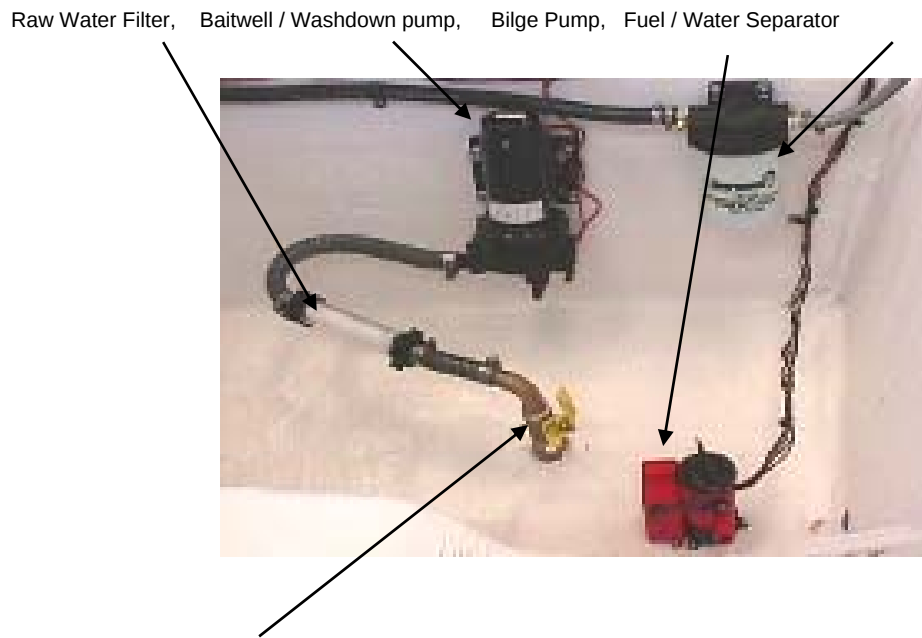

Sea-cock, shown in the open position

Fig 4 Baitwell/Wash-down

Fuel / Oil System

The fuel tank on your Pro Line is made of heavy gauge plastic with internal baffling to minimize sloshing. The tank is vented overboard, inspect the vent for obstructions regularly. 'Deck plate' access ports are placed over the hose connections and the sending unit. Inspect the hose connections on a regular basis, and if you notice fuel odor or see fuel in the bilge.

Water separator / filter units are located in the bilge. The spin on cartridges should be changed at least seasonally, more often depending on use and conditions.

Pro Line boats equipped with oil injected outboard engines have onboard oil tanks. Ensure that the tanks are well stocked with the recommended 2 stroke oil - refer to your engine manual. It is imperative that the oil supply remain clean and uncontaminated by water or dirt, check to make sure that the oil lines are free from leaks, kinks, and chafing.

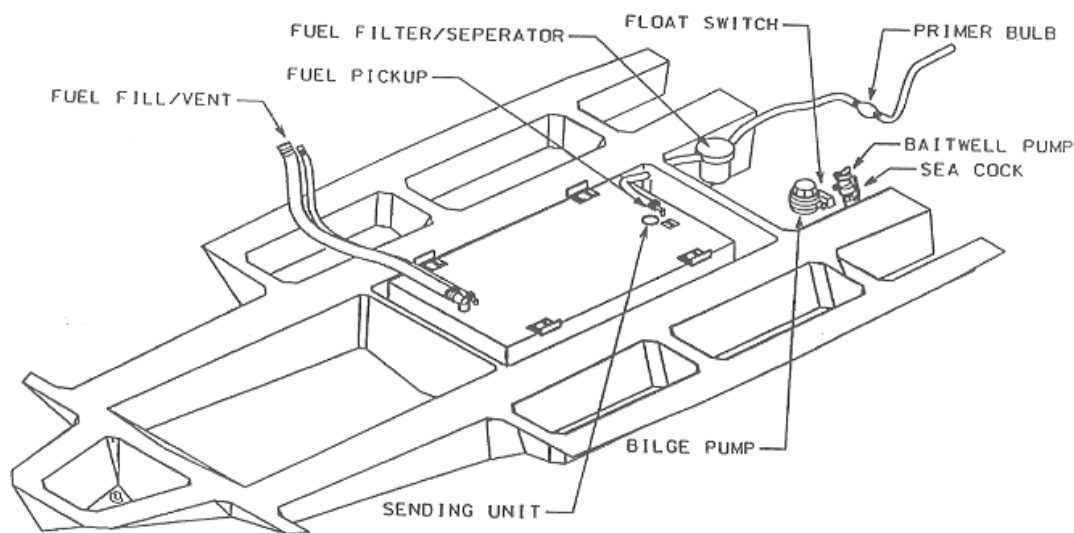


Fig 5 Under Deck

Electrical Direct Current

12 volt direct current provides electrical power for all lighting, pumps, electronics, and DC devices. A main breaker panel is located behind the starboard transom hatch.



Positive terminal, Negative terminal, Main Breaker

Fig 6 transom panel

Aftermarket Accessories

Your Pro Line's electrical system was designed for factory tested and approved dealer installed optional accessories. Pro Line makes no recommendations to the suitability of accessories that are not listed in the Pro Line sales literature. Any unapproved modifications or additions to the standard or optional system are done at the owners risk and void the warranty. Unapproved modifications could cause risk of fire or failure of the electrical system.

Trailer and Launching

Consult your trailer manufacture for specific information relating to your particular trailer. Pro Line does not make or recommend the use of any particular trailer. Make sure the trailer you use is certified.

Consult your state authority for state regulations pertaining to trailering a boat.

Use the following towing check list:

- Check brakes.
- Check springs and under carriage for cracks, loose parts and fasteners.
- Ensure tires are inflated to proper pressure, and in good condition.
- Check wheel bearings and lug nuts.
- Verify light and signal operation.
- Make sure boat is tied down from bow and stern eyes.
- Stow bimini top and other items likely to blow off or out.
- Carry a spare tire and tools for changing. (spare bearing and race set for long trips)
- Securely brace O/B motors.
- Go slow over bumps.
- Check tires and hubs often for excessive heat, service if required.
- When backing have an assistant watch and guide with signals.

Capacity

The trailer you choose should be a proper match for your boat with regard to capacity and hull design. Consult your dealer when making your selection. The tow vehicle must have sufficient towing capacity for the combined load of boat, trailer and accessories. Check the certification label on the forward port (left) side of your trailer to ensure that it has adequate gross vehicle weight rating (GVWR) for the combined boat and trailer. The weight of the boat must include; the empty basic hull weight, the motors weight, accessories weight, full fuel and water weight, provisions and equipment weight.

Hitch

Ensure that the hitch in the tow vehicle is rated for the GTW or greater, and that the ball size matches the trailer receiver.

Load Distribution

Generally speaking the tongue weight should be from 5 to 10 % of the GVWR. Make certain that the hull is evenly supported along the length and width with no load concentrations. Make sure that the bottom of the transom is supported and not hanging past the end of the trailer. Load the boat so it is centered side to side, and straight on the supports.

Launching and Retrieving

Pre- Launch Check List-

- Install drain plug.
- Remove covers and tie downs. (leave bow winch strap in place)
- Place lines and fenders if needed.
- Disconnect lights to avoid shorting.
- Verify that safety equipment is aboard.

Launching-

- If possible use a lookout.
- Back down the ramp until wheels are under water or the stern of the boat just starts to float (keeping perpendicular to the shore).
- Loosen bow strap, board the boat, lower the motor.
- Start the engine and check the bilge for leaks.
- Remove winch strap from bow eye.
- Back boat off of trailer.
- Dock the boat and park the tow vehicle.

Retrieving-

- Back down the ramp so trailer is half submerged.
- Carefully line up boat, slowly maneuvering with short bursts of power.
- When the keel is centered and boat is just touching the trailer, winch (or smoothly apply power) until the boat eases to rest on the bow rest.
- Secure the bow strap.
- Haul the boat out of the water and park out of the way of others.
- Remove the drain plug.
- Rinse off salt water if fresh water is available (or as soon as possible otherwise).
- Stow equipment and canvas, affix tie downs and covers.
- Hook up trailer lights and verify operation.

Operation and Performance

Loading

The capacity plate states the maximum persons and the maximum weight in pounds for persons, engine and gear that the boat will safely accommodate under normal conditions. These load capacity ratings are computed using USCG formulas. For operation in rough and adverse conditions reduce the boats load to permit safe operation.

The performance of any boat is a function of the amount of load carried, great loads reduce performance. Depending upon conditions and what engine / hull combination you have selected, your boat may not be able to stay on plane when loaded to its maximum rated capacity.

When loading your Pro Line always:

- Maintain a balance both port to starboard and bow to stern.
- Keep heavy items as low as possible.
- When boarding step (never jump) into the boat one at a time.
- Pass gear from the dock to someone in the boat, do not carry gear while boarding.
- Never allow passengers to ride with feet hanging over the side of the boat.
- Do not allow passengers to sit or stand on top of the stern, or gunwales.

Fueling

Due to the explosive nature of gasoline certain precautions must be observed when fueling.

Before Fueling-

- Secure the boat to the dock with adequate moorings.
- Turn off engine and any equipment having brush type (spark producing) contacts.
- Close cabin, doors and hatches so fumes don't enter boat.
- Disembark all persons not necessary for the fueling operation.
- Prohibit all smoking and open flame on board and nearby.
- Have a fire extinguisher close by.

While Fueling-

- Keep nozzle in contact with fill opening to minimize chance of sparks.
- Do not leave unattended.
- Do not spill fuel.
- Do not over fill, filling a tank until fuel is vented is dangerous. Allow room for expansion.

After Fueling-

- Close fill opening.
- Wipe up any spilled fuel. Dispose of rags on shore.
- Open cabin door, ventilate boat
- Check for fumes in bilge, continue to ventilate if present.

Starting

Follow the information in your engine manual if it deviates from the following instructions.

Before Starting Engine-

- Ventilate all enclosed spaces.
- Visually inspect bilge for raw fuel, smell for vapors.
- Visually make sure propeller is clear of obstructions or swimmers.
- Make sure engine cooling water intakes are submerged.
- Lock helm seats to face straight forward.
- Attach safety lanyard.

Start the engine in accordance with the manufactures recommendations. After your engine starts make sure to observe a few basic rules to ensure that the engine is functioning properly:

- Verify engine cooling water circulation.
- Check the water temperature gauge for the first few minutes to make sure the engine is warming properly.
- Check for leaks especially fuel, shut down and correct if found.
- Follow the break- in procedures for your engine.
- After engine is warm and after the necessary break-in, drive the boat at full throttle for a few moments (if conditions permit) to verify engine is developing full RPM.

Trim

The power trim system allows the operator to raise and lower motor through out a infinite number of settings between its upper and lower limits. For every throttle setting there is a trim setting that will yield optimal speed, stability or maneuverability.

For most conditions the best all-round performance is obtained when the bow of the boat is slightly out of the water, with all motors trimmed to the same degree.

General trim down (or "in") characteristics are:


- Starting position for best acceleration to plane.
- Lowers bow, providing better stability and ride in rough water.
- Reduces boat speed and economy due to increased drag of hull and drive.
- More spray over bow.

General trim up (or "out") characteristics are:

- Raises the bow of the boat in the water, resulting in less hull in the water.
- Greater speed and economy for a given throttle setting.
- Greater maneuverability (provided prop does not ventilate during the maneuver)
- In excess, the reduced stability can lead to bouncing, porpoising and propeller ventilation.

In addition to providing ideal boat performance, the power trim enables the motor or drive unit to be raised (tilted up) for trailering, beaching, and launching.

The electric motor that drives the hydraulic pump is protected by an internal thermal circuit breaker that interrupts the power when overheated. Avoid continued pressure on the switch after the unit has reached the limits of travel (you can hear the difference in sound as the pump strains against the increased load).

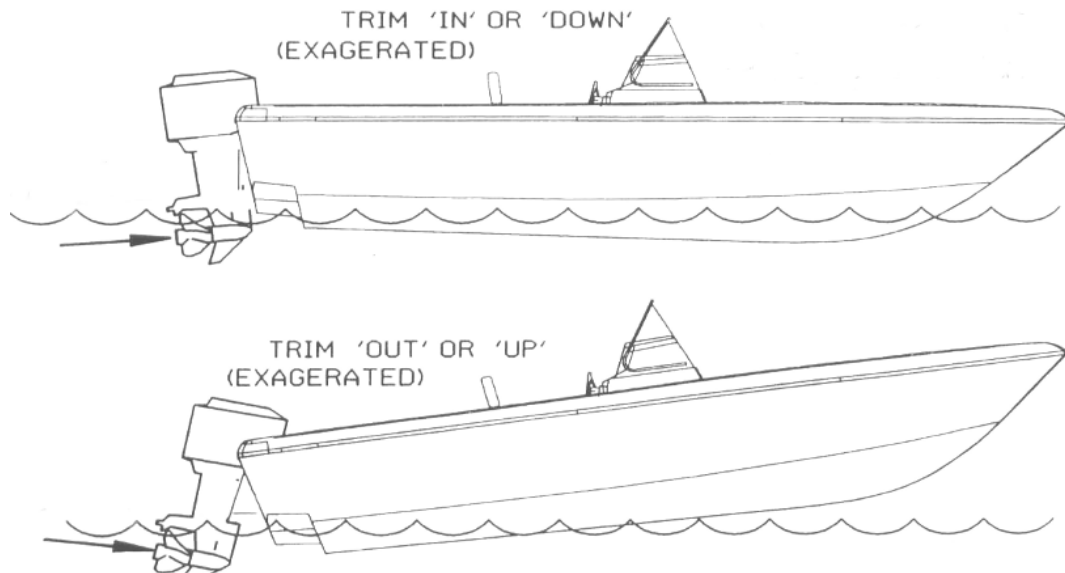

Drive Trim

Prop

If your Pro Line was ordered with a factory installed engine it will have a propeller that has been performance tested to provide the best all-round performance for your engine /hull combination at sea level.

In some situations, it may be desirable to re- prop your Pro Line to enhance desired performance needs. For instance:

- Decreasing pitch will enhance acceleration and power at high loads.
- Increasing pitch will increase speed at light loads.
- Decreasing diameter will compensate for loss of power at high altitudes.
- Increasing diameter results in higher efficiency at low speeds at the expense of top speed and acceleration.

When re- propping to a lower pitch or smaller diameter be sure not to over rev the engine at top speed, engine damage could result.

Operating your engine with a damaged prop will decrease top speed, increase fuel consumption and may introduce undesirable handling characteristics. The vibration caused by running a damaged prop could cause costly damage to your lower drive unit.

Service and Care

To enjoy trouble free use of your Pro Line follow the recommended procedures and instructions relating to the service and care of your boat. Failure to follow the following maintenance practices will result in shorter life of your equipment and may void your warranty.

Much of the installed equipment on your Pro Line is separately warranted, follow the care instructions found in your owners packet to keep these warranties in force.

Your engine manual contains service information relating to your particular engine installation. Follow the provided recommendations for trouble free service, and to preserve your warranty.

Fiberglass / Gel Coat

The gel coated fiber glass on your Pro Line provides a smooth easy to clean and maintain surface. Regular cleaning and waxing will preserve the finish on your boat for many years to come.

Use a mild detergent and plenty of fresh clean water to swab down the exposed gelcoat of your boat, don't use harsh cleaners containing ammonia, chlorine or abrasives. Do not use acetone or any ketone solvents. Stubborn stains can be removed with alcohol or kerosene provided they are washed off immediately and completely with mild detergent and water.

Wax all gel coated surfaces a minimum of twice a year, more often if the boat is stored in the sun. If due to neglect the surface takes on a dull appearance that is not restoreable by waxing, hand buff with a rubbing compound such as Dupont No. 7, or power buff with Mirror-Glaze No 1 then wax.

Caution: when power buffing use care not to leave swirl marks or "burn" the surface. You may want to leave power buffing to a professional.

The gel coat on your Pro Line is approximately 25 mil thick. Minor scratches and deep stains that do not penetrate the gel coat can be lightly wet sanded with 600 grit, buffed and waxed to remove. If a deep gouge to the surface occurs that goes all the way through the gel coat into the fiberglass it

must be repaired promptly to avoid further damage. Your dealer is best equipped to handle this repair and achieve good bonding and color match. There are many different gel coat repair kits on the market for this use however results obtained may not be satisfactory.

For damage to fiberglass that goes deeper than 1/16 inch see your Pro Line dealer.

Marine Growth

If marine growth is a problem, consult your dealer about an anti-fouling finish for the portions of the hull below the water line. When moored in salt or brackish water it is recommended that you haul the boat out and scrub the bottom every 30 days to prevent the accumulation of marine growth.

Windows and Hatches

To clean acrylic, rinse with fresh water to remove as much grime as possible. Use your bare hand with lots of water so you can feel any grit and avoid grinding it in to the surface as you dislodge it. When all material that may scratch is gone, use a soft clean cloth with a non abrasive mild detergent and clean fresh water. Rinse and blot dry with a clean dry chamois.

Grease and adhesives may be removed with kerosene, hexane or white gas (not gas you burn in your boat, car or lawn mower).

Never use, solvents like acetone, silicone spray, benzene, carbon tetrachloride, dry cleaning fluid, lacquer or paint thinner, or any chlorinated solvent, on acrylic, since they dissolve the material.

Stainless Steel / Aluminum

Stainless steel is used on bow rail and deck fittings on your Pro Line. Stainless is corrosion resistant but not corrosion proof. If used in contact with sulfides, chloride salts, or rusting metals, stainless will show rust spots, discolor or corrode. The grain structure of stainless, when modified by welding processes has increased susceptibility to micro- corrosion (invisible to the unaided eye) and embrittlement. Proper care will preserve the weld strength and beauty of your stainless:

- Always clean frequently with soap and water, most glass cleaners work.
- Always protect with a wax or oil film, especially around welds to guard against micro-corrosion cracking and rust spots.
- Always remove rust spots as they appear with brass, silver or chrome cleaner.
- Never use coarse abrasives like sandpaper or steel wool, as these can cause rusting.
- Never clean with acids or bleaches.
- Never permit contact with iron, steel or other metals which could cause rust or corrosion.

Canvas

Cleaning: Brush the canvas with a soft bristle brush and hose down at regular intervals to remove bird droppings, dust and dirt particles. It may be washed with a mild solution of natural soap in lukewarm water (less than 100 deg. F.) DO NOT USE DETERGENTS.

For more stubborn stains soak the canvas in a solution of 4oz. non-chlorine bleach, 4oz. natural soap and one gallon warm water, for about 20 min. Rinse with cold water.

Note: If the water repellence is lost due to cleaning, apply a water repellent treatment as necessary. The canvas may be washed in a automatic washing machine set on 'cold' using 2 cups non chlorine bleach 1 cup natural soap. DO NOT DRY IN A DRYER, LINE DRY ONLY to prevent shrinkage. If water won't bead on dry surface, re treat with water repellent.

Storage: Do not fold or store any canvas while wet. All canvas should be rolled or folded when dry and kept in a clean dry location.

Upholstery

Vinyl

An occasional wipe down with mild soap and water is all your interior and exterior vinyls need to remain in good condition for many years. We do not recommend the use of any special cleaners sealers or treatments for interior and exterior vinyls. Refer to the provided brochure.

Fabric

For all fabrics use dry cleaning fluid only.

Corrosion Protection

Your motor / drive unit has a sacrificial anode made of zinc to mitigate the effects of corrosion causing, electrolysis . Maintain this anode in accordance with the maintenance schedule in your engine manual. If you moor your Pro Line in salt water for extended periods make sure to check the anti-corrosion anode often for operation. Make sure the anode surface is exposed and not caked with corrosion and scale. If the anode is eroded renew it.

Winterization and Storage

Pre-Storage Check List

- Remove drain plug, keep bow high to drain any water accumulation.
- Drain all water from water systems, pumps, valves, drains and lines. Blown air can be used to help remove water.
- Fill fuel tank and add a stabilizer such as 'STA-BIL' to the gasoline.
- Prepare the engine in accordance with manufactures recommendations found in your engine manual.
- Treat metal parts with rust inhibitor.
- Remove the battery and protect it from freezing. Trickle charge overnight once a month.
- Place under cover, if on a trailer loosen tie down straps, and unload the tires with blocks.

Fitting Out After Storage-

- Check entire fuel system for loose fittings, leaks and damage.
- Clean battery terminals, install battery(s), and coat terminals with a deoxidizing agent.
- Check all through hull fittings and hoses for obstructions, water tightness and condition.
- Test navigation, anchor and other lights for operation.
- Check wiring, terminal blocks and plugs for loose connections and corrosion.
- Verify controls, switch and equipment operation.
- Check line condition and inspect anchor and rode.
- Install hull drain plug, clean out any debris from bilge and cockpit.
- Remove antifreeze and flush water system.

Appendix: Boat Identification Information

Owner:_____

Home Port:_____

Dealer:_____

Boat Name:_____

Registration No:_____

Hull No:_____

Boat Model:_____LOA:_____Beam:_____Draft:_____

Vertical Clearance:_____Hull:_____Deck:_____

Warranty Registration Date:_____

Fuel Capacity Gal.:_____Key No:_____

Radio Call Letters:_____Bat._____

Engine Make & Model:_____HP:_____

Engine S/N:_____

Prop: Dia:_____Pitch:_____P/N:_____

Trailer Make & model:_____

Trailer S/N:_____GVWR:_____

Insurance Company:_____

Agent:_____

Policy No.:_____Phone No.:_____

Trouble Shooting Chart

PROBLEM:

POSSIBLE CAUSE:

Poor speed or fuel economy:

- *Wrong propeller for load or conditions.
- *Trim is in to far.
- *Load is to far forward or to heavy, or boat has taken on water.
- *Marine growth on hull, Line or anchor dragging.
- *Fuel is stale or partially blocked, engine is worn, out of tune or under powered .
- *Improper rigging, air intake or exhaust partially blocked.

Engine cranks but will not start:

- *Out of fuel, filter is clogged, fuel line kinked, fuel vent plugged.
- *Water in fuel.
- *Engine problem, (electrical, fuel pump, blockage, etc.).
- *Safety shut down switch lanyard not installed.

Engine will not crank:

- *Drive is in gear (check operation of the throttle release).
- *Battery is weak or terminals corroded or loose.
- *Engine or drive damage.

Engine runs but boat wont go:

- *Throttle release is engaged.
- *Disconnected shift linkage.
- *Damaged prop, or lower drive unit.
- *Entangled in lines or weeds, or Anchor is down.

Prop cavitates:

- *Trim out too far, motor to high.
- *Weeds on prop.
- *Bow heavy, damage to hull.

Excessive vibration:

- *Propeller, engine, or drive unit damaged.
- *Hull damage.

Boat won't turn:

- *Steering unit needs fluid or has trapped air, tiller is Disconnected. (helm turns)
- *Steering trunion or mechanism jammed, (helm won't turn).

Electrical problems
(see wiring diagram)

- *Corroded wires, terminals, or plugs.
- *Broken, loose or short circuited wires.
- *Circuit breaker tripped.
- *Defective switch, device or breaker.
- *Inline fuse burnt out.
- *Overloaded circuit.

Handling problems like:

Porpoises

Runs wet

Hard ride

Lists

Overbank in turn

Catches in turns

- *Trimmed out too far, damaged hull (rocker), trim tabs up, stern heavy.
- *Trimmed in too far, bow heavy, trim tabs down, overloaded for conditions.
- *Stern heavy, trimmed in too far, going to fast for conditions.
- *Loaded to one side, trim tabs set wrong, trimmed to far in, fuel tanks uneven.
- *Trimmed in too far, improperly located load, throttle advanced to far.
- *Damaged hull (hook), stern heavy, trim tabs down.

Nautical Terms

Abeam: At 90 degrees to the center line of the boat, exactly to either side of the boat.

Aft: A point on a boat that is aft of another.

Aft: Toward the rear of the boat.

Beam: The widest part of the boat.

Bilge: The lower interior of the hull.

Bow: The fore part of a boat.

Bulkhead: A vertical partition or reinforcement in a boat usually perpendicular to the keel.

Chine: The juncture of the bottom and the side of the boat.

Chock: Deck fitting used to guide a line.

Cleat: Deck fitting used to secure a line to.

Deck: Upper structure of a boat that covers the hull.

Draft: The distance the lowest part (usually the keel) of the boat projects into the water.

Fathom: A unit of measure equal to six feet.

Freeboard: The height of the deck above the water line.

Gunwale or Gunnel: The juncture of the side of the cockpit, deck and hull.

Hatch: An opening used for access to an interior space.

Head: Toilet or toilet area in a boat.

Helm: Steering wheel or console area of a boat.

Hull: The basic structure of a boat, that provides flotation by displacing and excluding water.

Keel: The major lengthwise member of the hull, the lowest portion of the hull.

Knot: A measure of speed in nautical miles per hour, equal to 1.15 MPH

Lee: The side sheltered from the wind.

Port: The left side of the boat when aboard the boat facing the bow.

Scupper: Duct to drain water from the cockpit, usually with a check valve to sea water intrusion.

Sheer: The juncture of the deck and the hull, generally covered by the rub rail.

Starboard: The right side of the boat when aboard the boat facing the bow.


Stern: The back of the boat.

Stringer: Lengthwise reinforcing members of the hull.

Transom: Vertical part of the stern.

Wake: Waves produced by a boat moving through the water.

Windward: Toward the direction from which the wind is blowing.

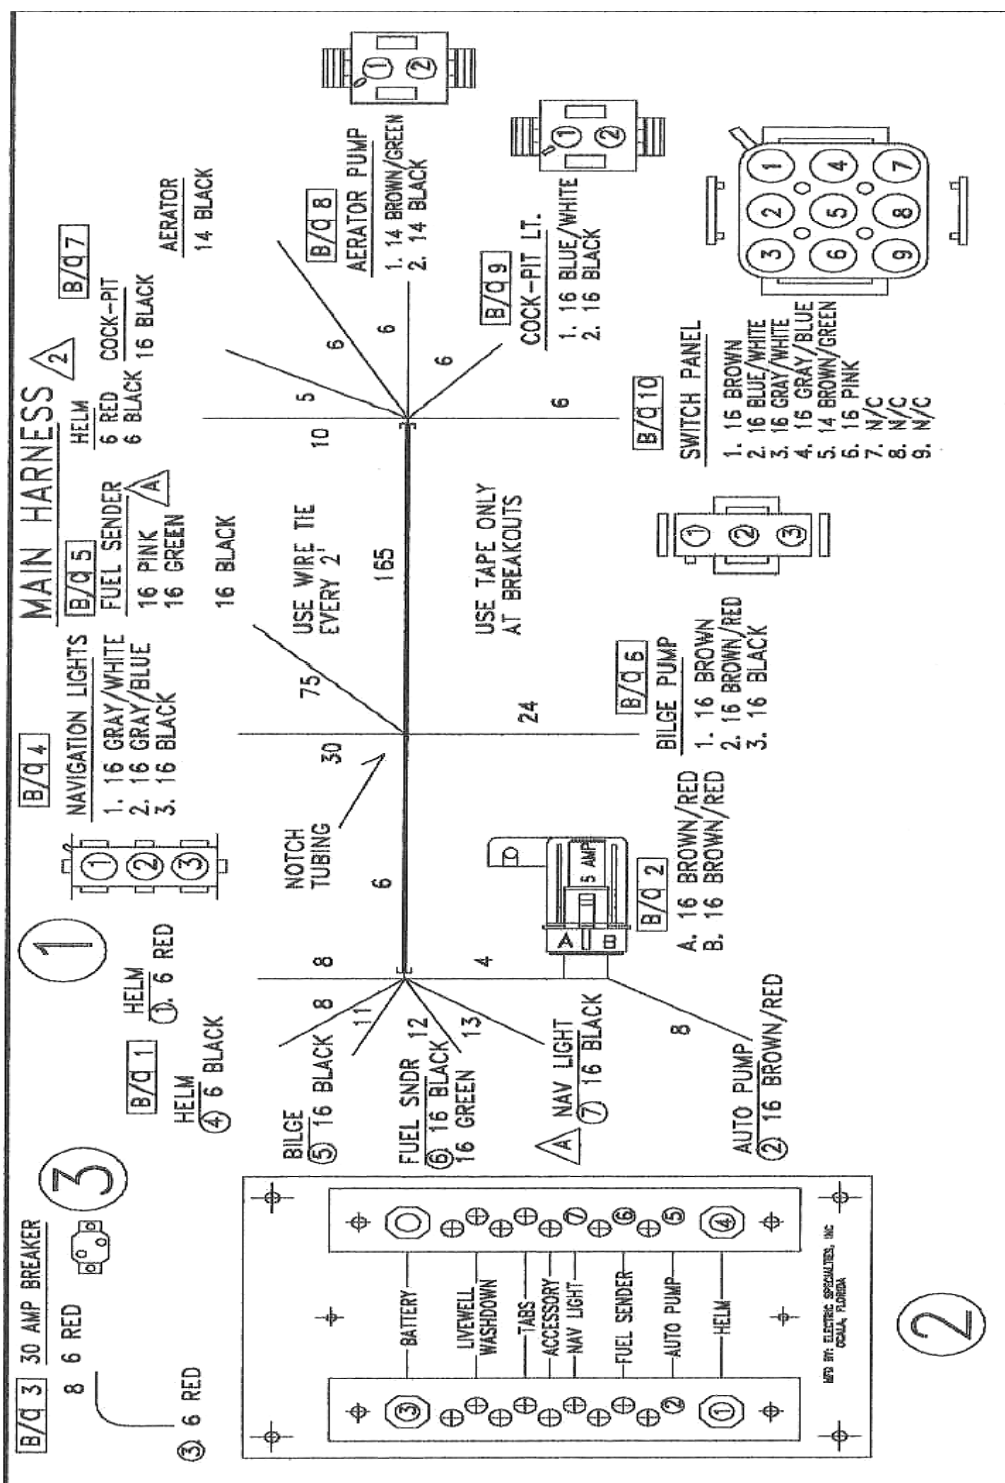

21 DC

SPECIFICATIONS

L.O.A.....20'9" (6.12m)
BEAM.....8'5" (2.50m)
DRAFT – HULL.....15" (0.38m)
DEADRISE.....198
FUEL CAPACITY.....70 GALS. (265.0L)
WEIGHT – HULL(6).....2500 LBS. (1134 kg)
WEIGHT – TRAILER (6).....4000 LBS (1814 kg)
COCKPIT AREA.....87 SQ. FT. (26.52m²)
COCKPIT DEPTH.....22" (0.56m)
BRIDGE CLEARANCE.....6'2" (1.88m)
MAX. HP.....200 (149.14kw)
BAITWELL CAPACITY.....9.75 GAL (36.9L)
FISHBOX CAPACITY.....9.75 GAL (36.9L)

23 DC


SPECIFICATIONS

L.O.A.....22'5" (6.83m)
BEAM.....8'5" (2.50m)
DRAFT – HULL.....15" (0.38m)
DEADRISE.....198
FUEL CAPACITY.....90 GALS. (340.8L)
WEIGHT – HULL(6).....3050 LBS. (1383 kg)
WEIGHT – TRAILER (6).....4179 LBS (1896kg)
COCKPIT AREA.....92 SQ. FT. (28.04m²)
COCKPIT DEPTH.....22" (0.56m)
BRIDGE CLEARANCE.....6'2" (1.88m)
MAX. HP.....225 (167.78kw)
BAITWELL CAPACITY.....9.75 GAL (36.9L)
FISHBOX CAPACITY.....9.75 GAL (36.9L)


BILL OF MATERIALS		
PART NUMBER	DESCRIPTION	QTY
052-2044	2 PDS 15A SM SKT HSG	1
052-2041	3 PDS 15A SM SKT HSG	1




TD HARNESS
3 PDS 15A MNL I I
SM SKT HSG W/SM SKTS
052-2041
(2) 052-3015
(1) 052-3016

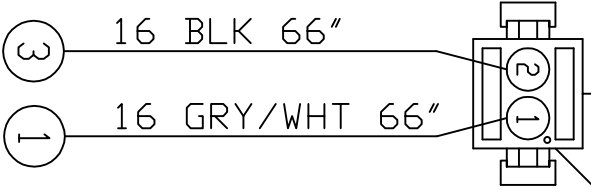

ANCHOR LIGHT
2 PDS 15A MNL I I
SM SKT HSG W/SM SKTS
052-2044
(2) 052-3015

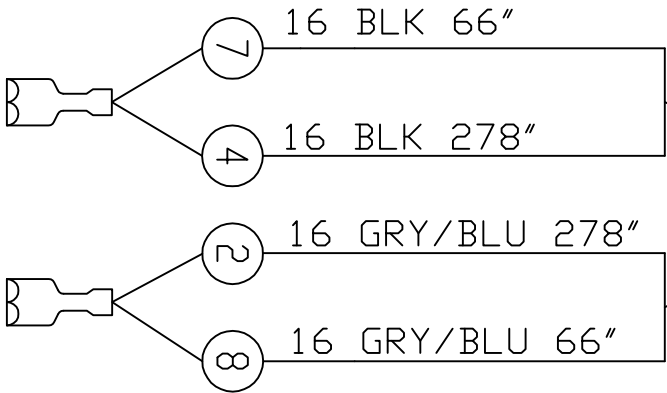

STBD BOW LIGHT
.250 QC'S N/I
(2) 051-1002

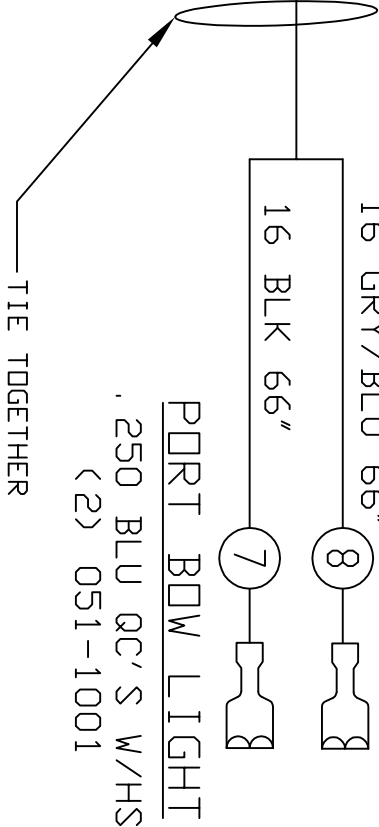

PORT BOW LIGHT
.250 BLU QC'S W/HS
(2) 051-1001

NOTES:
SPOT TAPE
EVERY 36"


NO.	REVISIONS	DATE	BY
2700	LENGTHS	6/11/03	BS
A	CHNGED YLW QC TO N/I	0008/04/03	RR

A DASH of Class
CORPORATION

DATE 05/12/03	TITLE	PROLINE
SHEET 0F	20' SERIES BOW HARNESS	
DRAWN BY	RDWE	PART NO.
CHECKED BY		H-162-068

BILL OF MATERIALS		
PART NUMBER	DESCRIPTION	QTY
052-2042	3 PDS 15A SM PIN HSG	1
052-2030	9 PDS 15A SM SKT HSG	1
052-2044	2 PDS 15A SM SKT HSG	2
052-2041	3 PDS 15A SM SKT HSG	1
079-9994	3/8" CONV TUBING	3FT
079-9996	5/8" CONV TUBING	15.5FT
D-162-035C	TRANSOM PANEL ASSY	1

TRANSOM PANEL
ATTACH TO TRANSOM
PANEL AS SHOWN ON
TRNSM PNL ASSY DETAIL
D-162-035C

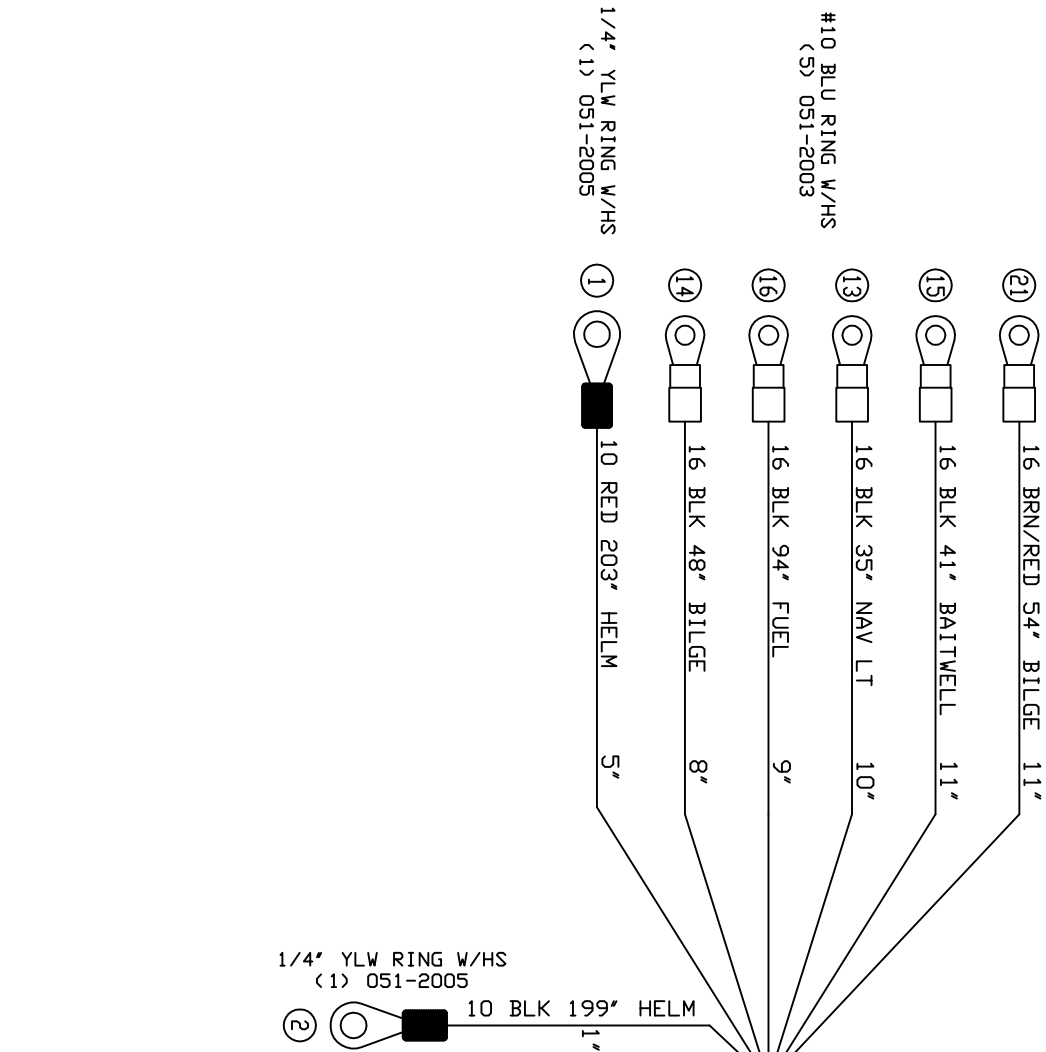

8GA 1/4" RING W/HS
051-2018 (18)

8 RED 49' TRANS 7' (19)

8GA #10 RING W/HS
051-2009

16 PNK 257' (7)

16 BLK 94' FUEL (16)

#10 BLU RING W/HS
(2) 051-2003

BAITWELL PUMP

2 PDS 15A MNL II
MALE PLUG W/SM SKTS
052-2044
(2) 052-3015 14-16GA

BILGE PUMP

3 PDS 15A MNL II
MALE PLUG W/SM SKTS
052-2041
(3) 052-3015 14-16GA

COCKPIT LT

2 PDS 15A MNL II
MALE PLUG W/SM SKTS
052-2044
(2) 052-3015 14-16GA

16 BLU/WHT 32' (6)

16 BLK 38' (17)

16 BRN/WHT 212' (5)

16 BRN/RED 48' (21)

16 BLK 48' (14)

SW PANEL

9 PDS 15A MNL II
MALE PLUG W/SM SKTS
052-2030
(6) 052-3015 14-16GA

16 BLU/WHT 32' (6)

16 GRY/WHT 197' (3)

16 PNK 257' (7)

16 BRN 212' (5)

16 GRY/BLU 197' (4)

16 BRN/GRN 202' (8)

HELM PNL

#10 BLU RING W/HS
(2) 051-2003

HELM PNL

#10 YLW RING W/HS
(2) 051-2004

ECN/R	REVISIONS	DATE	BY
2573/74	ADD TRNSM PNL AND 10" AT HELM	10/31/02	PDJ
N600	REV B WIRES 1, 2, 11 NOW 10G WAS 6GA	12/16/02	JP
JG	ADDED 3" TO 19&REMOVED 1" FROM 15	06/26/03	RR
N2859	(C) CHG BRKOUT FOR WIRES #18,19 &2012/24/03	JP	
N3056	(D) RWD WIRE#20, ATT- NOW WIRE 21 BLU RING	6/22/04	JP
N3024	ADD 6" TO WIRE #17	8/2/04	JG
R884	LANE ON END 2 OF WIRE 16	9/29/04	JD
R906	CORRECT WIRE # 25 BREAKOUT LENGTH	10/7/04	JF
R915	CORRECT LABELS TO MATCH OUTSHEET	10/11/04	JF


A dash of Class

NOVATRON


CORPORATION

DATE 10/28/02	TITLE	PROLINE 2003
SHEET DF	19/20/22 HULL ACCY HRNS	
DRAWN BY	J PARNELL	PART NO.
CHECKED BY		H-162-047D

BILL OF MATERIALS		
PART NUMBER	DESCRIPTION	QTY
043-3116	BRKR 3A MPT DC RESET W/SCRW TAB	1
043-3192	BRKR 30A SERIES-250 PIR BKM SCR	1
043-3205	BRKR BODT CLEAR SILICANE	1
078-4341H	JMPR 14 RED 4" BR-BR	1
090-0229	HOLE PLUG 3/8" HEYCO BLK	2
092-0260	SCREW #8 32x1 1/2 PAN HD PHIL SS	2
092-0311	NUT KEP 8/32	2
V-162-095A	VF BRKR PNL 40A + 1BRKR +2 PLG	1

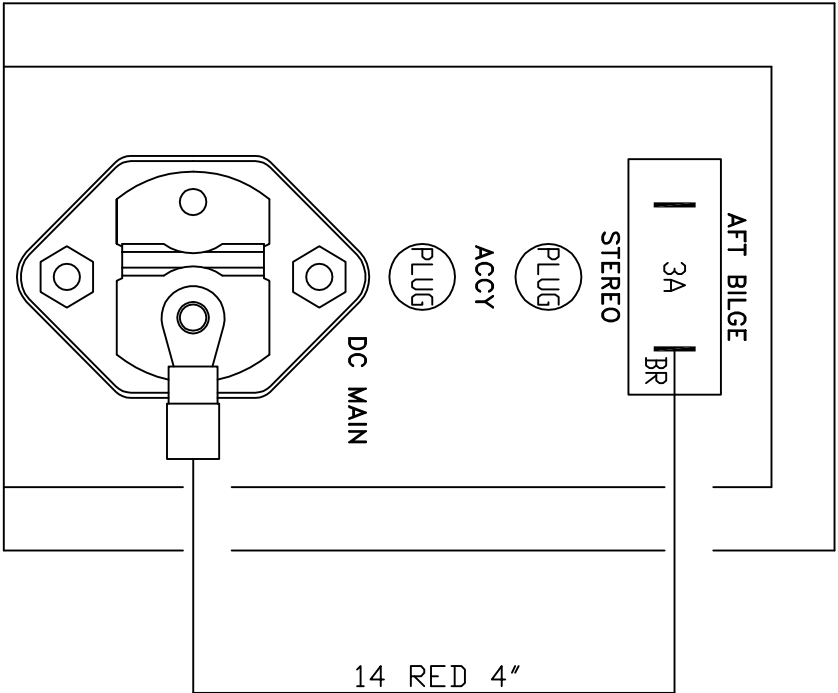

PANEL ASSY
LOAD VIEW

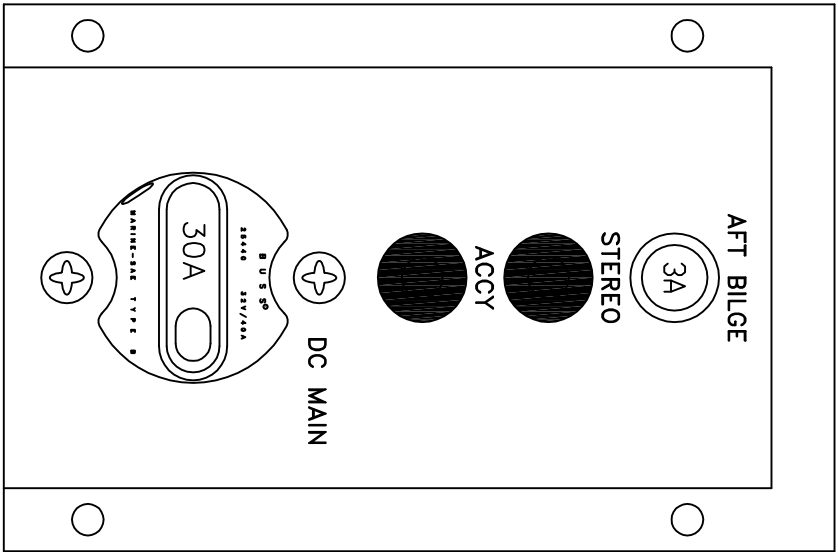



PANEL
FACE VIEW
FULL SCALE

NO	REVISIONS	DATE	BY
R737	SHOW TOP FLANGE ON PNL	6/22/04	JP
R750	ALL JMPRS W/HS	6/28/04	JP
3144	ROTATE MAIN BREAKER	9/22/04	BS
3177	CHANGE TD 4" JUMPERS	10/15/04	BS


NOVATRON
A dash of Class
CORPORATION

DATE 6/10/04	TITLE	PROLINE -2005- VF BRKR
SHEET OF	30A + 1BRKR + 2PLG	
DRAWN BY	J PARNELL	PART NO:
CHECKED BY		D-162-079B

PART #	DESCRIPTION	QTY
014-8912	EURO SSV FLT FOG RST 7% TACH	1
014-8921	EURO SSV FLT FOG RST 5% SPEED	1
014-8931	EURO SSV FLT FOG RST FUEL	1
033-1400	CN13 VHT CAP HDEN	1
033-1405	CN13 VHT CAP AC	2
033-1420	CN13 RGR SV SPST ND LT	1
033-1424	CN13 RGR SV SPST 1 LT	5
033-1453	CN13 RGR SV DEPT 2 LT	1
033-1467	CN13 VHT CAP BILGE	1
033-1469	CN13 VHT CAP NAV LVS	1
033-0531	CN13 VHT CAP BAINWELL	1
033-0622	CN13 VHT CAP COCKPIT	1
043-1000	5A ETA BRKR	6
043-3103	15A ETA BRKR	7
043-3205	CLEAR ETA BOOT	1
052-2033	6 PDS SH PIN HSG	1
090-0804	6 PDS TERM BAR	1
19-162-257	19/23 D/B INST/SV PUL	1
V-162-085	19/23 D/B INST/SV VIRE	1

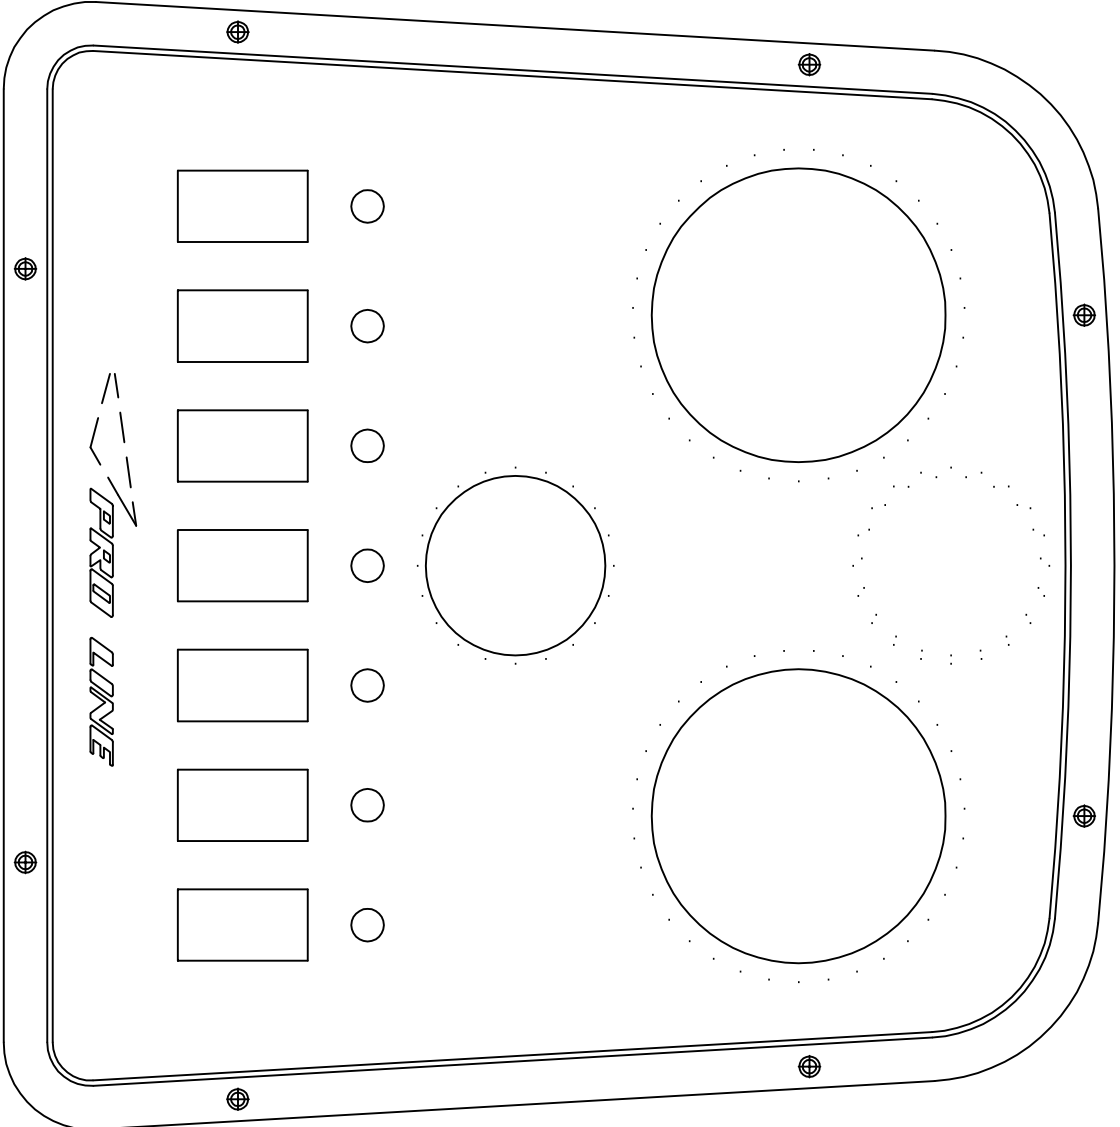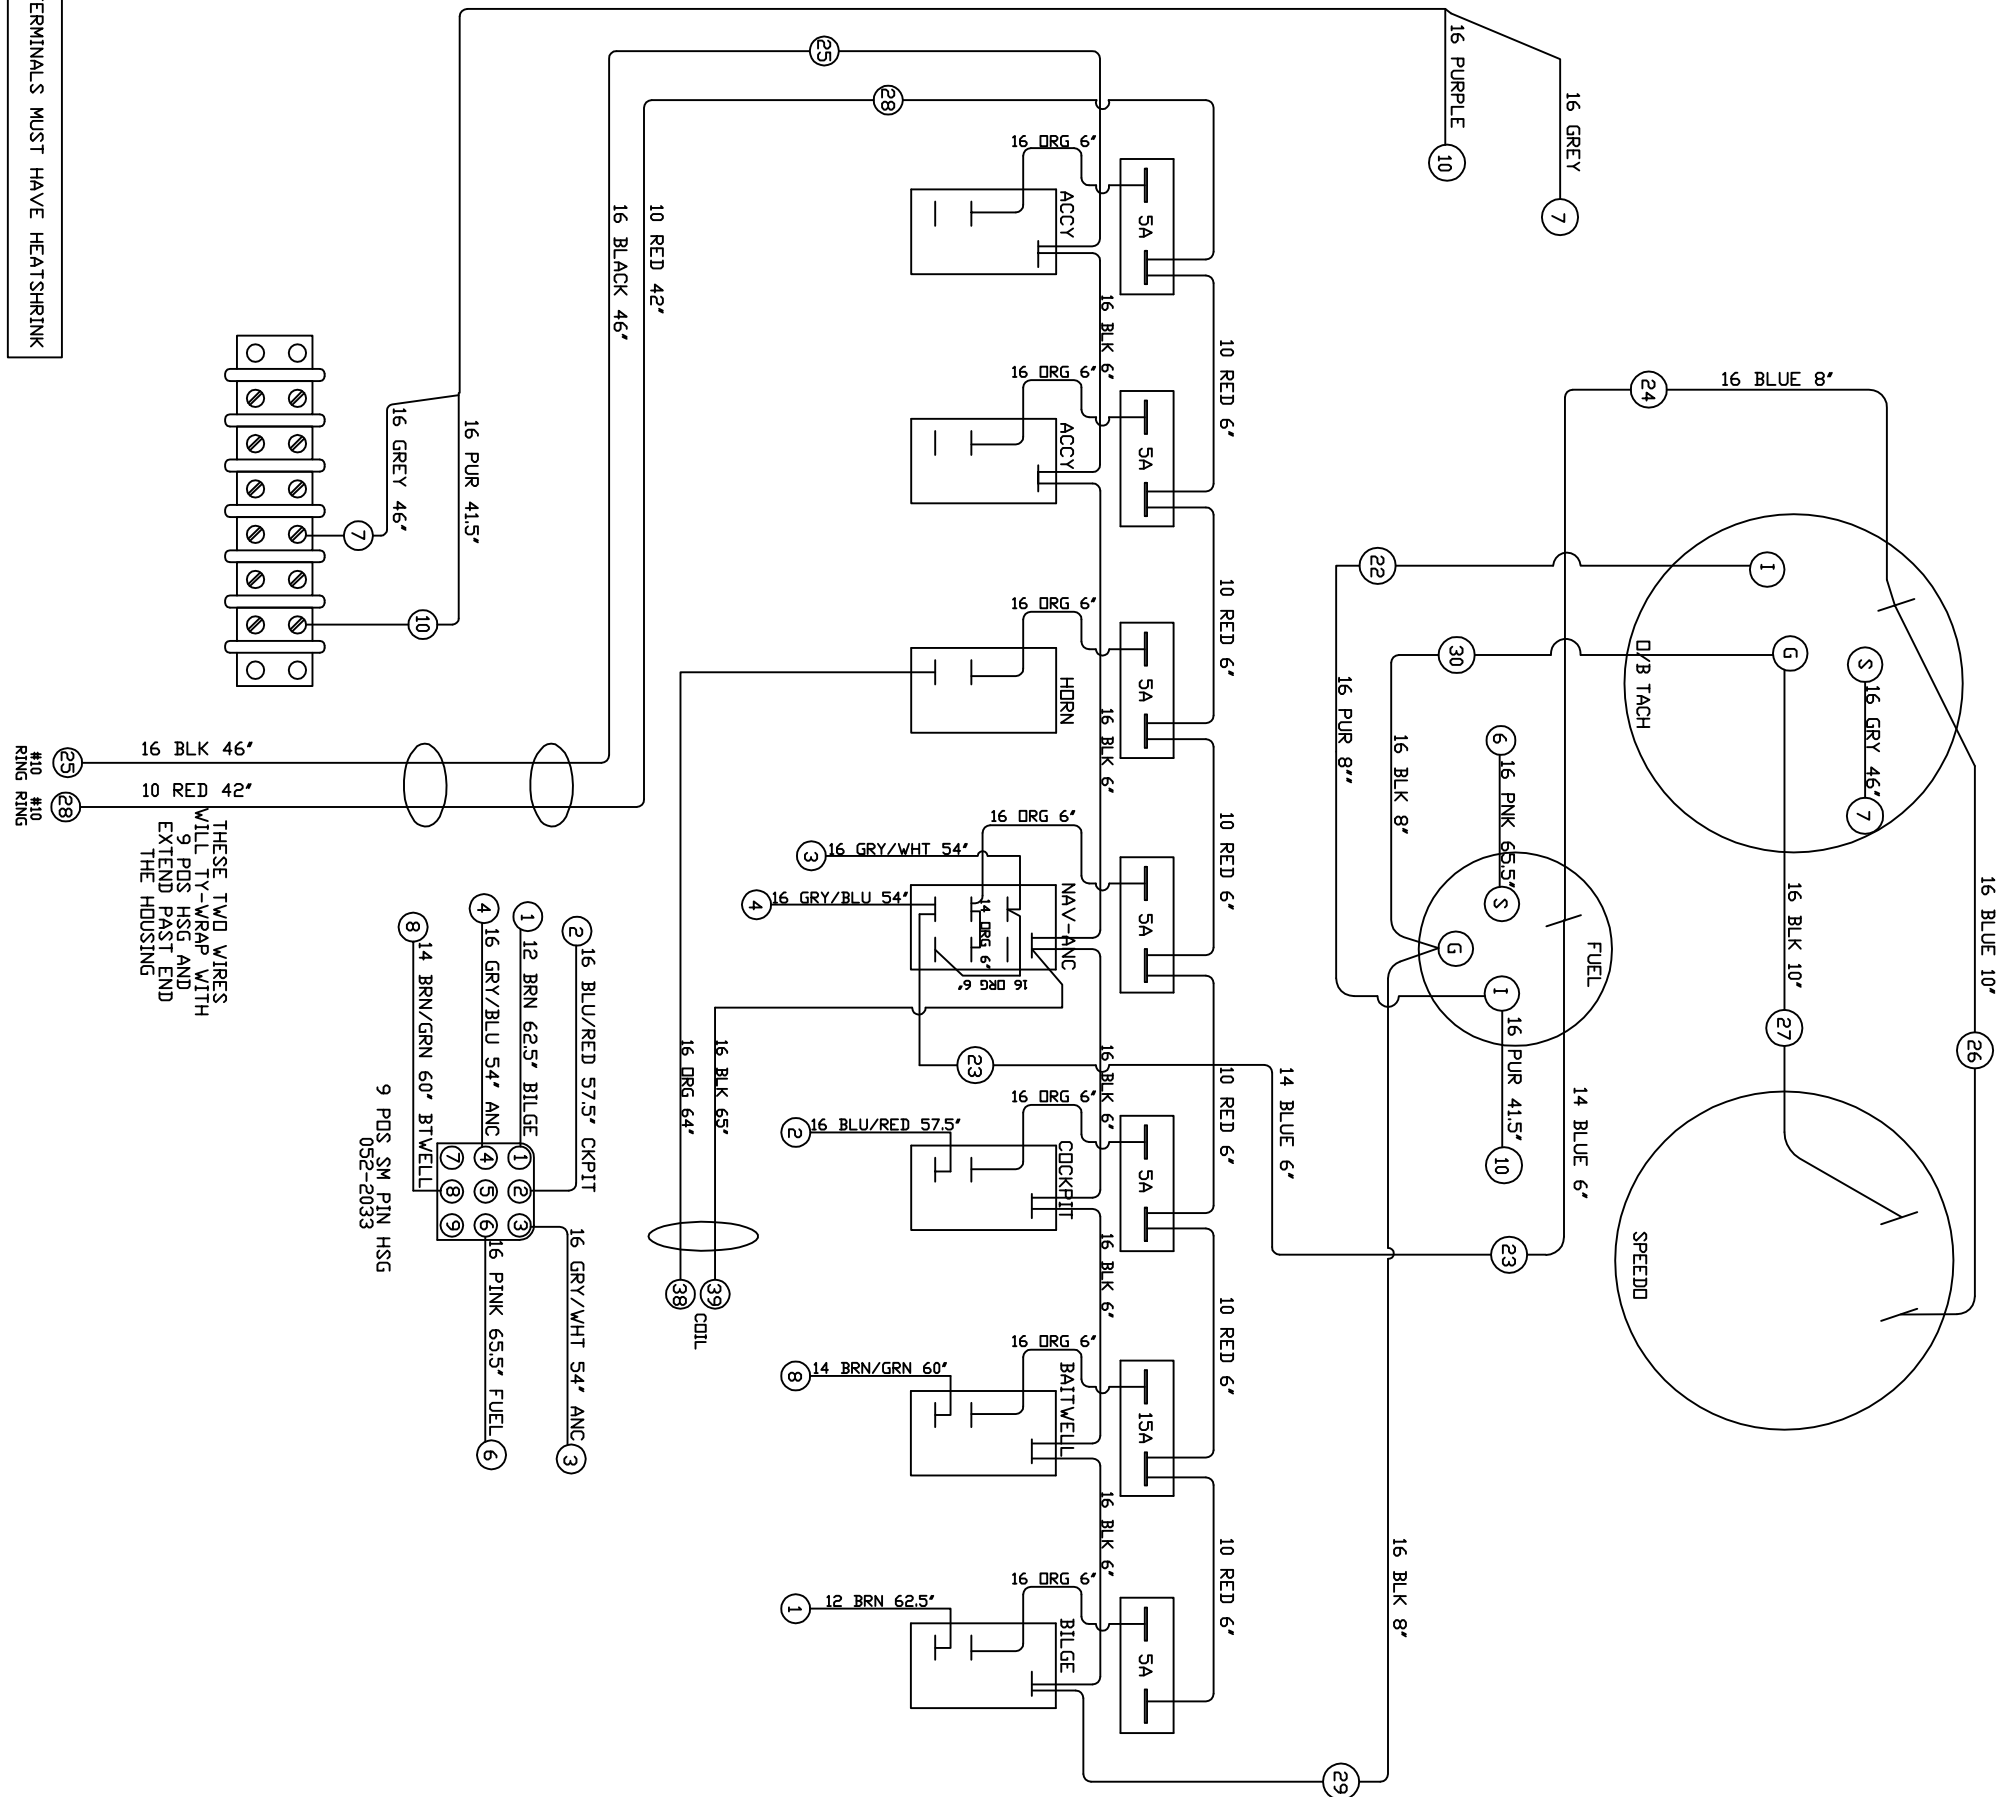

NO.	REVISIONS	DATE	BY
2521	BATTWELL TO 15A---ADD HORN LEADS	7/23/02	BS

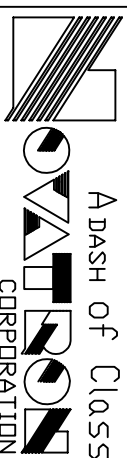

DATE 5/24/02	TITLE	
SHEET 0F	PROLINE-2003 19/23 D/B INST/SW PNL	
DRAWN BY	SMITH	PART NO. W-162-085
CHECKED BY	D-162-007	